

PHILIPS

HR3020



Welcome,
Get started!



 
 
home.id/welcome

Registration
and Benefits


Download app

Quick start

Digital manual

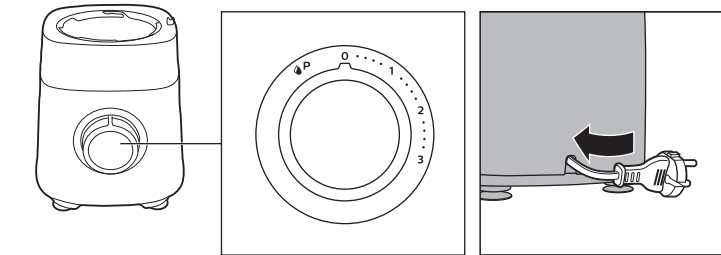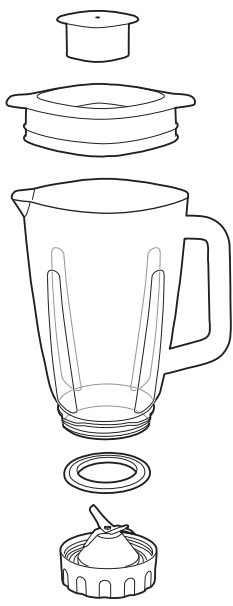

		 Kg (MAX)	 3	 (MAX)
		1500 ml	3	60 - 90 sec.
		1500 ml	3	30 - 60 sec.
		6 x	 P	5 x P - 6 x P

 

2.5x2.5x2.5 cm

EN Welcome, Get started!
KO 환영합니다. 지금 시작하세요!

MS Selamat datang, mari bermula!
VI Chào mừng, Bắt đầu!

TH ยินดีต้อนรับ เริ่มใช้งานเลย!
AR أهلا بك، نفضل وأبدأ الاستخدام!

EN Registration and Benefits
KO 등록 및 혜택

MS Pendaftaran dan Manfaat
VI Đăng ký và lợi ích

TH การลงทะเบียนและสิทธิประโยชน์
AR التسجيل والمزايا

EN Download app
KO 앱 다운로드

MS Muat turun aplikasi
VI Tải xuống ứng dụng

TH ดาวน์โหลดแอป
AR تنزيل التطبيق

EN Quick start
KO 빠른 시작

MS Mula pantas
VI Hướng dẫn sử dụng nhanh

TH เริ่มต้นด่วน
AR البدء السريع

EN Digital manual
KO 디지털 설명서

MS Manual digital
VI Hướng dẫn kỹ thuật số

TH คู่มือดิจิทัล
AR الدليل الرقمي

English

Important

Read this Important Information leaflet carefully before you use the blender and save it for future reference.

Danger

- Never immerse the motor unit in water or any other liquid, nor rinse it under the tap. Use only a moist cloth to clean the motor unit.

Warning

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- Do not use the appliance if the plug, the mains cord or other parts are damaged.
- Never use the blender jar or mill beaker to switch the appliance on and off.
- Never let the appliance run unattended.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children shall not play with the appliance.
- Do not touch the blades, especially when the appliance is plugged in. The blades are very sharp.
- Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.
- The appliance is intended to be used in household only.
- Do not touch the cutting edges of the blender blade unit when handling, emptying the container and during cleaning. They are very sharp and you could easily cut your fingers on them.
- Make sure the appliance is properly cleaned. Especially the surfaces in contact with food. Details of cleaning can be found in figure 4.

Caution

- Switch off the appliance and always disconnect from supply if it is left unattended and before assembling, disassembling, approaching parts that move in use or cleaning.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not exceed the maximum indication on the blender jar and the mill.
- Do not exceed the maximum quantities and processing times indicated in the relevant table.
- The appliance can only be switched on if the blender jar or the mill is assembled on the motor unit correctly.

Blender

Warning

- Never reach into the blender jar with your fingers or an object while the appliance is running.
- Make sure the blade unit is securely fastened to the blender jar before you assemble the blender jar onto the motor unit.
- Do not touch the cutting edges of the blender blade unit when you handle or clean it. They are very sharp and you could easily cut your fingers on them.
- If the blade unit gets stuck, unplug the appliance before you remove the ingredients that block the blades.

Caution

- In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- Do not misuse the appliance to avoid potential injury.
- Never fill the blender jar with ingredients hotter than 80 °C.
- To prevent spillage, do not put more than 1.5 litres of liquid in the blender jar, especially when you process at a high speed. Do not put more than 1.25 litre in the blender jar when you process hot liquids or ingredients that tend to foam.
- If food sticks to the wall of the blender jar, switch off the appliance and unplug it. Then use a spatula to remove the food from the wall.
- Always make sure the lid is properly closed/assembled on the jar and the measuring cup is inserted properly in the lid before you switch on the appliance.
- Do not let appliance run for more than 2 minutes at time.
- Always let the appliance cool down to room temperature after each batch you process.
- Noise level: Lc = 86dB(A)

Electromagnetic fields (EMF)

This appliance complies with the applicable standards and regulations regarding exposure to electromagnetic fields.

Recycling



This symbol means that this product shall not be disposed of with normal household waste (2012/19/EU). Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

Built-in safety lock

This feature ensures that you can only switch on the appliance if the blender jar, the mill or the chopper bowl is assembled on the motor unit properly. If the blender jar, the mill or the chopper bowl is correctly assembled, the built-in safety lock will be unlocked.

Overheat protection

The appliance is equipped with overheat protection. If the appliance overheats, it switches off automatically (which might occur during heavy processing jobs or if the appliance is not used according to the instructions in the user manual). If this happens, first switch off and unplug the appliance and let it cool down to room temperature. Then check if the quantity of ingredients you are processing does not exceed the quantity mentioned in the user manual or if something is blocking the blade unit. Then put the mains plug back into the power outlet and switch on the appliance again.

Warranty and support

Versuni offers a two-year warranty after purchase on this product. This warranty is not valid if a defect is due to incorrect use or poor maintenance. Our warranty does not affect your rights under law as a consumer. For more information or for invoking the warranty, please visit our website www.philips.com/support.

Recipe

To prepare this recipe, you will need the Mill (Mini-Chopper). It's important to note that the Mill (Mini-Chopper) is not included as a standard accessory with every model in this product range. However, it can be easily ordered as an additional accessory. For detailed instructions on how to order accessories, please refer to the dedicated chapter on 'Ordering Accessories' in this user manual.

~ 200g Beef (2x2x2cm cube);

Put the beef cube in the Mill (Mini-chopper) and use Max. speed for 10 seconds.

한국어

주의 사항

본 블렌더를 사용하기 전에 이 중요 정보 책자를 주의 깊게 읽고 나중에 참조할 수 있도록 잘 보관하십시오.

위험

- 절대 본체를 물 또는 다른 액체에 담그거나 행구지 마십시오. 본체는 젖은 천으로만 닦으십시오.

경고

- 제품에 전원을 연결하기 전에, 제품을 표시된 전압과 사용 지역의 전압이 일치하는지 확인하십시오.
- 전원 코드가 손상된 경우, 안전을 위해 필립스 서비스 센터 또는 필립스 서비스 지정점에 의뢰하여 교체하십시오.
- 플러그, 전원 코드 또는 기타 부품이 손상된 경우에는 제품을 사용하지 마십시오.
- 블렌더 용기 또는 분쇄기 용기를 이용하여 전원을 켜거나 끄지 마십시오.
- 사람이 없는 상태에서 블렌더를 작동시키지 마십시오.
- 어린이가 사용하지 않도록 주의하십시오. 제품과 전원 코드는 어린이의 손이 닿지 않는 곳에 보관하십시오.
- 산체적, 감각적 또는 정신적인 능력이 부족하거나 경험과 지식이 충분하지 않은 사람이 이 제품을 사용하려면 제품 사용과 관련하여 안전하게 사용할 수 있도록 지시사항을 충분히 숙지한 사람의 도움을 받아야 합니다.
- 어린이가 제품을 가지고 놀지 않도록 하십시오.
- 특히 제품이 전원에 연결되어 있을 때는 칼날을 만지지 마십시오. 칼날은 매우 날카롭습니다.
- 뜨거운 액체를 푸드프로세서 또는 블렌더에 넣는 경우 갑작스러운 열기로 인해 스팀이 제품 밖으로 나올 수 있으니 조심하십시오.
- 본 제품은 가정용입니다.
- 용기를 취급할 때, 비울 때 세척할 때 블렌더 칼날부의 칼날을 만지지 마십시오. 매우 날카롭기 때문에 손을 다칠 위험이 있습니다.
- 제품이 제대로 청소되었는지 확인하십시오. 특히 음식물에 닿는 표면을 꼼꼼히 확인하십시오. 청소에 대한 자세한 내용은 그림 4를 참조하십시오.

주의

- 제품을 사용하지 않을 때, 제품을 조립, 분해 또는 세척하거나 작동 중인 부품을 만지기 전에는 전원을 끄고 전원 코드를 뽑으십시오.
- 다른 제조업체에서 만들었거나 필립스에서 권장하지 않은 제품 액세서리 또는 부품은 절대 사용하지 마십시오. 이러한 액세서리나 부품을 사용했을 경우에는 품질 보증이 무효화됩니다.
- 블렌더 용기 및 분쇄기의 최대 표시선을 초과하여 재료를 넣지 마십시오.
- 해당 표에 표시된 최대량 및 작동 시간을 초과하지 마십시오.
- 블렌더 용기 또는 분쇄기가 본체에 올바르게 장착된 경우에만 제품이 작동합니다.

블렌더

경고

- 제품이 작동 중일 때는 절대로 블렌더 용기 내부에 손이나 다른 물건을 넣지 마십시오.
- 블렌더 용기를 분체에 조립하기 전에 칼날이 블렌더 용기에 단단히 고정되어 있는지 확인하십시오.
- 블렌더 칼날을 다루거나 세척할 경우, 날카로운 부품을 만지지 않도록 주의하십시오. 매우 날카롭기 때문에 손을 다칠 위험이 있습니다.
- 칼날부에 음식물이 끼어 움직이지 않으면 먼저 전원 코드를 뽑은 다음, 칼날의 움직임을 방해하는 음식물을 꺼내십시오.

주의

- 열 차단 장치가 의도치 않게 재설정되어 위험한 상황이 발생하는 것을 막기 위해, 타이머와 같은 외부 전원 장치를 통해 제품에 전력을 공급하거나 설비 시상에 의해 정기적으로 전원이 꺼졌다 켜지는 회로에 제품을 연결하지 마십시오.
- 잠재적인 부상의 위험이 있으므로 제품을 분해 용도 이외의 목적으로 사용하지 마십시오.
- 블렌더 용기에 80°C 이상 되는 재료를 절대 넣지 마십시오.



	✓	✓	✓
	✗	✗	✓



