

HD2103



EN User manual  
ID Buku Petunjuk Pengguna  
MS Manual pengguna

VI Hướng dẫn sử dụng  
ZH-S 用户手册

**PHILIPS**



Specifications are subject to change without notice  
© 2018 Koninklijke Philips N.V.  
All rights reserved.

HD2103\_SP\_VI\_UM\_v5.0



## English

### 1 Your electric pressure cooker

Congratulations on your purchase, and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

### 2 What's in the box

Electric pressure cooker main unit  
Rice & Soup ladle  
User manual  
Warranty card

Measuring cup  
Safety leaflet  
Power cord

### Overview

① Pressure regulator valve	⑩ Control knob
② Floating valve	⑪ Heating element
③ Floater	⑫ Side handle
④ Locking pin	⑬ Water level indications
⑤ Inner pot	⑭ Sealing ring
⑥ Power socket	⑮ Top lid
⑦ Safety valve	⑯ Lid handle
⑧ Anti-block cap	⑰ Heating indicator
⑨ On/Off switch	⑱ Keep Pressure/Keep Warm indicator

### 3 Before first use

- Remove all packaging materials from the appliance.
- Take out all the accessories from the inner pot.
- Clean the parts of the electric pressure cooker thoroughly before using it for the first time (see chapter 'Cleaning').


#### Note

- Make sure all parts are completely dry before you start using the electric pressure cooker.

### 4 Using the electric pressure cooker

Before using the electric pressure cooker to cook food, you need to follow below preparations:


- Hold the lid handle and turn it clockwise until the top lid cannot move any more, then lift up the top lid.
- Take out the inner pot from the electric pressure cooker and put the pre-washed food in the inner pot.
- Put the inner pot back into the electric pressure cooker.

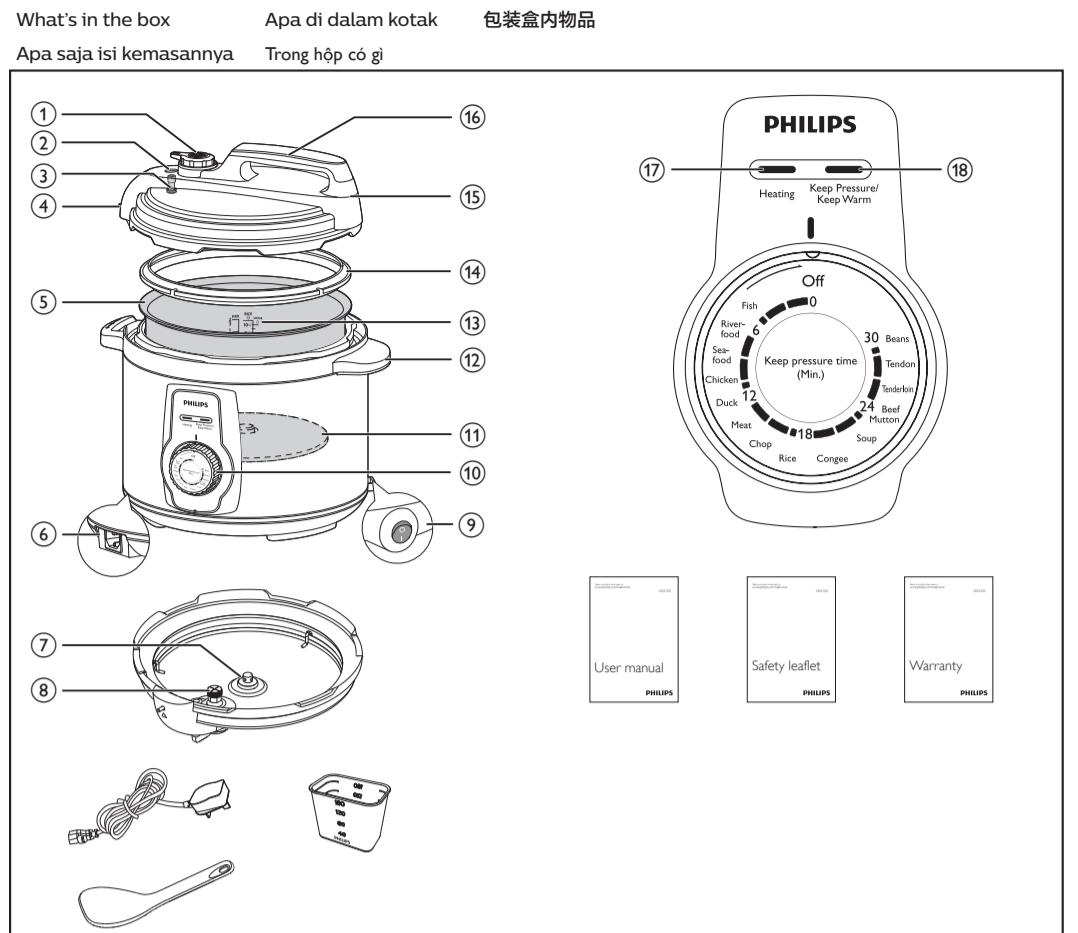

To disassemble the pressure regulator valve

Untuk melepaskan katup regulator tekanan


Untuk menangkanan injap pengatur tekanan

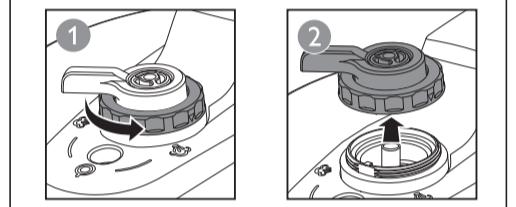

To assemble the pressure regulator valve

Untuk memasang katup regulator tekanan

Untuk memasang injap pengatur tekanan

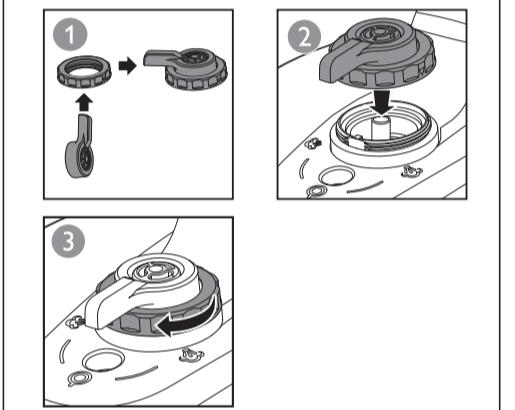

4 Place the top lid onto the electric pressure cooker and turn it anti-clockwise. You will hear a "click" sound when the top lid is properly locked.

5 Turn the pressure control valve to the sealed position (Seal).

#### Note

- Make sure the sealing ring is properly assembled around the inside of the top lid.
- Make sure the pressure regulator valve and floating valve are clean and not blocked.
- Make sure the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element or the magnetic switch.
- Make sure the inner pot is in proper contact with the heating element.

### Using the electric pressure cooker

#### Menggunakan peranak bertekanan listrik


#### Menggunakan periuk tekanan elektrik



#### Cooking food

#### Memasak makanan

#### Memasak makanan

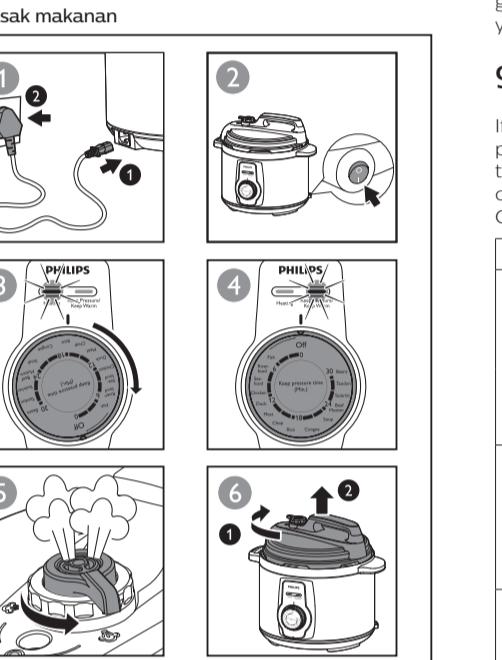

#### Assembling and disassembling the pressure regulator valve

#### Caution

- Do not disassemble the pressure regulator valve during cooking. Always unplug the electric pressure cooker and set the pressure keeping time. This is to avoid the pressure cooker to automatically switch to keep warm mode after heating.
- The pressure keeping timer will start counting when the working pressure is reached.
- After the cooking is finished and the pressure is released, unplug the electric pressure cooker to turn off the keep warm function or when not in use.

#### Note

- Choose the desired pressure keeping time according to the time indications on the control panel. You can also adjust the pressure keeping time for different types of food and your preference.

### 5 Specifications

Model Number	HD2103
Rated power output	900W
Rated capacity	5.0L
Warm keeping temperature	60–80 °C
Pressure keeping time	0–30 minutes

#### Note

- Always unplug the appliance if not used for a longer period.

### 6 Cleaning and Maintenance

#### Note

- Unplug the electric pressure cooker before starting to clean it.
- Wait until the electric pressure cooker has cooled down sufficiently before cleaning it.

#### Interior

Inside of the outer lid and the main body:

- Wipe with wrung out and damp cloth.
- Make sure to remove all the food residues stuck to the electric pressure cooker.

Heating element:

- Wipe with wrung out and damp cloth.
- Remove food residues with wrung out and damp cloth or toothpicks.

Sealing ring:

- Soak in warm water and clean with sponge.

## Indonesia

### 1 Penanak bertekanan listrik Anda

Selamat atas pembelian Anda dan selamat datang di Philips!

Untuk memanfaatkan sepenuhnya dukungan yang ditawarkan Philips, daftarkan produk Anda di www.Philips.com/welcome.

### 2 Apa saja isi kemasannya

Unit utama penanak bertekanan listrik  
Sendok Nasi & Sup  
Petunjuk Pengguna  
Kartu garansi

Gelas takar  
Pamflet keselamatan  
Kabel listrik

### Ikhlasar

• Saat memasak sup atau cairan kental, jangan mengeluarkan tekanan dengan memutar katup regulator tekanan ke posisi lubang uap karena cairan bisa menyembur dari katup kontrol tekanan. Tunggu hingga tekanan keluar dengan sendirinya dan floater turun sebelum membuka tutupnya.

• Bersihkan sisanya makanan dengan kain yang sudah diperas dan lembab.

• Setelah penanak bertekanan matanya, putar knop kontrol dan tetapkan waktu tekanan. Untuk menghindari penanak bertekanan beralih otomatis ke mode tetap hangat setelah memasak.

• Waktu tetap akan memulai bila tekanan yang tetap sudah dicapai.

• Setelah memasak selesai dan tekanan dilepaskan, cabut steker dari penanak bertekanan listrik untuk mematikan fungsi tetap hangat atau jika tidak digunakan.

### 3 Sebelum menggunakan alat pertama kali

#### 1 Troubleshooting

If your electric pressure cooker does not function properly or if the cooking quality is insufficient, consult the table below. If you are unable to solve the problem, contact a Philips service center or the Consumer Care Center in your country.

#### Problem

#### Solution

I have difficulties closing the top lid.

The sealing ring is not well assembled. Make sure the sealing ring is well assembled around the inside of the top lid.

The floater blocks the locking pin. Push down the floater so that it does not block the locking pin.

I have difficulties opening the top lid after the pressure is released.

The floater has not dropped. Push the floater down.

The food is not cooked.

Make sure that there is no foreign residue on the heating element and the outside of the inner pot before switching the electric pressure cooker on.

The heating element is damaged, or the inner pot is deformed. Take the cooker to your Philips dealer or a service center authorized by Philips.

Air or steam leaks from under the lid.

The sealing ring is not well assembled. Make sure the sealing ring is well assembled around the inside of the top lid.

There is food residue in the sealing ring. Make sure the sealing ring is clean.

The top lid is not properly closed. Make sure the top lid is properly closed.

The pressure level inside of the appliance is abnormal, in this case the safety valve will be releasing steam. Take the appliance to your Philips dealer or a service center authorized by Philips.

Air or steam leaks from the floating valve.

There is food residue in the rubber ring of the floating valve. Clean the rubber ring of the floating valve.

The rubber ring of the floating valve is broken. Replace the rubber ring.

The floater does not rise after the appliance starts pressurizing.

Make sure there is enough food and water in the inner pot.

The top lid or the pressure regulator valve has malfunction. Take the appliance to your Philips dealer or a service center authorized by Philips.

Caution

• Pastikan semua bagian benar-benar kering sebelum Anda mulai menggunakan penanak bertekanan listrik.

• Bersihkan bagian-bagian dari penanak bertekanan listrik dan masukkan makanan yang telah dicuci pada bagian bagian dalam.

• Masukkan piring bagian dalam kembali ke dalam penanak bertekanan listrik.

• Pasang tutup kontrol tekanan ke posisi tersegel (Seal).

• Cabut steker dari Soket Daya.

• Pastikan gelang penyegel terpasang dengan benar di sekeliling bagian dalam tutup atas.

• Pastikan katup regulator tekanan dan tutup atas berlapisan air yang benar. Anda akan mendengar suara "klik" bila tutup telah terkunci dengan benar.

• Keluarlah piring bagian dalam dari penanak bertekanan listrik dan masukkan piring bagian dalam yang telah dicuci pada bagian bagian dalam.

• Masukkan piring bagian dalam kembali ke dalam penanak bertekanan listrik.

• Pasang tutup kontrol tekanan ke posisi tersegel (Seal).

• Cabut steker dari Soket Daya.

• Pastikan gelang penyegel terpasang dengan benar di sekeliling bagian dalam tutup atas.

• Pastikan katup regulator tekanan dan tutup atas berlapisan air yang benar. Anda akan mendengar suara "klik" bila tutup telah terkunci dengan benar.

• Keluarlah piring bagian dalam dari penanak bertekanan listrik dan masukkan piring bagian dalam yang telah dicuci pada bagian bagian dalam.

• Masukkan piring bagian dalam kembali ke dalam penanak bertekanan listrik.

• Pasang tutup kontrol tekanan ke posisi tersegel (Seal).

• Cabut steker dari Soket Daya.

• Pastikan gelang penyegel terpasang dengan benar di sekeliling bagian dalam tutup atas.

• Pastikan katup regulator tekanan dan tutup atas berlapisan air yang benar. Anda akan mendengar suara "klik" bila tutup telah terkunci dengan benar.

• Keluarlah piring bagian dalam dari penanak bertekanan listrik dan masukkan piring bagian dalam yang telah dicuci pada bagian bagian dalam.

• Masukkan piring bagian dalam kembali ke dalam penanak bertekanan listrik.

• Pasang tutup kontrol tekanan ke posisi tersegel (Seal).

• Cabut steker dari Soket Daya.

• Pastikan gelang penyegel terpasang dengan benar di sekeliling bagian dalam tutup atas.

• Pastikan katup regulator tekanan dan tutup atas berlapisan air yang benar. Anda akan mendengar suara "klik" bila tutup telah terkunci dengan benar.

• Keluarlah piring bagian dalam dari penanak bertekanan listrik dan masukkan piring bagian dalam yang telah dicuci pada bagian bagian dalam.

• Masukkan piring bag

