

HD7768







English 6 한국어 15

Introduction

Thank you for buying Philips. To register your new product, please go to www.philips.com/grindbrew. On this website, you can also find handy videos, delicious recipes, frequently asked questions and get support.

General description (Fig. 1)

- 1 Filter basket
- 2 Drip stop
- 3 Filter basket holder
- 4 Water level indicator
- 5 Water reservoir lid
- 6 Bean container lid
- 7 Coarseness knob
- 8 Coffee bean container
- 9 Grinder funnel lid
- 10 Lock of grinder funnel lid
- 11 Water filling hole
- 12 Display
- 13 Pre-ground coffee icon
- 14 Number of cups
- 15 Coffee cup icon
- 16 Strength select coffee bean icon
- 17 Strength select button
- 18 Timer button
- 19 Control knob
- 20 Time indication
- 21 Timer icon
- 22 On/off button
- 23 Glass jug lid
- 24 Glass jug
- 25 Bean chute cleaning brush

Important

Danger

- Never immerse the appliance in water or any other liquid, nor rinse it under the tap.

Warning

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Do not use the appliance if the plug, the mains cord or the appliance itself is damaged.

- If the mains cord is damaged, you must have it replaced by Philips, a service center authorized by Philips or similarly qualified persons in order to avoid a hazard.
- Connect the appliance to an earthed wall socket.
- This appliance can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- Children shall not play with the appliance.
- Only use this appliance for its intended purpose to avoid potential hazard or injury.
- Do not let the mains cord hang over the edge of the table or worktop on which the appliance stands.
- Never pour water into the bean container, as this damages the appliance.
- Do not touch the grinding burrs of the of the appliance, especially when the appliance is connected to a wall socket.
- Do not touch the hot surfaces of the appliance when it operates.
- Do not empty the water reservoir by tilting the appliance, as this can damage the appliance. To empty the appliance, follow the instructions for flushing the appliance (see 'Flushing the appliance').
- If a problem occurs that you cannot solve by means of this user manual, contact the Consumer Care Center in your country. If the problem cannot be solved, take the appliance to a service center authorized by Philips for examination or repair. Do not attempt to repair the appliance yourself, otherwise your warranty becomes invalid.

8 English

Caution

- Do not place the appliance on a hot surface and prevent the mains cord from coming into contact with hot surfaces.
- Do not place the appliance in a cabinet when in use.
- Unplug the appliance if problems occur during grinding or brewing and before you clean it.
- Keep the plug and the wall socket dry.
- Do not lift and move the appliance while it is operating.
- The jug is hot during and after brewing. Always hold the jug by its handle.
- Never use the jug in a microwave oven.
- Wait until the appliance has cooled down before you store it. The hotplate and the coffee jug may be hot.
- After you have unpacked the appliance, make sure it is complete and undamaged. If in doubt, do not use the appliance but contact the Consumer Care Center in your country.
- This appliance is intended to be used in household and similar applications such as farm houses, bed and breakfast type environments, staff kitchen areas in shops, offices and other working environments, and by clients in hotels, motels and other residential type environments.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Before first use

Setting the clock

- 1 Put the mains plug in the wall socket. The time indication flashes on the display to indicate that you have to set the clock time.
- 2 Turn the control knob to set the hour. The hour indication flashes (Fig. 2).
- **3** Press the center of the control knob to confirm the hour (Fig. 3).
- 4 The minutes indication starts flashing to indicate that you have to set the minutes (Fig. 4).
- **5** Turn the control knob to set the minutes (Fig. 5).
- 6 Press the center of the control knob to confirm the minutes (Fig. 6).
- 7 The display shows the set clock time. The coffeemaker is now ready for use.

Setting the automatic switch-off time

You can choose how long you want your coffee to stay hot after brewing by adjusting the time after which the appliance automatically switches off. The default automatic switch-off time is 30 minutes. The maximum automatic switch-off time is 120 minutes. To adjust the automatic switch-off time, follow the steps below.

- 1 Make sure that the appliance is switched off but the mains plug is in the wall socket.
- 2 Press the center of the control knob until the display starts flashing.
- **3** Turn the control knob to increase or decrease the time. 1 is 10 minutes, 2 is 20 minutes, 3 is 30 minutes and so on until 12 is 120 minutes.
- 4 Press the center of the control knob to confirm the automatic switch-off time.

Note: The appliance always saves the last setting.

Flushing the appliance

Always flush the coffeemaker once before first use by following the steps below.

Warning: Never pour water into the bean container, as this damages the coffeemaker.

1 Open the water reservoir lid. Fill the water reservoir with fresh cold water up to the 8-cup indication (Fig. 7).

Caution: Do not put coffee beans or pre-ground coffee in the water reservoir.

- 2 Close the water reservoir lid.
- **3** Put the jug in the appliance (Fig. 8).
- 4 Press the on/off button (Fig. 9). The display lights up and the appliance beeps.
- 5 Press the strength select button (Fig. 10).
- **6** Turn the control knob to choose the pre-ground coffee setting (Fig. 11). The pre-ground coffee icon starts flashing.
- **7** Press the center of the control knob twice to confirm (Fig. 12). The appliance starts the flushing process.
- 8 Let the appliance operate until the flushing process is finished. It is finished when the appliance stops beeping.
- 9 Empty the jug.
- 10 Press the on/off button to switch off the appliance (Fig. 23).

Using the appliance

Filling the water reservoir

There are indications for 2 to 10 cups (275 ml to 1375 ml) on the water-level window. You can use these indications to determine how much water to put in the water reservoir. The reflection changes from light to dark for each cup of water added.

1 Open the water reservoir lid and fill the water reservoir with the required amount of cold water (Fig. 7).

Note: Do not fill the water reservoir beyond the 10-cup indication.

Note: Make sure that the amount of water you pour into the water reservoir is consistent with the number of cups you want to brew. The coffeemaker uses all the water in the water reservoir.

Using coffee beans

Warning: Always keep the water reservoir lid closed when you fill the coffee bean container with coffee beans. Otherwise coffee beans can fall into the water reservoir and block up the water inlet.

- 1 Open the coffee bean container lid (Fig. 13).
- 2 Fill the container with coffee beans. Make sure that there are enough coffee beans in the container for the amount of coffee you want to brew (Fig. 14).

Note: Always make sure that the bean container is at least half full.

Warning: To prevent the grinder from jamming, do not use unroasted or caramelized beans. Use coffee beans instead of espresso beans, as espresso beans may damage the grinder.

- **3** Open the filter basket holder (Fig. 15).
- 4 Place a paper filter (type 1x4 or no. 4) or the permanent filter in the filter basket (Fig. 16).
- **5** Close the filter basket holder.
- **6** Turn the coarseness knob to select the desired type of grind (from fine to coarse). There are nine grind settings (Fig. 17).

Tip: The coarseness knob allows you to choose between 9 different settings. The icons indicate 3 preselected optimal settings, but you can choose any setting in between. We advise you to experiment with the different grind settings to find out which setting you prefer.

- 7 Press the strength button (Fig. 10). The coffee bean icons start flashing.
- 8 Turn the control knob to select the desired coffee strength: 1 bean for mild coffee, 2 beans for medium-strong coffee or 3 beans for strong coffee.
- **9** Press the center of the control knob to confirm the strength (Fig. 6).
- **10** To select the number of cups, turn the control knob until the desired number of cups flashes on the display (Fig. 18).

Note: Please keep in mind that the coffeemaker uses all the water in the water reservoir. If you select a number of cups that is smaller than the amount of water, the coffee becomes weaker than you intended.

- 11 Press the center of the control knob to confirm the number of cups (Fig. 6).
- 12 Press the center of the control knob again. The appliance beeps and starts grinding the required amount of coffee beans. When the grinding process is finished, the appliance starts brewing coffee
- **13** Wait until the coffeemaker has stopped beeping before you remove the jug.

Note: After brewing, coffee drips from the filter basket for several seconds.

14 The appliance keeps your coffee hot until it switches off automatically. If you do not need your coffee to be kept hot, press the on/off button to switch off the appliance.

Using pre-ground coffee

If you want to use pre-ground coffee instead of coffee beans, follow the steps below.

- 1 Open the water reservoir lid and fill the water reservoir with the required amount of cold water (Fig. 7).
- 2 Open the filter basket holder (Fig. 15).
- 3 Place a paper filter (type 1x4 or no. 4) or the permanent filter in the filter basket (Fig. 16).
- 4 Put pre-ground coffee in the paper filter or in the permanent filter.
- 5 Close the filter basket holder.

- 6 Put the jug in the appliance (Fig. 8).
- 7 Press the on/off button (Fig. 9). The display lights up.
- 8 Press the strength select button (Fig. 10).
- **9** Turn the control knob to choose the pre-ground coffee setting (Fig. 11). The pre-ground coffee icon lights up.
- 10 Press the center of the control knob to confirm (Fig. 6).
- 11 Then press the center of the control knob again to start the brewing process (Fig. 6).
- 12 Wait until the coffeemaker has stopped beeping before you remove the jug.

Note: After brewing, coffee drips from the filter basket for several seconds.

13 The appliance keeps your coffee hot until it switches off automatically. If you do not need your coffee to be kept hot, press the on/off button to switch off the appliance (Fig. 23).

Setting the timer

The timer enables you to program the time at which you want the brewing process to start. Make sure that all steps of brewing coffee with either preground coffee or coffee beans have been taken before you set the timer.

- 1 Press the timer button (Fig. 19) and the timer icon will appear on the display. The hour indication flashes to indicate that you have to set the hour.
- 2 Turn the knob to set the hour (Fig. 20).
- **3** Press the center of the control knob to confirm the hour (Fig. 21). The minutes indication starts flashing to indicate that you have to set the minutes.
- 4 Turn the control knob to set the minutes (Fig. 22).
- 5 Press the center of the knob to confirm the minutes and the time set (Fig. 21). The timer is set and the brewing process will start at the preset time.

Note: To cancel the timer, simply press the timer button again and the timer icon will disappear from the display.

Drip stop function

The drip stop function enables you to remove the jug from the coffeemaker before the brewing process is finished. When you remove the jug, the drip stop stops the flow of coffee into the jug.

Note: The brewing process does not stop when you remove the jug. If you do not put the jug back into the appliance within 20 seconds, the filter basket overflows.

Cleaning and maintenance

Cleaning after every use

Never immerse the appliance in water or any other liquid, nor rinse it under the tap.

- 1 Press the on/off button to switch off the appliance (Fig. 23).
- 2 Remove the mains plug from the wall socket.
- **3** Wipe the outside of the coffeemaker with a damp cloth.
- **4** Clean the filter basket and the permanent filter with hot water and some washing-up liquid or clean them in the dishwasher.

12 English

Cleaning the grinder funnel

Important: Clean the grinder funnel every 1 to 2 weeks to prevent clogging with ground coffee. This is easily and quickly done by following the steps below.

Note: Make sure the coffee bean container is empty before you start the cleaning procedure.

- 1 Press the on/off button to switch off the appliance (Fig. 23).
- 2 Open the filter basket holder (Fig. 15).
- 3 Place a paper filter (type 1x4 or no. 4) or the permanent filter in the filter basket (Fig. 16).
- 4 Close the filter basket holder.
- 5 Use the end of the bean chute cleaning brush to open the grinder funnel lid (Fig. 24).
- 6 Press and hold the strength select button for 4 seconds (Fig. 25). The grinder starts cleaning itself.
- 7 When the grinder has stopped cleaning, use the bean chute cleaning brush to brush ground coffee residues into the lower part of the funnel (Fig. 26). The ground coffee residues fall into the filter basket.
- 8 Close the lid of the grinder funnel.
- 9 Remove the paper filter or permanent filter with the ground coffee residues.

Descaling the coffeemaker

Descale the coffeemaker when you notice excessive steaming or when the brewing time increases. It is advisable to descale the coffeemaker every two months. Only use white vinegar to descale, as other products may cause damage to the coffeemaker. For more information on descaling, see **www.philips.com/descale-coffeemaker**.

Warning: Never use vinegar with an acetic acid content of 8 % or more, natural vinegar, powder descalers or tablet descalers to descale the appliance, as this may cause damage.

- 1 Open the water reservoir lid.
- 2 Fill the water reservoir up to 10 cup indication with white vinegar (4 % acetic acid).
- **3** Place a paper filter (type 1x4 or no. 4) or the permanent filter in the filter basket and close the filter basket holder.
- 4 Put the empty jug in the appliance.
- **5** Put the mains plug in the wall socket.
- 6 Press the on/off button to switch on the appliance (Fig. 9). The display lights up.
- 7 Press the strength select button and turn the control knob to choose the pre-ground coffee setting (Fig. 11).
- 8 Press the center of the control knob twice to confirm and start the brewing process.
- **9** Wait until half of the vinegar has flowed into the jug. Then press the on/off button to interrupt the brewing process. Let the vinegar act for at least 15 minutes.
- **10** Press the on/off button to switch the coffeemaker back on.
- **11** Press the center of the control knob twice to let the appliance complete the brewing process (Fig. 12).
- 12 Empty the jug and remove the paper filter or the permanent filter with the scale residues.
- **13** Fill the water reservoir with fresh cold water and press the center of the control knob twice to start another brewing process (Fig. 12). Let the coffeemaker complete the entire brewing process and empty the jug.

Note: If necessary repeat step 14 until the water that comes out of the appliance no longer tastes or smells of vinegar.

- 14 Clean the filter basket and the jug with hot water and some washing-up liquid.
- 15 Press the on/off button on the front of the appliance to switch off the appliance (Fig. 23).

Warranty and support

If you need information or support, please visit **www.philips.com/support** or read the international warranty leaflet.

Ordering accessories

To buy accessories or spare parts, visit **www.philips.com/parts-and-accessories** or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

Recycling

- This symbol means that this product shall not be disposed of with normal household waste (2012/19/EU) (Fig. 27).
- Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit **www.philips.com/support** for a list of frequently asked questions or contact the Consumer Care Center in your country.

Problem	Solution
The appliance does not work.	Put the mains plug in the wall socket and press the on/off button to switch on the appliance.
	Make sure that the voltage indicated on the appliance corresponds to the local mains voltage.
	Fill the water reservoir with water.
	Close the lid of the grinder funnel.
The grinder does not work or does not work properly.	Make sure that you did not select pre-ground coffee. If the symbol for pre-ground coffee is visible on the display, you selected pre-ground coffee.
	Clean the grinder funnel by following the instructions.
When I use the grinder, the coffee is too weak.	Make sure that the number of cups you selected is consistent with the amount of water in the water reservoir. Please keep in mind that the coffeemaker uses up all the water in the water reservoir.
	Use the strength select button to set the coffee strength to 'strong'.
	Use coffee beans of a stronger blend or flavor.

14 English

When I use pre-ground coffee, the coffee is too weak.	Make sure that the amount of pre-ground coffee in the filter is consistent with the amount of water in the water reservoir. Please keep in mind that the appliance uses all the water in the water reservoir.
	Use ground coffee of a stronger blend or flavor.
	To increase the coffee strength, increase the amount of pre-ground coffee or decrease the amount of water.
The filter overflows when I remove the jug from the appliance while it is brewing coffee.	If you remove the jug for more than 20 seconds during the brewing process, the drip stop causes the filter basket to overflow. Also note that the coffee does not reach its full taste before the end of the brewing process. Therefore we advise you not to remove the jug and pour out the coffee before the end of the brewing process.
The appliance continues to drip long after the brewing process has ended.	The dripping is caused by condensation of steam. It is completely normal that the appliance drips for some time.
	If the dripping does not stop, the drip stop may be clogged. To clean the drip stop, open the filter basket holder and take out the filter basket. Rinse the filter basket and the drip stop under the tap.
The coffee is not hot enough.	The coffee in the jug cools down faster if you brew only a few cups. The coffee stays hot longer if you brew 10 cups, which is a full jug.
	coffee stays hot longer if you brew 10 cups, which is a full jug.
enough. The appliance does not start cleaning the grinder	coffee stays hot longer if you brew 10 cups, which is a full jug. Descale the appliance (see 'Descaling the coffeemaker').
enough. The appliance does not start cleaning the grinder	coffee stays hot longer if you brew 10 cups, which is a full jug. Descale the appliance (see 'Descaling the coffeemaker'). Make sure that the appliance is plugged in. Open the lid of the grinder funnel before you press and hold the
enough. The appliance does not start cleaning the grinder	coffee stays hot longer if you brew 10 cups, which is a full jug.Descale the appliance (see 'Descaling the coffeemaker').Make sure that the appliance is plugged in.Open the lid of the grinder funnel before you press and hold the strength select button for 4 seconds.Press and hold the strength select button for 4 seconds until the grinder
enough. The appliance does not start cleaning the grinder funnel. The appliance works but	 coffee stays hot longer if you brew 10 cups, which is a full jug. Descale the appliance (see 'Descaling the coffeemaker'). Make sure that the appliance is plugged in. Open the lid of the grinder funnel before you press and hold the strength select button for 4 seconds. Press and hold the strength select button for 4 seconds until the grinder starts cleaning itself.

소개

필립스 제품을 구입해 주셔서 감사합니다. 새 제품을 등록하시려면 www.philips.com/grindbrew를 참조하십시오. 이 웹 사이트에서는 유용한 동영상, 맛있는 레시피, 자주 하는 질문을 찾고 지원을 받을 수 있습니다.

구성품 명칭(그림 1)

필터 용기 1 2 누수 방지기 필터 용기 홀더 3 4 수위 표시기 급수통 뚜껑 5 6 커피 원두 용기 뚜껑 분쇄 정도 조절기 7 8 커피 원두 용기 9 분쇄기 주입구 뚜껑 10 분쇄기 주입구 뚜껑 잠금 장치 11 물 주입구 12 디스플레이 13 분쇄 커피 아이콘 14 컵 수 15 커피컵아이콘 16 농도 선택 커피 원두 아이콘 17 농도 선택 버튼 18 타이머 버튼 19 조절기 20 시간 표시 21 타이머 아이콘 22 전원 버튼 23 유리 용기 뚜껑 24 유리 용기 25 분쇄 커피 투입구 청소용 브러시

중요 사항

위험

- 절대 물이나 다른 액체에 제품을 담그거나 헹구지 마십시오.

경고

- 제품에 전원을 연결하기 전에, 제품에 표시된 전압과 사용 지역의 전압이 일치하는지 확인하십시오.
- 만약 플러그나 전원 코드 또는 제품이 손상되었을 경우에는 제품을 사용하지 마십시오.
- 전원 코드가 손상된 경우, 안전을 위해 필립스 서비스 센터 또는 필립스 서비스 지정점에 의뢰하여 교체하십시오.
- 제품은 접지된 벽면 콘센트에 연결하십시오.
- 8세 이상의 어린이와 신체 감각 및 인지 능력이 떨어지거나 경험과 지식이 풍부하지 않은 사람이 이 제품을 사용하려면 제품 사용과 관련하여 안전하게 사용할 수 있도록 지시사항을 충분히 숙지한 사람의 도움을 받아야 합니다. 8세 미만 또는 보호하에 있지 않은 어린이가 제품 청소 및 관리를 하도록 두어서는 안 됩니다. 제품 및 코드를 8세 미만 어린이의 손이 닿지 않는 장소에 보관하십시오.
- 어린이가 제품을 가지고 놀지 않도록 하십시오.

16 한국어

- 잠재적인 위해 또는 손상을 방지하기 위해 사용 설명서에 나온 본래 용도로만 제품을 사용하십시오.
- 제품이 올려져 있는 식탁이나 조리대의 가장자리로 전원 코드가 흘러내리지 않도록 하십시오.
- 제품이 손상될 수 있으므로 커피 원두 용기에 물을 붓지 마십시오.
- 특히 제품이 전원에 연결되어 있을 때 제품의 분쇄기를 만지지 마십시오.
- 제품이 작동할 때 뜨거운 표면을 만지지 마십시오.
- 제품을 기울여 급수통을 비울 경우 제품이 손상될 수 있습니다. 제품을 비우려면 제품 (보기 '제품 세척') 세척 지침을 따르십시오.
- 사용자 설명서에 나온 방법으로 해결할 수 없는 문제가 발생한다면 해당 지역 고객 상담실에 문의하십시오. 문제를 해결할 수 없으면 필립스 지정 서비스 센터에서 제품의 검사 또는 수리를 요청하십시오. 품질 보증이 무효화되므로, 제품을 직접 수리하지 마십시오.

주의

- 제품을 뜨거운 곳에 놓지 마시고 전원 코드가 뜨거운 표면과 접촉하지 않도록 주의하십시오.
- 제품을 사용할 때에는 캐비닛에 두지 마십시오.
- 재료를 분쇄하거나 추출하는 도중에 문제가 발생한 경우 또는 제품 청소 시, 제품의 전원 코드를 뽑으십시오.
- 전원 플러그 및 벽면 콘센트를 건조한 상태로 유지하십시오.
- 작동 중에는 제품을 들거나 옮기지 마십시오.
- 추출 도중과 그 이후에는 용기가 뜨겁습니다. 항상 용기의 손잡이를 잡으십시오.
- 커피 용기를 전자레인지에서 사용하지 마십시오.
- 제품이 충분히 식은 다음 보관하십시오. 열판과 커피 용기가 뜨거울 수 있습니다.
- 제품의 포장을 푼 후 완전하고 손상된 곳은 없는지 확인하십시오. 의심이 들면 제품을 사용하지 마시고 해당 지역 고객 상담실에 문의하십시오.
- 본 제품은 가정 및 유사 환경(예: 농가, 민박 시설, 매장과 사무실 및 기타 작업장의 직원용 탕비실, 호텔
 및 기타 숙박 시설의 객실 등)에서 사용하도록 설계되었습니다.

EMF(전자기장)

이 Philips 제품은 EMF(전자기장) 노출과 관련된 모든 기준 및 규정을 준수합니다.

처음 사용 전

시계 설정

- 전원 플러그를 벽면 콘센트에 꽂으십시오. 디스플레이의 시간 표시가 깜박이며 시계 시간을 설정해야 함을 알려줍니다.
- 2 조절기를 돌려 시간을 설정합니다. 시간 표시가 깜박입니다 (그림 2).
- 3 조절기의 가운데를 눌러 시간 (그림 3)을 적용합니다.
- 4 분 표시가 깜박이기 시작하며 분 (그림 4)을 설정해야 함을 알려줍니다.
- 5 조절기를 돌려 분 (그림 5)을 설정합니다.
- 6 조절기의 가운데를 눌러 분 (그림 6)을 적용합니다.
- 7 디스플레이에 설정한 시계 시간이 표시됩니다. 이제 커피메이커를 사용할 수 있습니다.

자동 전원 꺼짐 시간 설정

제품 전원이 자동으로 꺼지도록 시간을 조정하여 추출 후 커피를 얼마 동안 뜨겁게 유지할지 선택할 수 있습니다. 기본 자동 전원 꺼짐 시간은 30분으로 설정되어 있습니다. 최대 120분까지 자동 전원 꺼짐 시간을 설정할 수 있습니다. 자동 전원 꺼짐 시간을 조절하려면 다음 단계를 따르십시오.

1 전원 플러그가 벽면 콘센트에 꽂힌 상태에서 제품의 전원이 꺼져 있는지 확인합니다.

- 2 디스플레이가 깜빡일 때까지 조절기 가운데를 누릅니다.
- 3 조절기를 돌려 시간을 늘리거나 줄입니다. 1은 10분, 2는 20분, 3은 30분이며 최대 120분까지 설정할 수 있습니다.
- 4 조절기 가운데 눌러 자동 전원 꺼짐 시간을 적용합니다.

참고: 제품에는 항상 마지막 설정이 저장됩니다.

제품 세척

처음 사용하기 전에 항상 아래의 단계에 따라 커피메이커를 한 번 세척해야 합니다.

경고: 커피메이커가 손상될 수 있으므로 커피 원두 용기에 물을 붓지 마십시오.

1 급수통 뚜껑을 엽니다. 급수통에 깨끗하고 차가운 물을 8컵 표시선 (그림 7)까지 채우십시오.

주의: 급수통에 커피 원두 또는 분쇄 커피를 넣지 마십시오.

- 2 급수통 뚜껑을 닫습니다.
- 3 제품 (그림 8)에 용기를 넣습니다.
- 4 전원 버튼 (그림 9)을 누릅니다. 디스플레이가 켜지고 제품에서 신호음이 울립니다.
- 5 농도 선택 버튼 (그림 10)을 누릅니다.
- 6 조절기를 돌려 분쇄 커피 설정 (그림 11)을 선택합니다. 분쇄 커피 아이콘이 깜박이기 시작합니다.
- 7 조절기 가운데를 두 번 눌러 적용 (그림 12)합니다. 세척 과정이 시작됩니다.
- 8 세척 과정이 완료될 때까지 제품을 작동시킵니다. 세척 과정이 완료되면 신호음이 멈춥니다.
- 9 용기를 비웁니다.
- 10 전원 버튼을 눌러 제품 (그림 23)의 전원을 끕니다.

제품 사용

급수통 채우기

수위 표시창에 2~10컵(275 ml~1375 ml)의 표시선이 있습니다. 이 표시선에 따라 급수통에 물을 얼마나 넣을지 정할 수 있습니다. 물이 채워지는 컵 수에 따라 표시등의 불빛이 꺼집니다.

1 급수통 뚜껑을 열고 차가운 물 (그림 7)을 필요한 만큼 채웁니다.

참고: 10컵 표시선을 초과하여 급수통에 물을 채우지 마십시오.

참고: 추출하려는 커피의 컵 수와 급수통에 있는 물의 양이 동일해야 합니다. 커피메이커는 급수통에 있는 모든 물을 사용합니다.

커피 원두의 사용

경고፡ 커피 원두 용기에 커피 원두를 채울 때 항상 급수통 뚜껑이 닫혀 있어야 합니다. 그렇지 않으면 커피 원두가 급수통에 떨어져 물 주입구가 막힐 수 있습니다.

- 1 커피 원두 용기 뚜껑 (그림 13)을 엽니다.
- 2 용기에 커피 원두를 채웁니다. 추출 (그림 14)하려는 커피의 양만큼 용기에 충분한 커피 원두가 있는지 확인합니다.

참고: 항상 커피 원두 용기에 적어도 절반 가량 채워져 있는지 확인합니다.

18 한국어

경고: 볶지 않은 원두나 캐러멜 원두를 사용할 경우, 분쇄기 낌 현상으로 인하여 제품에 손상이 일어날 수 있으니 사용하지 마십시오. 에스프레소 원두로 인해 분쇄기가 손상될 수 있으므로 일반 커피 원두를 사용하십시오.

- 3 필터 용기 홀더 (그림 15)를 엽니다.
- 4 필터 용기 (그림 16)에 종이 필터(1x4 또는 no.4 규격제품) 또는 영구 필터를 놓습니다.
- 5 필터 용기를 닫습니다.
- 6 분쇄 정도 조절기를 원하는 분쇄 유형(미세에서 굵음까지)에 선택하여 맞춥니다. 아홉 가지 분쇄 설정 (그림 17)이 있습니다.

도움말: 분쇄 정도 조절기를 사용하여 아홉 가지 설정을 선택할 수 있습니다. 세 가지 최적의 설정이 사전 선택되어 표시되지만 아이콘에서 다른 설정을 선택할 수도 있습니다. 여러 분쇄 설정을 시도하여 취향에 맞게 설정을 맞추십시오.

- 7 농도 버튼 (그림 10)을 누릅니다. 커피 원두 아이콘이 깜박이기 시작합니다.
- 8 조절기를 돌려 원하는 커피 농도를 선택합니다. 부드러운 커피는 원두 1개, 중간은 원두 2개, 진한 커피는 원두 3개입니다.
- 9 조절기 가운데를 눌러 농도 (그림 6)를 적용합니다.
- 10 디스플레이 (그림 18)에 원하는 컵 수가 깜빡일 때까지 조절기를 돌려 컵 수를 선택합니다.

참고: 커피메이커는 급수통에 있는 모든 물을 사용한다는 점을 유의하십시오. 물의 양보다 적은 컵 수를 선택하는 경우 커피가 연해집니다.

- 11 조절기 가운데를 눌러 설정한 컵 (그림 6) 수를 적용합니다.
- 12 조절기 가운데를 다시 누릅니다. 제품에서 신호음이 울리고 필요한 만큼의 커피 원두를 분쇄합니다. 분쇄 과정이 완료되면 커피를 추출하기 시작합니다.
- 13 커피메이커의 신호음이 멈춘 후 용기를 분리합니다.

참고: 추출 후 몇 초간 필터 용기에서 커피가 나옵니다.

14 자동으로 전원이 꺼지기 전까지 커피를 뜨겁게 유지합니다. 커피를 뜨겁게 유지할 필요가 없는 경우 전원 버튼을 눌러 제품의 전원을 끕니다.

분쇄 커피 사용

원두 커피 대신 분쇄 커피를 사용하려면 다음 단계를 따르십시오.

- 1 급수통 뚜껑을 열고 차가운 물 (그림 7)을 필요한 만큼 채웁니다.
- 2 필터 용기 홀더 (그림 15)를 엽니다.
- 3 필터 용기 (그림 16)에 종이 필터(1x4 또는 no.4 규격제품) 또는 영구 필터를 놓습니다.
- 4 종이 필터 또는 영구 필터에 분쇄 커피를 넣습니다.
- 5 필터 용기를 닫습니다.
- 6 제품 (그림 8)에 용기를 넣습니다.
- 7 전원 버튼 (그림 9)을 누릅니다. 디스플레이가 켜집니다.
- 8 농도 선택 버튼 (그림 10)을 누릅니다.
- 9 조절기를 돌려 분쇄 커피 설정 (그림 11)을 선택합니다. 분쇄 커피 아이콘이 켜집니다.
- 10 조절기 가운데를 눌러 적용 (그림 6)합니다.
- 11 그런 다음 조절기 가운데를 다시 눌러 추출 과정 (그림 6)을 시작합니다.
- 12 커피메이커의 신호음이 멈춘 후 용기를 분리합니다.

참고: 추출 후 몇 초간 필터 용기에서 커피가 나옵니다.

13 자동으로 전원이 꺼지기 전까지 커피를 뜨겁게 유지합니다. 커피를 뜨겁게 유지할 필요가 없는 경우 전원 버튼을 눌러 제품 (그림 23)의 전원을 끕니다.

타이머 설정

타이머로 추출 시작 시간을 설정할 수 있습니다. 타이머를 설정하기 전에 분쇄 커피나 커피 원두로 커피를 추출하는 모든 단계가 진행되는지 확인하십시오.

- 1 타이머 버튼 (그림 19)을 누르면 디스플레이에 타이머 아이콘이 표시됩니다. 시간 표시가 깜박이며 시간을 설정해야 함을 알려줍니다.
- 2 조절기를 돌려 시간 (그림 20)을 설정합니다.
- 3 조절기의 가운데를 눌러 시간 (그림 21)을 적용합니다. 분 표시가 깜박이기 시작하며 분을 설정해야 함을 알려줍니다.
- 4 조절기를 돌려 분 (그림 22)을 설정합니다.
- 5 조절기의 가운데를 눌러 분과 시간 설정 (그림 21)을 적용합니다. 타이머를 설정하면 설정된 시간에 추출 과정이 시작됩니다.

참고: 타이머를 취소하려는 경우, 타이머 버튼을 다시 누르면 디스플레이에서 타이머 아이콘이 사라집니다.

누수 방지 기능

누수 방지 기능이 있어 추출 과정이 끝나기 전에 커피메이커에서 용기를 꺼낼 수 있습니다. 용기를 꺼낼 때 누수 방지기가 커피가 용기로 내려가지 않도록 막아줍니다.

참고: 용기를 꺼내도 추출 과정이 중단되지 않습니다. 20초 이내에 용기를 제품에 넣지 않으면 필터 용기가 넘칩니다.

청소 및 유지관리

매 사용 후 세척

절대 물이나 다른 액체에 제품을 담그거나 헹구지 마십시오.

1 전원 버튼을 눌러 제품 (그림 23)의 전원을 끕니다.

- 2 벽면 콘센트에서 전원 플러그를 뽑으십시오.
- 3 커피메이커 외부는 젖은 헝겊으로 닦습니다.
- 4 필터 용기 및 영구 필터를 소량의 세제를 푼 따뜻한 물에 세척하거나 식기 세척기로 세척하십시오.

분쇄기 주입구 세척

중요 사항: 분쇄기 주입구가 분쇄 커피로 인해 막힐 수 있으니 1~2주에 한 번씩 세척하십시오. 다음 단계에 따라 쉽고 빠르게 세척할 수 있습니다.

참고: 커피 원두 용기를 비운 후 세척 절차를 시작하십시오.

- 1 전원 버튼을 눌러 제품 (그림 23)의 전원을 끕니다.
- 2 필터 용기 홀더 (그림 15)를 엽니다.
- 3 필터 용기 (그림 16)에 종이 필터(1x4 또는 no.4 규격제품) 또는 영구 필터를 놓습니다.
- 4 필터 용기를 닫습니다.
- 5 분쇄 커피 투입구 청소용 브러시의 끝을 사용하여 분쇄기 주입구 뚜껑 (그림 24)을 엽니다.
- 6 농도 선택 버튼을 4초 (그림 25)동안 누릅니다. 분쇄기 자동 세척이 시작됩니다.
- 7 분쇄기 세척이 완료되면 분쇄 커피 투입구 청소용 브러시로 투입구 (그림 26) 하단부에 있는 분쇄 커피 찌꺼기를 털어 냅니다. 분쇄 커피 찌꺼기가 필터 용기에 떨어집니다.
- 8 분쇄기 주입구 뚜껑을 닫으십시오.

20 한국어

9 분쇄 커피 찌꺼기가 있는 종이 필터 또는 영구 필터를 분리합니다.

커피메이커의 석회질 제거

수증기가 과도하게 발생하거나 추출 시간이 길어지면 커피메이커의 석회질을 제거하십시오. 두 달 간격으로 석회질을 제거하는 것이 좋습니다. 흰 식초 외에 다른 물질을 사용할 경우 커피메이커가 손상될 수 있습니다. 석회질 제거에 대한 자세한 정보는 www.philips.com/descale-coffeemaker를 참조하십시오.

경고፡ 제품의 석회질을 제거할 때 아세트산 8 % 이상의 식초, 천연 식초, 분말형 석회질 제거제 또는 석회질 제거용 알약은 절대 사용하지 마십시오. 제품이 손상될 수 있습니다.

- 1 급수통 뚜껑을 엽니다.
- 2 급수통에 흰 식초(아세트산 4 %)를 최대 10컵 표시선까지 채우십시오.
- 3 필터 용기에 종이 필터(1x4 또는 no.4 규격제품) 또는 영구 필터를 놓고 필터 용기 홀더를 닫습니다.
- 4 제품에 빈 용기를 넣습니다.
- 5 전원 플러그를 벽면 콘센트에 꽂으십시오.
- 6 전원 버튼을 눌러 제품 (그림 9)을 켜십시오. 디스플레이가 켜집니다.
- 7 농도 선택 버튼을 누르고 조절기를 돌려 분쇄 커피 설정 (그림 11)을 선택합니다.
- 8 조절기 가운데를 두 번 눌러 적용하고 추출 과정을 시작합니다.
- 9 식초의 절반이 용기에 들어갈 때까지 기다립니다. 그런 다음 전원 버튼을 눌러 추출 과정을 중단합니다. 식초를 최소 15분 동안 불립니다.
- 10 전원 버튼을 눌러 커피메이커를 다시 켭니다.
- 11 조절기 가운데를 두 번 눌러 추출 과정 (그림 12)을 완료합니다.
- 12 용기를 비우고 석회질 잔류물이 있는 종이 필터 또는 영구 필터를 분리합니다.
- 13 급수통에 차가운 물을 채우고 조절기 가운데를 두 번 눌러 추출 과정 (그림 12)을 다시 시작합니다. 커피메이커에서 추출 과정이 끝나면 완료하면 용기를 비웁니다.

참고: 필요한 경우, 제품에서 나온 물이 더 이상 식초 맛이나 향이 느껴지지 않을 때까지 14단계를 반복합니다.

14 필터 용기 및 영구 필터를 소량의 세제를 푼 따뜻한 물에 세척합니다.

15 전면의 전원 버튼을 눌러 제품 (그림 23) 전원을 끕니다.

품질 보증 및 지원

보다 자세한 정보나 지원이 필요한 경우에는 필립스 웹사이트(www.philips.com/support)를 방문하거나 국제 보증 리플릿을 참조하십시오.

액세서리 주문

액세서리 또는 예비 부품을 구입하려면 www.philips.com/parts-and-accessories를 방문하거나 필립스 대리점에 문의하십시오. 또한 해당 국가의 필립스 고객 상담실에 문의하셔도 됩니다(연락처 정보는 국제 보증서 참조).

재활용

- 이 기호는 본 제품을 일반 가정용 쓰레기와 함께 폐기하면 안 됨을 의미합니다(2012/19/EU) (그림 27).
- 전기 및 전자 제품의 분리 수거에 대한 해당 국가의 규정을 준수하십시오. 제품을 올바르게 폐기하면 환경과 인체 건강에 미치는 부정적인 영향을 예방할 수 있습니다.

문제 해결

이 장에서는 제품을 사용하면서 접할 수 있는 가장 일반적인 문제를 다룹니다. 아래 정보를 통해 문제를 해결하지 못한 경우 www.philips.com/support를 방문하여 자주 묻는 질문(FAQ) 목록을 참조하거나 해당 국가의 필립스 고객 지원 센터로 문의하십시오.

문제점	해결책
제품이 작동하지 않습니다.	전원 플러그를 벽면 콘센트에 꽂은 다음 제품의 전원 버튼을 눌러 전원을 켜십시오.
	제품에 표시된 전압과 사용 지역의 전압이 일치하는지 확인하십시오.
	급수통에 물을 채우십시오.
	분쇄기 주입구 뚜껑을 닫으십시오.
분쇄기가 제대로 작동하지 않습니다.	분쇄 커피가 선택되어 있지 않은지 확인하십시오. 분쇄 커피를 선택한 경우 디스플레이에 분쇄 커피 기호가 보입니다.
	다음 지침에 따라 분쇄기 주입구를 세척하십시오.
분쇄기를 사용하면 커피가 너무 연합니다.	선택한 컵의 수와 급수통에 있는 물의 양이 동일한지 확인하십시오. 커피메이커는 급수통에 있는 모든 물을 사용한다는 점을 유의하십시오.
	농도 선택 버튼을 사용하여 커피 농도를 '진함'으로 설정합니다.
	더 진한 블렌드와 향의 커피 원두를 사용합니다.
분쇄 커피를 사용하면 커피가 너무 연합니다.	필터에 넣은 분쇄 커피의 양과 급수통에 있는 물의 양이 동일한지 확인하십시오. 제품은 급수통에 있는 모든 물을 사용한다는 점을 유의하십시오.
	더 진한 블렌드와 향의 분쇄 커피를 사용합니다.
	커피 농도를 높이려면 분쇄 커피의 양을 늘리거나 물의 양을 줄이십시오.
커피가 추출되는 동안 제품에서 용기를 분리하면 필터가 넘칩니다.	추출 과정에서 용기를 20초 이상 분리해 두는 경우 필터 용기가 넘치는 것을 방지하기 위해 누수 방지 기능의 작동이 멈춥니다. 또한 커피는 추출 과정이 끝나기 전에는 완전한 맛을 낼 수 없습니다. 따라서 추출 과정이 끝나기 전에는 용기를 분리하여 커피를 따라내지 않는 것이 좋습니다.
추출 과정이 끝난 후에도 오랫동안 제품에서 물이 떨어집니다.	스팀이 액화되면서 물이 떨어지는 것입니다. 제품에서 몇 차례의 누수가 발생하는 것은 일반적인 현상입니다.
	계속 물이 떨어지는 경우 누수 방지 부품이 막혀 있을 수 있습니다. 누수 방지 부품을 세척하려면 필터 용기 홀더를 열고 필터 용기를 꺼냅니다. 필터 용기와 누수 방지 부품을 수돗물로 헹굽니다.
커피가 충분히 뜨겁지 않습니다.	커피를 몇 컵만 추출할 경우 용기에 담긴 커피가 빨리 식습니다. 용기 가득(10컵) 커피를 추출하면 커피 온도를 보다 오래 유지할 수 있습니다.
	제품 (보기 '커피메이커의 석회질 제거')의 석회질을 제거하십시오.
제품에서 분쇄기 주입구 세척이 시작되지 않습니다.	제품이 전원에 연결되어 있는지 확인하십시오.
	분쇄기 주입구 뚜껑을 연 다음 4초 동안 농도 선택 버튼을 누릅니다.

22 한국어

농도 선택 버튼을 4초 정도 길게 누르면 그라인더 자동 세척이 시작됩니다.

제품이 작동할 때 신호음이 들립니다.	분쇄기 주입구 뚜껑이 올바르게 닫혀있는지 확인하십시오.
커피 원두를 너무 빨리 소비하는 것 같습니다.	온전한 커피 한 컵을 추출하려면 일정량의 분쇄 커피가 필요합니다. 매 컵 최적의 분쇄 커피 양을 얻기 위해 제품에서 사용하는 커피 원두의 양은 정상입니다.
타이머가 작동하지 않습니다.	타이머를 설정하기 전에 커피 원두나 분쇄 커피로 커피를 추출하는 모든 단계를 완료하도록 하십시오.

제조번호 부여기준 : 본 제품의 제조번호는 4자리,5자리,6자리,9자리로 표기될 수 있습니다. (1) 4자리일 경우 : 앞의 두 자리는 연도를,뒤의 두 자 리는 생산된 주를 의미합니다. 예) 0632 → 2006년 32번째 주에 생산 (2) 5자리일 경우 : 앞의 두 자리는 연도를,다음 두 자리는 생산된 주를, 마지 막 자리는 생산된 요일을 의미합니다. 예) 06243 → 2006년 24번째 주의 수요일 생산 (3) 6자리일 경우 : 앞의 두 자리는 연도를,다음 두 자리는 월 을, 마지막 두 자리는 일을 의미합니다. 예) 061125 → 2006년 11월 25일 생산 (4) 9자리일 경우 : 앞의 한 자리는 제조국을, 다음 두 자리는 연도를, 다음 두 자리는 생산된 저름, 다음 한 자리는 공장의 생산라인을, 마지막 3자리는 그 주에 생산된 제품의 일련번호를 의미합니다. 예) 507402001 → 네덜란드에서 2007년 40번째 주에 2번 생산라인에서 첫 번째 생산 (5) 기타제조번호에 대한 문의사항은 080~600~6600 으로 연락바랍니다.

































2x





















© 2020 Koninklijke Philips N.V. All rights reserved 3000.057.2004.1 (21/7/2020)





>75 % recycled paper >75 % papier recyclé