Fresh water

Switch on

> 2 > >

Remove accessories

Mount drip tray and

if the cappuccinatore

Measure water

Read strip after 1 min.

Hardness

Hardness 4

Hardness 2 Hardness 3

hardness

drip grid













see page (

## Supplied accessories



Key for mounting and dismounting the sieve



Test strip for water hardness



Measuring dipper

**Technical data** 

-	Туре	
-	Nominal	voltag

- Mains cable

- Nominal output Pump pressure

Preparation time

- Dosage of water quantity

Steam volume

Weight (net)

SUP 016 RE

Espresso approx. 20 sec/cup, coffee approx. 30 sec/cup

Coffee grounds ejection

Capacity

- Dimensions (L x H x D)

approx. 15 bar

automatic

see type plate on machine

1.2 m

see type plate on machine

electronic, continuous

water tank: approx. 2.4 l dregs drawer: approx. 300 g

continually adjustable approx. 33 x 45 x 40 cm

approx. 70 x 45 x 40 cm with opened service door approx. 16 kg

This TSM SUCCESS MANUAL® has been examined by SEV for conformity with the safety-relevant standards, and has been analysed by an applicationoriented risk analysis for the completeness and correctness of the indications for a safe use of the appliance. Thereby we assume a use with which can be reckoned based on common sense ´



TSM SUCCESS MANUAL® - safe to use - easy to understand due to TSM®-Total Security Management and ergonomic communication®

## TROUBLESHOOTING

No display

No power to the machine

- Switch on main power switch

- Close service door - Check plug, connection and fuses

Preparation cycle does not begin Display

**BREW UNIT MISS.** Insert brewing unit **BREWUNIT BLOCK.** Clean brewing unit **DREGDRAW. MISS.** Insert dregs drawer **GRINDER BLOCKED** ▶ Clean grinding unit **ENERGY SAVING** ▶ Press «ENTER»

With «coffee powder» selected, only water comes instead of coffee

Coffee is not hot enough

No hot water/steam

- Fill a measuring dipper with ground coffee

Preheat the cups Modify temperature

- If necessary: clean brewing unit

- If necessary: descale

- Clean hot water / steam nozzle with a thin l needle. Caution: carry out this operation only when machine is shut off and tap closed

Heating time too long, not enough water

Brewing unit cannot be removed Attach dregs drawer

although the dregs drawer is removed...

 
Brewing unit cannot be inserted

Hot water/steam nozzle is blocked

- Descale machine Close service door

Switch on machine The brewing unit is released

Continue with



### possible damage to machine · Follow strictly the manufacturers

instructions for use out this procedure only when all parts of the machine have cooled down

Prepare descalina

Reset descale display

Reset brewing unit

1. Place large receptacle under hot water/ steam nozzle

2. Fill descaling solution into the water tank according to manufacturer's instructions

 Press programming key
Search for **DESCALING** with Start descaling Cancel with ESC 3. Start cycle with ENTER

1. Open turning knob **MACHINE IS DESCALING** Wait approx. 45 min.

**DESCALING FINISHED** Close turning knob, press ENTER FILL WATERTANK Rinse + fill water tank 2. Open turning knob

> 3. Let tank contents run out 4. Close turning knob, press ENTER

Cancel with ESC

**RINSING FINISHED** > Press ESC

. Press programming key 2. Search for **SIGNAL.DESCAL.** with -> ENTER 3. Search for **YES** with  $\longrightarrow$  => ENTER

Dregdrawer full

Casing

rewing uni

ver clean the brewing

2.1 Loosen sieve with key...

nit in a dishwasher

2,2 ...and remove

Cappuccinatore

and cold machine

necessary with a switched off

Remove mains from power socket before cleaning the machine Do not dry parts of the coffee machine in a baking or microwave oven

Dreas drawer, drip tray and fresh water tank

This message appears on the display when the dregdrawer is full or every 10-15 cups. When the digital display reads "dregdrawer full" the machine is able to dispense only hot water and steam (not coffee).

Wipe with a soft, damp cloth

Clean under running water

Remove drip tray/dregs drawer

2. Press position PRESS and remove brewing

of brewing unit

unit. If necessary, unscrew upper sieve

Clean everything under running warm water and let dry. Clean service area

3. Assemble brewing unit and slide in, In

3. Remove brewing unit cappuccinatore

To clear the message, **make sure machine is on,** remove the dregdrawer, empty it, wait for 5 seconds and then put back in place. After this the display reads:

SELECT PRODUCT READY FOR USE

Now the machine is ready to dispense coffee again.

Take out lateral

Remove cover

4. Wash in water

5. Dry

6. Mount



# **Operating Instructions**

Please read these TSM® operating instructions before initial operation. Follow the instructions carefully to insure constant optimum quality of your drinks and to avoid damages and injuries. Keep this instruction manual handy where you can readily refer to it. If you pass on your machine to others, be sure that the operating and safety instructions go with it. Your machine has been conscientiously checked for safety and proper functioning and left the factory in fault-free working order.

## FOR HOUSEHOLD USE ONLY

Read safety instructions before starting to use the machine