

STARTING

1. Assemble

- Lock turning ring if necessary
- Remove accessories
- Mount drip tray and drip grid

2. Fill up

- Coffee beans
- Fresh water
- Measure water hardness

3. Switch on

- Plug in
- Switch on

4. Decerate

- Place receptacle under nozzle
- Draw off hot water until no more air escapes

5. Adjust

- Start programming
- Function... search select
- Settings... search select + store

Cancel with ESC


Read strip after 1 min.

| | |
|---|------------|
| ■ | Hardness 1 |
| ■ | Hardness 2 |
| ■ | Hardness 3 |
| ■ | Hardness 4 |

LANGUAGE ITALIANO - FRANCAIS - Deutsch...

WATER HARDN. HARDNESS 1 - HARDNESS 2 HARDNESS...

Supplied accessories

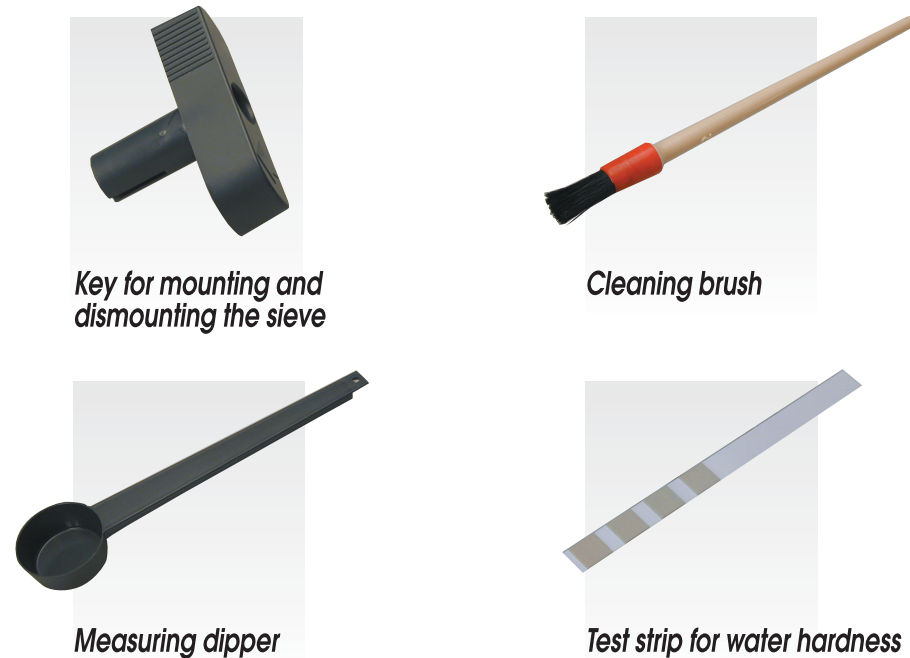

Technical data

- Type: SUP 015 R
- Nominal voltage: see type plate on machine
- Mains cable: 1.2 m
- Nominal output: see type plate on machine
- Pump pressure: approx. 15 bar
- Preparation time: Espresso approx. 20 sec/cup, coffee approx. 30 sec/cup
- Coffee grounds ejection: automatic
- Dosage of water quantity: electronic, continuous
- Capacity: water tank: approx. 2.4 l, dregs drawer: approx. 300 g
- Steam volume: continually adjustable
- Dimensions (L x H x D): approx. 33 x 45 x 40 cm, approx. 70 x 45 x 40 cm with opened service door
- Weight (net): approx. 16 kg

This TSM SUCCESS MANUAL® has been examined by SEV for conformity with the safety-relevant standards, and has been analysed by an application-oriented risk analysis for the completeness and correctness of the indications for a safe use of the appliance. Thereby we assume a use with which can be reckoned based on common-sense.



TSM SUCCESS MANUAL® - safe to use - easy to understand due to TSM®-Total Security Management and ergonomic communication®

TROUBLESHOOTING

No display
No power to the machine

- Switch on mains switch
- Close service door
- Check plug, connection and fuses

Preparation cycle does not begin Display:

- BREW UNIT MISS.** ▶ Insert and fasten brewing unit
- BREWUNIT BLOCK.** ▶ Clean brewing unit
- DREGDRAW. MISS.** ▶ Insert dregs drawer
- GRINDER BLOCKED** ▶ Clean grinding unit
- ENERGY SAVING** ▶ Press «Stand by»

With «coffee powder» selected, only water comes instead of coffee

- Fill a measuring dipper with ground coffee
- Preheat cups
- Modify temperature
- If necessary: clean brewing unit
- If necessary: descale

Coffee is not hot enough

- Clean hot water/steam nozzle with a thin needle
- Caution: carry out this procedure with machine switched off and turning knob closed

No hot water/ steam
Hot water/ steam nozzle is blocked

- Descalc machine

Heating time too long, not enough water

- Descalc machine

Brewing unit cannot be removed

- Close service door
- Switch off machine: the unit returns to original position
- Switch on machine
- Open service door. Press position PRESS and remove brewing unit
- Continue with

Brewing unit cannot be inserted
Reset brewing unit

DESCALE (automatic)

- Carry out the procedure only when machine and all parts are cold. Follow exactly the instructions given by the manufacturer of the descaling agent!

- NEVER use VINAGER** (possible damage to machine)
- Carry out procedure approx. 3 – 4 x per year

1 Prepare descaling

- Place large receptacle under hot water/ steam nozzle
- Fill descaling solution into the water tank according to manufacturer's instructions

2 Start descaling
Do not interrupt the descaling program!

Display:

- MACHINE IS DESCALING** ▶ Wait approx. 45 min.
- DESCALING FINISHED** ▶ Close turning knob, press ENTER
- FILL WATERTANK RINSING** ▶ Rinse + fill water tank
- RINSING FINISHED** ▶ Press ESC

3 Reset descale display

- Press programming key
- Search for **SIGNAL.DESCAL.** with ▲▶▶→ ENTER
- Search for **YES** with ▲▶▶→ ENTER

Cancel with ESC

CLEANING

Use only a mild and non-scouring cleaning agent

Casing Wipe with a soft, damp cloth

Dregs drawer, drip tray, sieve and Fresh water tank Clean under running water

Brewing unit

Clean weekly
Never clean the brewing unit in a dishwasher

- Open service door. Remove drip tray/ dregs drawer
- Loosen sieve with key...
- Press position PRESS and remove brewing unit. If necessary, unscrew upper sieve of brewing unit
- Assemble brewing unit and slide in. In doing this, do NOT press position PRESS!

2.1 Loosen sieve with key...

2.2 ...and remove

Clean everything under running warm water and let dry. Clean service area

Nozzle when needed

- Loosen knurled screw
- Remove nozzle, take apart and clean well
- Dry components thoroughly, reassemble
- Tighten knurled screw

Dregdrawer full

DREGDRAWER FULL

This message appears on the display when the dregdrawer is full or every 10-15 cups. When the digital display reads "dregdrawer full" the machine is able to dispense only hot water and steam (not coffee). To clear the message, **make sure machine is on**, remove the dregdrawer, empty it, wait for 5 seconds and then put back in place. After this the display reads:

SELECT PRODUCT READY FOR USE

Now the machine is ready to dispense coffee again.



Operating Instructions

Please read these TSM® operating instructions before initial operation. Follow the instructions carefully to insure constant optimum quality of your drinks and to avoid damages and injuries. Keep this instruction manual handy where you can readily refer to it. If you pass on your machine to others, be sure that the operating and safety instructions go with it. Your machine has been conscientiously checked for safety and proper functioning and left the factory in fault-free working order.

FOR HOUSEHOLD USE ONLY

Please read the safety instructions

cod. 0347.955 Rev. 01 del 18/03/02

1. Fill beans



2. Fill water



3. Switch on

To activate the mode "interrupt operation" press «Stand by»

Save energy!



4. Observe display

WARMING UP... ▶ wait...

or **RINSING** ▶ Place cup under nozzle

or **ENERGY SAVING** ▶ Press «Stand by»

5. Deacerate after long period of non-use



Place empty receptacle under nozzle



Open the hot water/ steam knob and wait until the water flows in a regular stream. To stop, close the hot water/steam knob

Preheat cups
Switch on cup heater
→ see «programming»

ADJUSTMENT

only if necessary


Filling quantity ↔ Adjust for cup size

if «store filling» ON

- 1) Place cup(s) beneath nozzle
 - 2) Press and hold desired button
 - 3) Release button when correct amount is reached
- amount remains stored!

Coarseness

Adjust only when grinding unit is running

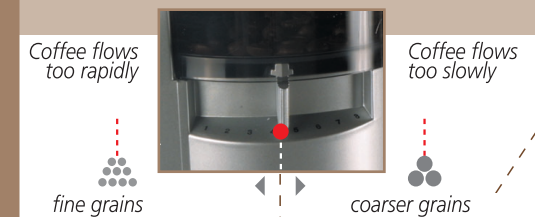

Coffee flows too rapidly

fine grains

coarser grains


Coffee flows too slowly



see page 6




- Fresh water tank
- Cup heater
- Turning knob hot water/ steam
- Hot water/ steam nozzle
- Coffee output (adjustable)
- Frothing aid
- Mains switch
- Drip tray/ drip grid
- Coffee bean container
- Adjusting lever for grinding coarseness
- Coffee powder filler-hole
- Adjusting lever for amount of coffee
- Operating panel
- Service door/ brewing unit
- Drawer for coffee dregs
- Display: drip tray is full

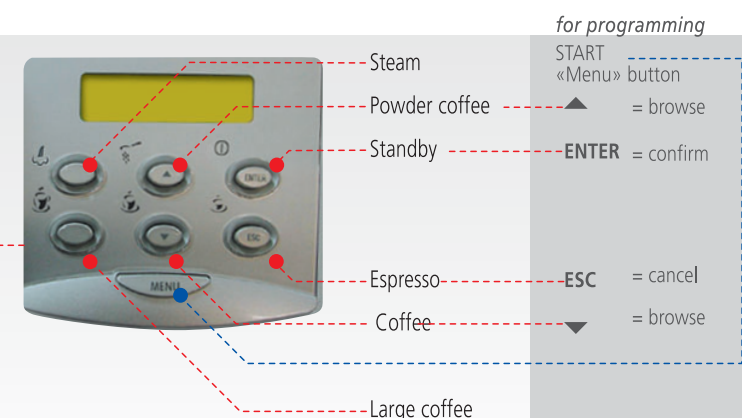

- Steam
 - Powder coffee
 - Standby
 - Espresso
 - Coffee
 - Large coffee
- for programming
- START «Menu» button = browse
 - ENTER = confirm
 - ESC = cancel
 - = browse


PREPARATION

BEAN COFFEE

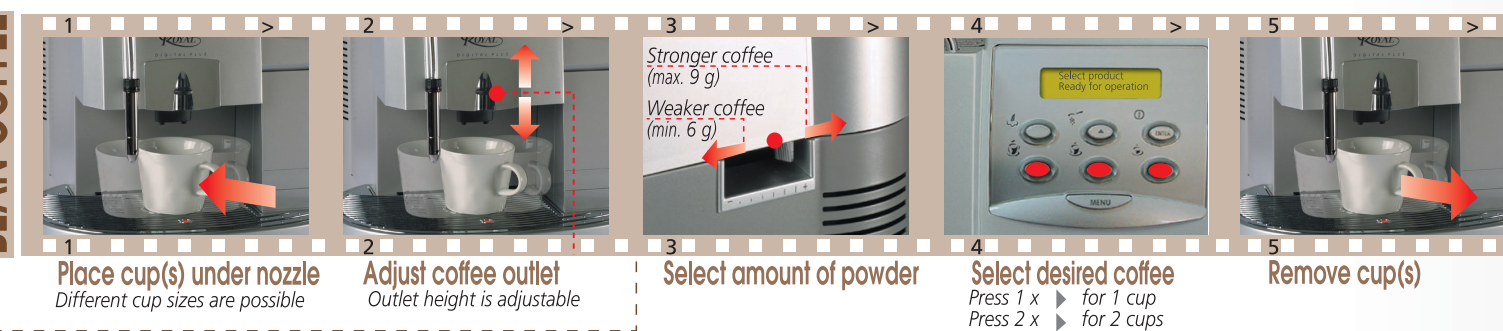


- 1 Place cup(s) under nozzle
Different cup sizes are possible
- 2 Adjust coffee outlet
Outlet height is adjustable
- 3 Select amount of powder
Stronger coffee (max. 9 g)
Weaker coffee (min. 6 g)
- 4 Select desired coffee
Press 1 x ▶ for 1 cup
Press 2 x ▶ for 2 cups
- 5 Remove cup(s)

POWDER COFFEE

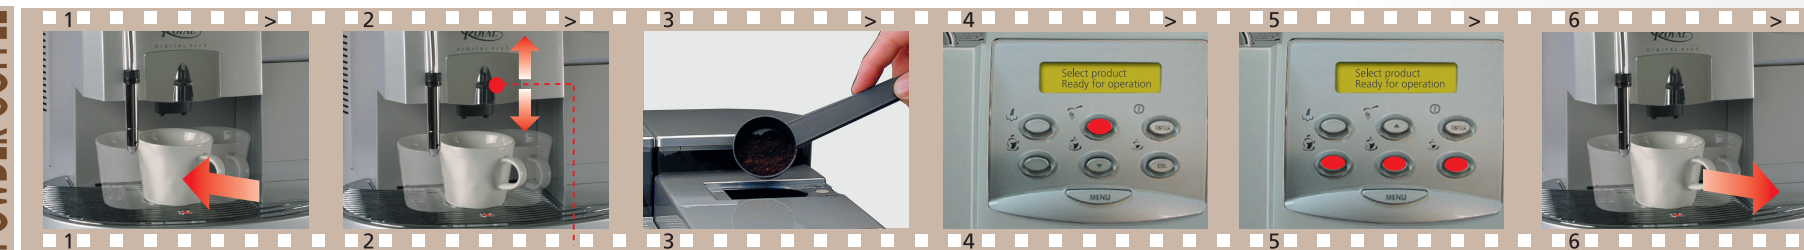


- 1 Place cup(s) under nozzle
- 2 Adjust coffee outlet
Outlet height is adjustable
- 3 Fill in coffee powder
- Max. 1 measuring dipper (= 1 cup)
- NEVER use instant coffee!
- 4 Select powder coffee
- 5 Select coffee
▶ press 1 x only
- 6 Remove cups

CAPPUCCINO

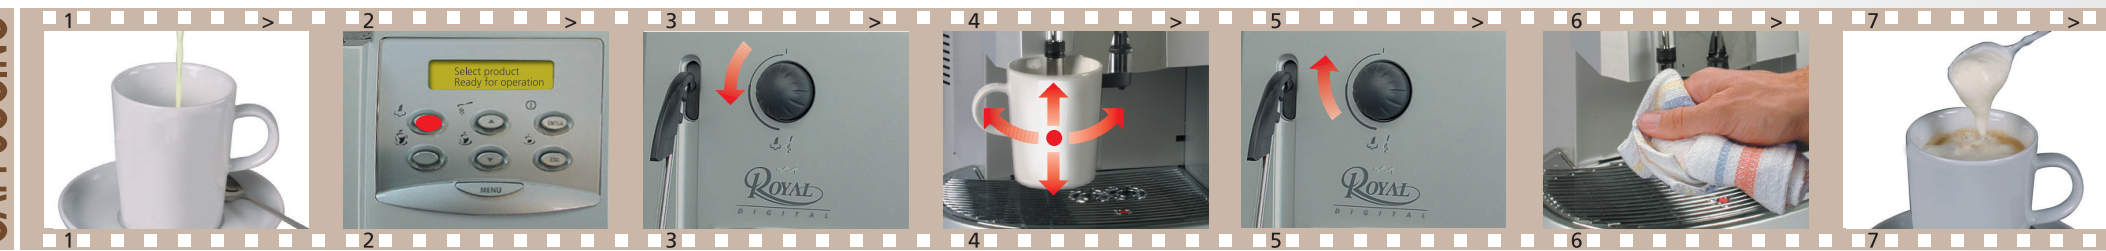


- 1 Fill 1/3 cup with milk
- 2 Select steam
Wait until the display "WARMING UP." disappears
- 3 Start preparation
Let any residual water run out
Close turning knob again
- 4 Froth up milk
While shifting cup
- 5 End preparation and remove cup(s)
- 6 Clean nozzle with damp cloth so that the froth does not dry up on nozzle
- 7 Add froth to coffee

STEAM

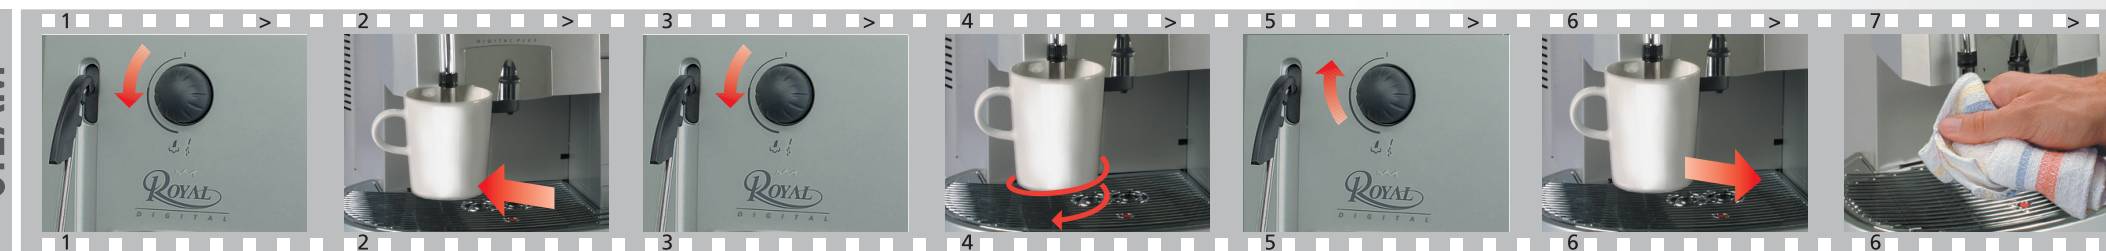

- 1 Start preparation
Let residual water flow out
Close turning knob
- 2 Place cup/ immerse nozzle
3-4 cm into liquid
- 3 Start preparation
- 4 Rotate beverage while frothing
- 5 End preparation
- 6 Remove cup
- 6 Clean nozzle with damp cloth

HOT WATER

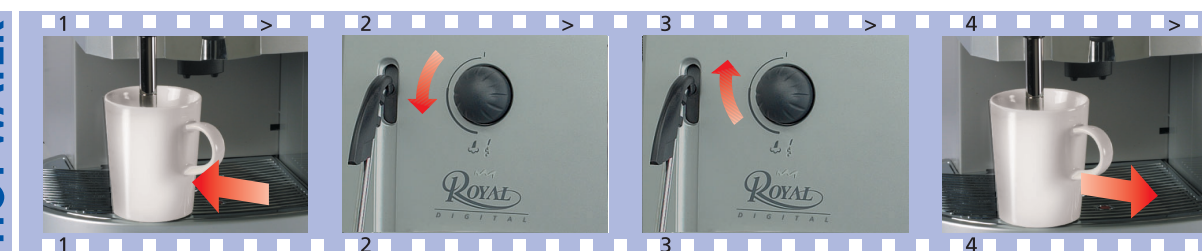

- 1 Place cup under hot water nozzle
- 2 Draw off hot water
- 3 End preparation
- 4 Remove cup

Improve frothing (crema)

Use another coffee mixture
→ make sure that it is an appropriate coffee sort for fully automatic Espresso coffee machines


- Use fresh roasted coffee beans
- Change the grinding coarseness

Coffee grounds are biodegradable!

After CAPPUCCINO/ STEAM for coffee outlet

Press "steam" button and draw off 1 cup hot water, water cools down to normal coffee temperature.
See point 5 "Deacerate" (STARTING)

Start programming

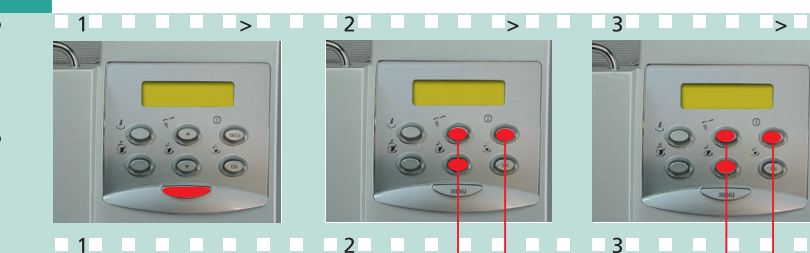

- 1 Start programming
Start programming:
Confirm selection:
End selection mode:
Leave menu:
Browse between menus:
- 2 Function...
search
select
- 3 Setting...
search
select + store

PROGRAMMING

| | | |
|-----------------------|----------------------|---|
| Language | LANGUAGE | ITALIANO - FRANCAIS - Deutsch... |
| Rinse | RINSE | ON - OFF |
| Water hardness | WATER HARDN. | HARDNESS 1 - ... 2 - ... 3 - HARDNESS 4 |
| Preheat cups | CUP HEATER | ON - OFF |
| Temperature | TEMPERATURE | MINIMUM - LOW - MEDIUM - HIGH - MAXIMUM |
| Prebrewing | PREBREWING | ON - OFF |
| Pregrinding | PREGRINDING | ON - OFF |
| Number of brewings | TOTAL COFFEE | The counter displays the total number of issued coffees. The value cannot be changed. Select function ... display |
| Descaling (automatic) | DESCALING | This procedure should be carried out on the machine with cold parts. Never use VINAGER. It could damage the machine. Descaling enables removal of calcification deposits from the internal components |
| Descaling reset | SIGNAL DESCAL | QUANTITY WATER NOT REACHED |
| Shut down time | TIMER | + 15 minutes - 15 minutes |
| Cleaning cycle | RINSING CYCLE | FILL WATERTANK |