



EN User manual
FR Mode d'emploi

دلیل المستخدم
راهنمای کاربر

AR
FA



©2019 Koninklijke Philips N.V.
All rights reserved.
4240 002 03086



English

1 Important

Read this user manual carefully before you use the appliance, and save the user manual for future reference.

Warning

- Do not immerse the motor unit in water nor rinse it under the tap.
- Before you connect the appliance to the power, make sure that the voltage indicated on the bottom of the appliance corresponds to the local power voltage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

- Before you connect the mixer to the mains, insert the beaters into the mixer.

- Switch off the appliance and disconnect it from the mains if you leave it unattended and before you assemble, disassemble and clean it and before changing accessories or approaching parts that move in use.
- Do not touch or insert any object on the gears of the mixer stand, especially when the appliance is in use.
- Clean the mixer unit, stand and holder with a moist cloth.

Caution

- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- This appliance is intended for household use only.
- Do not exceed the quantities and processing time indicated in the user manual.
- Do not process more than one batch without interruption. Let the appliance cool down to room temperature before you continue processing.

Note

- Noise level = 86 dB [A]

Electromagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

Recycling

Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.


2 Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

3 What's in the box (Fig. 1)

- Turbo button**
• Press and hold to reach the maximum speed
- Speed control**
• 0 : OFF position
• 1 2 3 4 5 : speed setting
- Eject button**
• Press to release the beaters or dough hooks
- Hole for the beaters and dough hooks**
• Hole A: for the beaters and dough hooks with gear a
• Hole B: for the beaters and dough hooks with gear b (of larger size)

2

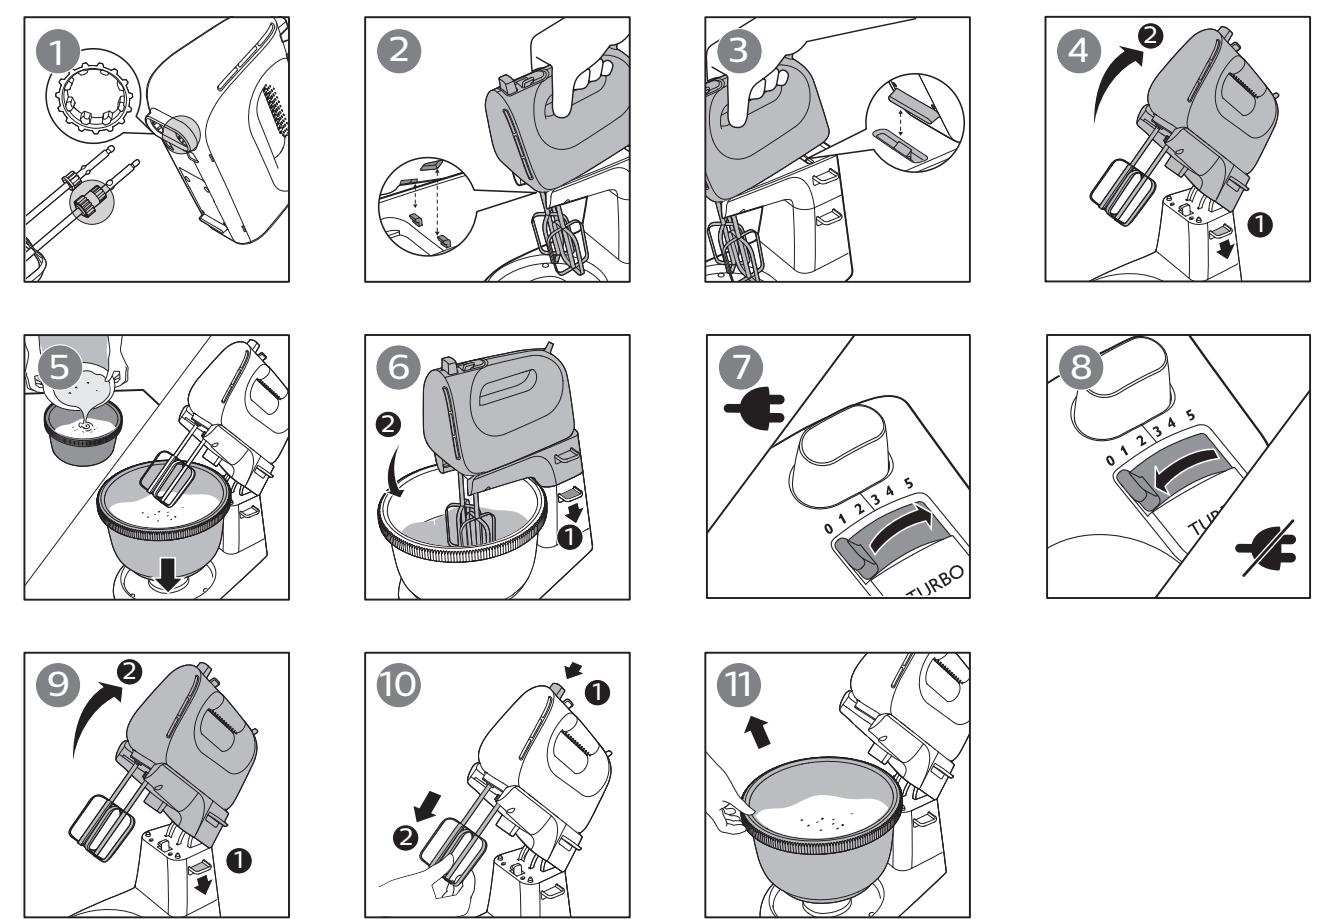

Note

- Noise level = 86 dB [A]

Electromagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

Recycling

Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

2 Introduction


Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

3 What's in the box (Fig. 1)

- Turbo button**
• Press and hold to reach the maximum speed
- Speed control**
• 0 : OFF position
• 1 2 3 4 5 : speed setting
- Eject button**
• Press to release the beaters or dough hooks
- Hole for the beaters and dough hooks**
• Hole A: for the beaters and dough hooks with gear a
• Hole B: for the beaters and dough hooks with gear b (of larger size)

1

3

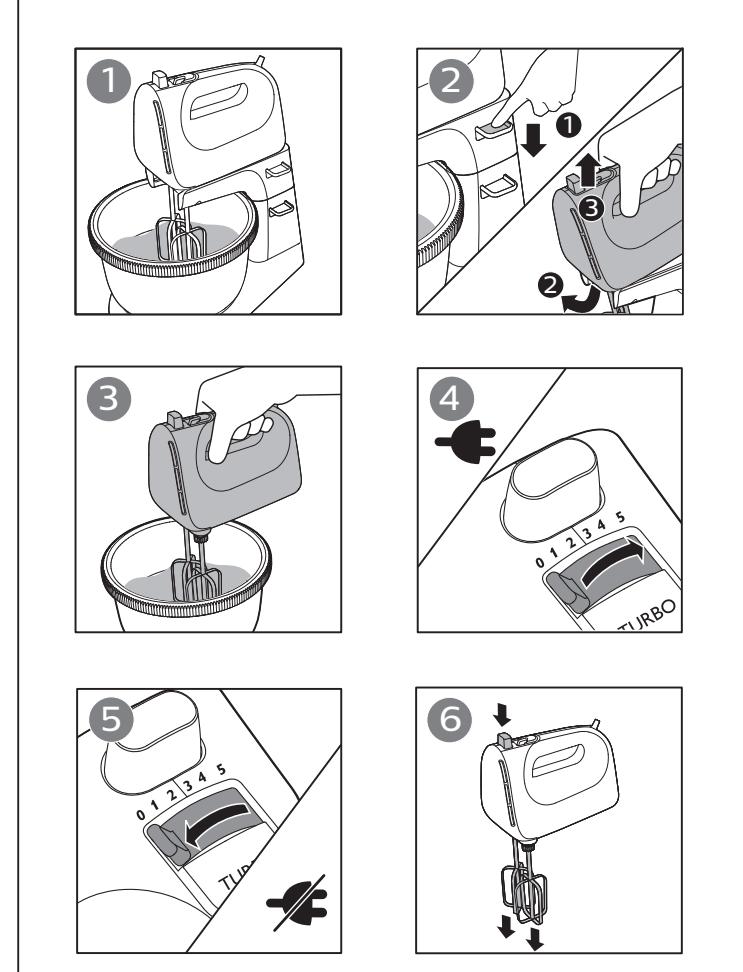

Driving bowl

Mixer stand

Lever to release the arm of the mixer stand

Lever to release the mixer

Mixer unit

Power cord

Cord clip

Two dough hooks

Two strip beaters

⑤ Driving bowl

⑥ Mixer stand

⑦ Lever to release the arm of the mixer stand

⑧ Lever to release the mixer

⑨ Mixer unit

⑩ Power cord

⑪ Cord clip

⑫ Two dough hooks

⑬ Two strip beaters

④ Driving bowl

⑤ Mixer stand

⑥ Lever to release the arm of the mixer stand

⑦ Lever to release the mixer

⑧ Mixer unit

⑨ Power cord

⑩ Cord clip

⑪ Two dough hooks

⑫ Two strip beaters

③ Driving bowl

④ Mixer stand

⑤ Lever to release the arm of the mixer stand

⑥ Lever to release the mixer

⑦ Mixer unit

⑧ Power cord

⑨ Cord clip

⑩ Two dough hooks

⑪ Two strip beaters

② Driving bowl

③ Mixer stand

④ Lever to release the arm of the mixer stand

⑤ Lever to release the mixer

⑥ Mixer unit

⑦ Power cord

⑧ Cord clip

⑨ Two dough hooks

⑩ Two strip beaters

① Driving bowl

② Mixer stand

③ Lever to release the arm of the mixer stand

④ Lever to release the mixer

⑤ Mixer unit

⑥ Power cord

⑦ Cord clip

⑧ Two dough hooks

⑨ Two strip beaters

① Driving bowl

② Mixer stand

③ Lever to release the arm of the mixer stand

④ Lever to release the mixer

⑤ Mixer unit

⑥ Power cord

⑦ Cord clip

⑧ Two dough hooks

⑨ Two strip beaters

① Driving bowl

② Mixer stand

③ Lever to release the arm of the mixer stand

④ Lever to release the mixer

⑤ Mixer unit

⑥ Power cord

⑦ Cord clip

⑧ Two dough hooks

⑨ Two strip beaters

① Driving bowl

② Mixer stand

③ Lever to release the arm of the mixer stand

④ Lever to release the mixer

⑤ Mixer unit

⑥ Power cord

⑦ Cord clip

⑧ Two dough hooks

⑨ Two strip beaters

① Driving bowl

② Mixer stand

③ Lever to release the arm of the mixer stand

④ Lever to release the mixer

⑤ Mixer unit

⑥ Power cord

⑦ Cord clip

⑧ Two dough hooks

⑨ Two strip beaters

① Driving bowl

② Mixer stand

③ Lever to release the arm of the mixer stand

④ Lever to release the mixer

⑤ Mixer unit

⑥ Power cord

⑦ Cord clip

⑧ Two dough hooks

⑨ Two strip beaters

① Driving bowl

② Mixer stand

③ Lever to release the arm of the mixer stand

④ Lever to release the mixer

⑤ Mixer unit

⑥ Power cord

⑦ Cord clip

⑧ Two dough hooks

⑨ Two strip beaters

