

**PHILIPS**



All registered and unregistered trademarks are property of their respective owners.  
© 2012 Koninklijke Philips Electronics N.V.  
All rights reserved.

HD4902\_ZH-HK\_Safety\_V2.0\_297x315mm



### English

Read this important information leaflet carefully before you use the appliance and save it for future reference.

## Danger

- Never immerse the appliance in water or rinse it under the tap.

## Warning

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Only connect the appliance to an earthed wall socket.

Always make sure the plug is inserted firmly into the socket.

- Do not use the appliance if the plug, the mains cord or the appliance itself is damaged.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance is intended for household use only. If the appliance is used improperly or for professional or semi-professional purposes or if it is not used according to the instructions in the user manual, the guarantee becomes invalid and Philips refuses any liability for damage caused.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep the appliance and its cord out of reach of children less than 8 years. Do not let

the mains cord hang over the edge of the table or worktop on which the appliance stands.

- The appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- The temperature of accessible surfaces may be high when the appliance operates.
- Make sure the cooking plate is clean and dry before you switch on the appliance.
- Do not cover the air inlets and outlets while the induction cooker is operating.
- Do not plug in the appliance or operate the control panel with wet hands.
- Do not touch the cooking plate after cooking, as it retains heat from the cookware.
- Metallic objects such as knives, forks, spoons and lids should not be placed on the induction cooker since they can get hot.
- Do not insert external objects such as iron wires and bolts into the appliance.
- Do not cover any part of the cooking plate with aluminium to prevent the risk of electric shock, short circuiting or fire.
- If the surface of the cooking plate is cracked, switch off the appliance and do not use it anymore to prevent the risk of electric shock, short circuiting or fire.

## Caution

- Never use any accessories or parts from other

- manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not expose the induction cooker to high temperatures, hot gas, steam or damp heat. Do not place the induction cooker on or near an operating or still hot stove or cooker.
- Always switch off the appliance before you unplug it.
- Always unplug the appliance and let it cool down before you clean it.
- This appliance is intended for household use only. If the appliance is used improperly or for professional or semi-professional purposes or if it is not used according to the instructions in the user manual, the guarantee becomes invalid and Philips refuses any liability for damage caused.
- Place the induction cooker on a stable, horizontal and level surface and make sure there is at least 10cm free space around it to prevent overheating.
- Do not use the induction cooker on a gas cooker or metal plate.
- For better ventilation, do not block the air inlet and outlets while the appliance is operating, e.g. do not operate the appliance on a plastic tablecloth.
- Do not place anything between the cookware and the cooking plate.

- Do not put heavy objects on the induction cooker.
- Beware of hot steam that comes out of the cookware during cooking or when you remove the lid.
- Do not lift and move the induction cooker while it is operating.
- Never put empty cookware on the switched-on induction cooker, as this could cause the cookware to become distorted or the heating coil to become damaged.
- Do not store flammable materials and liquids near or on the induction cooker.
- Avoid hard contact between the cookware or other objects and the crystalite cooking plate.
- Always place the cookware on the cooking zone during cooking.
- Always use cookware with a bottom diameter from 10cm to 23cm during cooking.

#### Automatic shut-off

The appliance is equipped with automatic shut-off. It switches off automatically in the following situations:

- If cookware with a bottom diameter less than 6cm, or small objects like knives, forks, or spoons are placed on the plate during cooking.
- If the voltage is lower than 120V or higher than 280V.
- If no cookware is put on the cooking zone when the induction cooker is working for 1 minute.
- If the induction cooker has been idle for 2 hours.
- If the temperature of the central plate is higher than 300°C, or if the internal temperature of the induction cooker is too high.

#### Electromagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

### 繁體中文

使用本產品前請先閱讀本重要資訊手冊，並保管以作將來參考。

#### 危險事項

- 請勿將本產品浸泡於水中，或直接在水龍頭下沖洗。

#### 警告

- 在連接本產品前，請檢查產品註明的指示電壓與當地電源電壓是否對應。
- 請務必將本產品連接至接地電源插座。使用時隨時確認插頭和插座無鬆脫。
- 若插頭、電源線或產品本身已受損，請勿使用。
- 如電線受損，您必需經由 Philips，Philips 認可的服務中心，或是同樣受認可人仕更換以避免危險。
- 此產品只適合家居使用。若本產品未正確使用、使用於職業或半職業目的、未根據用戶手冊內的指示使用，保證書即失效，飛利浦不為造成的損害承擔責任。
- 此產品可供八歲及以上兒童，體能、感官或心智能力低下人仕，或缺乏知識及經驗人仕使用，如該等人仕已就使用本產品給予監督或有關安全使用本產品的指導及明白本產品的使用所涉及的危險。
- 請勿在沒有監督的情況下，或是讓未滿 8 歲的兒童清潔和維護產品。
- 兒童應受監督以確保他們不會以本產品玩耍。
- 請勿讓未滿 8 歲的兒童使用電器及其電線。請勿讓電源線懸掛於放置產品的桌面或工作檯邊緣。
- 本電器不得以外部計時器或其他遙控系統操作使用。
- 本產品運作時，可接觸表面可能會呈高溫。

- 啟動產品前，請先確認電磁爐板面乾淨乾爽。
- 電磁爐在運作時，請不要蓋住進氣口和排氣口。
- 拔除產品電源插頭或使用控制板面前，請先將雙手擦乾。
- 烹飪完畢後，電磁爐板面會吸收廚具剩餘的熱量，此時請勿觸碰電磁爐板面。
- 由於可能因加熱而燙手，所以請勿將刀、叉、湯匙和上蓋等金屬物體放在電磁爐上。
- 請勿將鐵線、螺栓等異物插入產品內。
- 請勿用鋁製品蓋住電磁爐板面的任何部分，以防觸電、短路或火災。
- 若電磁爐板面的表面有裂縫，請關閉產品，不要再使用，以防觸電、短路或火災。

#### 注意

- 請勿使用任何其他廠商製造而非 Philips 特別建議使用的配件或零件。如使用該等配件或零件，您的保障將會失效。
- 請勿將電磁爐暴露在高溫、熱氣、蒸汽或高溫潮濕等環境。請勿將電磁爐放置於正在使用或尚有餘溫的爐子或廚具的上方或周圍。
- 拔除插頭前，務必先關閉本產品。
- 清潔產品前，務必先拔除插頭、讓產品冷卻。
- 此產品只適合家居使用。若本產品未正確使用、使用於職業或半職業目的、未根據用戶手冊內的指示使用，保證書即失效，飛利浦不為造成的損害承擔責任。
- 將電磁爐放置於穩固、平坦的水平表面上，並確定

- 機器周圍 10 公分內沒有其他物體，以防機器過熱。
- 請勿在氣體煮食爐或金屬板面上使用電磁爐。
- 為保持通風良好，產品運作時請勿遮住進氣口和排氣口。例如請不要在塑膠桌布上使用本產品。
- 請不要在廚具和電磁爐板面之間放置其他物品。
- 請勿在電磁爐上放置重物。
- 烹飪或移除鍋蓋時，請小心從廚具內飄出的熱蒸氣。
- 電磁爐運作時，請勿抬起或移動機器。
- 請勿將空廚具放置在啟動的電磁爐上，否則廚具可能會因此扭曲變形，加熱線圈也可能因此損壞。
- 請勿將易燃物質或液體放置在電磁爐上方或周圍。
- 避免讓微晶玻璃電磁爐板面和廚具或其他物體強烈撞擊。
- 烹飪時請將廚具放置在烹飪區內。
- 烹飪時請使用底部直徑介於 10 到 23 公分的廚具。

#### 自動斷電裝置

本產品內建自動斷電裝置。遇到以下情況時，產品會自動關閉：

- 烹飪時，電磁爐板上放置底部直徑小於 6 公分的廚具，或刀叉、湯匙等小型物品。
- 電壓低於 120 伏特或高於 280 伏特。
- 電磁爐運作 1 分鐘也沒有在烹飪區上放置廚具。
- 電磁爐閒置 2 小時未使用。
- 中央板面溫度高於攝氏 300 度，或電磁爐內部溫度過高。

#### 電磁場 (EMF)

本產品符合一切有關電磁場 (EMF) 之安全標準。在現存的科學證明下，本產品如按照本用戶手冊指示正確地使用，將會是安全的。