



EN	User manual
IN	Buku Petunjuk Pengguna
MS-MY	Manual pengguna

TH คู่มือผู้ใช้
VI Hướng dẫn sử dụng
ZH-HK 使用手册

Overview
Ikhtisar



Gambaran keseluruhan
ภาพรวม

Tổng quan
概覽

Use the kettle
Menggunakan ketel

Gunakan cerek
ກາງເຫັນຄໍາມຳນັ້ນ

Sử dụng bình đun
使用電熱水煲

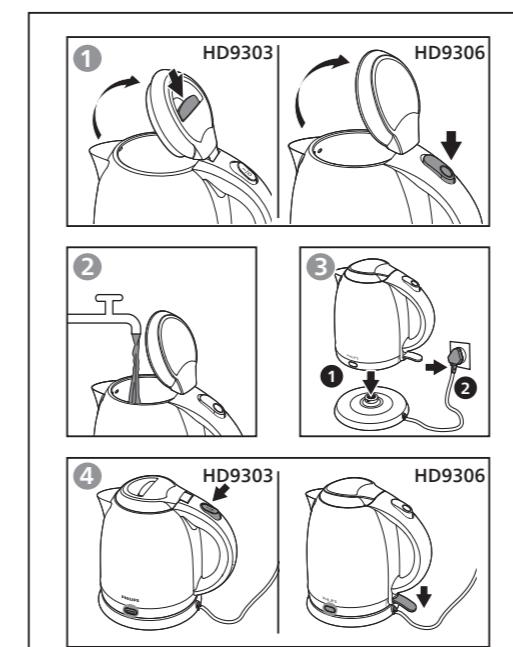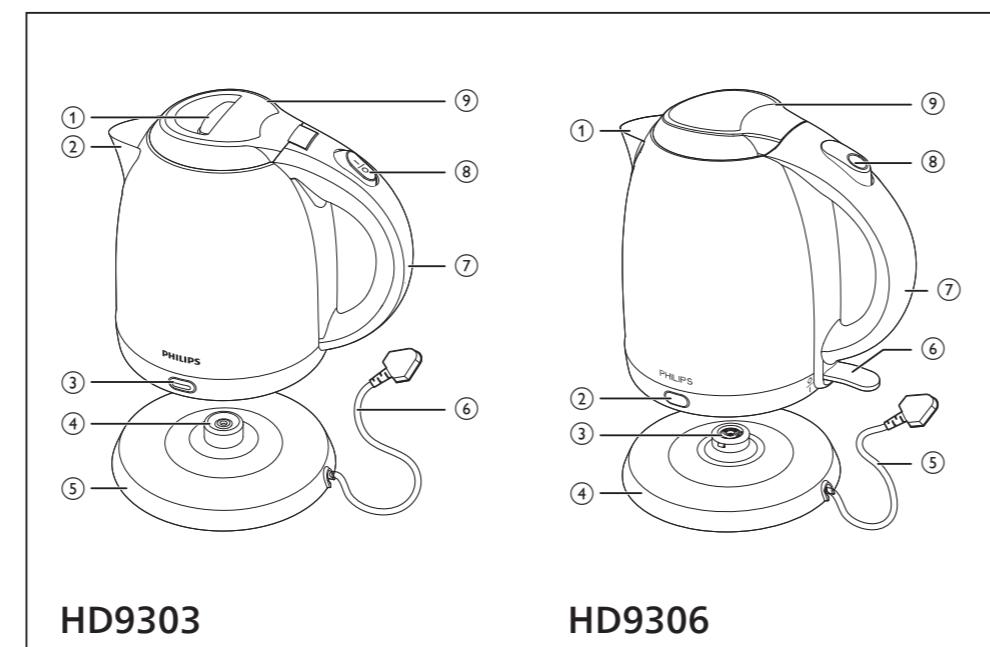

4 Use the kettle

- Press the lid release button.
→ The lid opens automatically.
- Fill the kettle with the desired amount of water.
- Close the lid properly.
- Place the kettle on its base and put the plug in the wall socket.
- For HD9303, set the ON/OFF switch to "I" to switch on the kettle; for HD9306, push the ON/OFF switch downwards to do so.
→ The power-on light goes on.
→ The kettle starts heating up.
- The kettle switches off automatically when the water boils.
→ The power-on light goes out automatically.

Note

- Make sure the lid is properly closed to prevent the kettle from boiling dry.

5 Cleaning and Descaling

Note

- Never use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the kettle.
- Never immerse the kettle or its base in water.

Clean the kettle

- Unplug the kettle and wait until it cools down.
- Clean the outside of the kettle with a soft cloth moistened with warm water and some mild cleaning agent.

Descale the kettle

Regular descaling prolongs the life of the kettle.
In case of normal use (up to 5 times a day), the following descaling frequency is recommended:

- Once every 3 months for soft water areas (up to 18dH).
- Once every month for hard water areas (more than 18dH).
- Fill the kettle with water up to three-quarters of the maximum level and bring the water to the boil.
- After the kettle has switched off, add white vinegar (8% acetic acid) to the maximum level.
- Leave the solution in the kettle overnight.
- Empty the kettle and rinse the inside thoroughly.
- Fill the kettle with fresh water and boil the water.
- Empty the kettle and rinse it with fresh water again.
- Repeat the procedure if there is still some scale in the kettle.

Note

- You can also use an appropriate descaler. In that case, follow the instructions of the descaler.

6 Storage

Store the mains cord by winding it round the reel in the base of the kettle.

7 Replacement

If the kettle, the base or the mains cord of the appliance is damaged, take the kettle, the base or the mains cord to a service centre authorised by Philips for repair or replacement to avoid a hazard.

8 Recycling

Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

9 Troubleshooting

If your kettle does not function properly or if the kettle quality is insufficient, consult the table below. If you are unable to solve the problem, contact a Philips service center or the Consumer Care Center in your country.

Problem	Solution
The kettle switches off automatically before the water boils.	There is some scale in the kettle. Descale the kettle. There is no water or not enough water in the kettle, and the boil-dry protection is activated. Add more water to the kettle.
The kettle does not work.	Make sure the plug is properly connected to the power socket. Make sure the power cord is not damaged. Make sure the kettle is not boiling dry.
There is unpleasant smell in the water.	Follow steps 5 and 6 in "Before first use" section. If the problem still exists, add water to the maximum level and pour two spoons of baking soda into the kettle, then boil the water and rinse the kettle.
There is some scale in the water, and the water is turbid.	The water hardness is high in the area you live. Descale the kettle.

© 2022 Philips Domestic Appliances Holding B.V.
All rights reserved.
3000.087.1500.2 (27/06/2022)



English

1 Your electric kettle

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

2 Overview

HD9303

① Lid release button	⑥ Power cord
② Spout	⑦ Handle
③ Power indicator	⑧ ON/OFF switch
④ Base connector	⑨ Lid
⑤ Base	

HD9306

① Spout	⑥ ON/OFF switch
② Power indicator	⑦ Handle
③ Base connector	⑧ Lid release button
④ Base	⑨ Lid

3 Before first use

- Remove stickers, if any, from the base or the kettle.
- Place the base on a dry, stable and flat surface.
- To adjust the length of the cord, wind part of it around the cord storage facility in the bottom of the base.
- Pass the cord through one of the slots in the base.
- Rinse the kettle with water.
- Fill the kettle with water up to the MAX indication and let the water boil once.
- Pour out the hot water and rinse the kettle once more.

Catatan

- Anda juga dapat menggunakan pembersih kerak yang sesuai. Jika demikian, ikutilah petunjuk pada pembersih kerak.

6 Penyimpanan

Simpanlah kabel listriknya dengan menggulung pada kumparan di alas ketel.

7 Penggantian

Jika ketel, alas, atau kabel listrik alat rusak, bawalah alas atau ketel, alas atau kabel listriknya ke pusat layanan resmi Philips untuk diperbaiki atau diganti guna menghindari bahaya.

8 Mendaur ulang

Jangan membuang alat bersama limbah rumah tangga biasa jika alat sudah tidak bisa dipakai lagi, tetapi serahkan ke titik pengumpulan atau daur ulang resmi. Dengan melakukan hal ini, Anda ikut membantu melestarikan lingkungan.

Patuh peraturan mengenai pengumpulan terpisah produk-produk elektrik dan elektronik di negara Anda. Pembuangan produk secara benar akan membantu mencegah dampak negatif terhadap lingkungan dan kesehatan manusia.

9 Mengatasi masalah

Jika ketel Anda tidak berfungsi dengan benar atau jika kualitas ketel tidak memadai, perhatikan tabel di bawah ini. Jika Anda tidak dapat mengatasi masalah tersebut, hubungi pusat layanan Philips atau Pusat Layanan Konsumen di negara Anda.

Masalah	Solusi
Ketel mati secara otomatis sebelum air mendidih.	Ada kerak dalam ketel. Bersihkan kerak ketel.
Pastikan steker telah dihubungkan dengan benar ke soket daya.	Tidak ada air atau air tidak cukup dalam ketel, dan perlindungan merebus dalam keadaan kering. Tambahkan air ke ketel.
Ketel tidak bekerja.	Pastikan kabel listriknya tidak rusak.
Airnya berbau tidak enak.	Pastikan ketel tidak sedang merebus dalam keadaan kering.
Ada kerak dalam air, dan airnya keruh.	Ikuti langkah 5 dan 6 di bagian "Sebelum menggunakan pertama kali". Jika masalah masih ada, tambahkan air hingga batas maksimum dan masukkan dua sendok soda kue ke dalam ketel, kemudian didihkan air dan bilas ketel.
	Kesadahan air di tempat tinggal Anda tinggi. Bersihkan kerak ketel.

Bahasa Melayu

1 Cerek elektrik anda

Tahniah atas pembelian anda dan selamat menggunakan Philips! Untuk mendapatkan manfaat sepenuhnya daripada sokongan yang ditawarkan oleh Philips, daftarkan produk anda di www.philips.com/welcome.

2 Gambaran keseluruhan

HD9303

① Butang pelepas tudung	⑥ Kord kuasa
② Muncung	⑦ Pemegang
③ Penunjuk kuasa	⑧ Suis ON/OFF
④ Penyambung tapak	⑨ Tudung
⑤ Tapak	

HD9306

① Muncung	⑥ Suis ON/OFF
② Penunjuk kuasa	⑦ Pemegang
③ Penyambung tapak	⑧ Butang pelepas tudung
④ Tapak	⑨ Tudung
⑤ Kord kuasa	

3 Sebelum menggunakan pertama kali

- Tepaskan stiker, jika ada, dari alas atau ketel.
- Letakkan alas di permukaan yang kering, stabil dan rata.
- Untuk menyesuaikan panjang kabel, gulung sebagian pada tempat penyimpanan kabel di bagian bawah alas.

4 Menggunakan ketel

5 Membersihkan dan Membersihkan Kerak

Catatan

6 Membersihkan ketel

7 Membersihkan kerak ketel

8 Gunakan cerek

- Tekan butang pelepas tudung.
- Tudungnya terbuka secara automatik.
- Isikan cerek dengan jumlah air yang dikehendaki.
- Tutup tudungnya dengan betul.
- Letakkan cerek di atas tapaknya dan masukkan plag ke dalam soket dinding.
- Bagi HD9303, tetapkan suis ON/OFF kepada "I" untuk menghidupkan cerek; bagi HD9306, tolak suis ON/OFF ke bawah untuk berbuat demikian.
- Lampu kuasa hidup menyalा.
- Cerek akan mulai memanas.

Catatan

- Pastikan tudung ditutup dengan sempurna untuk mengelakkan cerek dari mendidih hingga kering.

5 Membersihkan dan Menanggalkan Kerak

Catatan

- Jangan sekali-kali menggunakan sabut gosok, bahan pembersih abrasif atau cairan agresif seperti minyak tanah atau aseton untuk membersihkan cerek.
- Jangan tenggelamkan cerek atau tapaknya di dalam air.

