

一般说明 (图 1)

- 1 喷雾嘴
- 2 注水口盖
- 3 蒸汽控制
- ☰ = 蒸汽熨烫
- ☲ = 干熨
- CALC CLEAN = 自动除垢功能
- 4 蒸汽束喷射按钮 (仅限于特定型号)
- 5 喷雾按钮
- 6 温度旋钮
- 7 温度指示灯 (仅限于特定型号: 带安全自动关熄指示灯)
- 8 电源线
- 9 型号铭牌
- 10 水箱, 带 MAX (最高) 水位标示
- 11 底板

使用本产品**给水箱注水**

注意: 根据设计, 您的产品适合使用自来水。如果您所居住的区域水质非常硬, 水垢积聚会非常快。因此, 建议完全使用蒸馏水或软化水以延长产品的使用寿命。

注意: 请勿将香水、醋、淀粉、除垢剂、烫衣剂、化学除垢水或其它化学品放入水箱。

1 将蒸汽控制旋钮调至 ☲ (干熨)。(图 2)

2 向水箱注水至 MAX (最高) 水位 (图 3)。

3 盖上注水口的盖子。

选择温度和蒸汽設定**表 1**

面料类型	温度设定	蒸汽设定	蒸汽喷射 (仅限特 定型号)	喷雾 功能
亚麻	最大	☐	是	是
棉质	●●●	☐	是	是
羊毛	●●	☐	否	是
丝质	●●	☐	否	是
合成纤维 (例如丙烯酸 纤维、尼龙、 聚酰胺、 聚酯纤维)。	●	☒	否	否

注意: 如上表所示, 请勿在低温时使用蒸汽或蒸汽束喷射, 否则, 熨斗可能泄漏热水。

1 参阅表 1, 将温度旋钮调至适合衣物的设置 (图 4)。

2 将熨斗竖放并将插头插入电源插座。温度指示灯亮起, 表示熨斗正在加热 (图 5)。

3 温度指示灯熄灭时, 表示熨斗已达到适当的温度。

4 参阅表 1, 选择与设定温度对应的蒸汽设定 (图 6)。

功能**干熨**

- 将蒸汽控制旋钮调至 ☲ (干熨) 可进行无蒸汽熨烫。(图 2)。

喷水功能

- 按几次喷雾按钮, 把要熨烫的布料润湿。这有助于抚平顽固褶皱 (图 7)。

蒸汽束喷射功能 (仅限于特定型号)

- 按下然后释放蒸汽束喷射按钮可获得强劲的蒸汽喷射, 轻松抚平顽固褶皱 (图 8)。

垂直蒸汽 (仅限于特定型号)

- 您可以在竖直握住熨斗时使用蒸汽束喷射功能, 用于去除悬挂衣物、窗帘上的褶皱 (图 9)。

安全自动关熄功能 (仅限于特定型号)

- 如果熨斗在水平位置 30 秒或在垂直位置 8 分钟未被移动, 熨斗会自动关闭。自动关熄指示灯会开始闪烁 (图 10)。

- 要使熨斗重新加热, 请拿起或轻轻移动熨斗, 直至自动关熄指示灯熄灭。

清洁和维护**清洁**

- 1** 将蒸汽控制旋钮调至 ☲ (干熨), 拔下熨斗插头, 使其冷却。(图 2)

- 2** 将水箱中的水全部倒出。

- 3** 用湿布和非腐蚀性 (液体) 清洁剂抹去底板上的薄片和其他沉积物。

- 警告:** 要保持底板光滑, 请避免与金属物碰撞。切勿使用磨砂布、醋或其它化学药剂来清洁底板。

注意: 定期用自来水冲洗水箱。冲洗后倒空水箱。

除水垢功能

注意事项: 要延长产品的使用寿命并保持良好的蒸汽性能, 应每 2 周使用一次自动除垢功能。如果您所在地区的水硬度非常高 (即熨烫过程中底板中出现薄片), 则需更经常地使用自动除垢功能。

- 1** 确保已经拔下产品插头, 且已将蒸汽控制旋钮调至 ☲ (干熨)。(图 2)

- 2** 为水箱注水至 MAX (最高) 水位标示。(图 3) 请勿将醋或其它除垢剂注入水箱。

- 3** 将熨斗插头插入插座, 将温度旋钮调至 MAX (最高) (图 11)。

- 4** 当温度指示灯熄灭时, 拔下熨斗的电源插头。

- 5** 握住熨斗, 将其置于水池上方。将蒸汽控制旋钮调至自动除垢位置并按住。(图 12)

- 6** 轻轻摇动熨斗, 直至水箱中的水全部用完 (图 13)。

- 警告:** 水垢冲出时, 蒸汽和沸水也会从底板中冲出。

- 7** 将蒸汽控制旋钮调回 ☲ (干熨) 位置。(图 2)

注意: 如果从熨斗中冲出的水仍有水垢颗粒, 则应再次使用自动除垢功能。

完成除水垢过程后

- 1** 将熨斗插头插入插座。让熨斗加热, 使底板干燥。

- 2** 当温度指示灯熄灭时, 拔下熨斗的电源插头。

3 将熨斗在一块布上轻轻移动, 去除底板上残留的水渍。

4 待熨斗冷却后再予以存放。

存储

- 1** 拔掉熨斗的插头, 并将蒸汽控制旋钮调至 ☲ (干熨) 位置。(图 2)

- 2** 将电源线绕在熨斗的背板上, 竖立存放熨斗 (图 14)。

故障排除

本章归纳了使用本产品时最常见的一些问题。如果您无法根据以下信息解决问题, 请访问 www.philips.com/support 阅查常见问题列表, 或联系您所在国家/地区的客户服务中心 (联系详情, 请参阅全球保修卡)。

问题**可能的原因**

熨斗已经插好插头, 但底板仍是冷的。

熨斗未产生蒸汽。

蒸汽控制旋钮已设在 ☲ 位置。

熨斗不够热。

熨斗未产生蒸汽束喷射。

您在很短的时间内过于频繁地使用了蒸汽喷射功能。

熨斗不够热。

水箱中水不足。

熨烫时, 水滴会滴在布料上。

您没有正确地盖上注水口盖。

您在水箱中放入了添加剂。

您在温度设定低于 ●●● 的情况下使用了蒸汽束喷射功能。

熨斗冷却后或存放期间, 底板漏水。

在熨烫过程中底板内冒出水垢和杂质。

随着时间的推移, 蒸汽会变弱。

您在水箱仍然有水的情况下将熨斗水平放置。


硬水会在底板内形成水垢。

硬水会在底板内形成水垢。

倒空水箱或将熨斗竖立。

使用一次或多次除垢功能 (请参阅“除垢功能”部分)。

使用一次或多次除垢功能 (请参阅“除垢功能”部分)。

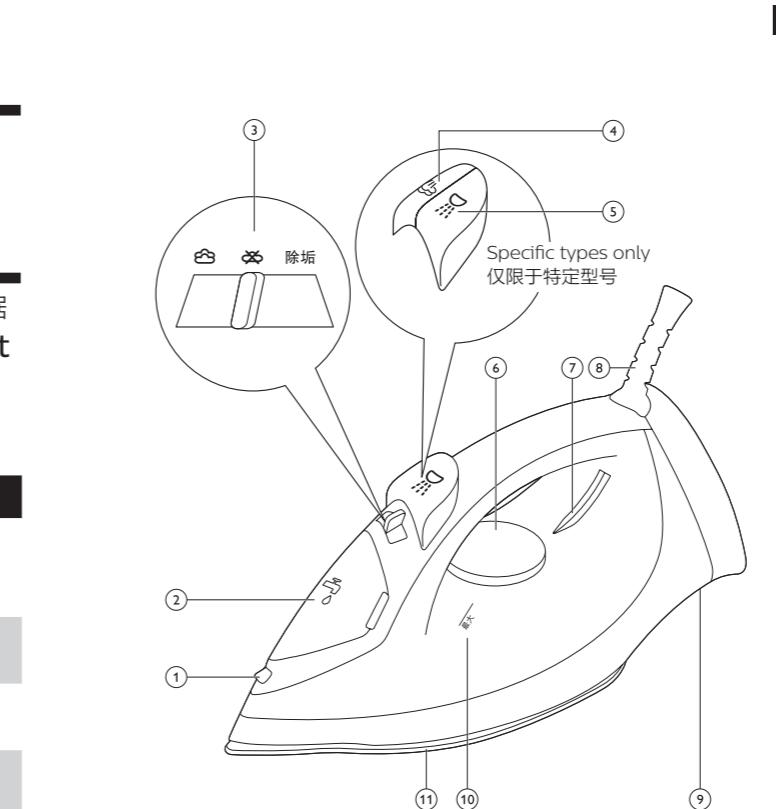

用户手册

PHILIPS

产品: 飞利浦蒸汽电熨斗

型号: GC1423

额定电压: 220 V ~

额定频率: 50 Hz

额定输入功率: 1200 W

生产日期: 请见产品本体

产地: 中国浙江慈溪

飞利浦 (中国) 投资有限公司
上海市静安区灵石路 718 号 A1 幢
全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005, GB4706.2-2007, GB4343.1-2018 及 GB17625.1-2012 制造

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬Cr(VI)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
MainBody	x	o	o	o	o	o
Powercord	x	o	o	o	o	o

本表格依据 SJ/T 11364 的规定编制。
o: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。
x: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。
*该表格中所显示的“有害物质”在产品正常使用情况下不会对人身和环境产生任何伤害。
*该表格中所显示的“有害物质”及其存在的部件向消费者和回收处理从业者提供相关物质的存在信息, 有助于产品废弃时的妥善处理。

保留备用

发行日期: 191018



©2019 Koninklijke Philips N.V.
保留所有权利。

ENGLISH

General description (Fig. 1)

- 1 Spray nozzle
- 2 Cap of filling opening
- 3 Steam control
- ☂ = steam ironing
- ☂ = dry ironing
- CALC CLEAN = Calc-Clean function
- 4 Steam boost button (Specific types only)
- 5 Spray button
- 6 Temperature dial
- 7 Temperature light (specific types only: with safety-auto off indication)
- 8 Mains cord
- 9 Type plate
- 10 Water tank with MAX water level indication
- 11 Soleplate

Using the appliance

Filling the water tank

Note: Your appliance has been designed to be used with tap water. If you live in an area with hard water, fast scale build-up may occur. Therefore, it is recommended to use 100% distilled or demineralized water to prolong the lifetime of your appliance.

Note: Do not put perfume, vinegar, starch, descaling agents, ironing aids, chemically descaled water or other chemicals in the water tank.

- 1 Set the steam control to position ☂ (dry ironing). (Fig. 2)
- 2 Fill the water tank up to the MAX indication (Fig. 3).
- 3 Close the cap of the filling opening.

Selecting temperature and steam setting

Table 1

Fabric type	Temperature setting	Steam setting	Steam boost (specific types only)	Spray
Linen	MAX	☒	Yes	Yes
Cotton	●●●	☒	Yes	Yes
Wool	●●	☒	No	Yes
Silk	●●	☒	No	Yes
Synthetic fabrics (e.g. acrylic, nylon, polyamide, polyester).	●	☒	No	No

Note: As indicated in the table above, do not use steam or steam boost at a low temperature, otherwise hot water may leak from the iron.

- 1 Consult table 1 to set the temperature dial to the appropriate setting for your garment (Fig. 4).
- 2 Put the iron on its heel and plug it in. The temperature light goes on to indicate that the iron is heating up (Fig. 5).
- 3 When the temperature light goes out, the iron has reached the correct temperature.
- 4 Consult table 1 to select a steam setting that corresponds to the temperature you have set (Fig. 6).

Features

Dry ironing

- Set the steam control to ☂ (dry ironing) to iron without steam. (Fig. 2)

Spray function

- Press the spray button to moisten the article to be ironed. This helps remove stubborn creases (Fig. 7).

Steam boost function (specific types only)

- Press and release the steam boost button for a powerful boost of steam to remove stubborn creases (Fig. 8).

Vertical steam (specific types only)

- You can use the steam boost function when you hold the iron in vertical position for removing creases from hanging clothes, curtains etc (Fig. 9).
- Safety auto-off function (specific types only)**
- The iron switches off automatically if it has not been moved for 30 seconds in horizontal position or 8 minutes in vertical position. The auto-off light starts flashing (Fig. 10).
- To let the iron heat up again, pick up the iron or move it slightly until the auto-off light goes out.

Cleaning and maintenance

Cleaning

- 1 Set the steam control to ☂ (dry ironing), unplug the iron and let it cool down. (Fig. 2)
- 2 Pour any remaining water out of the water tank.
- 3 Wipe flakes and any other deposits off the soleplate with a damp cloth and a non-abrasive (liquid) cleaning agent.

Caution: To keep the soleplate smooth, avoid hard contact with metal objects. Never use a scouring pad, vinegar or other chemicals to clean the soleplate.

Note: Regularly rinse the water tank with tap water. Empty the water tank after rinsing it.

Calc-Clean function

IMPORTANT: To prolong the lifetime of your appliance and to maintain good steaming performance, use the Calc-Clean function once every two weeks. If the water in your area is very hard (i.e. when flakes come out of the soleplate during ironing), use the Calc-Clean function more frequently.

- 1 Make sure the appliance is unplugged and the steam control is set to ☂ (dry ironing). (Fig. 2)
- 2 Fill the water tank to the MAX indication. (Fig. 3)

Do not pour vinegar or other descaling agents into the water tank.

- 3 Plug in the iron and set the temperature dial to MAX (Fig. 11).
- 4 Unplug the iron when the temperature light goes out.
- 5 Hold the iron over the sink. Push the steam control to the Calc-Clean position and hold it. (Fig. 12)
- 6 Gently shake the iron until all water in the water tank has been used up (Fig. 13).

Caution: While scale is flushed out, steam and boiling water also come out of the soleplate.

- 7 Set the steam control back to ☂ (dry ironing). (Fig. 2)

Note: Repeat the Calc-Clean process if the water that comes out of the iron still contains scale particles.

After the Calc-Clean process

- 1 Plug in the iron. Let the iron heat up to let the soleplate dry.
- 2 Unplug the iron when the temperature light goes out.
- 3 Move the iron gently over a piece of cloth to remove any water stains on the soleplate.
- 4 Let the iron cool down before you store it.

Storage

- 1 Unplug the iron and set the steam control to ☂ (dry ironing). (Fig. 2)
- 2 Wind the mains cord round the backplate of the iron and store the iron on its heel (Fig. 14).

Troubleshooting

This chapter summarises the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Centre in your country (see the worldwide guarantee leaflet for contact details).

Product usage

Mains cord storage

- The iron is plugged in, but the soleplate is cold.

- The iron does not produce any steam.

Problem	Possible cause	Solution
	The steam control is set to position ☂.	Set the steam slider to position ☂.
	The iron is not hot enough.	Set an ironing temperature that is suitable for steam ironing (●● to MAX). Put the iron on its heel and wait until the temperature light has gone off before you start ironing.
The iron does not produce a steam boost.	You have used the steam boost function too often within a very short period.	Continue ironing in horizontal position and wait a while before you use the steam boost function again.
	The iron is not hot enough.	Set an ironing temperature at which the steam boost function can be used (●●● to MAX). Put the iron on its heel and wait until the temperature light has gone off before you use the steam boost function.
	There is not enough water in the water tank.	Fill the water tank (see Fig. 3).
Water droplets drip onto the fabric during ironing.	You have not closed the cap of the filling opening properly.	Press the cap until you hear a click.
	You have put an additive in the water tank.	Rinse the water tank and do not put any additive in the water tank.
	The set temperature is too low for steam ironing.	Set a temperature of ●● or higher.
	You have used the steam boost function at a temperature setting below ●●●.	Set the temperature dial to a setting between ●●● and MAX.
Water drips from the Soleplate after the iron has cooled down or has been stored.	You have put the iron in horizontal position with water still left in the water tank.	Empty the water tank or put the iron on heel.
Flakes and impurities come out of the soleplate during ironing.	Hard water forms flakes inside the soleplate.	Use the Calc-Clean function one or more times (see the 'Calc-Clean function' section).
Steam becomes weaker over time.	Hard water forms flakes inside the soleplate.	Use the Calc-Clean function one or more times (see the 'Calc-Clean function' section).

한국어

각 부의 명칭 (그림 1)

- 1 스팀량 조절기 (건식 담居室)

- 2 물 주입구 뚜껑

- 3 스팀량 조절기

- ☂ = 스팀 담居室

- ☂ = 건식 담居室

- CALC CLEAN = 석회질 제거 기능

- 순간 스팀 버튼 (특정 모델만 해당)

- 스프레이 버튼

- 온도 조절기

- 온도 표시등 (안전한 자동 전원 차단 기능이 있는 특정 모델만 해당)

- 전원 코드

- 명판

- MAX 수위 표시선이 있는 물탱크

- 열판

- 열판