


**PHILIPS**



请勿使用本产品吸入水  
或其它液体

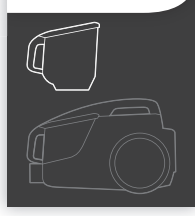

4222.003.4240.5 16/3/2020

> 75% 循环再造纸

保留备用



>75 % recycled paper  
>75 % papier recyclé

English

## Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at **[www.philips.com/welcome](http://www.philips.com/welcome)**.

## Important safety information

Read this important information carefully before you use the appliance and save it for future reference.

### Danger

- Never vacuum up water or any other liquid, flammable substances or hot ashes.

### Warning

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Do not use the appliance if the plug, the mains cord or the appliance itself is damaged.
- If the mains cord is damaged, you must have it replaced by Philips, a service center authorized by Philips or similarly qualified persons in order to avoid a hazard.
- Do not point the hose, the tube or any other accessory at the eyes or ears nor put it in your mouth.
- Do not use the appliance in combination with a transformer, as this could cause hazardous situations.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.
- This vacuum cleaner is designed for household use only. Do not use this vacuum cleaner to vacuum up building waste, cement dust, ashes, fine sand, lime and similar substances. Never use the vacuum cleaner without any of the filters. This could damage the motor and shorten the life of the vacuum cleaner. Always clean all parts of the vacuum cleaner as shown in the user manual. Do not clean any parts with water and/or cleaning agents if this is not specifically shown in the user manual.

### Caution

- If you clean a washable filter with water, make sure it is completely dry before you put it back into the appliance. Do not dry the filter in direct sunlight, on a radiator or in a tumble dryer. Replace a washable filter if it can no longer be cleaned properly or if it is damaged.
- To guarantee optimal dust retention and performance of the vacuum cleaner, always replace the filters with original Philips filters of the correct type (see 'Ordering accessories').
- Maximum noise level: Lc = 84 dB(A)

### Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

## Ordering accessories

To buy accessories or spare parts, visit **[www.philips.com/parts-and-accessories](http://www.philips.com/parts-and-accessories)** or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

## Warranty and support

If you need information or support, please visit **[www.philips.com/support](http://www.philips.com/support)** or read the international warranty leaflet.

## Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

## Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit **[www.philips.com/support](http://www.philips.com/support)** for a list of frequently asked questions or contact the Consumer Care Center in your country.

Problem	Possible cause	Solution
The suction power is insufficient.	The dust container is full.	Empty the dust container.

Problem	Possible cause	Solution
	The filters are dirty.	Clean or replace the filters.
	The suction power is set to a low setting.	Increase the suction power with the regulator on the appliance or on the handgrip.
	The nozzle, tube or hose is blocked up.	To remove the obstruction, disconnect the blocked-up item and connect it (as far as possible) the other way around. Switch on the vacuum cleaner to force the air through the blocked-up item in opposite direction.
When I use my vacuum cleaner I sometimes feel electric shocks.	Your vacuum cleaner builds up static electricity. The lower the air humidity, the more static electricity the appliance builds up.	Discharge the appliance by frequently holding the tube against other metal objects in the room (for example the legs of a table or chair, a radiator etc.). You can also raise the air humidity level in the room.

简体中文

简介

感谢您的惠顾，很高兴您选择飞利浦！为了让您能充分享受飞利浦提供的支持，请在 [www.philips.com/welcome](http://www.philips.com/welcome) 上注册您的产品。

重要安全信息

使用产品之前，请仔细阅读本重要信息，并妥善保管以供日后参考。

危险

- 切勿吸入水或其它液体、易燃物质或热灰。

警告

- 在将产品连接电源之前，请先检查产品所标电压与当地的供电电压是否相符。
- 如果插头、电源线或产品本身受损，请勿使用本产品。
- 如果电源线损坏，为了避免危险，必须由飞利浦、飞利浦特约维修中心或有同等维修资格的专业人员进行更换。
- 切勿将软管、硬管或任何其它附件指向眼睛或耳朵，也不要放在口中。
- 请勿将产品与变压器配合使用，可能会导致危险情况。
- 产品不建议由有肢体、感官或精神能力缺陷或缺少使用经验和知识的人（包括儿童）使用，除非有负责他们安全的人对他们进行与产品使用有关的监督或指导。
- 请照看好儿童，本产品不能用于玩耍。
- 清洁或维护产品之前，必须先从插座拔掉插头。
- 根据设计，本吸尘器仅限于家用。切勿使用本吸尘器清理建筑垃圾、水泥灰、灰尘、细沙、石灰和类似的物质。切勿在没有任何滤网的情况下使用本吸尘器。这会损坏马达并缩短吸尘器的使用寿命。务必按照用户手册中的说明清洁吸尘器的所有部件。请勿使用水和/或清洁剂清洁任何部件（如果用户手册中未特别说明）。

注意

- 如果用水清洁可水洗滤网，确保其完全干燥，然后再放回产品中。切勿在阳光直射处、暖气管上或转筒式干燥机中干燥滤网。如果无法再正常清洁水洗滤网或其已损坏，请加以更换。
- 为保证吸尘器的最佳吸尘效果和性能，请务必用正确型号的原装飞利浦过滤网来替换滤网（请参阅“订购附件”一章）。
- 最大噪音强度： Lc = 84 dB(A)

电磁场 (EMF)

本 Philips 产品符合所有有关暴露于电磁场的适用标准和法规。

订购配件

如需购买附件或备件，请访问 [www.philips.com/parts-and-accessories](http://www.philips.com/parts-and-accessories) 或联系您的飞利浦经销商。您还可以联系所在国家/地区的飞利浦客户服务中心（请参阅保修卡了解详细联系信息）。

保修和支持

如需信息或支持，请访问 [www.philips.com/support](http://www.philips.com/support) 或阅读保修卡。

回收

- 弃置本产品时，请不要将其与一般生活垃圾放在一起，应将其交给政府指定的回收中心。这样做将有利于环保。
- 请遵守您所在国家/地区的电器和电子产品专门回收规定。正确处置废弃产品有助于避免对环境和人类健康造成不良后果。

产品中有害物质的名称及含量						
部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI) )	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
吸尘器	X	X	O	O	O	O

本表格依据 SJ/T 11364 的规定编制

O: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。

X: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。

- 该表格中所显示的“有害物质”在产品正常使用情况下不会对人身和环境产生任何伤害。
- 该表格中所显示的“有害物质”及其存在的部件向消费者和回收处理从业者提供相关物质的存在信息，有助于产品废弃时的妥善处理。

故障处理方法

本章归纳了使用本产品时最常见的一些问题。如果您无法根据以下信息解决问题，请访问 [www.philips.com/support](http://www.philips.com/support) 查阅常见问题列表，或联系您所在国家/地区的客户服务中心。

问题	可能的原因	解决方法
吸力不足。	集尘桶已满。	清空集尘桶。
	滤网脏了。	清洁或更换过滤网。
	吸力被设置在较低的档位。	使用机身或手柄上的调节器增强吸力。
	吸嘴、硬管或软管阻塞。	要清除阻塞物，请将阻塞的部分拆下，并将它以相反方向连接（尽可能离的远一些）。打开吸尘器的电源，强迫气流从相反方向通过被阻塞的部分。
有时，在使用吸尘器时会有触电的感觉。	吸尘器会积聚静电。空气湿度越低，产品积聚的静电就越多。	经常握住硬管使其与房间中的其它金属物体接触（例如，桌椅脚或电炉等），对产品进行放电。您也可以增加房间的空气湿度。

<div><b>PHILIPS</b></div> <div>产品：飞利浦家用真空卧式吸尘器 型号：FC8518 额定电压：220V~ 额定频率：50Hz 额定输入功率：1400 W 生产日期：请见产品本体 产地：中国江苏苏州</div> <div>飞利浦（中国）投资有限公司 上海市静安区灵石路718号A1幢 全国顾客服务热线：4008 800 008</div> <div>本产品根据国标 GB4706.1-2005, GB4706.7-2014, GB4343.1-2018及 GB17625.1-2012制造</div>	<div><b>PHILIPS</b></div> <div>产品：飞利浦家用真空卧式吸尘器 型号：FC8517 额定电压：220V~ 额定频率：50Hz 额定输入功率：1400 W 生产日期：请见产品本体 产地：中国江苏苏州</div> <div>飞利浦（中国）投资有限公司 上海市静安区灵石路718号A1幢 全国顾客服务热线：4008 800 008</div> <div>本产品根据国标 GB4706.1-2005, GB4706.7-2014, GB4343.1-2018及GB 17625.1-2012制造</div>
--	--

**PHILIPS**

产品：飞利浦家用真空卧式吸尘器  
型号：FC8516  
额定电压：220V~  
额定频率：50Hz  
额定输入功率：1400 W  
生产日期：请见产品本体  
产地：中国江苏苏州

飞利浦（中国）投资有限公司  
上海市静安区灵石路718号A1幢  
全国顾客服务热线：4008 800 008

本产品根据国标 GB4706.1-2005, GB4706.7-2014, GB4343.1-2018及 GB17625.1-2012制造



**PHILIPS**

产品 : 飞利浦家用真空卧式吸尘器  
型号 : FC8515  
额定电压 : 220V~  
额定频率 : 50Hz  
额定输入功率 : 1400 W  
生产日期 : 请见产品本体  
产地 : 中国江苏苏州

飞利浦（中国）投资有限公司  
上海市静安区灵石路718号A1幢  
全国顾客服务热线：4008 800 008

本产品根据国标 GB4706.1-2005,  
GB4706.7-2014, GB4343.1-2018及  
GB17625.1-2012制造



保留备用

发行日期: 16/3/2020