


EN Put the glove on the hand you are using to hold a garment. The glove protects your hand against the steam from the steamer head.

SC 将防烫手套戴在拿着衣物手上。防烫手套可保护您的手不被蒸汽喷头所喷出的蒸汽烫伤。





GC516
GC522

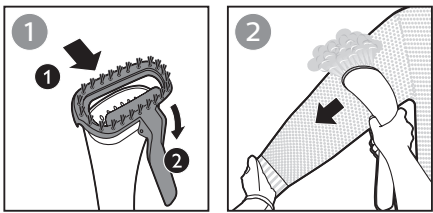

EN **Caution:** Do not attach or detach the brush/pleat maker while the steam is on or the steamer head is hot.




SC 小心：蒸汽已打开或蒸汽喷头很烫时，不要安装或拆卸毛刷/衣裤褶线夹。

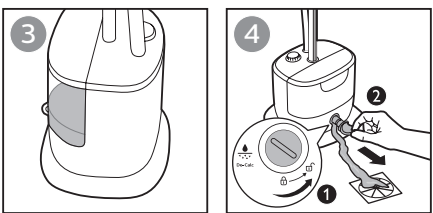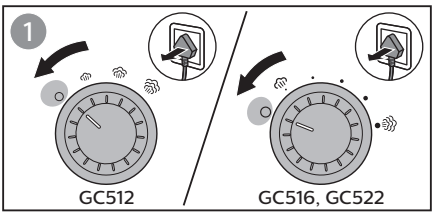

EN To maintain optimal steam performance and prolong the lifetime of the appliance, it is important to remove scales and impurities inside the appliance regularly. Therefore, it is recommended to perform the de-calc process at least once a month.




Before you start de-calc process, make sure there is some water in the water tank.

SC 为了保持良好的蒸汽熨烫性能并延长产品的使用寿命，定期去除产品内部的水垢和杂质是很有必要的。因此，建议您至少每月执行一次除垢流程。开始执行除垢流程之前，请确保水箱中留有一些水。

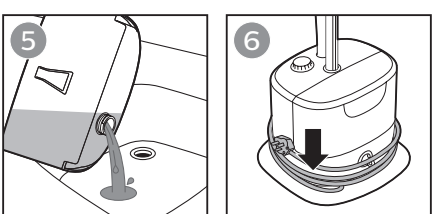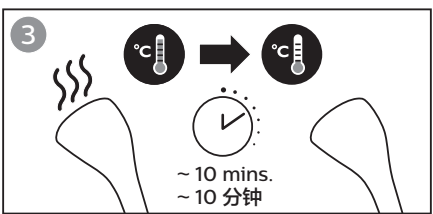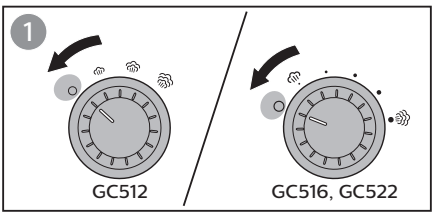

EN **Note:** Clean the appliance and wipe any deposits off the steamer head with a damp cloth and non-abrasive liquid cleaning agent. Always empty the water tank after usage, to prevent calc build-up and maintain good steam performance.

SC 注意：用湿布和非腐蚀性液体清洁剂清洁本产品，并擦去蒸汽喷头中的沉积物。使用后务必将水箱倒空，以防止水垢的形成并保持良好的蒸汽性能。

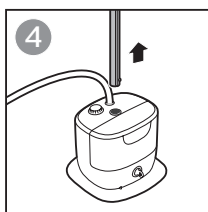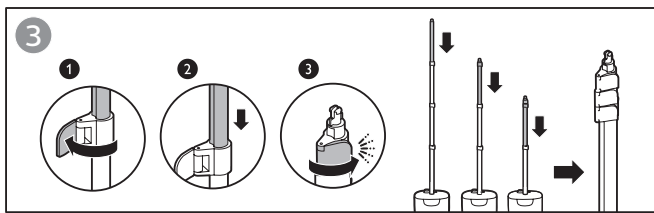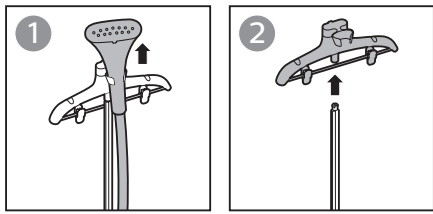

EN	Problem	Possible cause	Solution
	The appliance produces no steam or irregular steam.	The steamer has not heated up sufficiently.	Let the appliance heat up for approximately 45 seconds.
		Steam has condensed in the hose.	Lift the steamer head to straighten the hose vertically. This allows any condensation to flow back.
		Low water level in the tank or the tank is not inserted properly.	Refill the water tank and insert it properly.
		Too much scale has built up in the appliance.	Perform calc-clean process. Refer to
	Water droplets drip from the steamer head or the appliance produces a croaking sound.	You have left the steamer head and/or the steam supply hose in horizontal position for a long time.	Lift the steamer head to straighten the hose vertically. This allows any condensation to flow back.
		When the hose forms a U-shape, condensation in the hose cannot flow back into the water tank.	Lift the steamer head to straighten the hose vertically. This allows any condensation to flow back.
	An excessive amount of water drips out of the steamer head when the appliance is heating up.	The water in the appliance is dirty or has been left inside the appliance for a long time.	Perform calc-clean process. Refer to
	Water leaks out from the steamer base.	You have not closed the water tank cap or de-calc knob securely.	Close the water tank cap or de-calc knob securely.
		The water tank is not inserted properly.	Insert the tank properly.



SC	问题	可能的原因	解决方法
	产品无法产生蒸汽或产生的蒸汽不连贯。	蒸汽挂烫机未充分加热。	让产品加热约45 秒。
		有蒸汽凝结在输送管内。	提起蒸汽喷头以垂直拉直蒸汽输送管。这样做可使冷凝水流回水箱中。
		水箱中的水位低或水箱未正确插入。	为水箱加水并正确装入。
		产品内积聚的水垢太多。	执行除垢过程。请参阅
	水滴从蒸汽喷头上滴下或产品发出咕噜声。	蒸汽喷头和/或蒸汽输送管水平摆放了较长时间。	提起蒸汽喷头以垂直拉直蒸汽输送管。这样做可使冷凝水流回水箱中。
		当蒸汽输送管处于 U 形状时，输送管内的冷凝水不能流回水箱中。	提起蒸汽喷头以垂直拉直蒸汽输送管。这样做可使冷凝水流回水箱中。
	产品加热时有过多的水从蒸汽喷头中滴出。	产品中的水变脏或留在产品很长时间。	执行除垢过程。请参阅
	蒸汽挂烫机底座漏水。	水箱盖未盖好或除垢旋钮未拧紧。	盖好水箱盖或拧紧除垢旋钮。
		水箱未正确插入。	请正确插入水箱。

PHILIPS

GC512, GC516,
GC522



User manual

用户手册

PHILIPS

产品： 飞利浦蒸汽挂烫机
型号： GC512, GC516, GC522
额定电压： 220 V ~
额定频率： 50 Hz
额定输入功率： 1600 W
生产日期： 请见产品本体
产地： 中国浙江慈溪

飞利浦（中国）投资有限公司
上海市静安区灵石路718号A1幢
全国顾客服务热线: 4008 800 008


本产品根据国标 GB4706.1-2005,
GB4706.84-2007 制造

保留备用
发行日期：2020-12-22




©2020 Koninklijke Philips N.V.
All rights reserved.
4239 001 06394



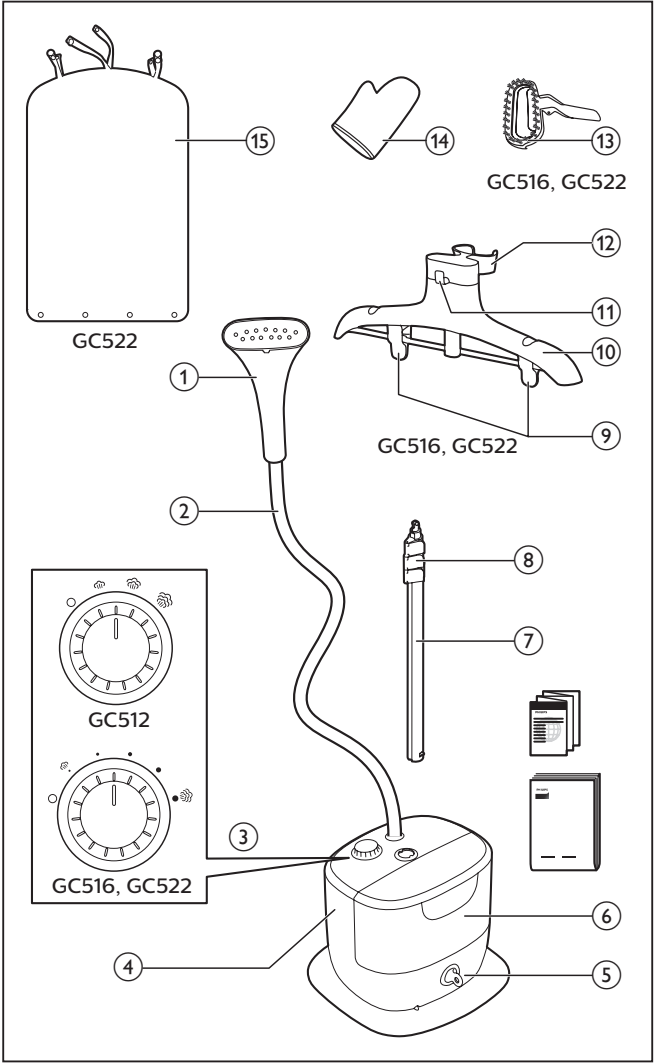

- ① Steamer head
- ② Steam supply hose
- ③ Steam dial
- ④ Base
- ⑤ De-calc knob
- ⑥ Water tank
- ⑦ Pole
- ⑧ Pole lock clip
- ⑨ Pants clip (GC516, GC522)
- ⑩ Hanger
- ⑪ Hanger hook
- ⑫ Steamer head holder
- ⑬ Pleat maker and brush (GC516, GC522)
- ⑭ Glove
- ⑮ Mat (GC522)

① 蒸汽喷头	⑨ 裤夹 (GC516、GC522)
② 蒸汽输送管	⑩ 衣架
③ 蒸汽旋钮	⑪ 衣架钩
④ 底座	⑫ 蒸汽喷头支架
⑤ 除垢旋钮	⑬ 衣裤褶线夹和毛刷 (GC516、GC522)
⑥ 水箱	⑭ 防烫手套
⑦ 衣架杆	⑮ 熨衣垫 (GC522)
⑧ 衣架锁夹	

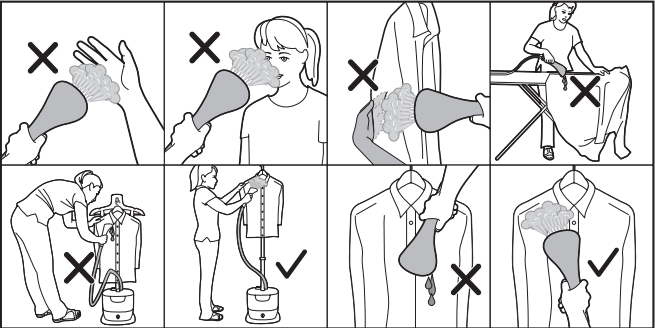

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.



- 本产品仅限于家用。
- 产品只能使用带接地线的插座。
- 定期检查电源线和蒸汽输送管是否损坏。
- 将产品插入电源插座之前，请将电源线完全解开。
- 水箱为空时，请勿使用产品。
- 切勿使用香水、转筒式干燥机中的水、醋、淀粉、除垢剂、熨衣剂、化学除垢水或其他化学品，因为它们可能会导致漏水、留下褐色污垢或损坏产品。
- 切勿将蒸汽挂烫机底座放置在桌面或椅子上，使用过程中，请将蒸汽挂烫机底座放在地板上。如果蒸汽输送管处于 U 形状态，则蒸汽会在输送管内冷凝。从而导致蒸汽输出不连续或蒸汽喷头中滴出水滴。
- 注水和清洁时，请先拔下电源插头。
- 当完成熨烫、清洁产品、为水箱加水或清空水箱、清洁和冲洗产品、安装或拆卸毛刷附件或短时间离开产品时，请关闭产品电源，并从电源插座上拔下电源插头。
- 使用除垢功能（如果有这个功能）之前，确保蒸汽挂烫机的电源插头已拔下至少 1 小时且完全冷却。

-

The diagram consists of three numbered panels illustrating the connection of a hose to a tank. Panel 1 shows the top of the tank with a valve; a hose is being attached to it. Panel 2 shows the side of the tank with a valve; a hose is being attached to it. Panel 3 shows the bottom of the tank with a valve; a hose is being attached to it. Each panel includes a circular inset showing a close-up of the connection point.

Diagram 4 shows a mannequin head being dressed with a white shirt. Diagram 5 shows a mannequin torso being dressed with a white shirt. Diagram 6 shows a mannequin legs being dressed with white pants.

- SC** 熨衣垫可以提供支撑以增强熨烫效果。
注意：不要清洗熨衣垫，因为这可能会损坏泡沫材料。

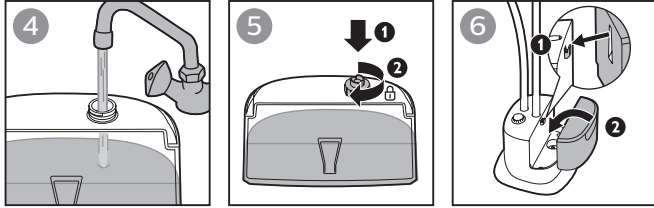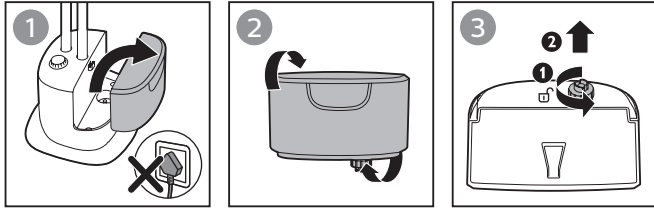

-

- 注意：**蒸汽熨烫期间，蒸汽输送管会变热。这是正常的。

- Note:** Do not wash the mat as it may damage the foam material

- SC** 熨衣垫可以提供支撑以增强熨烫效果。
注意：不要清洗熨衣垫，因为这可能会损坏泡沫材料。