



HD3021
HD3025
HD3027

EN User manual
ES-AR Manual del usuario
MS-MY Manual pengguna
VI Hướng dẫn sử dụng

PHILIPS



Specifications are subject to change without notice
© 2013 Koninklijke Philips Electronics N.V.
All rights reserved.

HD3021/HD3025/HD3027_UM_A5_V3.0

English

1 Your rice cooker

Congratulations on your purchase, and welcome to Philips!
To fully benefit from the support that Philips offers, register your product at www.Philips.com/welcome.

2 What's in the box

Rice cooker main unit	Steam basket
Rice scoop	Measuring cup
User manual	Safety leaflet
Warranty card	Power cord
Soup Ladle	

Overview

① Detachable inner lid	⑦ Steam water storage
② Inner pot	⑧ Outer lid
③ Water level indications	⑨ Lid release button
④ Scoop holder	⑩ Detachable steam vent cap
⑤ Heating element	⑪ Main body
⑥ Control Key	⑫ Power socket

Controls Overview

⑬ Keep warm indicator	⑭ Menu Key
⑮ Cooking indicator	

3 Using the rice cooker

Before first use

- Take out all the accessories from the inner pot. Remove the packaging material of the inner pot.
- Clear the parts of the rice cooker thoroughly before using the rice cooker for the first time (see chapter "Cleaning").

Note

- Make sure all parts are completely dry before you start using the rice cooker.

Preparations before use

- Before using the rice cooker, you need to follow the preparation:
- Measure the rice using the measuring cup provided.
 - Wash the rice thoroughly.
 - Put the pre-washed rice in the inner pot.
 - Add water to the level indicated on the scale inside the inner pot that corresponds to the number of cups of rice used. Then smooth the rice surface.
 - Press the release lever to open the lid.
 - Put the inner pot in the rice cooker. Check if the inner pot is in proper contact with the heating element.
 - Close the lid of the rice cooker, put the plug in the power socket.


- Measure a few cups of water with the measuring cup. Pour the water into the inner pot.
- Put the steam basket into the inner pot.
- Put the food into the steam basket.
- Close the lid of the rice cooker, put the plug in the power socket.
- Slide the menu (MENU) key to the rice (RICE) function.
- Push down the control key, and the cooking (COOK) indicator lights up.

What's in the box

Contenido de la caja

محتويات الصندوق

Apa dalam kotak ini
در جمعه بسته بندی قطعات زیر وجود دارد

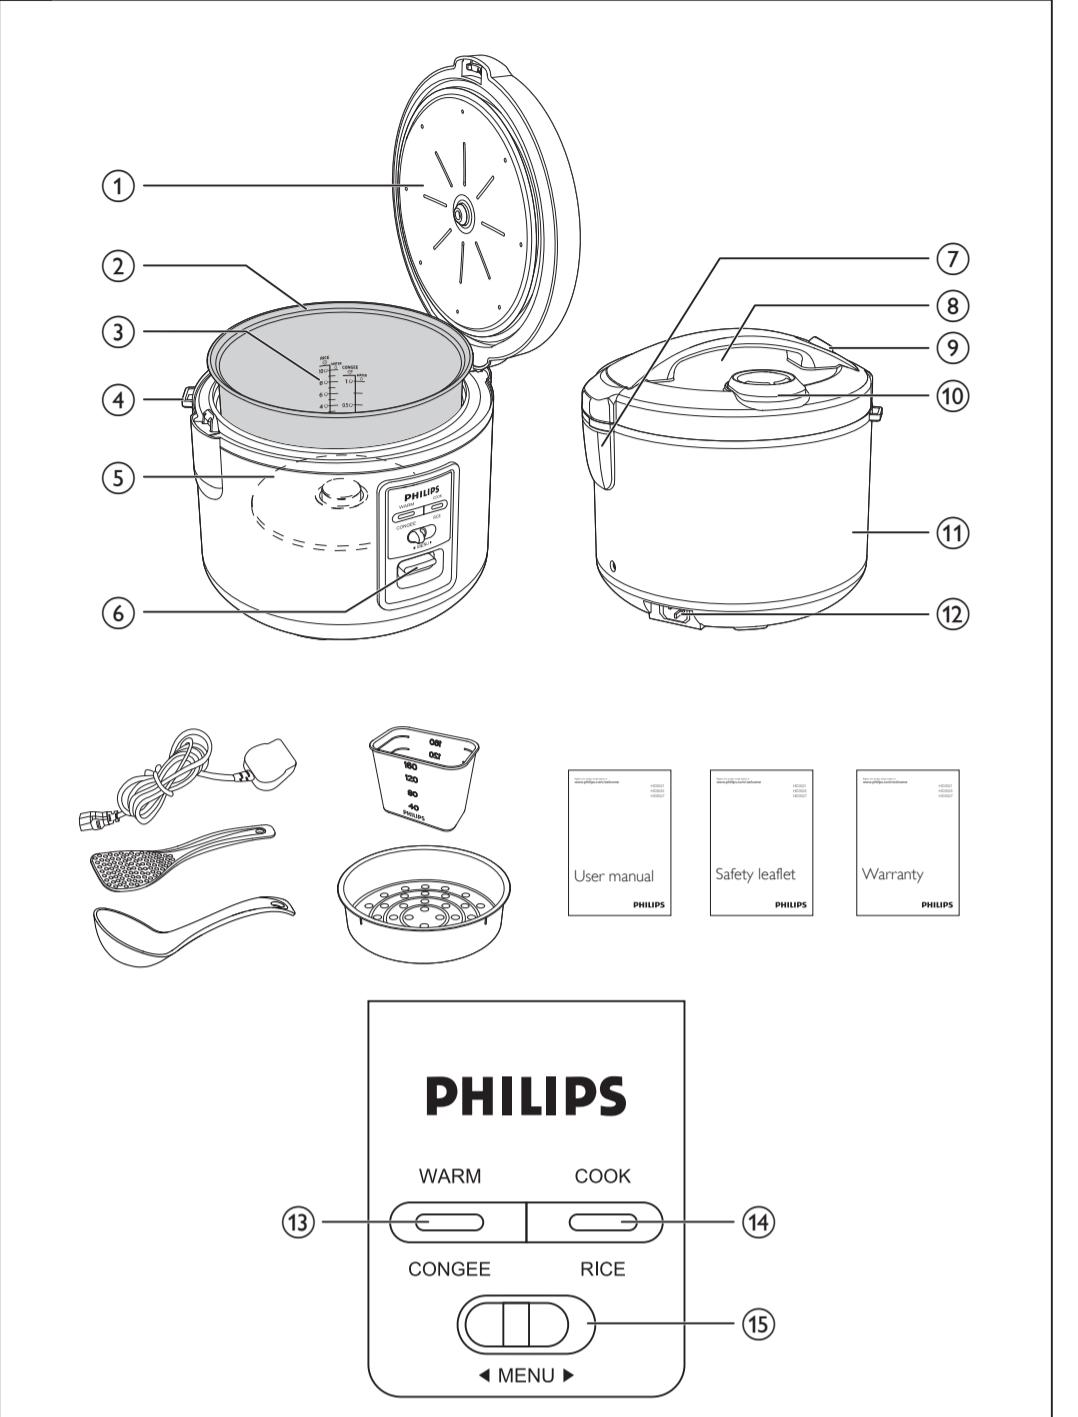

Using the rice cooker

Menggunakan pemasak nasi

Uso de la arrocera

استخدام جهاز طهي الأرز

煮饭

طهي الأرز

Using the rice cooker

Menggunakan pemasak nasi

Uso de la arrocera

استخدام جهاز طهي الأرز

煮饭

طهي الأرز

Using the rice cooker

Menggunakan pemasak nasi

Uso de la arrocera

استخدام جهاز طهي الأرز

煮饭

طهي الأرز

Using the rice cooker

Menggunakan pemasak nasi

Uso de la arrocera

استخدام جهاز طهي الأرز

煮饭

طهي الأرز

Using the rice cooker

Menggunakan pemasak nasi

Uso de la arrocera

استخدام جهاز طهي الأرز

煮饭

طهي الأرز

Using the rice cooker

Menggunakan pemasak nasi

Uso de la arrocera

استخدام جهاز طهي الأرز

煮饭

طهي الأرز

Using the rice cooker

Menggunakan pemasak nasi

Uso de la arrocera

استخدام جهاز طهي الأرز

煮饭

طهي الأرز

Using the rice cooker

Menggunakan pemasak nasi

Uso de la arrocera

استخدام جهاز طهي الأرز

煮饭

طهي الأرز

Using the rice cooker

Menggunakan pemasak nasi

Uso de la arrocera

استخدام جهاز طهي الأرز

煮饭

طهي الأرز

Using the rice cooker

Menggunakan pemasak nasi

Uso de la arrocera

استخدام جهاز طهي الأرز

煮饭

طهي الأرز

Using the rice cooker

Menggunakan pemasak nasi

Uso de la arrocera

استخدام جهاز طهي الأرز

煮饭

طهي الأرز

Using the rice cooker

Menggunakan pemasak nasi

Uso de la arrocera

استخدام جهاز طهي الأرز

煮饭

طهي الأرز

Using the rice cooker

Menggunakan pemasak nasi

Uso de la arrocera

استخدام جهاز طهي الأرز

煮饭

طهي الأرز

Using the rice cooker

Menggunakan pemasak nasi

Uso de la arrocera

استخدام جهاز طهي الأرز

煮饭

طهي الأرز

Using the rice cooker

Menggunakan pemasak nasi

Uso de la arrocera

استخدام جهاز طهي الأرز

煮饭

طهي الأرز

Using the rice cooker

Menggunakan pemasak nasi

Uso de la arrocera

استخدام جهاز طهي الأرز

煮饭

طهي الأرز

Using the rice cooker

Menggunakan pemasak nasi

Uso de la arrocera

استخدام جهاز طهي الأرز

煮饭

طهي الأرز

Using the rice cooker

Menggunakan pemasak nasi

Uso de la arrocera

استخدام جهاز طهي الأرز

煮饭

طهي الأرز

Using the rice cooker

Menggunakan pemasak nasi

Uso de la arrocera

استخدام جهاز طهي الأرز

煮饭

طهي الأرز

Using the rice cooker

Menggunakan pemasak nasi

Uso de la arrocera

استخدام جهاز طهي الأرز

煮饭

طهي الأرز

Using the rice cooker

Menggunakan pemasak nasi

Uso de la arrocera

استخدام جهاز طهي الأرز

煮饭

طهي الأرز

Using the rice cooker

Menggunakan pemasak nasi

