



EN	User manual	VI	Hướng dẫn sử dụng
MS-MY	Manual pengguna	ZH-CN	用户手册
TH	คู่มือผู้ใช้		

PHILIPS




All registered and unregistered trademarks are property of their respective owners.
© 2012 Koninklijke Philips Electronics N.V.
All rights reserved.




HD3011_3012_3015_3016_3017_3018_UM_SG_V1.0

What's in the box
ภายในกล่องมีอะไรบ้าง
包装盒内物品

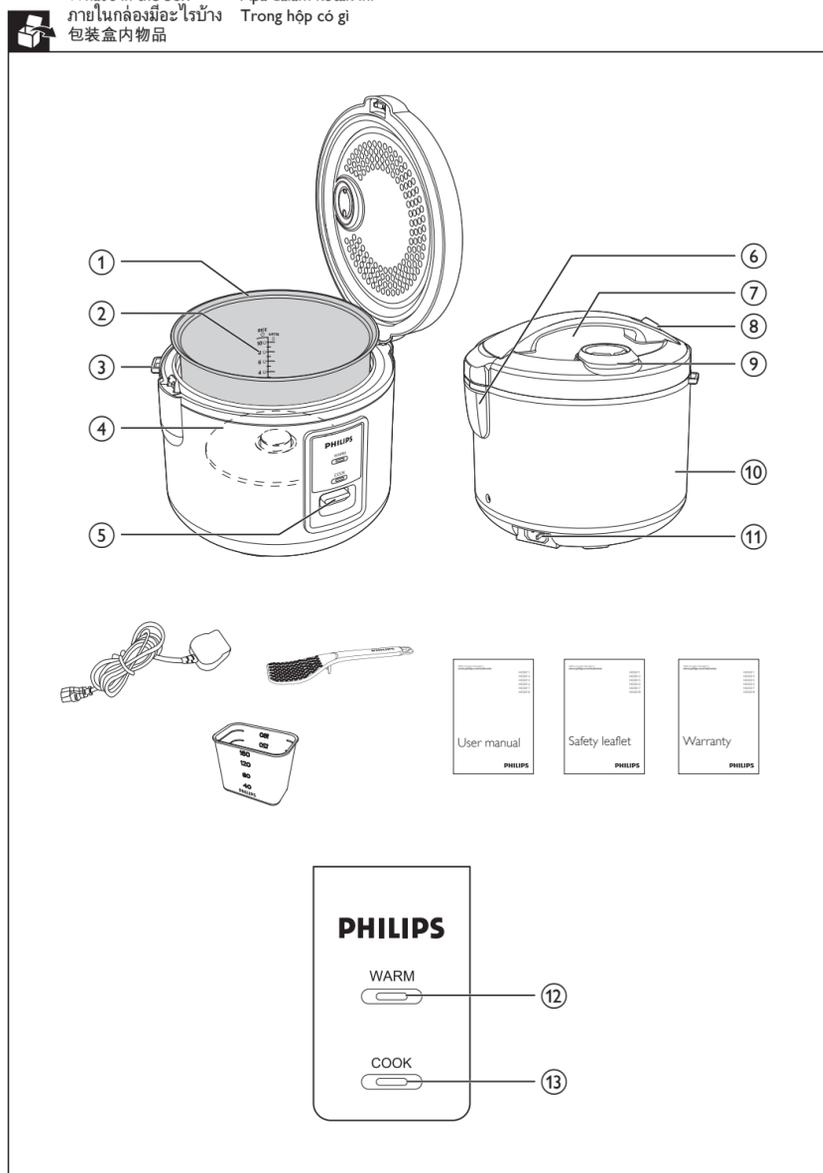

PHILIPS

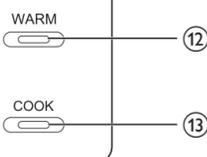

English

1 Your rice cooker

Congratulations on your purchase, and welcome to Philips!
To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

2 What's in the box

Rice cooker main unit
Measuring cup
Safety leaflet
Power cord

Rice scoop
User manual
Warranty card

Overview

① Inner pot	⑧ Lid release button
② Water level indications	⑨ Detachable steam vent cap
③ Scoop holder	⑩ Main body
④ Heating element	⑪ Power socket
⑤ Control Key	⑫ Keep warm indicator
⑥ Steam water storage	⑬ Cooking indicator
⑦ Outer lid	

3 Using the rice cooker

Before first use

- Take out all the accessories from the inner pot. Remove the packaging material of the inner pot.
- Clean the parts of the rice cooker thoroughly before using the rice cooker for the first time (see chapter "Cleaning").

Note

- Make sure all parts are completely dry before you start using the rice cooker.

Preparations before use

- Before using the rice cooker, you need to follow the preparation:
- Measure the rice using the measuring cup provided.
 - Wash the rice thoroughly.
 - Put the pre-washed rice in the inner pot.
 - Add water to the level indicated on the scale inside the inner pot that corresponds to the number of cups of rice used. Then smooth the rice surface.
 - Press the release lever to open the lid.
 - Put the inner pot in the rice cooker. Check if the inner pot is in proper contact with the heating element.
 - Close the lid of the rice cooker, put the plug in the power socket.

Note

- Each cup of uncooked rice normally gives 2 bowls of cooked rice. Do not exceed the quantities indicated on the inside of the inner pot.
- The level marked inside the inner pot is just an indication. You can always adjust the water level for different types of rice and your own preference. If the voltage is unstable at the area you live, it is possible that the rice cooker overflows.
- Besides following the water level indications, you can also add rice and water at 1:1-1.2 ratio for rice cooking. Do not exceed the quantities indicated on the inside of the inner pot.
- Make sure that the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element or the magnetic switch.

Cooking rice

- Follow the steps in "Preparations before use".
- Press down the control key, and the cooking (**COOK**) indicator lights up.
- When the cooking is finished, the cooking (**COOK**) indicator will be off.
- The rice cooker switches to keep warm mode automatically, and the keep warm (**WARM**) indicator lights up.

Note

- Do not exceed the volume indicated nor exceed the maximum water level indicated in the inner pot, as this may cause the rice cooker to overflow.

Specifications

Model Number	HD3011/ HD3012	HD3015/ HD3016	HD3017/ HD3018
Rated power output	500W	650W	650W
Rated capacity	3.0L	4.0L	5.0L
Rice volume (cups)	1L (1-6)	1.5L (1-8)	1.8L (1-10)

4 Cleaning and Maintenance

Note

- Unplug the rice cooker before starting to clean it.
- Wait until the rice cooker has cooled down sufficiently before cleaning it.

Interior

Inside of the outer lid and the main body:

- Wipe with wrung out and damp cloth.
- Make sure to remove all the food residues stuck to the rice cooker.

Heating element:

- Wipe with wrung out and damp cloth.
- Remove food residues with wrung out and damp cloth or toothpicks.

Exterior

Surface of the outer lid and outside of the main body:

- Wipe with a cloth dampened with soap water.
- ONLY use soft and dry cloth to wipe the control panel.
- Make sure to remove all the food residues around the control buttons.

Accessories

Rice scoop, inner pot, steam vent cap:
Soak in hot water and clean with sponge.

5 Environment

Do not throw away the appliance with normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you can help to preserve the environment.


6 Guarantee and service

If you need service or information, or if you have a problem, visit the Philips website at www.philips.com or contact the Philips Customer Care Center in your country. You can find its phone number in the worldwide guarantee leaflet. If there is no Customer Care Center in your country, go to your local Philips dealer.

7 Troubleshooting

Problem	Solution
The lights on the buttons does not go on.	There is a connection problem. Check if the power cord is connected to the cooker properly and if the plug is inserted firmly into the power outlet. The light is defective. Take the appliance to your Philips dealer or a service center authorized by Philips.
The rice is not cooked.	There is not enough water. Add water according to the scale on the inside of the inner pot. You did not press down the control key. Make sure that there is no foreign residue on the heating element and the outside of the inner pot before switching the rice cooker on. The heating element is damaged, or the inner pot is deformed. Take the cooker to your Philips dealer or a service center authorized by Philips.
The rice is not well cooked.	Add more water.
The cooker does not switch to keep warm mode automatically in "Rice Cooking" mode.	The temperature control is defective. Take the appliance to your Philips dealer or a service center authorized by Philips.
The rice is scorched.	You have not rinsed the rice properly. Rinse the rice until water runs clear.
Water spills out of the rice cooker during cooking.	<ul style="list-style-type: none"> Make sure that you add water to the level indicated on the scale inside the inner pot that corresponds to the number of cups of rice used. Make sure the water does not exceed the next level on the scale, as this may cause the appliance to overflow during cooking.
Rice smells bad after cooking	Clean the inner pot with some washing detergent and warm water. After cooking, make sure the steam vent cap, inner lid and inner pot is cleaned thoroughly.

Using the rice cooker
การใช้หม้อหุงข้าว
使用电饭煲

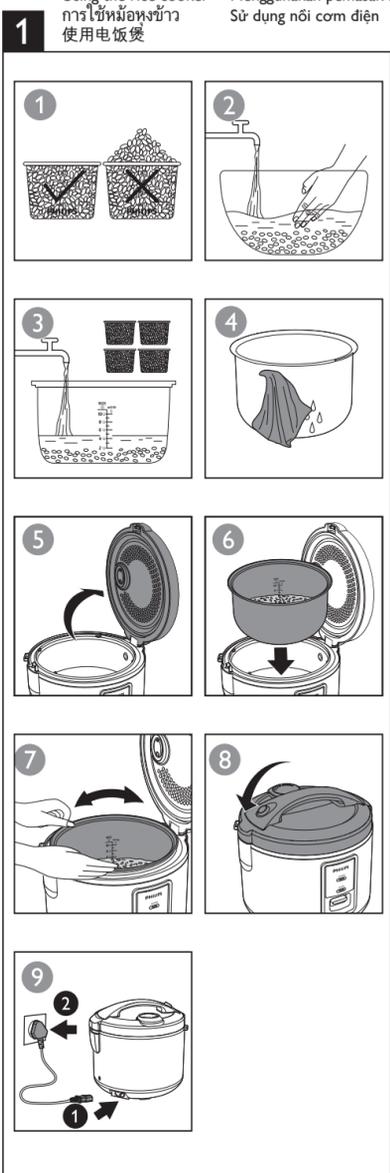

Bahasa Melayu

1 Pemasak nasi anda

Tahniah atas pembelian anda dan selamat menggunakan Philips!
Untuk mendapatkan manfaat sepenuhnya daripada sokongan yang ditawarkan oleh Philips, daftar produk anda di www.philips.com/welcome.

2 Apa dalam kotak ini

Unit utama pemasak nasi
Cawan penyukat
Risalah keselamatan
Kord kuasa

Senduk nasi
Manual pengguna
Kad waranti

Gambaran keseluruhan

① Peruk dalam	⑥ Butang pelepas tudung
② Penunjuk paras air	⑦ Tukup bolong stim boleh tanggal
③ Pemegang senduk	⑧ Jasad utama
④ Elemen pemanasan	⑨ Soket kuasa
⑤ Kunci kawalan	⑩ Penunjuk simpan panas
⑥ Penyimpanan air stim	⑪ Penunjuk memasak
⑦ Tudung luar	

3 Menggunakan pemasak nasi

Sebelum penggunaan pertama

- Keluarkan semua aksesori dari peruk dalam. Alih keluar bahan pembungkusan peruk dalam.
- Bersihkan bahagian pemasak nasi dengan menyeluruh sebelum anda menggunakan pemasak nasi buat kali pertama (lihat bab "Pembersihan").

Catatan


- Pastikan semua bahagian telah kering sepenuhnya sebelum anda mula menggunakan pemasak nasi.

Persediaan sebelum menggunakan

Sebelum menggunakan pemasak nasi, anda perlu mengikuti persediaan tersebut:

- Ukur beras menggunakan cawan penyukat yang disediakan.
- Basuh beras dengan sempurna.
- Tuangkan beras yang sudah dibasuh ke dalam peruk dalam.
- Tambahkan air sehingga paras yang ditunjukkan pada skala di bahagian dalam peruk dalam, yang sepadan dengan bilangan cawan beras yang digunakan. Kemudian, ratakan permukaan beras.
- Tekan butang pelepas untuk membuka tudungnya.
- Masukkan peruk dalam ke dalam pemasak nasi. Periksa sama ada peruk dalam bersentuhan dengan betul dengan elemen pemanas.
- Tutup tudung peruk pemasak nasi, dan masukkan plag ke dalam soket kuasa.

Cooking rice
วิธีหุงข้าว
煮饭

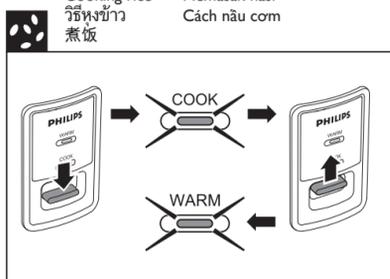

Catatan

- Setiap cawan beras biasanya menghasilkan 2 mangkuk nasi. Jangan melebihi kuantiti yang ditunjukkan di bahagian dalam peruk dalam.
- Paras yang ditandai di dalam peruk dalam hanyalah penunjuk. Anda sentiasa boleh melaraskan aras air untuk berlainan jenis beras dan keutamaan anda. Jika voltan di kawasan anda tinggal tidak stabil, pemasak nasi mungkin melimpah.
- Selain dari mengikut penunjuk paras air, anda juga boleh menambah beras dan air pada nisbah 1:1-1.2 untuk memasak nasi. Jangan melebihi kuantiti yang ditunjukkan di bahagian dalam peruk dalam.
- Pastikan bahawa bahagian luar peruk dalam adalah kering dan bersih, dan bahawa tiada sisa asing pada elemen pemanasan atau suis magnet.

Memasak nasi

- Ikuti langkah dalam "Persediaan sebelum menggunakan".
- Tekan kekunci kawalan ke bawah, dan penunjuk memasak (**COOK**) menyala.
- Apabila memasak selesai, penunjuk (**COOK**) memasak akan mati.
- Pemasak nasi bertukar ke mod simpan panas secara automatik, dan penunjuk simpan panas (**WARM**) menyala.

Catatan

- Jangan melebihi isi padu yang ditunjukkan mahupun melebihi paras air maksimum yang ditunjukkan di dalam peruk dalam, kerana ini boleh menyebabkan pemasak nasi melimpah.

Spesifikasi

Nombor Model	HD3011/ HD3012	HD3015/ HD3016	HD3017/ HD3018
Output kuasa yang ditarafkan	500W	650W	650W
Kapasiti yang ditarafkan	3.0L	4.0L	5.0L
Jumlah beras (cawan)	1L (1-6)	1.5L (1-8)	1.8L (1-10)

4 Pembersihan dan Penyelenggaraan

Catatan

- Cabut plag perkakas setiap kali sebelum anda mula membersihkannya.
- Tunggu sehingga peruk pemasak nasi telah sejuk secukupnya sebelum membersihkannya.

Dalam

Di bahagian dalam tudung luar dan badan utama:

- Lap dengan kain lembap yang telah diperah.
- Pastikan semua sisa makanan yang melekat pada pemasak nasi dibuang.

Elemen pemanas:

- Lap dengan kain lembap yang telah diperah.
- Buang sisa makanan dengan kain lembap yang telah diperah atau cungkil gigi.

Luar

Permukaan tudung luar dan bahagian luar jasad utama:

- Lap dengan kain yang dilembapkan dengan air sabun.
- HANYA gunakan kain lembut dan kering untuk melap panel kawalan.
- Pastikan semua sisa makanan di sekeliling butang kawalan dibuang.

Aksesori

Senduk nasi, peruk dalam, tukup bolong stim:

- Rendam di dalam air panas dan bersihkan dengan span.

5 Alam sekitar

Jangan buang perkakas ini dengan sampah rumah biasa di akhir hayatnya, sebaliknya bawa ia ke pusat pungutan rasmi untuk dikitar semula. Dengan melakukan ini, anda membantu memelihara alam sekitar.

6 Jaminan dan perkhidmatan

Jika anda memerlukan servis atau maklumat, atau jika anda mengalami masalah, lawati laman web Philips di www.philips.com atau hubungi Pusat Layanan Pelanggan Philips di negara anda. Anda boleh mendapatkan nombor telefonnya dalam risalah jaminan seluruh dunia. Jika tiada Pusat Layanan Pelanggan di negara anda, pergi ke penjual Philips tempatan anda.

