

- O aparelho tem de ser usado e posicionado numa superfície plana e resistente ao calor. Quando coloca o ferro no seu suporte, certifique-se de que a superfície onde o coloca é estável. O suporte é o descanso do ferro ou a parte em que o ferro é colocado quando não está em utilização.
- Ligue o aparelho apenas a uma tomada com ligação à terra.
- Desenrolle completamente o cabo de alimentação antes de ligar a ficha à tomada elétrica.
- A plataforma e a base do ferro podem ficar extremamente quentes e causar queimaduras se lhes tocar. Se quiser mover o gerador de vapor, não toque na plataforma do ferro.
- Quando terminar de engomar, quando limpar o aparelho, quando encher ou esvaziar o gerador de vapor e quando abandonar o ferro ainda que por pouco tempo: coloque o ferro no respetivo suporte, desligue o aparelho e retire a ficha de alimentação da tomada elétrica.
- Não adicione água perfumada, água de uma máquina de secar, vinagre, goma, agentes anticalcário, produtos para ajudar a engomar, água descalcificada quimicamente nem outros produtos químicos, pois estes podem causar fugas de água, manchas castanhas ou danos no aparelho.
- A ficha deve ser ligada apenas a tomadas com as mesmas características técnicas.
- Este aparelho destina-se apenas a uso doméstico.

#### Campos eletromagnéticos (CEM)

Este aparelho Philips cumpre todas as normas e regulamentos aplicáveis relativos à exposição a campos eletromagnéticos.

#### Reciclagem

- Este símbolo (Fig. 2) significa que este produto não deve ser eliminado juntamente com os resíduos domésticos comuns (UE 2012/19/UE).
- Siga as normas do seu país para a recolha seletiva de produtos elétricos e eletrónicos. A eliminação correta ajuda a evitar consequências prejudiciais para o meio ambiente e para a saúde pública.

#### Garantia e assistência

Se precisar de informações ou assistência, acesse a [www.philips.com/support](http://www.philips.com/support) ou leia o folheto da garantia mundial em separado.

#### ภาษาไทย

##### ข้อความเตือน

ข้อความเตือนนี้ได้ถูกเพิ่มเข้ามาเพื่อเตือนผู้ใช้งานว่าหากไม่ปฏิบัติตามข้อห้ามที่ระบุไว้ในข้อความเตือนนี้ อาจส่งผลกระทบต่อชีวิตและทรัพย์สินของคุณได้ ดูรายละเอียดเพิ่มเติมที่ [www.philips.com/welcome](http://www.philips.com/welcome)

##### ข้อสำคัญ

อ่านข้อความสำคัญนี้ให้ดีก่อนใช้งาน แล้วปฏิบัติตามอย่างเคร่งครัด เก็บเอกสารทั้งสองฉบับไว้ 以防万一

เครื่องใช้ไฟฟ้าที่ไม่ได้รับการรับรองตามมาตรฐานของประเทศใดๆ ก็ตาม ไม่สามารถรับประกันคุณภาพได้ ไม่สามารถรับประกันว่าจะปลอดภัย หรือสามารถใช้งานได้ เช่นเดียวกับเครื่องใช้ไฟฟ้าที่ได้รับการรับรองมาตรฐานของประเทศนั้นๆ ให้ใช้เครื่องใช้ไฟฟ้าที่ได้รับการรับรองมาตรฐานของประเทศไทยเท่านั้น

##### การรับประกันและสนับสนุน

หากคุณต้องการข้อมูลเพิ่มเติม โปรดเข้าชมเว็บไซต์ [www.philips.com/support](http://www.philips.com/support) หรืออ่านข้อมูลจากสารคดีที่แนบมาพร้อมกับเครื่องใช้ไฟฟ้า

##### Tiếng Việt

##### Giới thiệu

Chúc mừng bạn đã mua được sản phẩm của Philips! Để được hưởng lợi ích đầy đủ từ sự hỗ trợ do Philips cung cấp, hãy đăng ký sản phẩm tại [www.philips.com/welcome](http://www.philips.com/welcome).

##### Quan trọng

Hãy đọc kỹ tài liệu thông tin quan trọng riêng và tài liệu hướng dẫn sử dụng trước khi sử dụng thiết bị. Hãy cẩn giữ để tiện tham khảo sau này.

Thiết bị này đã được thiết kế để chỉ sử dụng trong nhà. Đôi với bất kỳ hành vi sử dụng thường mại, không thích hợp nào hoặc không tuân thủ các hướng dẫn, nhà sản xuất sẽ không chịu trách nhiệm và bảo hành sẽ không được áp dụng.

##### Nguy hiểm

- Tuyệt đối không nhúng máy vào nước.

##### Cảnh báo

- Không sử dụng thiết bị nếu phích cắm, dây điện, ống cấp hơi nước hoặc chính bản thân thiết bị có biểu hiện hư hỏng rõ ràng, hoặc nếu thiết bị đã bị rơi hoặc rò rỉ. Đã sửa chữa hoặc bảo dưỡng, bạn phải mang thiết bị đến kiểm tra tại Philips, trung tâm dịch vụ của Philips uy tín hoặc bởi những người có trình độ tương đương.

- 8岁或以上年龄的儿童只有在监督下才可清洁本设备和执行除垢程序。

- 切勿让儿童玩要本产品。

- 当熨斗通电或者正在冷却时, 请将熨斗及其电源线放在8岁或以下儿童触及不到的地方。

- 小心拿放您的熨斗, 切勿让蒸汽喷向人或动物, 否则可能会导致烫伤。

- 请勿让电源线和蒸汽输送管接触熨斗的高温底板。

- 激活蒸汽功能后, 请将手指或手远离底板, 以免在熨烫过程中烫伤。

\* 在电熨斗接通电源期间, 使用者不得离开。

\* 在给水箱注水前必须将电源线的插头从插座上拔掉。

\* 在使用时不得打开注水口。

\* 当把电熨斗放置在其支座上时, 应确保支座已在稳定的表面上。

**注意: 表面很烫 (图1)**

表面在使用中容易变得很烫 (适用于产品上有“烫”符号的电熨斗)。

##### 警 告

- 切勿在产品无人看管的情况下进行除垢。

- 按照“清洁和保养”一章中的说明为蒸汽电熨斗除垢或启用自动除垢功能。

- 始终用除垢容器执行除垢过程, 期间不要中断。

- 在除垢过程中, 切勿让熨斗竖立, 因为这样会冒出热水。

- 完成除垢过程后, 除垢容器会变热。请等待大约5分钟, 冷却后再触碰。

- 必须在平整、隔热的表面上使用和放置本产品。当您将熨斗放在熨斗座上时, 确保将其放在稳固的表面。熨斗座是指熨斗的后部或熨斗在不工作时所放置的地方。

- 产品只能使用带接地线的插座。

- 将插头接入电源插座之前, 请将电源线完全解开。

- 熨斗座和熨斗底板有可能会变得很烫, 如果触及, 可能导致烫伤。如果要移动蒸汽箱, 切勿触碰熨斗座。

- 当完成熨烫、清洁产品、注水或将水倒出蒸汽发生器以及即使短时间离开熨斗时, 均必须将

熨斗放在熨斗座上, 关闭设备电源, 并从电源插座上拔下电源线。

- 切勿使用香水、转筒式干燥机中的水、醋、淀粉、除垢剂、熨衣剂、化学除垢水或其他化学品, 因为它们可能会导致漏水、留下褐色污垢或损坏产品。

- 插头只能连接到与插头的技术特性相同的电源插座中。

- 本产品仅限于家用。

##### 電磁場 (EMF)

本飞利浦产品符合所有有关暴露于电磁场的适用标准和法规。

##### 回收

- 产品使用寿命结束时, 请勿与一般家庭废物一同丢弃。请将该产品送至政府指定的回收点进行回收。此举有助于保护环境和人类健康。

- 调遗遵循您所在国家/地区的电器及电子产品分类收集的规定。正确弃置产品有助于避免对环境和人类健康造成负面影响。

- 如需相关資訊或支援, 请造訪 [www.philips.com/support](http://www.philips.com/support), 或另行参阅全球保证书。

如欲了解有关产品或支援, 请造访 [www.philips.com/support](http://www.philips.com/support) 或参阅全球保证书。

如欲了解有关产品或支援, 请造访 [www.philips.com/support</](http://www.philips.com/support)

**Introduction**

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

**Important**

Read the separate important information leaflet and the user manual carefully before you use the appliance. Save both documents for future reference.  
This appliance has been designed for domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.

**Danger**

- Never immerse the appliance in water.

**Warning**

- Do not use the appliance if the plug, the mains cord, the steam supply hose or the appliance itself shows visible damage, or if the appliance has been dropped or leaked. For repair or service, you must have the appliance inspected by Philips, a service center authorized by Philips or similarly qualified persons.
- Check if the voltage indicated on the type plate corresponds to the local mains voltage before you connect the appliance.
- Do not leave the appliance unattended when it is connected to the mains.
- This appliance can be used by children aged 8 or above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given instructions in safe use of the appliance or supervision to establish safe use and if they have been made aware of the hazards involved.
- Children aged 8 or over are only allowed to clean the appliance and perform descale or Calc-Clean procedure under supervision.
- Do not allow children to play with the appliance.
- Keep the iron and its mains cord out of the reach of children aged 8 or under when the appliance is switched on or cooling down.
- Handle your iron carefully and never direct the steam towards persons or animals as your appliance gives off steam which can cause burns.
- Do not let the mains cord and steam supply hose come into contact with the hot soleplate of the iron.
- Keep your fingers or hand away from the soleplate when steam is activated to avoid burns during ironing.

**CAUTION: Hot surface (Fig. 1)**

Surfaces are liable to get hot during use (for irons with hot symbol marked on the appliance).

**Caution**

- Do not leave the appliance unattended during the Calc-Clean process.
- Descale or calc clean the steam generator according to the instructions in chapter 'Cleaning and maintenance'.
- Always perform the Calc-Clean process with the Calc-Clean container and do not interrupt the process.
- Do not let the iron rest on its heel during the Calc-Clean process as hot water comes out.
- After the calc-clean process, the calc-clean container becomes hot. Wait approximately 5 minutes to cool down before you touch it.
- The appliance must be used and placed on a flat, heat-resistant surface. When you place the iron on its stand, make sure that the surface on which you place it is stable. Stand is the heel of the iron or the part, which the iron is placed when at rest.
- Only connect the appliance to an earthed wall socket.
- Fully unwind the mains cord before you put the plug in the wall socket.
- The iron platform and the soleplate of the iron can become extremely hot and may cause burns if touched. If you want to move the steam generator, do not touch the iron platform.
- When you have finished ironing, when you clean the appliance, when you fill or empty the steam generator and when you leave the iron even for a short while: put the iron back on the iron platform, switch off the appliance and remove the mains plug from the wall socket.
- Do not add perfumed water, water from the tumble dryer, vinegar, starch, descaling agents, ironing aids, chemically descaled water or other chemicals, as they may cause water leakage, brown staining or damage to your appliance.
- The plug must only be connected to a socket with the same technical characteristics as plug.
- This appliance is intended for household use only.

**Electromagnetic fields (EMF)**

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

**Recycling**

- This symbol (Fig. 2) means that this product shall not be disposed of with normal household waste (2012/19/EU).
- Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

**Guarantee and support**

If you need information or support, please visit [www.philips.com/support](http://www.philips.com/support) or read the separate worldwide guarantee leaflet.

**Français****Introduction**

Félicitations pour votre achat et bienvenue chez Philips! Pour profiter pleinement de l'assistance offerte par Philips, enregistrez votre appareil à l'adresse suivante : [www.philips.com/welcome](http://www.philips.com/welcome).

**Important**

Veuillez lire la brochure séparée sur les informations importantes et le mode d'emploi avant d'utiliser l'appareil. Conservez les deux documents afin de pouvoir vous y référer ultérieurement.  
Cet appareil a été conçu pour un usage domestique uniquement. En cas d'utilisation commerciale, d'utilisation non appropriée ou de non-respect des instructions, le fabricant ne pourra être tenu responsable et la garantie ne s'appliquera pas.

**Danger**

- Never immerse the appliance in water.

**Warning**

- Do not use the appliance if the plug, the mains cord, the steam supply hose or the appliance itself shows visible damage, or if the appliance has been dropped or leaked. For repair or service, you must have the appliance inspected by Philips, a service center authorized by Philips or similarly qualified persons.
- Check if the voltage indicated on the type plate corresponds to the local mains voltage before you connect the appliance.
- Do not leave the appliance unattended when it is connected to the mains.
- This appliance can be used by children aged 8 or above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given instructions in safe use of the appliance or supervision to establish safe use and if they have been made aware of the hazards involved.
- Children aged 8 or over are only allowed to clean the appliance and perform descale or Calc-Clean procedure under supervision.
- Do not allow children to play with the appliance.
- Keep the iron and its mains cord out of the reach of children aged 8 or under when the appliance is switched on or cooling down.
- Handle your iron carefully and never direct the steam towards persons or animals as your appliance gives off steam which can cause burns.
- Do not let the mains cord and steam supply hose come into contact with the hot soleplate of the iron.
- Keep your fingers or hand away from the soleplate when steam is activated to avoid burns during ironing.

**CAUTION: Hot surface (Fig. 1)**

Surfaces are liable to get hot during use (for irons with hot symbol marked on the appliance).

**Caution**

- Do not leave the appliance unattended during the Calc-Clean process.
- Descale or calc clean the steam generator according to the instructions in chapter 'Cleaning and maintenance'.
- Always perform the Calc-Clean process with the Calc-Clean container and do not interrupt the process.
- Do not let the iron rest on its heel during the Calc-Clean process as hot water comes out.
- After the calc-clean process, the calc-clean container becomes hot. Wait approximately 5 minutes to cool down before you touch it.
- The appliance must be used and placed on a flat, heat-resistant surface. When you place the iron on its stand, make sure that the surface on which you place it is stable. Stand is the heel of the iron or the part, which the iron is placed when at rest.
- Only connect the appliance to an earthed wall socket.
- Fully unwind the mains cord before you put the plug in the wall socket.
- The iron platform and the soleplate of the iron can become extremely hot and may cause burns if touched. If you want to move the steam generator, do not touch the iron platform.
- When you have finished ironing, when you clean the appliance, when you fill or empty the steam generator and when you leave the iron even for a short while: put the iron back on the iron platform, switch off the appliance and remove the mains plug from the wall socket.
- Do not add perfumed water, water from the tumble dryer, vinegar, starch, descaling agents, ironing aids, chemically descaled water or other chemicals, as they may cause water leakage, brown staining or damage to your appliance.
- The plug must only be connected to a socket with the same technical characteristics as plug.
- This appliance is intended for household use only.

**Electromagnetic fields (EMF)**

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

**Recycling**

- This symbol (Fig. 2) means that this product shall not be disposed of with normal household waste (2012/19/EU).
- Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

**Guarantee and support**

If you need information or support, please visit [www.philips.com/support](http://www.philips.com/support) or read the separate worldwide guarantee leaflet.

**Français****Introduction**

Félicitations pour votre achat et bienvenue chez Philips! Pour profiter pleinement de l'assistance offerte par Philips, enregistrez votre appareil à l'adresse suivante : [www.philips.com/welcome](http://www.philips.com/welcome).

**Important**

Veuillez lire la brochure séparée sur les informations importantes et le mode d'emploi avant d'utiliser l'appareil. Conservez les deux documents afin de pouvoir vous y référer ultérieurement.  
Cet appareil a été conçu pour un usage domestique uniquement. En cas d'utilisation commerciale, d'utilisation non appropriée ou de non-respect des instructions, le fabricant ne pourra être tenu responsable et la garantie ne s'appliquera pas.

**Danger**

- Never immerse the appliance in water.

**Warning**

- Do not use the appliance if the plug, the mains cord, the steam supply hose or the appliance itself shows visible damage, or if the appliance has been dropped or leaked. For repair or service, you must have the appliance inspected by Philips, a service center authorized by Philips or similarly qualified persons.
- Check if the voltage indicated on the type plate corresponds to the local mains voltage before you connect the appliance.
- Do not leave the appliance unattended when it is connected to the mains.
- This appliance can be used by children aged 8 or above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given instructions in safe use of the appliance or supervision to establish safe use and if they have been made aware of the hazards involved.
- Children aged 8 or over are only allowed to clean the appliance and perform descale or Calc-Clean procedure under supervision.
- Do not allow children to play with the appliance.
- Keep the iron and its mains cord out of the reach of children aged 8 or under when the appliance is switched on or cooling down.
- Handle your iron carefully and never direct the steam towards persons or animals as your appliance gives off steam which can cause burns.
- Do not let the mains cord and steam supply hose come into contact with the hot soleplate of the iron.
- Keep your fingers or hand away from the soleplate when steam is activated to avoid burns during ironing.

**CAUTION: Hot surface (Fig. 1)**

Surfaces are liable to get hot during use (for irons with hot symbol marked on the appliance).

**Caution**

- Do not leave the appliance unattended during the Calc-Clean process.
- Descale or calc clean the steam generator according to the instructions in chapter 'Cleaning and maintenance'.
- Always perform the Calc-Clean process with the Calc-Clean container and do not interrupt the process.
- Do not let the iron rest on its heel during the Calc-Clean process as hot water comes out.
- After the calc-clean process, the calc-clean container becomes hot. Wait approximately 5 minutes to cool down before you touch it.
- The appliance must be used and placed on a flat, heat-resistant surface. When you place the iron on its stand, make sure that the surface on which you place it is stable. Stand is the heel of the iron or the part, which the iron is placed when at rest.
- Only connect the appliance to an earthed wall socket.
- Fully unwind the mains cord before you put the plug in the wall socket.
- The iron platform and the soleplate of the iron can become extremely hot and may cause burns if touched. If you want to move the steam generator, do not touch the iron platform.
- When you have finished ironing, when you clean the appliance, when you fill or empty the steam generator and when you leave the iron even for a short while: put the iron back on the iron platform, switch off the appliance and remove the mains plug from the wall socket.
- Do not add perfumed water, water from the tumble dryer, vinegar, starch, descaling agents, ironing aids, chemically descaled water or other chemicals, as they may cause water leakage, brown staining or damage to your appliance.
- The plug must only be connected to a socket with the same technical characteristics as plug.
- This appliance is intended for household use only.

**ATTENTION : surface chaude (Fig. 1)**

Les surfaces peuvent devenir chaudes en cours d'utilisation (pour les fers à repasser marqués par le symbole « chaud »).

**Attention**

- Ne laissez pas l'appareil sans surveillance pendant le traitement Calc-Clean.
- Détardez la centrale vapeur ou effectuez la procédure Calc-Clean en suivant les instructions du chapitre « Nettoyage et entretien ».
- Exécutez toujours la procédure de détartrage Calc-Clean avec le réservoir Calc-Clean sans l'interrompre.
- Ne laissez pas le fer sur son talon pendant la procédure de détartrage Calc-Clean car de l'eau brûlante s'échappe de l'appareil.
- La procédure de détartrage Calc-Clean fait chauffer le réservoir Calc-Clean. Attendez environ 5 minutes qu'il refroidisse avant de le manipuler.
- L'appareil doit être utilisé et placé sur une surface plane qui résiste à la chaleur. Lorsque vous placez le fer à repasser sur sa base, assurez-vous que la surface sur laquelle vous le placez est stable. La base correspond au talon du fer ou à la partie sur laquelle le fer est placé lorsqu'il n'est pas utilisé.
- Branchez l'appareil uniquement sur une prise murale mise à la terre.
- Détouchez complètement le cordon d'alimentation avant de le brancher sur la prise secteur.
- La base du fer à repasser et sa semelle deviennent extrêmement chaudes et peuvent donc provoquer des brûlures si vous les touchez. Si vous souhaitez déplacer la chaudière, ne touchez pas la base.
- Lorsque vous avez fini de repasser, pendant que vous nettoyez l'appareil, que vous remplissez ou videz la centrale vapeur, ou lorsque vous laissez le fer sans surveillance un bref instant, posez le fer sur son support, éteignez l'appareil, puis débranchez-le du secteur.
- N'ajoutez pas d'eau parfumée, d'eau provenant du séche-linge, de vinaigre, d'amidon, de détartrants, de produits d'aide au repassage ou d'autres agents chimiques dans le réservoir d'eau car ils peuvent entraîner des fuites d'eau, des taches marron ou des dommages à votre appareil.
- La fiche doit être branchée uniquement sur une prise ayant les mêmes caractéristiques techniques que la fiche.
- Cet appareil est destiné à un usage domestique uniquement.

**PERHATIAN: Permukaan panas (Gbr. 1)**

Permukaan bisa menjadi panas selama pemakaian (untuk setrika dengan simbol 'hot' pada alat).

**PERHATIAN: Permukaan panas (Gbr. 1)**

Permukaan bisa menjadi panas selama pemakaian (untuk setrika dengan simbol 'hot' pada alat).

**PERHATIAN: Permukaan panas (Raj. 1)**

Permukaan bisa menjadi panas selama pemakaian (untuk setrika dengan simbol 'hot' pada alat).

**PERHATIAN: Permukaan panas (Raj. 1)**

Permukaan bisa menjadi panas selama pemakaian (untuk setrika dengan simbol 'hot' pada alat).

**PERHATIAN: Permukaan panas (Raj. 1)**

Permukaan bisa menjadi panas selama pemakaian (untuk setrika dengan simbol 'hot' pada alat).

**PERHATIAN: Permukaan panas (Raj. 1)**

Permukaan bisa menjadi panas selama pemakaian (untuk setrika dengan simbol 'hot' pada alat).

**PERHATIAN: Permukaan panas (Raj. 1)**

Permukaan bisa menjadi panas selama pemakaian (untuk setrika dengan simbol 'hot' pada alat).

**PERHATIAN: Permukaan panas (Raj. 1)**

Permukaan bisa menjadi panas selama pemakaian (untuk setrika dengan simbol 'hot' pada alat).

**PERHATIAN: Permukaan panas (Raj. 1)**

Permukaan bisa menjadi panas selama pemakaian (untuk setrika dengan simbol 'hot' pada alat).

**PERHATIAN: Permukaan panas (Raj. 1)**

Permukaan bisa menjadi panas selama pemakaian (untuk setrika dengan simbol 'hot' pada alat).

**PERHATIAN: Permukaan panas (Raj. 1)**

Permukaan bisa menjadi panas selama pemakaian (untuk setrika dengan simbol 'hot' pada alat).

**PERHATIAN: Permukaan panas (Raj. 1)**

Permukaan bisa menjadi panas selama pemakaian (untuk setrika dengan simbol 'hot' pada alat).

**PERHATIAN: Permukaan panas (Raj. 1)**

Permukaan bisa menjadi panas selama pemakaian (untuk setrika dengan simbol 'hot' pada alat).

**PERHATIAN: Permukaan panas (Raj. 1)**

Permukaan bisa menjadi panas selama pemakaian (untuk setrika dengan simbol 'hot' pada alat).

**PERHATIAN: Permukaan panas (Raj. 1)**

Permukaan bisa menjadi panas selama pemakaian (untuk setrika dengan simbol 'hot' pada alat).

**PERHATIAN: Permukaan panas (Raj. 1)**

Permukaan bisa menjadi panas selama pemakaian (untuk setrika dengan simbol 'hot' pada alat).

**PERHATIAN: Permukaan panas (Raj. 1)**

Permukaan bisa menjadi panas selama pemakaian (untuk setrika dengan simbol 'hot' pada alat).

**PERHATIAN: Permukaan panas (Raj. 1)**

Permukaan bisa menjadi panas selama pemakaian (untuk setrika dengan simbol 'hot' pada alat).

**PERHATIAN: Permukaan panas (Raj. 1)**

Permukaan bisa menjadi panas selama pemakaian (untuk setrika dengan simbol 'hot' pada alat).

**PERHATIAN: Permukaan panas (Raj. 1)**

Permukaan bisa menjadi panas selama pemakaian (untuk setrika dengan simbol 'hot' pada alat).

**PERHATIAN: Permukaan panas (Raj. 1)**