 


PHILIPS

手持式蒸汽熨烫机

STH3050



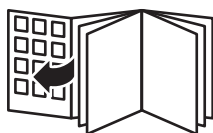


English	6
简体中文	20
繁體中文	34

Introduction


Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome. Read this user manual, the important information leaflet, and the quick start guide carefully before you use the appliance. Save them for future reference.

 Product Overview

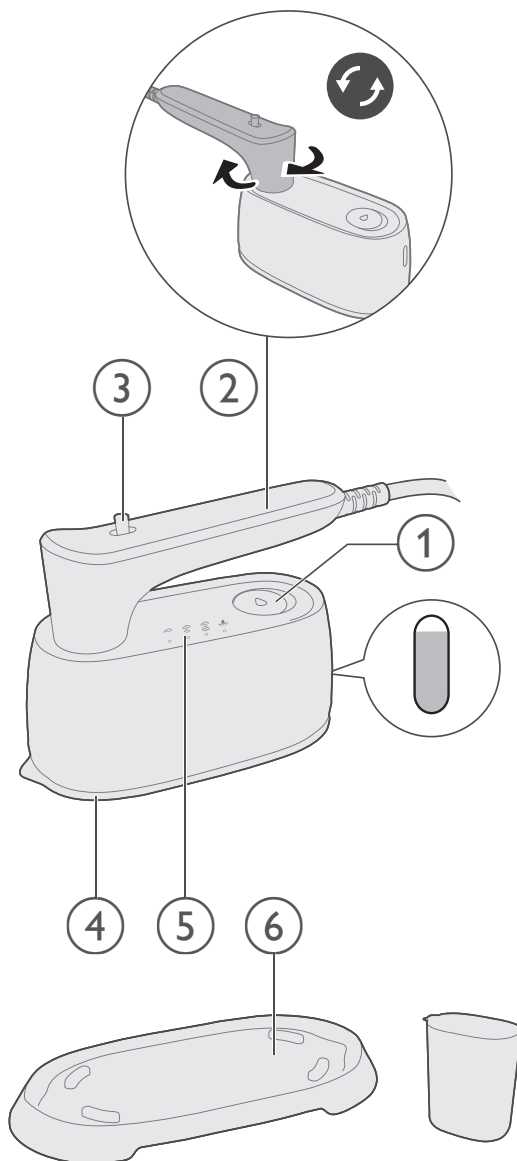

- 1 Water tank
- 2 Handle
- 3 Power/Mode selection lever
- 4 Soleplate
- 5 Mode display area
- 6 Heat-Resistant tray

 
Warnings

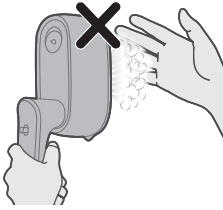


- 1 Beware of hot steam that comes out of the steamer. Steam can cause burns.



 - 2 Do not position the appliance towards your/ another person's face.

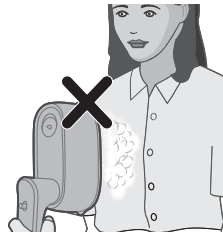

 - 3 Do not direct the appliance towards yourself/another person.

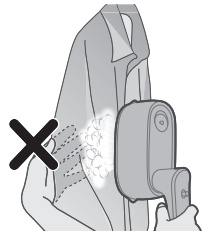

- 4 Do not use your bare hand as a supporting surface when you steam.

8 English



- 5 Keep the appliance out of children's reach.



 
- 6 Make sure the power cord is not underneath the appliance.




- 7 When heated, do not turn the handle by one hand and place the other on the appliance surface to prevent burns.



- 8 Always hold the steamer by its handle for safe operation.

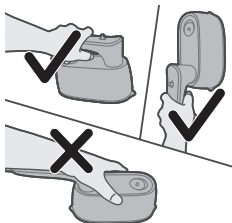

 
- 9 Place the appliance on the tray provided between uses to prevent burns when the heating soleplate is hot.

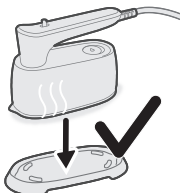

Preparing for Use

Type of Water to Use

 
The appliance is suitable to be used with tap water. However, if you live in an area with hard water, we recommend that you mix an equal amount of tap water with distilled or demineralized water. This will prevent fast scale build up and prolong the lifetime of the appliance.

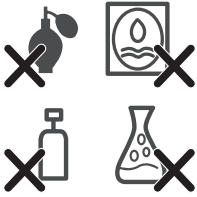


Do not add perfume, water from the tumble dryer, vinegar, starch, descaling agents, ironing aids, chemically descaled water or other chemicals, as they may cause water spitting, brown staining or damage to your appliance.

Filling Water Tank

 
- 1 Ensure the appliance is unplugged before filling the water tank.

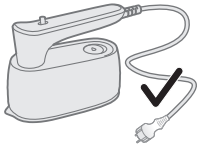


 - 2 Before adding water, rotate the handle to avoid blocking the water tank filling inlet.

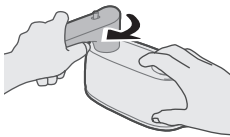

  - 3 Carefully pour water into the tank, avoiding spills and overfilling.


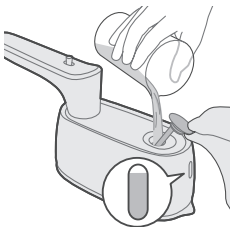


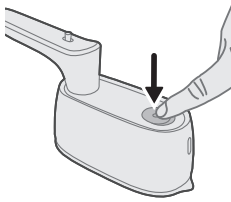


- 4 Close and secure the water tank cap back into place, ensuring it is properly sealed.

Preparation before Use

  
- 1 Insert the appliance's plug into a power socket.

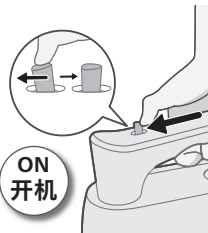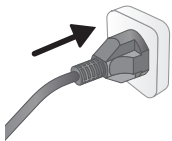

 
- 2 Activate the appliance by sliding the lever up, which turns on the appliance in dry ironing mode.

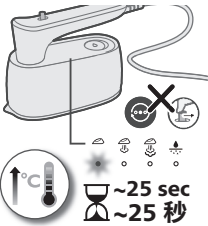

 
- 3 The appliance requires approximately 25 seconds to preheat. During preheating, the LED indicator uses a breathing light pattern to indicate the process is underway. Mode switching is not available during this phase.

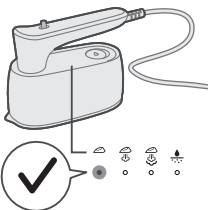

 - 4 Once preheating is complete, the appliance is ready for use. The LED illuminates continuously, signifying that the appliance is heated and ready for ironing.

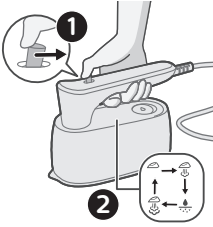

 - 5 Slide the lever down to cycle through the modes: dry ironing -> first-level steam -> second-level steam -> descaling.

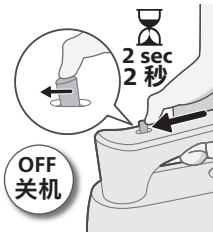


- 6 Turn off the appliance by sliding the lever upwards for 2 seconds while it's powered on.

Using the Appliance

Steam mode




 Adjust the lever to choose your preferred steam setting. Make sure the appliance is on a flat surface and the handle is securely closed.

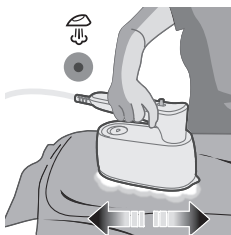

You can use the appliance horizontally in first-level steam mode.

 
12 English

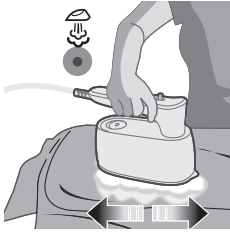


When needing more steam, you can use the appliance horizontally in second level steam mode.



 
When the soleplate is hot, avoid using one hand to hold the main body of the appliance and the other to rotate the handle. Always practice safety.

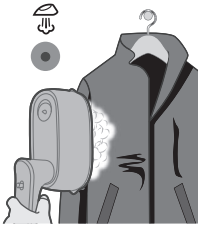

 You can also use the appliance in a vertical position with first-level steam. Keep the appliance at a safe distance from your body and fabrics.

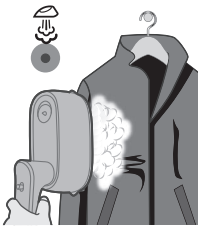

 For a higher steam output, use the appliance in a vertical position with second level steam.

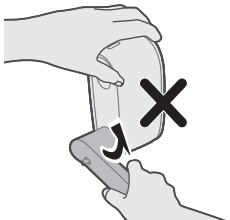


Do not hold the appliance with one hand and rotating the handle with the other while the soleplate is hot. Maintain a safe handling distance to prevent burns.


Steam Boost



 
Slide the lever backwards for 2 seconds to activate the steam boost feature, which can only be initiated in dry ironing mode.

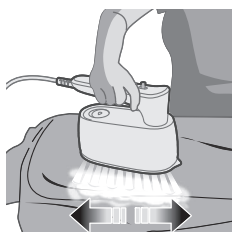

 The steam boost feature can be used in both horizontal and vertical positions. When ironing horizontally, place the appliance directly on the fabric. For vertical steaming, aim the appliance at hanging garments.

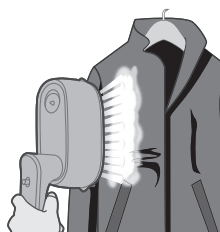

 
After activating the steam boost, it's important to wait for approximately 15 seconds before using it again. This interval allows the appliance to rebuild steam pressure, ensuring each burst is as effective as the first.

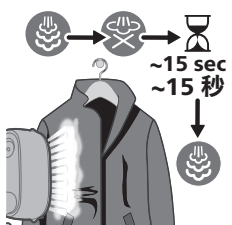


Dry Ironing Mode



 Slide the lever downwards to set the appliance to dry ironing mode. Ensure the appliance is placed on a stable, flat surface and the handle is properly closed.

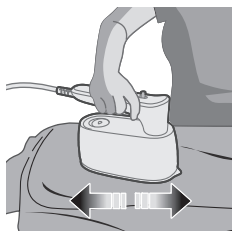

 You can iron horizontally or vertically as needed in dry ironing mode.

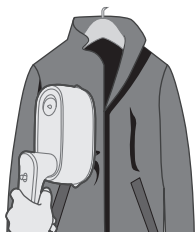


Stand-by Mode




- 1 The appliance features a safety protection mode designed to avoid potential burning issues when the user steps away.




  - 2 If the appliance detects no user interaction for 2 minutes, it automatically transitions to a reduced heating state to avoid potential safety hazards.

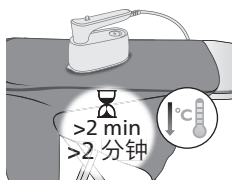


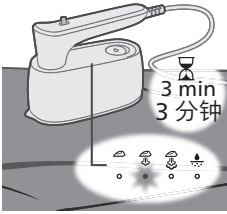

 - 3 Once in standby mode, the appliance's indicator light blinks for 3 minutes. This period offers the user a chance to reactivate the appliance before it shuts down automatically.

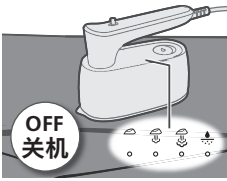


 - 4 If there's no user interaction within the 3-minute blinking indicator period, the appliance automatically shuts off.

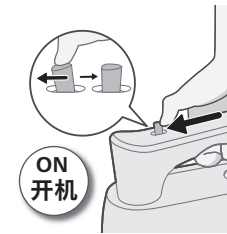


- 5 After the automatic shutdown, users need to manually restart the appliance to use it again.

 Descaling Mode

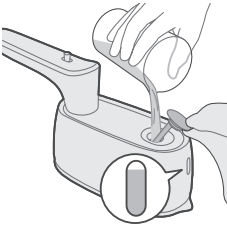

 
- 1 Fill the appliance's water tank to prepare for the descaling process.

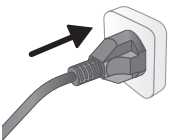


- 2 Plug the appliance into an electrical outlet to power it for the descaling operation.



 - 3 Activate the appliance by pushing the lever upwards.

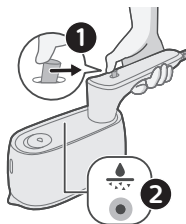

 - 4 Move the lever to activate descaling mode. Once set, the indicator light for descaling will illuminate, signifying the appliance is now in descaling mode and ready for the next steps.

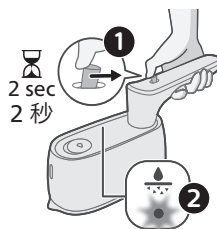


- 5 To start the descaling process, push the lever downwards for 2 seconds. This action triggers the beginning of descaling, indicated by the flashing light.




- 6 The appliance automatically discharges water for 90 seconds. Maintain a firm grip on the handle and position the appliance over a sink to manage the outflow.



 - 7 Do not submerge the appliance in water during descaling. Please grip the handle tightly to keep the soleplate above the level of the sink.

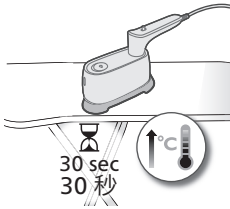

 
- 8 Following the discharge of water, the appliance will heat up for 30 seconds to complete the descaling. During heating, please place the tray on the heat-resistant base.

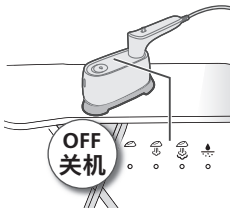


- 9 While the descaling process is active, you cannot switch to other modes—if attempted, the corresponding indicator lights will not illuminate. To stop the descaling process, you can turn off the appliance. After turning off, restarting the appliance will reset it to its default dry ironing mode. Once the descaling is complete, the appliance will automatically power down, and the indicator light will turn off, signaling the end of the cycle.

Cleaning and Maintenance

 - 1 Before cleaning, ensure the appliance is turned off and carefully unplug it from the wall socket to ensure safety.

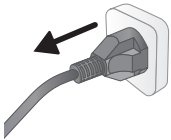

 
- 2 Allow the appliance to cool down on a heat-resistant surface before cleaning.

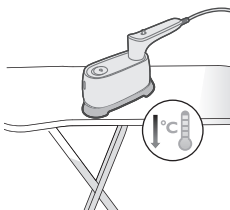


- 3 Use a soft cloth to wipe the soleplate. Do not use abrasive cleaners or scouring pads.




 
Storage

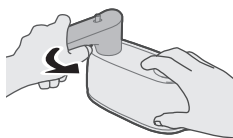

 - 1 Before storing the appliance, ensure to rotate the handle back into its original position.

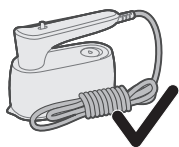

  - 2 Wind the power cord away from the appliance, ensuring that the power cord is not bent or stretched.

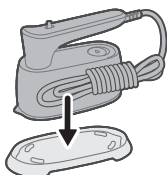

- 3 Make sure you store the tray together with the appliance so that you won't lose it when use it next time

Trouble Shooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Center in your country.

Problem

Possible Cause


Solution

The soleplate is heating up, but the appliance is not producing steam.	The water level in the tank is insufficient.	After turning off and disconnecting the power, add enough water to the tank.
	The appliance is in dry ironing mode.	Please select steam mode.
Water droplets appear on the clothes / Droplets drip from the steam panel.	The machine is in preheating mode, the water has not yet been fully heated.	This is normal. You can wait for the machine to finish preheating before proceeding with the ironing operation.
Unable to switch modes.	Modes cannot be switched while the appliance is preheating.	Wait for the appliance to finish preheating, the dry ironing indicator stays on.
The appliance makes a noticeable pumping sound. / The handle vibrates.	The water tank is short of water.	Select the dry ironing mode.
		After turning off and disconnecting the power, fill the water tank.
	Water is drawn to the area near the steam panel to be converted into steam.	This is normal.

产品简介


欢迎购买并使用飞利浦产品！为了让您能充分享受飞利浦提供的支持，请在 www.philips.com/welcome 上注册您的产品。使用本产品前，请认真阅读本用户手册、重要信息手册和快速入门指南。请妥善保管这些文件，以供日后参考。

 产品概述

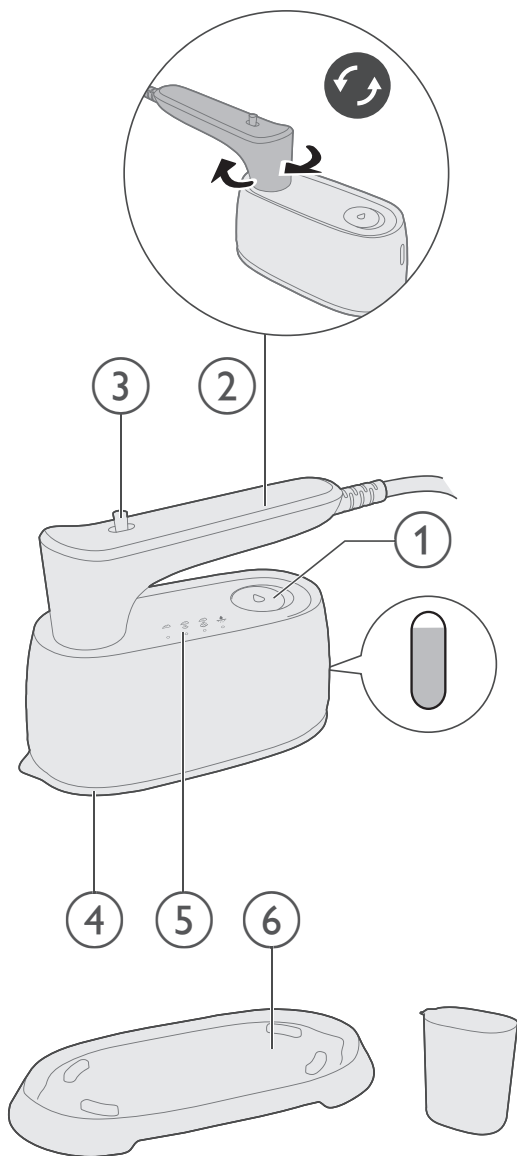

- 1 水箱
- 2 手柄
- 3 电源/模式选择杆
- 4 底板
- 5 模式显示区域
- 6 隔热托盘

 
警告

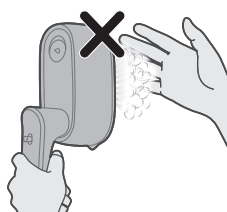


- 1 请注意从蒸汽熨烫机逸出的热蒸汽。热蒸汽可能导致烫伤。



 - 2 切勿将产品朝向自己/他人的脸。

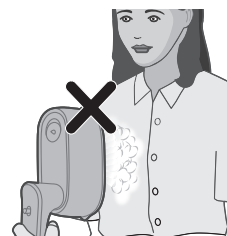

- 3 切勿将产品朝向自己/他人。

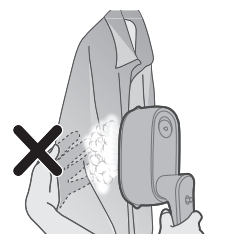 

- 4 熨烫时请不要用手作为支撑面。



5 请将产品放在儿童接触不到的地方。



 
6 切勿将电源线放在产品下方。




7 加热状态下,请勿用一只手转动手柄,另一只手放在产品表面上,以免烫伤。



8 为了安全操作,请始终握住蒸汽熨烫机的手柄。

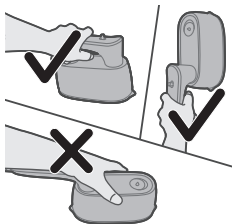

9 在两次使用之间,将产品放在提供的托盘上,以免被加热的底板烫伤。

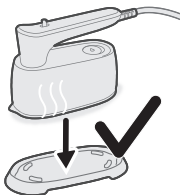 

使用准备

所用水质类型

 


本产品可使用自来水。但如果您居住的区域水质较硬，我们建议您将等量的自来水与蒸馏水或软化水混合使用。这样可以防止水垢快速积聚，从而延长产品的使用寿命。




请勿将香水、转筒式干燥机中的水、醋、淀粉、除垢剂、熨衣剂、化学除垢水或其他化学品加入水箱，因为它们可能会导致喷水、留下褐色污垢或损坏产品。


给水箱注水

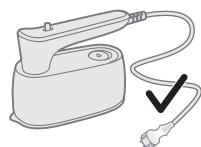


1 在给水箱注水之前，请确保拔出产品的电源插头。

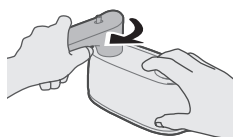 

2 加水前，请旋转手柄，以免遮挡水箱注水口。

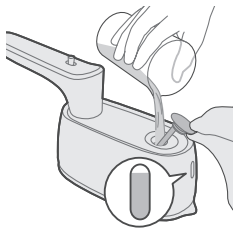 


3 小心地将水倒入水箱，避免溢漏或加水过满而溢出。

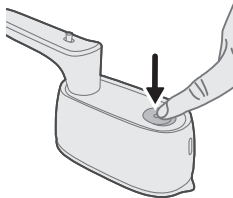 


4 关闭水箱盖并将其固定到位，确保水箱正确密封。

 使用前准备

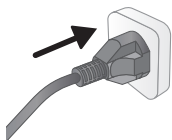


1 将产品的插头插入电源插座。

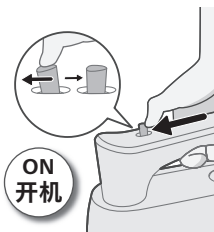 


2 向上滑动拨杆开机，开启时，默认档位为干烫模式。



 
3 本产品需要大致25秒的预热时间，在预热过程中，LED指示灯呈呼吸灯模式。在此过程中，不可切换模式。

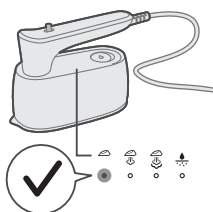

 - 4 预热完成后，即可使用产品。LED 指示灯持续亮起，表示产品已加热并可开始熨烫。

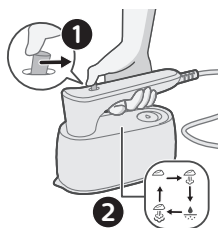

 - 5 向下滑动模式选择杆可在以下模式之间循环切换：干烫 -> 一档蒸汽 -> 二档蒸汽 -> 除垢。

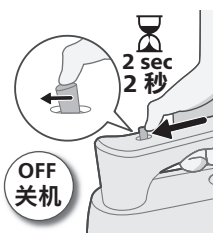


- 6 在产品通电时，向上滑动模式选择杆 2 秒钟，即可将产品关机。

使用本产品


蒸汽模式



 调整模式选择杆以选择您喜欢的蒸汽设置。确保将产品放在平面上，并且手柄已牢固闭合。

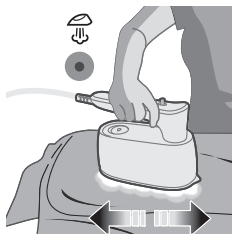


您可以在一档蒸汽模式下在水平位置使用本产品。

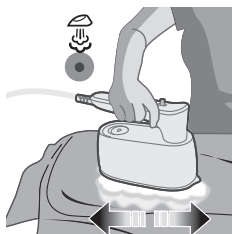 

当需要更多蒸汽时，您可以在二档蒸汽模式下在水平位置使用本产品。



 
当底板很热时，避免用一只手握住产品的主体部分，另一只手转动手柄。确保安全使用。

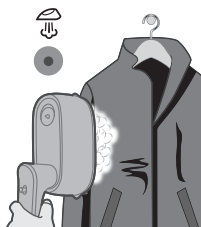

您也可以在一档蒸汽模式下在垂直位置使用本产品。请将产品与身体和布料保持安全距离。




 如需更高的蒸汽输出量，请在二档蒸汽模式下在垂直位置使用本产品。

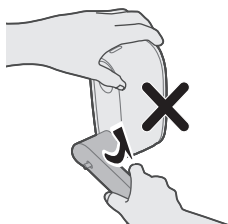


在底板很热时，切勿用一只手握住产品，另一只手转动手柄。
使用本产品时请保持安全距离，防止烫伤。

 
爆炸蒸汽

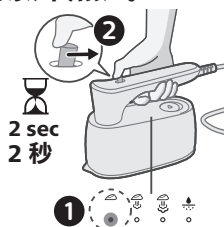


向后滑动拨杆组件 2 秒钟以释放爆炸蒸汽功能，该功能只能在干烫模式下启动。

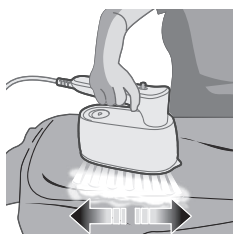 

 在水平位置和垂直位置均可使用爆炸蒸汽功能。在水平位置上熨烫时，可将产品直接放在布料上。如果是垂直蒸汽熨烫，请将产品对准悬挂的衣物。

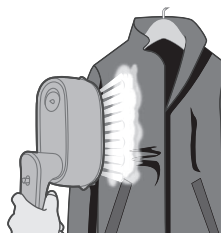

 
触发爆炸蒸汽功能后，请务必等待大约 15 秒，然后再使用。此间隔可让产品重新积聚蒸汽压力，确保每次喷射的蒸汽都具有和第一次喷射时相同的效果。

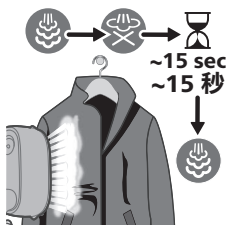


干烫模式



 向下滑动拨杆组件，将产品设为干烫模式。确保将产品放在稳定的平面上，并且手柄已正确闭合。

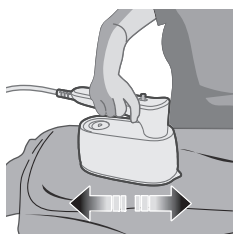


在干烫模式下，您可以根据需要水平或垂直熨烫。

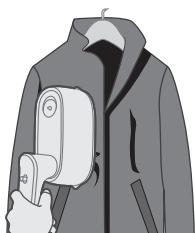 

待机模式



 
- 1 本产品具有安全保护模式，旨在避免用户离开时出现潜在的衣物烫伤问题。

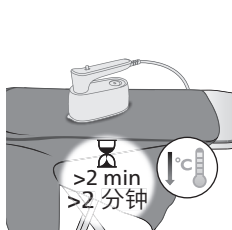

- 2 如果产品在 2 分钟内未检测到用户交互，它会自动切换到降热状态，以避免潜在的安全隐患。



 - 3 进入待机模式后，产品的指示灯会闪烁 3 分钟。在这段时间，您可以在产品自动关机之前重新激活产品。

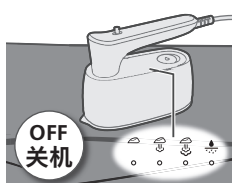


- 4 如果在指示灯闪烁的 3 分钟内没有额外的操作，指示灯闪烁3分钟内产品会自动关机。




- 5 自动关机后，您需要手动重新启动才能再次使用本产品。

 除垢模式

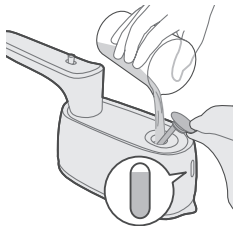


1 给产品的水箱注水，为除垢过程做好准备。

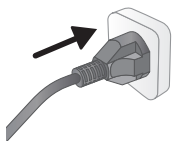 


2 将产品插头插入电源插座，为除垢操作供电。



 3 向上推动模式选择杆以激活产品。

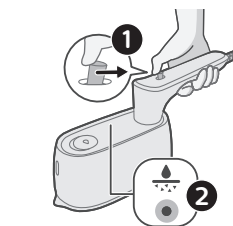

 4 移动模式选择杆以激活除垢模式。设置后，除垢指示灯将亮起，表示产品现在处于除垢模式，并准备好进行后续操作。

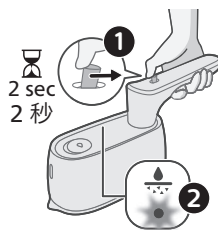


5 要开始除垢过程，请向下推动模式选择杆 2 秒钟。此操作会触发除垢过程，并由闪烁的指示灯指示。




- 6 产品会自动排水 90 秒。牢牢握住手柄，并将产品放在水槽上方以控制水流出。



 - 7 除垢过程中请勿将产品浸入水中。请紧握把手将底盘维持于洗手盆上方的位置。

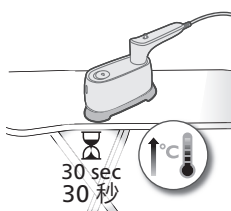


 - 8 排出水后，产品将加热 30 秒以完成除垢过程。加热期间，请将托盘放置于隔热底板之上。

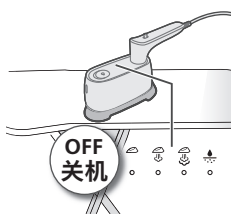


- 9 当除垢过程处于活动状态时，您不能切换到其他模式，如果尝试切换，相应的指示灯将不会亮起。要停止除垢过程，您可以将产品关机。将产品关机后，重新启动会将产品重置为默认的干烫模式。除垢过程完成后，产品将自动关机，指示灯将熄灭，表示除垢程序结束。

 清洁和保养

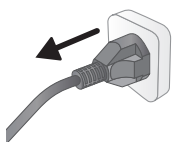

- 1 清洁前，请确保产品已关机，并小心地将插头从电源插座上拔下，以确保安全。

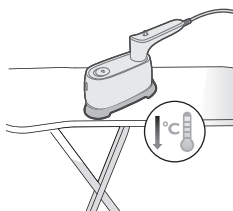 


- 2 将产品置于隔热表面上，等待其冷却后再进行清洁。




- 3 用软布擦拭底板。请勿使用磨蚀性清洁材料或钢丝绒。

 存储

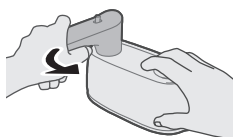


- 1 在存放产品之前，请确保将手柄转回原位。

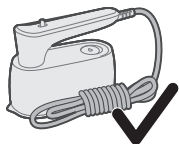 

- 2 朝着远离产品的方向缠绕电源线，确保电源线没有弯曲或拉伸过长。



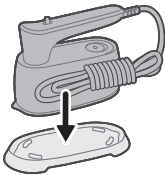 

3 确保将托盘与产品一起存放，以免下次使用时丢失

故障排除


本章归纳了您在使用本产品时常常遇到的问题。如果您无法根据以下信息解决问题，请访问 www.philips.com/support 查阅常见问题列表，或联系您所在国家/地区的客户服务中心。

问题	可能的原因	解决方法
底板在加热，但产品不产生蒸汽。	水箱中的水位太低。	将产品关机并断开电源后，向水箱中加入足够的水。
	产品处于干烫模式。	请选择蒸汽模式。
衣物上出现水滴/水滴从蒸汽板上滴落。	产品处于预热模式，水尚未完全加热。	这是正常的。您可以等待产品完成预热，然后再进行熨烫操作。
无法切换模式。	产品预热时无法切换模式。	等待产品完成预热，此时干烫指示灯持续亮起。
产品发出明显的抽水声。/手柄振动。	水箱缺水。	选择干烫模式。
		将产品关机并断开电源后，向水箱中注水。
	水被吸到蒸汽板附近的区域并转化为蒸汽。	这是正常的。

簡介

感謝您購買 Philips 產品，歡迎來到 Philips 世界！要享受 Philips 為您提供的全面支援，請在 www.Philips.com/welcome 網站註冊您的產品。使用本產品前，請先仔細閱讀此使用者手冊、重要資訊小冊子及快速入門指南。保管所有資料以作將來參考。

 
產品概要

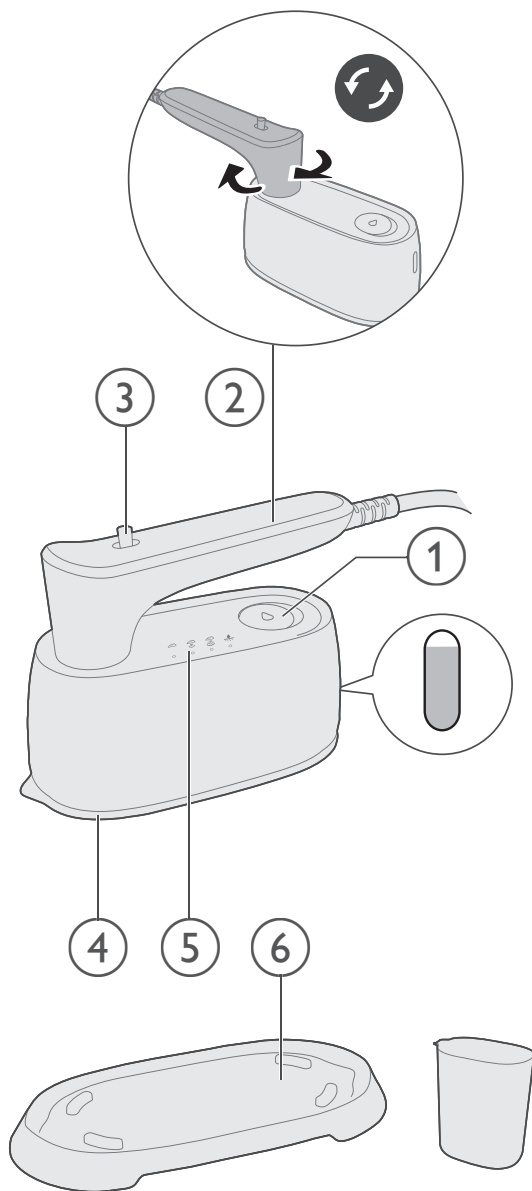

- 1 可拆式水箱
- 2 把手
- 3 電源/模式選擇壓桿
- 4 底盤
- 5 模式顯示範圍
- 6 隔熱盤

警告

 - 1 請小心熨斗冒出的熱蒸氣。蒸氣可能會導致燙傷。

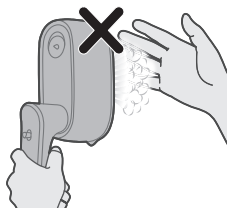


- 2 切勿將產品對準自己或他人的臉部。



- 3 切勿將產品對準自己或他人。



 - 4 蒸熨時，切勿用手作為產品的支撐面。

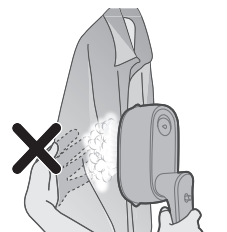



5 切勿讓兒童觸及產品。



 
6 請確保電源線沒有被產品壓住。




7 為避免燙傷，切勿以單手轉動把手，同時用另一隻手放在產品表面。



8 為確保安全操作，請只握住蒸氣熨斗的把手。

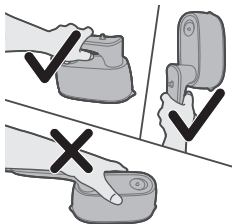

9 每次蒸熨前後，請將產品放於隨附的隔熱盤上，以免發熱底盤造成燙傷。

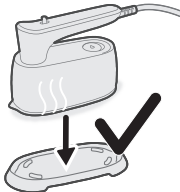 

準備使用

適用水源



 
本產品適宜使用自來水。但如果您居住的地區水質較硬，我們建議您將自來水混合相同分量的蒸餾水或去除礦物質的水使用。這將有助於防止水垢迅速積聚，並延長產品的使用壽命。




切勿加入香水、滾筒式烘乾機濾水、醋、澱粉、除垢劑、熨燙助劑、化學除垢劑或其他化學品，以免出現水泡沫和褐色污漬而損壞產品。

水箱注水


1 水箱注水之前，請確保產品沒有插上電源。

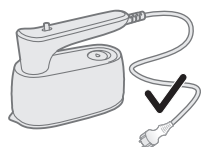


2 加水之前，請旋轉把手以免阻塞量杯。

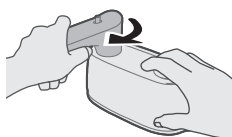 

38 繁體中文

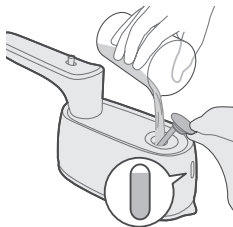 


3 小心地將水注入水箱，以免溢漏。

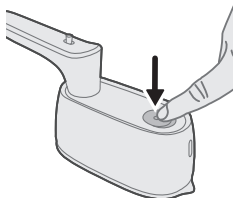 


4 關閉及鎖好水箱蓋，確保產品已妥善密封。

 
使用前準備

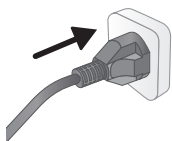


1 將產品插入接地電源插座。

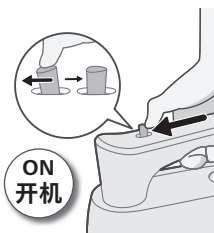 


2 向上滑動壓桿，產品會以乾熨模式啟動。

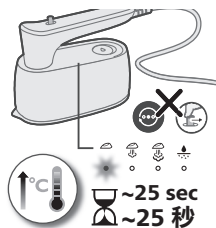 

 3 產品需要 25 秒時間預熱。在預熱期間，LED 指示燈會以呼吸燈模式（亮起 1.5 秒，熄滅 1.5 秒）來顯示預熱過程。在此階段無法切換產品模式。

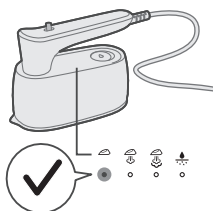

 - 4 預熱完成後，產品就可以使用。LED 會持續亮起，表示產品已經加熱，並可以開始熨衣。

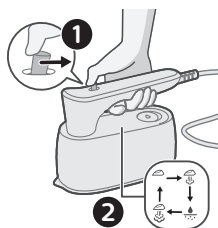


- 5 向下滑動壓桿以循環切換模式：乾熨 -> 一級蒸熨 -> 二級蒸熨 -> 除垢。



- 6 產品啟動後，向上滑動壓桿兩秒即可關機。


使用產品

 蒸熨模式

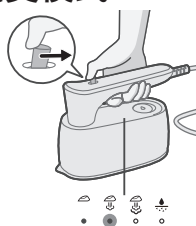


調整壓桿以選擇您需要的蒸氣設定。請確保產品放置於平面上，並已經關好把手。

 
40 繁體中文

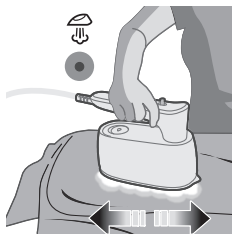


您可以在一級蒸熨模式下使用產品進行水平熨燙。

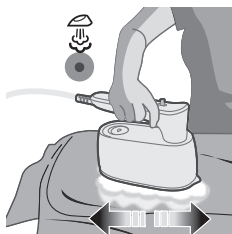 

當需要更多蒸氣時，您可以在二級蒸熨模式下使用產品進行水平熨燙。

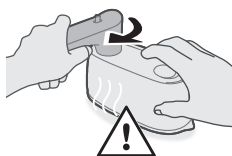 


在底盤發熱期間，切勿以單手握住產品，同時用另一隻手轉動把手。請時刻注意安全。

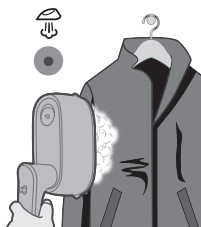 

您也可以在一級蒸熨模式下使用產品進行垂直熨燙。請將產品與您的身體及衣料保持安全距離。




 若要輸出更多蒸氣，您可以在二級蒸熨模式下使用產品進行垂直熨燙。

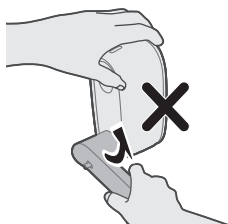


在底盤發熱期間，切勿以單手握住產品，同時用另一隻手轉動把手。請保持安全的操作距離，以防止燙傷。

 
強力蒸氣噴射

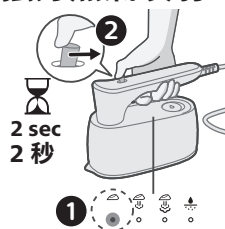


向後滑動壓桿兩秒以啟動強力蒸氣噴射功能，此功能僅在乾熨模式下可以使用。

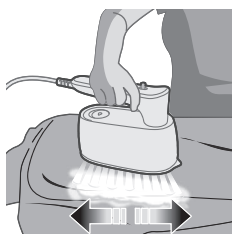 

 強力蒸氣噴射功能適用於水平及垂直熨燙方式。進行水平熨燙時，將產品直接放在衣料上面。如要垂直蒸熨，則將產品對準懸掛的衣物，但不要直接接觸。

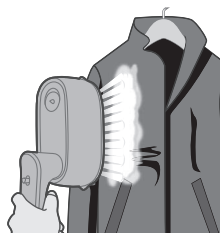

 
啟動強力蒸氣噴射後，必須等待約 15 秒才可再次使用。此間隔時間讓產品重設蒸氣壓力，確保每次噴射的效能一致。

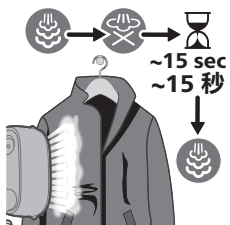


乾熨模式



 向下滑動壓桿以設定產品到乾熨模式。請確保將產品放置在平穩的表面，並正確地鎖好把手。

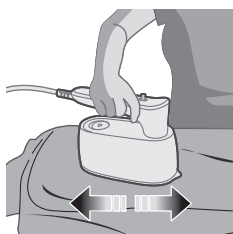

您可以在乾熨模式下進行水平或垂直熨燙。

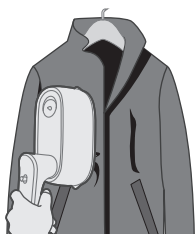 


待機模式




- 1 此產品備有安全保護模式，旨在避免產品可能在用戶離開時燒壞。



 - 2 若兩分鐘內沒有任何用戶互動，產品將自動進入降溫狀態，以避免潛在的安全風險。

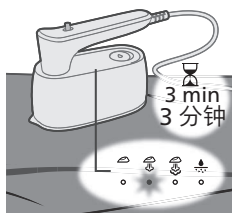

 - 3 在待機模式下，產品指示燈會閃爍 3 分鐘。用戶可以在此期間重新啟動產品，否則產品將自動關機。

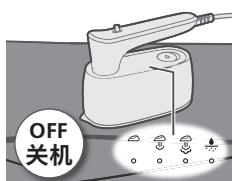


- 4 如果在指示燈閃爍的 3 分鐘內沒有任何用戶互動，產品將自動關機。




- 5 自動關機後，用戶必須以手動方式重新啟動產品方可使用。

 除垢模式

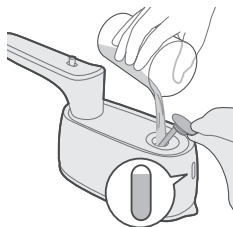


1 為產品水箱注水，預備進行除垢。

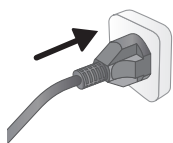 


2 將產品連接至電源插座，以便開始除垢操作。



 
3 向上推動壓桿以啟動產品。

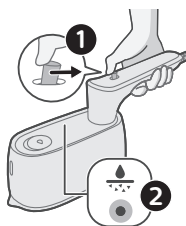

 4 移動壓桿以啟動除垢模式。設定後，除垢指示燈會亮起，表示產品已進入除垢模式，並準備好進行下一個步驟。

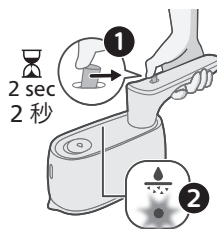


5 向下推動壓桿兩秒，以開始進行除垢。此操作將啟動除垢程序，指示燈會開始閃爍。

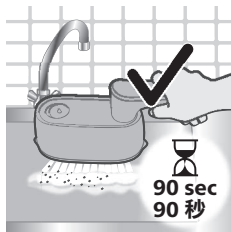 


- 6 產品將自動排水 90 秒。請緊握把手，並將產品置於洗手盆上方以便排水。



 - 7 除垢期間，切勿將產品浸入水中。請將底盤維持於洗手盆上方的位置。

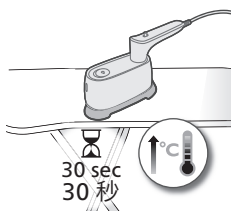


- 8 排水後，產品會加熱 30 秒以完成除垢程序。

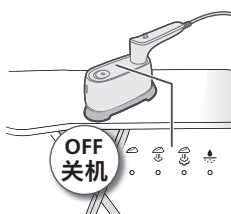 


- 9 在進行除垢期間，您將無法切換到其他模式。若您試圖切換模式，該相應的指示燈將不會亮起。如要停止進行除垢，您可以將產品關機。關機後重新啟動，產品將回到預設的乾髮模式。完成除垢後，產品將自動關機，而指示燈也會熄滅，表示操作程序已經結束。

清潔與保養

  - 1 進行清潔之前，請務必將產品關機，並小心地從電源插座拔除電源以確保安全。

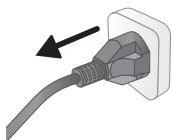

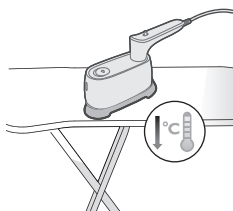


- 2 將產品置於隔熱表面，並等待產品冷卻後才開始清潔。




- 3 使用柔軟抹布擦拭底盤。切勿使用磨蝕性清潔劑或擦潔墊。

 存放

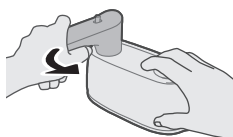


- 1 存放產品之前，請確保將把手轉回到原來位置。

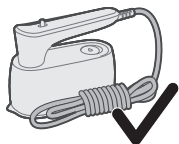 

- 2 請勿以電源線纏繞產品，並確保電源線沒有被屈曲或拉扯。



 - 3 請確保您將產品與隔熱盤一起存放，以免遺失。

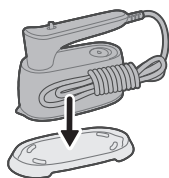

疑難排解

本章節概述使用本產品時最常見的問題。若您未能使用下列資訊解決問題，請瀏覽 www.philips.com/support 查看常見問題解答，或與您國家/地區的客戶服務中心聯絡。

問題	可能原因	解決方案
底盤正在發熱，但產品沒有產生蒸氣。	水箱注水不足。	關掉產品並中斷電源，然後為水箱注入足夠水量。
	產品處於乾熨模式。	請選擇蒸熨模式。
衣物上出現水滴/蒸氣面板滴水。	熨斗正處於預熱模式，而儲水尚未完全加熱。	此屬正常情況。您可以等待熨斗完成預熱後再進行熨燙操作。
無法切換模式。	產品預熱時無法切換模式。	等待產品完成預熱，並亮起乾熨模式指示燈。
產品發出明顯的抽水聲。/ 把手振動。	水箱缺水。	選擇乾熨模式。
		關掉產品並中斷電源，然後為水箱注水。
	儲水被抽到蒸氣面板附近，以轉化為蒸氣。	此屬正常情況。

PHILIPS and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured by and is sold under the responsibility of Versuni Holding B.V., and Versuni Holding B.V. is the warrantor in relation to this product.

2024 © Versuni Holding B.V.



>75 % recycled paper
>75 % papier recyclé