


EN User manual


ID Petunjuk Pengguna

PHILIPS  
Kompor Induksi  
HD4902  
2000W  
220-240V ~ 50-60Hz  
Negara Pembuat: Cina  
Diimpor oleh:  
PT Philips Domestic Appliances Indonesia Commercial  
Gedung Cibis Nine Lantai 10  
Jl. T.B. Simatupang No. 2 RT. 001 RW. 005  
Kel. Cilandak Timur, Kec. Pasar Minggu  
Jakarta Selatan 12560 – Indonesia


## Overview Ikhtisar

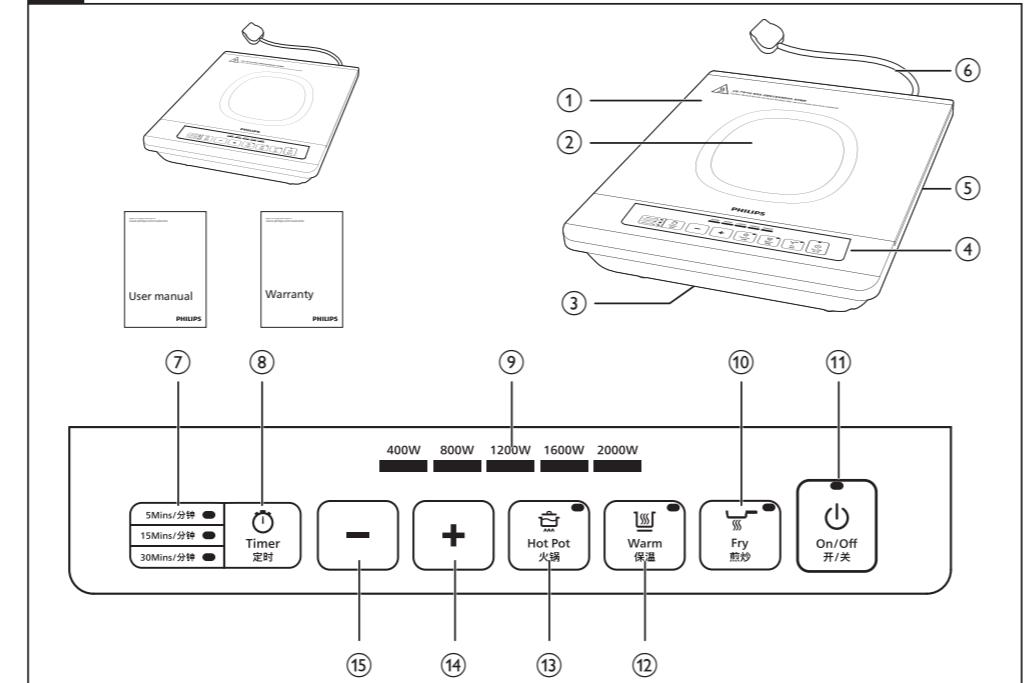

## i Preparing for use Menyiapkan penggunaan

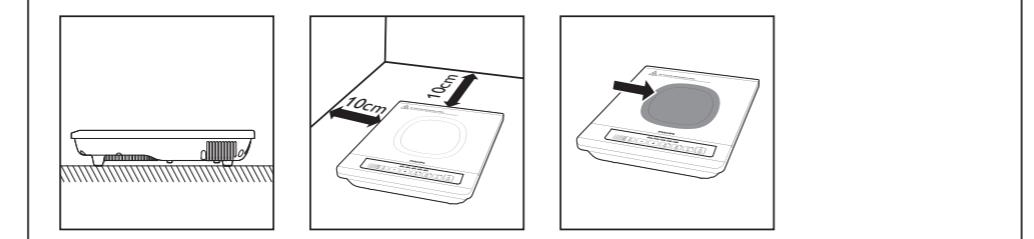

## Recommended types and sizes of cookware Tipe dan ukuran peralatan memasak yang disarankan

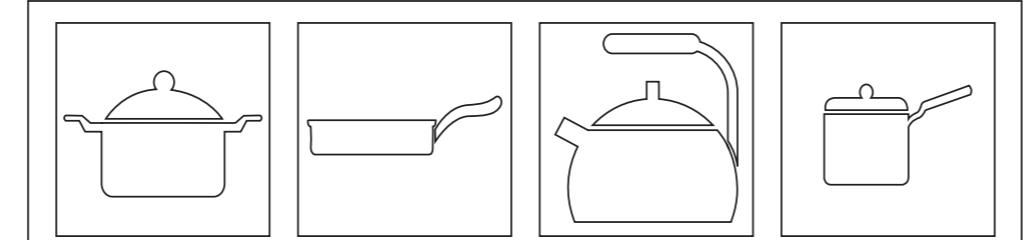

## English

### 1 Safety

Read this important information leaflet carefully before you use the appliance and save it for future reference.

#### Danger

- The appliance must not be immersed.

#### Warning

- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- WARNING: Always follow the instructions and use the appliance properly to avoid potential injury.
- WARNING: If the surface of the cooking plate is cracked, switch off the appliance and do not use it anymore to avoid the possibility of electric shock.
- The appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- Metallic objects such as knives, forks, spoons and lids should not be placed on the induction cooker since they can get hot.
- The temperature of accessible surfaces may be high when the appliance operates.
- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Only connect the appliance to an earthed wall socket. Always make sure the plug is inserted firmly into the socket.
- Do not use the appliance if the plug, the mains cord or the appliance itself is damaged.
- Keep the mains cord out of the reach of children. Do not let the mains cord hang over the edge of the table or worktop on which the appliance stands.
- Never connect this appliance to an external timer switch in order to avoid a hazardous situation.
- Make sure the cooking plate is clean and dry before you switch on the appliance.
- The ducts in the pressure regulator allowing the escape of steam should be checked regularly to ensure that they are not blocked.
- The container must not be opened until the pressure has decreased sufficiently.
- Do not cover the air outlets while the induction cooker is operating.
- Do not plug in the appliance or operate the control panel with wet hands.
- Don't clean the appliance while hot.
- Do not touch the cooking plate after cooking, as it retains heat from the cookware.
- Do not insert external objects such as iron wires and bolts into the appliance.
- Do not cover any part of the cooking plate with aluminium to prevent the risk of electric shock, short circuiting or fire.

#### Caution

- The symbol marked on the appliance means "Caution, Hot surfaces", do not touch the hot surface in order to avoid scald.
- Always let the appliance cool down before you clean or move it.

- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not expose the induction cooker to high temperatures, hot gas, steam or damp heat. Do not place the induction cooker on or near an operating or still hot stove or cooker.
- Always switch off the appliance before you unplug it.
- Always unplug the appliance and let it cool down before you clean it.
- This appliance is intended for household use only. If the appliance is used improperly or for professional or semi-professional purposes or if it is not used according to the instructions in the user manual, the guarantee becomes invalid and Philips refuses any liability for damage caused.
- Place the induction cooker on a stable, horizontal and level surface and make sure there is at least 10cm free space around it to prevent overheating.
- Do not use the induction cooker on a gas cooker or metal plate.
- For better ventilation, do not block the air inlet and outlets while the appliance is operating, e.g. do not operate the appliance on a plastic tablecloth.
- Do not place anything between the cookware and the cooking plate.
- The maximum weight that can be put on the induction cooker is 15kg.
- Beware of hot steam that comes out of the cookware during cooking or when you remove the lid.
- Do not lift and move the induction cooker while it is operating.
- Never put empty cookware on the switched-on induction cooker, as this could cause the cookware to become distorted or the heating coil to become damaged.
- Do not store flammable materials and liquids near or on the induction cooker.
- Avoid hard contact between the cookware or other objects and the crystalite cooking plate.
- Always place the cookware on the cooking zone during cooking.

### Automatic shut-off

The appliance is equipped with automatic shut-off. It switches off automatically in the following situations:

- If cookware with a bottom diameter less than 6cm, or small objects like knives, forks, or spoons are placed on the plate during cooking.
- If the voltage is lower than 120V or higher than 280V.
- If no cookware is put on the cooking zone when the induction cooker is working for 1 minute.
- If the induction cooker has been idle for 2 hours.
- If the temperature of the central plate is higher than 300°C, or if the internal temperature of the induction cooker is too high.

### Electromagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

### 2 Your induction cooker

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

### 3 What's in the box

Induction cooker main unit	User manual
Important information leaflet	Warranty card

### Overview

① Cooking plate	④ Control panel
② Cooking zone	⑤ Air outlets
③ Air inlet	⑥ Power cord

### Controls overview

⑦ Timer indicator	⑫ Warm mode
⑧ Timer button	⑬ Hot pot mode
⑨ Cooking power	⑭ Increase button
⑩ Fry mode	⑮ Decrease button
⑪ On/Off button	

### 4 Before first use

Remove all packaging materials from the induction cooker.

#### Preparing for use

- Place the appliance on a dry, stable and level surface.
- Make sure there is at least 10cm free space around the appliance to prevent overheating.
- Always place the cookware on the cooking zone during cooking.
- Make sure you use cookware of the correct types and sizes (see the table below).

#### Recommended types and sizes of cookware

Material	Cookware with a bottom made of iron or magnetic stainless steel
Shape	Cookware with a flat bottom

### 4 Using the induction cooker

- There are three cooking modes: Hot pot (火锅), Warm (保温), and Fry (煎炒).
- Follow the steps in "Preparing for use".
  - Press the On/Off button (⑪) to switch on the appliance, and the On/Off indicator lights up.
  - Press the desired cooking mode button, the corresponding indicator lights up and the induction cooker starts working in the selected mode.
  - When the cooking is finished, press the On/Off button (⑪) to switch off the appliance.
  - Unplug the induction cooker after the fan stops working.



## Note

- During cooking, you can change the power level by pressing the Increase (+) or Decrease (-) button.

## Default cooking time and power level

Refer to below table for the cooking time and the cooking power of different cooking modes.

Cooking mode	Default cooking time	Default power level/Power	Power adjusting range
Fry (⌚)	2 hours	3/1200W	400W - 1200W
Hot pot (🍲)	2 hours	5/2000W	400W - 2000W
Warm (熥)	2 hours	3/1200W	400W - 2000W

## Using the timer

You can use the Timer button (⌚) to decide how much time you want the appliance to work at different cooking modes.

- Follow the steps in "Preparing for use".
- Press the On/Off button (⌚) to switch on the appliance, and the On/Off indicator lights up.
- Press the desired cooking mode button, the corresponding indicator lights up and the induction cooker starts working in the selected mode.
- Press the Timer button once or more times to select the desired cooking time.
- When the time has elapsed, the induction cooker turns off automatically.

## Note

- After the timer is set, you can press the Timer button (⌚) repeatedly until the timer indicator is off to cancel the timer.

## 6 Cleaning

Unplug the appliance after the fan stops working and let it cool down. Clean the appliance with a damp cloth and, if necessary, with some mild cleaning agent.

## 7 Recycling

Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

## 8 Guarantee and service

If you need service or information or if you have a problem, please visit the Philips website at [www.philips.com](http://www.philips.com) or contact the Philips Consumer Care Centre in your country (you will find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

## 9 Troubleshooting

If your induction cooker does not function properly or if the cooking quality is insufficient, consult the table below. If you are unable to solve the problem, contact a Philips service centre or the Consumer Care Centre in your country.

Problem	Solution
The On/Off button (⌚) does not respond.	There is a connection problem. Check if the induction cooker is connected to the mains and if the plug is inserted firmly into the wall socket.
The appliance beeps continuously and then stops working.	You may have put unsuitable cookware on the cooking plate or you may have removed the cookware from the cooking plate during cooking. Make sure the cookware is made of steel, iron or aluminium with stainless steel cladding base and has a base diameter larger than 12cm.  You may have placed the cookware outside of the cooking zone.
The cookware does not heat up to the required temperature.	The bottom of the cookware may not be flat. Use cookware with a flat bottom. If the problem still exists, take the appliance to your Philips dealer or a service center authorised by Philips.
The appliance stops working suddenly.	The temperature of the cookware is too high. Let the cookware cool down for a while.
The cooking temperature of the preset modes are too high or too low.	When the induction cooker is working in one of the preset modes, you may adjust the cooking temperature using the Increase (+) or Decrease (-) button.
When I press one of the cooking mode buttons, the light of the selected mode does not go on.	The light is defective. Take the appliance to your Philips dealer or a service centre authorised by Philips.
The fan works but the appliance has not started working.	You have to press a cooking mode button after you have pressed the On/Off (⌚) button. If you do not press a cooking mode button within one minute, the induction cooker will switch off and the fan continues to work for a while to cool down the appliance.
The 1600W indicator blinks and the appliance beeps.	The voltage is either too high or too low. Check if the voltage in your home is suitable for the induction cooker.
The 2000W indicator blinks and the appliance beeps.	The inner temperature of the appliance is too high. The appliance will start working again when it cools down.

Problem	Solution
The 800W indicator blinks and the appliance beeps.	IGBT sensor is in open circuit or short circuit state. Take the appliance to your Philips dealer or a service center authorised by Philips.
The 1200W indicator blinks and the appliance beeps.	The main sensor is in open circuit or short circuit state. Take the appliance to your Philips dealer or a service center authorised by Philips.
The 400W and 1200W indicators blink at the same time and the appliance beeps.	The main sensor has malfunction. Take the appliance to your Philips dealer or a service center authorised by Philips.
All power indicators blink at the same time and the appliance beeps.	The buttons have malfunction. Take the appliance to your Philips dealer or a service center authorised by Philips.

## Indonesia

### 1 Keselamatan

Baca buklet informasi penting ini dengan cermat sebelum menggunakan alat dan simpanlah untuk referensi nanti.

#### Bahaya

- Jangan merendam alat dalam air.

#### Peringatan

- Alat ini dimaksudkan untuk digunakan di rumah tangga dan pemakaian yang serupa seperti:
  - area dapur staf di toko, kantor, dan lingkungan kerja lainnya;
  - rumah ladang;
  - oleh klien di hotel, motel, dan lingkungan berjenis tempat tinggal lainnya;
  - lingkungan yang menyediakan tempat tidur dan sarapan.
- Alat ini tidak dimaksudkan untuk digunakan oleh orang (termasuk anak-anak) dengan cacat fisik, indera atau kecacatan mental yang kurang, atau kurang pengalaman dan pengetahuan, kecuali jika mereka diberikan pengawasan atau petunjuk mengenai penggunaan alat oleh orang yang bertanggung jawab bagi keselamatan mereka.
- Anak kecil harus diwasih untuk memastikan mereka tidak bermain-main dengan alat ini.
- PERINGATAN:** Selalu ikuti petunjuk dan gunakan alat dengan benar untuk mencegah kemungkinan bahaya.
- PERINGATAN:** Jika permukaan pelat masak retak, matikan alat dan jangan gunakan lagi untuk menghindari kemungkinan sengatan listrik.
- Alat ini tidak ditujukan untuk dioperasikan dengan menggunakan timer eksternal atau sistem remote-control yang terpisah.
- Jika kabel listrik rusak, maka harus diganti oleh produsen, agen servis, atau personel dengan kualifikasi setara untuk menghindari bahaya.
- Jangan letakkan benda logam seperti pisau, garpu, sendok, dan tutup di atas Kompor Induksi karena benda-benda itu dapat menjadi panas.
- Suhu permukaan yang dapat disentuh mungkin sedang tinggi bila alat beroperasi.
- Periksalah apakah voltase pada alat sesuai dengan voltase listrik di rumah Anda, sebelum menghubungkan alat.
- Alat hanya boleh dihubungkan ke stopkontak dinding yang telah dibumikan. Selalu pastikan steker telah ditancapkan dengan erat ke stopkontak.
- Jangan gunakan alat ini jika steker, kabel listrik atau alatnya sendiri rusak.
- Jauhkan kabel listrik dari jangkauan anak-anak. Jangan membiarkan kabel listrik menggantung di tepi meja atau di tempat alat berada.
- Pastikan pelat masak bersih dan kering sebelum Anda menyalaikan alat.
- Salurkan pada regulator tekanan memungkinkan Anda memeriksa aliran uap secara teratur untuk memastikan aliran tidak tersumbat.
- Wadah tidak boleh dibuka hingga tekanan berkurang.
- Jangan menutupi keluaran udara saat mengoperasikan Kompor Induksi.
- Jangan tancapkan steker pada alat atau mengoperasikan panel kontrol dengan tangan basah.
- Jangan bersihkan alat saat masih panas.
- Jangan menyentuh pelat masak setelah memasak, karena masih menyimpan panas dari peralatan memasak.
- Jangan memasukkan benda luar seperti kawat besi dan baut ke dalam alat.
- Jangan menutupi bagian pelat masak dengan aluminium untuk mencegah risiko kejutan listrik, korosleting, atau kebakaran.

#### Perhatian

- Simbol yang tertera pada alat berarti "Awas, Permukaan panas", jangan menyentuh permukaan panas agar tidak melepuh.
- Selalu biarkan alat menjadi dingin terlebih dahulu sebelum membersihkan atau memindahkannya.
- Jangan sekali-kali menggunakan aksesoris atau komponen apa pun dari produsen lain atau yang tidak secara khusus direkomendasikan oleh Philips. Jika Anda menggunakan aksesoris atau komponen tersebut, garansi Anda menjadi batal.
- Jangan biarkan Kompor Induksi terkena suhu tinggi, gas panas, uap atau panas lembap. Jangan letakkan Kompor Induksi di atas atau di dekat kompor atau penanak yang sedang dioperasikan atau masih panas.
- Sebelum membersihkannya, selalu cabut steker alat pengukur dan tunggu sampai dingin sebelum Anda membersihkannya.
- Alat ini hanya untuk keperluan rumah tangga. Jika alat ini digunakan tidak sebagaimana layaknya atau untuk tujuan profesional atau semi-profesional, atau digunakan dengan cara yang tidak sesuai dengan petunjuk penggunaan, garansi menjadi tidak berlaku dan Philips tidak bertanggung jawab atas setiap kerusakan yang disebabkannya.
- Letakkan kompor induksi pada permukaan yang stabil, datar dan rata, serta pastikan terdapat ruang kosong sekitar 10 cm di sekeliling alat untuk mencegah panas yang berlebihan pada alat.
- Jangan gunakan Kompor Induksi di atas kompor gas atau pelat logam.
- Agar ventilasinya lebih baik, jangan menghalangi keluaran dan masukan udara selagi alat dioperasikan, mis. jangan mengoperasikan alat di atas taplak meja plastik.
- Jangan letakkan apa pun di antara peralatan memasak dan pelat masak.

- Berat maksimum yang dapat diletakkan di atas Kompor Induksi adalah 15 kg.
- Waspadalah terhadap uap panas yang keluar dari peralatan memasak selama Anda memasak atau bila Anda melepaskan tutupnya.
- Jangan mengangkat dan memindahkan Kompor Induksi selagi dioperasikan.
- Jangan sekali-kali meletakkan peralatan memasak yang kosong di atas Kompor Induksi yang telah dinyalakan, karena ini dapat menyebabkan peralatan memasak menjadi terdistorsi atau koi pemanasnya menjadi rusak.
- Jangan menyimpan cairan atau bahan yang mudah terbakar di atas Kompor Induksi.
- Hindari benturan keras antara peralatan memasak atau benda lain dan pelat masak kristalit.
- Selalu letakkan peralatan memasak di atas area memasak selama memasak.

### Mati otomatis

Alat ini dilengkapi fitur mati otomatis. Fitur ini akan mematikan alat secara otomatis dalam situasi berikut:

- Jika peralatan memasak dengan diameter dasar kurang dari 6 cm, atau benda kecil seperti pisau, garpu, atau sendok diletakkan di atas pelat selama memasak.
- Jika voltase kurang dari 120 V atau lebih tinggi dari 280 V.
- Jika tidak ada peralatan memasak yang diletakkan pada zona memasak saat Kompor Induksi bekerja selama 1 menit.
- Jika Kompor Induksi mengangsur selama 2 jam.
- Jika suhu pelat tengah lebih tinggi dari 300°C, atau jika suhu internal Kompor Induksi terlalu tinggi.

### Medan elektromagnet (EMF)

Alat Phillips ini mematuhi semua standar yang terkait dengan medan elektromagnet (EMF). Jika ditangani dengan benar dan sesuai dengan petunjuk dalam petunjuk pengguna ini, alat tersebut aman digunakan menurut bukti ilmiah yang kini tersedia.

### 2 Kompor Induksi Anda

Selamat atas pembelian Anda dan selamat datang di Philips! Untuk memanfaatkan sepenuhnya dukungan yang ditawarkan Philips, daftarkan produk Anda di [www.philips.com/welcome](http://www.philips.com/welcome).

### 3 Ada apa di dalam kotak

Unit utama Kompor Induksi  
Leaflet informasi penting

Petunjuk pengguna  
Kartu garansi

### Ikhtisar

(1) Pelat masak	(4) Panel kontrol
(2) Area memasak	(5) Keluaran udara
(3) Masukan udara	(6) Kabel listrik

### Ikhtisar kontrol

(7) Indikator Timer	(12) Mode Hangat
(8) Tombol Timer	(13) Mode Hot pot
(9) Daya memasak	(14) Tombol tambah
(10) Mode Goreng	(15) Tombol kurang
(11) Tombol On/Off	

### 4 Sebelum pemakaian pertama

Lepaskan semua kemasan dari Kompor Induksi.

#### Persiapan penggunaan

- Letakkan alat pada permukaan yang kering, stabil, dan rata.
- Pastikan ada ruang kosong setidaknya 10 cm di sekeliling alat agar alat tidak kepanasan.
- Selalu letakkan peralatan memasak di atas area memasak selama memasak.
- Pastikan Anda menggunakan peralatan memasak dengan tipe dan ukuran yang benar (lihat tabel di bawah).

#### Tipe dan ukuran peralatan memasak yang disarankan

Bahan	Peralatan memasak dengan bagian dasar terbuat dari besi atau baja anti karat magnetik
Bentuk	Peralatan memasak dengan bagian dasar rata

- Kipas angin berfungsi, tetapi alat tidak mulai bekerja.
- Indikator 1600W berkedip dan alat berbunyi bip.
- Indikator 2000W berkedip dan alat berbunyi bip.
- Indikator 800W berkedip dan alat berbunyi bip.
- Indikator 1200W berkedip dan alat berbunyi bip.
- Indikator 400W dan 1200W berkedip bersamaan dan alat berbunyi bip.
- Sebuah indikator daya berkedip bersamaan dan alat berbunyi bip.

- Ada masalah sambungan. Periksa apakah Kompor Induksi sudah terhubung ke arus listrik dan apakah stekernya sudah dimasukkan dengan pas ke stopkontak dinding.
- Anda mungkin meletakkan alat memasak yang tidak sesuai pada pelat masak atau Anda mungkin melepas peralatan memasak dari pelat sewaktu memasak.
- Pastikan peralatan memasak tersebut dari baja, besi, atau aluminium dengan dasar berlapis baja antikarat dan berdiameter lebih dari 12 cm.
- Anda mungkin meletakkan peralatan memasak di luar zona memasak.

- Bagian bawah peralatan memasak mungkin tidak rata. Gunakan peralatan memasak pada permukaan yang rata. Jika masalah berlanjut, bawalah alat ke dealer Philips atau pusat layanan resmi Philips.
- Suhu peralatan memasak terlalu tinggi. Biarkan peralatan memasak mendingin sebentar.
- Jika Kompor Induksi dijalankan dalam salah satu mode preset terlalu tinggi atau terlalu rendah. Pastikan peralatan memasak dengan menggunakan tombol Increase (Tambah) (+) atau Decrease (Kurangi) (-).

- Lampu rusak. Bawalah alat ke dealer Philips Anda atau pusat servis resmi Philips.
- Anda harus menekan tombol mode memasak setelah menekan tombol On/Off (⌚). Jika Anda tidak menekan tombol mode memasak dalam waktu satu menit, Kompor Induksi akan mati dan lampu akan terus bekerja selama beberapa saat untuk mendinginkan alat.

- Tegangan terlalu tinggi atau terlalu rendah. Pastikan tegangan di rumah Anda sesuai untuk Kompor Induksi.
- Suhu bagian dalam alat terlalu tinggi. Alat akan mulai bekerja lagi setelah mendingin.

- Sirkuit pada sensor IGBT terbuka atau mengalami korosleting. Bawalah alat tersebut ke dealer Philips Anda atau ke pusat layanan resmi Philips.
- Sirkuit pada sensor utama terbuka atau mengalami korosleting. Bawalah alat tersebut ke dealer Philips Anda atau ke pusat layanan resmi Philips.