



在以下网址注册您的产品并获得支持
www.philips.com/welcome


HU4801

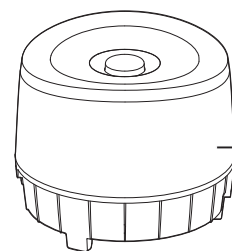


Upper unit
加湿器上部

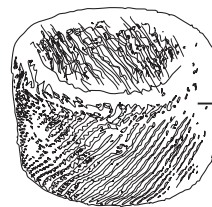

Humidification filter
(HU4102)
加湿滤网 (HU4102)

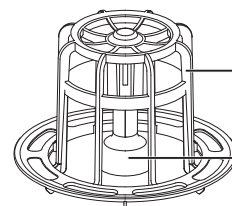

Filter support
滤网架
Float
浮筒

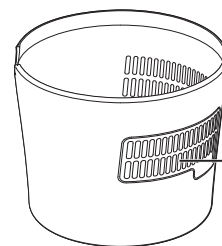







Water tank
水箱

Quick start guide


快速入门指南

PHILIPS

1 First use | 首次使用

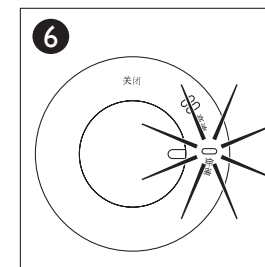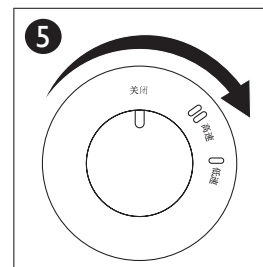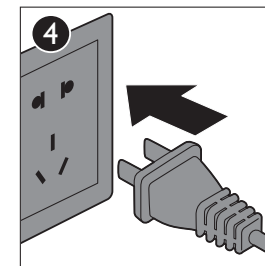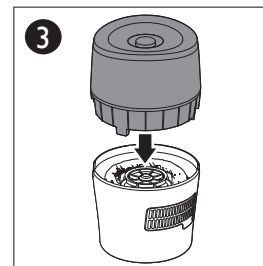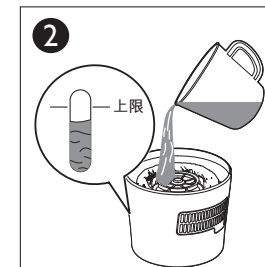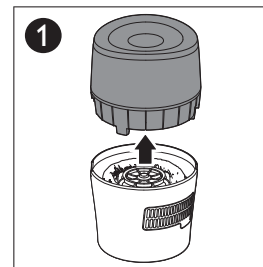

Weekly cleaning | 每周清洁

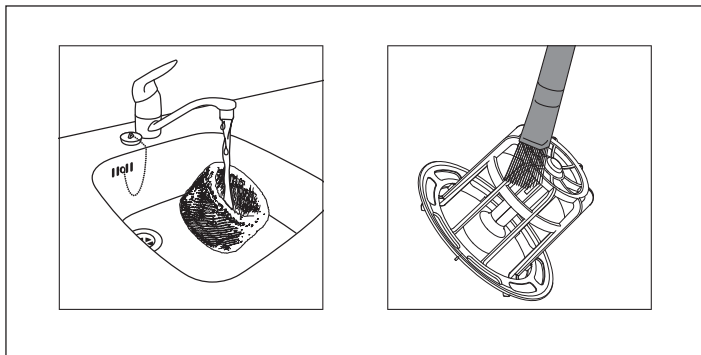

Specifications are subject to change without notice
©2012 Koninklijke Philips Electronics N.V.
All rights reserved.







HU4801_QSG_V2.0_S120820



100% recycled paper

4241 210 03851







Descal the filter | 为滤网除垢

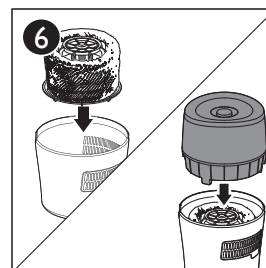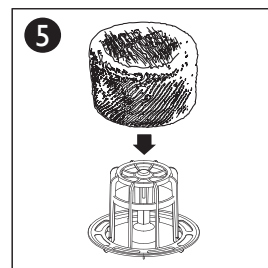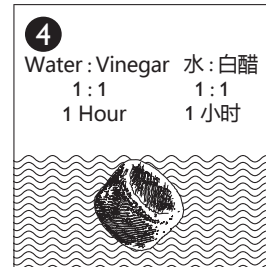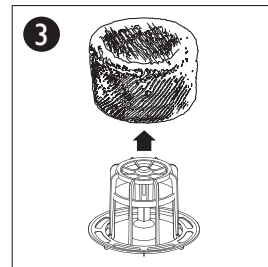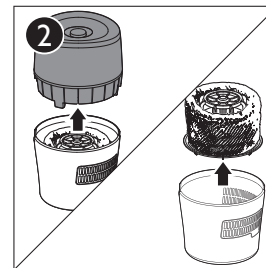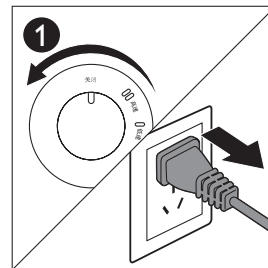

Descal the filter every two weeks.
每两周为滤网除垢一次。

Do not squeeze or wring the filter.
请不要揉搓滤网

Replace the filter | 更换滤网

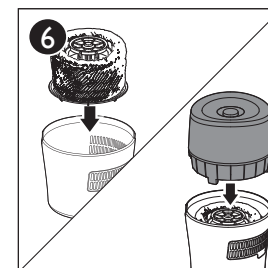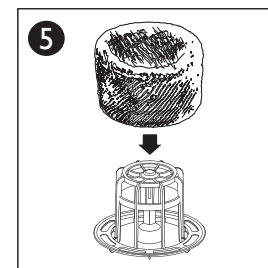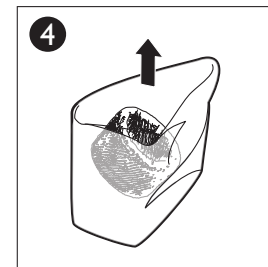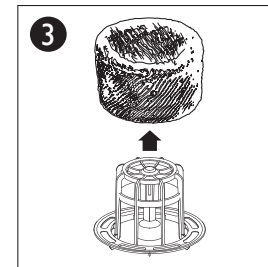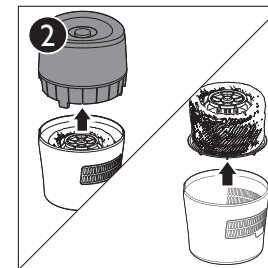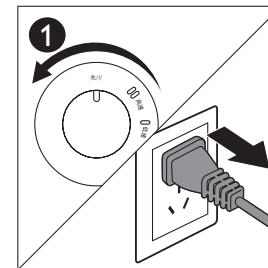

Replace the filter every three months.
每三个月更换一次滤网。