

HR2062

EN	Important information leaflet
ZH-S	重要信息手册

PHILIPS



English

1 Important

Read this user manual carefully before you use the appliance and save it for future reference.

Warning

- Do not touch the sharp blades when the appliance is plugged in. If the blades get stuck, unplug the appliance before you remove the ingredients. Be careful when handling the sharp cutting blades, emptying the jar and during cleaning.
- Switch off and unplug the appliance from the power supply before:
  - Removing it from the motor unit, changing accessories or approaching parts that move in use.
  - Assembling, disassembling or cleaning it.
  - It is left unattended.
- Do not immerse the appliance in water or any other liquid.
- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Do not use the appliance if the plug, the mains cord or the rotating sieve or the protecting cover are damaged or has visible cracks. If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- Make sure the blade unit is securely fastened and the lid is properly assembled to the blender jar before you use the appliance.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.

- Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.
- Never assemble or disassemble the blender jar to the motor base while the power is on.
- This appliance is intended for household use only.
- Read the cleaning procedure from "User Manual" before use.
- In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

Caution

- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not exceed the maximum indication on the blender jar.
- Do not exceed the maximum quantities and processing times indicated in the relevant table.
- If food sticks to the wall of the blender jar, switch off the appliance and unplug it. Then use a spatula to remove the food from the wall.
- Never fill the blender jar with ingredients hotter than 80°C.
- The appliance can only be switched on if the blender jar or the beaker is assembled on the motor unit correctly.
- Noise level: Lc = 86 dB(A).



Warning

- Never reach into the blender jar with your fingers or an object while the appliance is running.
- If the blade unit gets stuck, unplug the appliance before you remove the ingredients that block the blades.

Caution

- To prevent spillage, do not put more than 1 litres of liquid in the blender jar, especially when you process at a high speed. Do not put more than 750 ml in the blender jar when you process hot liquids or ingredients that tend to foam.
- Do not let the appliance run for more than 2 minutes at a time. Let the appliance cool down to room temperature before you continue processing.
- Always make sure the lid is properly closed/assembled on the jar and the measuring cup is inserted properly in the lid before you switch on the appliance.

Built-in safety lock

This feature ensures that you can only switch on the appliance if the blender jar is assembled on the motor unit properly. If the blender jar is correctly assembled, the built-in safety lock will be unlocked.

Safety Feature

This blender is fitted with a safety feature which safeguards against excessive loads. In case of overloading, the blender automatically activates the protection and operation will stop. If this occurs, set the rotary knob to OFF, unplug the appliance and allow it to cool down for 15 minutes. Remove the ingredients and clear up the blender jar before starting operation.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Recycling

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.



2 Guarantee and service

If you need service or information or if you have a problem, please visit the Philips website at [www.philips.com](http://www.philips.com) or contact the Philips Consumer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

简体中文

1 重要事项

使用本产品之前，请仔细阅读本使用说明书，并妥善保管以备日后参考。

警告

- 产品通电时切勿触摸锋利的刀片。如果刀片被卡住，请先拔下电源插头再清除原料。拿取锋利的切割刀片、清空搅拌杯和清洁时要非常小心。
- 执行以下操作之前请关闭产品并拔出电源插头：
  - 将其从底座中取下、更换附件或接触在使用时会活动的部件。
  - 安装、拆卸或清洁。
  - 产品处于无人看管状态。
- 不要将本产品浸入水中或任何其它液体中。
- 在将产品连接电源之前，请先检查产品所标电压与当地的供电电压是否相符。
- 如果插头、电源线、旋转滤网或保护盖已损坏，则不要使用产品。如果电源线损坏，为了避免危险，必须由飞利浦、飞利浦特约维修中心或有同等维修资格的专业人员来进行更换。
- 使用产品之前，确保刀片组件已牢牢固定在搅拌杯上且杯盖已盖好。
- 儿童不得使用本产品。应将产品及其线缆置于儿童触及不到的地方。
- 本产品适合由肢体不健全、感觉或精神上有障碍或缺乏相关经验和知识的人士使用，但前提是有人对他们使用本产品进行监督或指导，以确保他们安全使用，并且让他们明白相关的危害。
- 应照看好儿童，避免他们玩耍本产品。
- 向食品加工机或搅拌机中倒入高温液体时要小心操作，突如其来的热气可能会导致液体喷溅。
- 切勿在通电时在马达底座上拆装搅拌杯。
- 本产品仅限于家用。
- 使用前，请阅读“用户手册”中的清洁过程。
- 为避免因不慎重置过热保护装置而发生危险，切勿通过外部切换设备（例如定时器）为本产品供电，也不要连接到具有定期开关切换功能的电路。

警告

- 切勿使用由其它制造商生产的，或未经飞利浦特别推荐的任何附件或部件。如果使用此类附件或部件，您的保修将失效。
- 不要超出搅拌杯上的最大刻度。
- 不要超出相关表中所示的最大份量和加工时间。
- 如果食物粘在搅拌杯杯壁上，请关闭产品并拔下电源插头。然后使用刮铲去除杯壁上的食物。
- 切勿将温度超过 80°C 的原料装入搅拌杯。

- 切勿在通电时在马达底座上拆装搅拌杯。
- 噪音强度：Lc = 86 dB(A)。

搅拌机

警告

- 在产品运转时，切勿将手指或其它物体伸入搅拌杯中。
- 如果刀片组件被卡住，请先拔下电源插头，然后清除堵塞刀片的原料。

警告

- 为避免溅出，请不要在搅拌杯中装入超过 1 升液体，尤其是以高速加工时。在加工热液体或容易起泡的原料时，请不要装入超过 750 毫升。
- 不要让产品一次运转 2 分钟以上。让产品冷却至室温，才能继续进行加工。
- 在打开产品电源之前，应始终确保杯盖已正确关闭/安装在搅拌杯上，量杯也正确插入盖子中。

内置安全锁

此功能可确保只有将搅拌杯正确安装在马达装置上，才可以启动产品。正确组装搅拌杯，内置安全锁才会解锁。

安全功能

本搅拌机配备了一项安全功能，可以防范过载。如果发生过载，搅拌机将自动激活保护并停止工作。如果出现这种情况，请将转动式旋钮调至 OFF（关），拔掉产品插头并使其冷却 15 分钟。在开始操作前，请取出原料并清洁搅拌杯。

电磁场 (EMF)

本飞利浦产品符合所有有关暴露于电磁场的适用标准和法规。

回收

本产品是采用优质的材料和元件设计和制造的，可以回收利用。



如果产品上贴有带叉的轮式垃圾桶符号，则表示此产品符合欧盟指令 2002/96/EC：

请不要将该产品与其它生活垃圾一同弃置。请自行了解当地关于分类收集电子和电气产品的规定。正确弃置旧产品有助于避免对环境和人类健康造成潜在的负面影响。

2 保修与服务

如果您需要服务或信息，或者有任何疑问，请访问飞利浦网站：[www.philips.com](http://www.philips.com)。您也可与您所在国家/地区的飞利浦客户服务中心联系（可从全球保修卡中找到其电话号码）。如果您所在的国家/地区没有飞利浦客户服务中心，请向当地的飞利浦经销商求助。