

PHILIPS



All registered and unregistered trademarks are property of their respective owners.
© 2012 Koninklijke Philips Electronics N.V.
All rights reserved.

HD3085_3087_Safety leaflet_ZH-HK_V1.0



English

Read this safety leaflet carefully before you use the fuzzy rice cooker and save it for future reference.

Danger

- Do not immerse the rice cooker in water, nor rinse it under the tap.

Warning

- Check if the voltage indicated on the rice cooker corresponds to the local power voltage before you connect it.

- Only connect the rice cooker to a grounded power outlet. Always make sure that the plug is inserted firmly into the power outlet.
 - Do not use the appliance if the plug, the power cord, the inner pot, the sealing ring, or the main body is damaged.
 - Make sure that the damaged power cord is replaced by Philips, a service center authorized by Philips or similarly qualified persons in order to avoid a hazard.
 - The appliance is not intended to be operated by means of an external timer or a separate remote-control system.
 - The appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - Children should be supervised to make sure that they do not play with the rice cooker.
 - Keep the power cord out of the reach of children. Do not let the power cord hang over the edge of the table or worktop on which the rice cooker stands.
 - Make sure the heating element, the temperature sensor, and the outside of the inner pot are clean and dry before you put the plug in the power outlet.
 - Do not plug in the rice cooker or press any of the buttons on the control panel with wet hands.
 - Never connect this rice cooker to an external timer switch in order to avoid a hazardous situation.
- ### Caution
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
 - Do not expose the rice cooker to high temperatures, nor place it on a working or still hot stove or cooker.
 - Do not expose the rice cooker to direct sunlight.
 - Place the rice cooker on a stable, horizontal, and level surface.
 - Always put the inner pot in the rice cooker before you put the plug in the power outlet and switch it on.
 - Do not place the inner pot directly over an open fire to cook rice.
 - Do not use the inner pot if it is deformed.
- The accessible surfaces may become hot when the rice cooker is operating. Only touch the control panel and open lid button.
 - Beware of hot steam coming out of the steam vent during cooking or out of the rice cooker when you open the lid. Keep hands and face away from the rice cooker to avoid the steam.
 - The inner pot, steam basket, and resealable cups, during and after cooking process, may be hot and heavy.
 - Do not lift and move the rice cooker while it is operating.
 - Do not exceed the maximum water level indicated in the inner pot to prevent overflow.
 - Do not place the cooking utensils inside the pot while cooking, keeping warm or reheating rice.
 - Only use the cooking utensils provided. Avoid using sharp utensils.
 - Do not use the cooking utensils provided by the rice cooker on open flame.
 - To avoid scratches, it is not recommended to cook ingredients with crustaceans and shellfish. Remove the hard shells before cooking.
 - Do not insert metallic objects or alien substances into the steam vent.

- Do not place a magnetic substance on the lid. Do not use the rice cooker near a magnetic substance.
- Always let the rice cooker cool down before you clean or move it.
- Always clean the rice cooker after use. Do not clean the rice cooker in dishwasher.
- Always unplug the rice cooker if not used for a longer period.
- The rice cooker is intended to be used in household or similar applications such as: Staff kitchen areas in shops, offices, and other residential type environments; Farm houses; By clients in hotels, motels and other residential type environments; Bed and breakfast type environments.
- If the rice cooker is used improperly or for professional or semiprofessional purposes, or if it is not used according to the instructions in this user manual, the guarantee becomes invalid and Philips refuses liability for any damage caused.

Electromagnetic fields (EMF)

This appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

Power failure backup function

This appliance has a backup function that remembers the status before a power failure, provided the power supply is resumed within two hours. If the power failure occurs during a cooking process, the countdown of the cooking time continues where it left off when the power supply resumes.

繁體中文

使用快思電飯煲前，請仔細閱讀本安全小冊子，並保管以備日後參考之用。

危險事項

- 請勿將電飯煲浸在水中，也請勿在水龍頭下清洗。

警告

- 在連接本產品前，請檢查產品註明的指示電壓與當地電源電壓是否對應。
- 僅將電飯煲連接上接地的電源插座。務必確保插頭已穩固插入電源插座。
- 如插頭、電源線、內鍋、密封圈或機身受損，切勿使用本產品。
- 確保受損的電源線由 Philips、Philips 認可的服務中心或同樣受認可人士更換，以免產生危險。
- 本電器不得以外部計時器或其他遙控系統操作使用。
- 本產品並不適合身體、感覺或心智能力低下人士（包括兒童），或缺乏知識及經驗人士使用，除非該人士在使用本產品方面已接受其他負責其安全之人士的監督或指導。
- 兒童應受監督以確保他們不會把電飯煲當作玩具。
- 將電源線收藏於兒童無法觸及的地方。請勿讓電源線懸掛於放置產品的桌面或工作檯邊緣。
- 將插頭插入電源插座前，確保加熱元件、溫

度感應器及內鍋外部清潔乾爽。

- 請勿用濕手插入電飯煲或按下控制面板的按鈕。
- 切勿將產品接上外部定時器切換，以免產生危險。

注意

- 請勿使用任何其他廠商製造而非 Philips 特別建議使用的配件或零件。如使用該等配件或零件，您的保障將會失效。
- 請勿將電飯煲暴露於高溫之中，也不要放置於正在使用或仍然燙熱的爐子或廚具上。
- 請勿將電飯煲暴露於直射陽光下。
- 將電飯煲放置在穩定平坦的水平表面上。
- 將插頭插入電源插座並開啟之前，務必將內鍋放入電飯煲裡。
- 請勿將內鍋直接放置在開放火源上煮飯。
- 如內鍋變形，則請勿使用。
- 電飯煲運作期間，可接觸的表面或會變熱。僅點按控制面板及開蓋按鈕。
- 烹調期間，留意蒸氣氣孔噴出的熱蒸氣；開蓋時，也要留意電飯煲噴出的熱蒸氣。將雙手及臉部遠離電飯煲，以免受蒸氣燙傷。
- 烹調期間及之後，內鍋、蒸架及可密封杯或會燙熱和變得沉重。
- 電飯煲運作時，請勿將其抬起或移動。
- 請勿超過內鍋註明的最高水位，以免溢出。

- 烹調、保暖或翻熱米飯期間，請勿將廚具放入鍋內。
- 僅使用隨附的廚具。避免使用尖銳的廚具。
- 請勿在開放火源上使用隨附的廚具。
- 為了避免刮花，不建議連同甲殼類或貝類烹調材料。烹調前取下硬殼。
- 請勿將金屬物件或異物插入蒸氣氣孔。
- 請勿將磁性物質放在蓋上。請勿在磁性物質附近使用電飯煲。
- 清潔或移動電飯煲之前，務必讓電飯煲冷卻下來。
- 使用後，務必清潔電飯煲。請勿使用洗碗機清潔電飯煲。
- 如長時間不使用電飯煲，務必拔除電飯煲的插頭。
- 電飯煲為家用或類似應用而設，如店舖、辦公室及其他居住類型環境的員工廚房區、農屋、酒店、汽車旅館及其他居住類型環境的客戶、早餐酒店類型環境。
- 如不當使用電飯煲、使用電飯煲作專業或半專業用途，或沒有按照本用戶手冊的說明使用電飯煲，保用將會無效，而 Philips 拒絕承擔任何造成的損毀。

電磁場 (EMF)

本產品符合一切有關電磁場 (EMF) 之安全標準。在現存的科學證明下，本產品如按照本用戶手冊指示正確地使用，將會是安全的。

斷電備份功能

本產品有備份功能，可記住斷電前的狀態，不過電力必須在兩小時內回復。如果烹調時停電，當電力回復時電飯煲就會繼續烹調，且時間掣也會繼續倒數。