



PHILIPS and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured by and is sold under the responsibility of Versuni Holding B.V., and Versuni Holding B.V. is the warrantor in relation to this product.

2024 © Versuni Holding B.V.  
642001018629 (30/08/2024)



1

2

Take off the protection cover and trim the short hair.  
取下保護罩修剪短毛

Keep the protection cover and trim the long hair.  
保留保護罩修剪長毛

4

Press to turn on the appliance.  
Press 2 seconds to turn off the appliance.  
短按開機  
長按2秒關機

5

Last selected mode is displayed after the appliance is turn on. Press the power button to change the mode.  
開機後顯示上次設定段數，短按切換段數，1-3-2-1循環

6

After changing the mode for 5 seconds, remaining battery will be shown.  
切換段數5秒後顯示電量

You can change modes by pressing the power button. The selected mode will be displayed.  
再短按，直接切換段數，顯示目前段數

7

Low battery reminder: Numbers on the screen begin to blink 5 times when battery is 10.  
低電量提醒：電量到10，數字開始閃爍5次

Turn on the appliance when there is no power: Numbers blink 5 times and goes off.  
無電量開機：電機不工作，數字閃爍5次，然後熄滅



8

1. Battery is displayed. Battery decreases 5 each time (100-95-90...5-0).  
2. Battery is displayed when it is charged. Battery increases 5 each time (0-5...90-95-100).  
1. 顯示實際電量，每次下降 5 (100-95-90...5-0)  
2. 充電顯示電量，每次上升 5 (0-5...90-95-100)

9

1

Pour the pills into the trash can.  
垃圾桶接住，防止毛屑灑出

2

3

4

5

**Note:** Do not touch the blade directly when take off and install the blade.

**注意：**在取下和安裝刀片的時候，請勿用手直接接觸刀片。

EN User manual

TC 使用手冊

ENGLISH

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product and read online user manual at [www.philips.com/welcome](http://www.philips.com/welcome).

Important

Read this user manual carefully before you use the appliance and save it for future reference.

Danger

- Never immerse the appliance in water.
- Keep the appliance dry.
- Children shall not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not open and remove the blade guard and pills compartment during use.
- Do not use the appliance if it shows visible damage or if the blade unit or blade guard is broken.
- Do not let pointed objects come into contact with the blades and rotating shaft during use.
- Do not switch on and use the appliance when charging or when performing cleaning and maintenance.
- Keep your fingers and hand away from the blades and rotating shaft during cleaning and maintenance.

Caution

- This appliance contains non-replaceable Li-ion battery.
- Only charge the appliance with the USB cable shipped with package, make sure that you connect to a 5Vdc adaptor. Switch off the appliance when charging.
- This appliance contains Li-ion battery, please use it at a room temperature. Internal protection will enable if temperature below -5 °C or above 60 °C and will recover afterwards.
- Stop using the appliance when there is a hump, smelly, extreme hot or smoke.

- Remove the USB cable after charging for 4 hours. Note that the charging light will remain on as long as the USB cable is plugged in, and does not indicate the charging status.
- The appliance is intended for garments only.

Electromagnetic fields (EMF)

This appliance complies with the applicable standards and regulations regarding exposure to electromagnetic fields.

Using the appliance

Make sure you smooth out the garment on a flat surface. Do not press the appliance onto the garment too hard. Do not use the appliance on embroideries, zips, buttons and loose threads.

Cleaning and maintenance

For extra safety, the blades stop rotating automatically when you remove the blade guard.

**Note:** Do not clean the power button when cleaning the appliance with water.

Environment

- This symbol means that electrical products and batteries shall not be disposed of with normal household waste.
- Follow your country's rules for the separate collection of electrical products and batteries.



Removal of built-in rechargeable battery

The built-in rechargeable battery must only be removed by a qualified professional when the appliance is discarded. Before removing the battery, make sure that the appliance is disconnected from the wall socket and that the battery is completely empty.

Removing the rechargeable battery

Undo the screws, open the casing, take out the printed-circuit board and cut the metal tabs to detach the battery.

Warranty and support

Versuni offers a two-year warranty after purchase on this product. This warranty is not valid if a defect is due to incorrect use or poor maintenance. Our warranty does not affect your rights under law as a consumer. For more information or for invoking the warranty, please visit our website [www.philips.com/support](http://www.philips.com/support).

*Note: The guarantee does not cover wear and tear of the blade unit.*

Trouble shooting

Problem	Possible cause	Solution
The appliance does not remove pills.	Pills have been accumulated inside the appliance.	Clean the appliance. (Fig. 2).
The cutter is not turning.	The cutter cap is not tightened properly.	Check and ensure the cutter cap is tightened properly.
	The rechargeable battery is empty (the red LED light flashes).	Recharge the battery.

繁體中文

簡介

感謝您購買本產品。歡迎來到飛利浦的世界！請至 [www.philips.com/welcome](http://www.philips.com/welcome) 註冊您的產品並閱讀電子說明書，以獲得飛利浦提供的完整支援。

重要事項

在使用本產品前，請先仔細閱讀本使用手冊，並保留使用手冊以供日後參考。

危險

- 切勿將本產品浸泡於水中。
- 保持產品干燥。
- 請勿讓孩童把玩產品。
- 本產品不適合交由身體、知覺或精神能力障礙者或經驗與知識缺乏者 (包括孩童) 使用，除非由負責他們安全的人員提供安全使用產品相關的監督或指示說明。
- 請勿在產品使用時打開並取下刀片安全防護及毛絮槽。
- 如產品本身有明顯損傷，或是刀片座或刀片安全防護破損，請勿使用。
- 使用期間，請勿將尖銳物品接觸刀片及轉軸。
- 進行充電或清潔與維護時，請勿啟動並使用產品。
- 進行清潔與維護時，請確保手指與雙手遠離刀片及轉軸。

注意

- 本產品內含不可更換的鋰電池。
- 本產品只能使用包裝內附的 USB 線充電，請確認連接的是 5Vdc 轉接器。充電時請關閉產品電源。
- 本產品內含鋰電池，請於室溫下使用。如果溫度低於 -5 °C 或超過 60 °C，內部保護將啟用，並於之後恢復。

- 若出現膨脹、發臭、過熱或冒煙等情況，請停止使用本產品。
- 充電 4 小時後，請拔掉 USB 纜線。請注意，只要 USB 纜線沒有拔掉，充電指示燈就會持續亮起，而且不會指示充電狀態。
- 本產品僅限用於衣物。

電磁場 (EMF)

本產品符合電磁場暴露的相關適用標準和法規。

使用本產品

請務必在平坦表面上撫平衣物。將產品壓於衣物上的力道切勿過大。請勿將產品用於刺繡、拉鍊、鈕扣及線頭。

清潔與維護

為了提高安全性，當您取下刀片安全防護時，刀片會自動停止旋轉。  
**備註：**用水清潔產品時，請勿清潔電源按鈕。

環境保護

- 此符號表示電氣產品及電池不得與一般家用廢棄物一併丟棄。
- 請遵循您所在國家/地區對電氣產品及電池的分類收集規定。



取出內建充電式電池

丟棄產品時，僅能由合格的專業人員取出內建充電式電池。取出電池前，請先確認產品已與電源插座中斷連接，且電池電力完全耗盡。

取出充電式電池

鬆開螺絲，打開外殼，取出印刷電路板，剪斷金屬突片以拆下電池。

保固與支援

Versuni 為本產品提供售後兩年保固。若因使用不當或保養不周而導致瑕疵，此保固隨即失效。我們的保固不會影響您作為消費者的法律權利。如需更多資訊或欲使用保固，請造訪我們的網站 [www.philips.com/support](http://www.philips.com/support)。

**備註：**保固範圍不包含磨損與破損的刀片座。

故障類型和處理方法

問題	可能的原因	解決方法
本產品不能去除毛球。	毛球在產品內部堆積。	清潔產品 (圖 2)。
刀片不轉動。	刀片罩未正確擰緊。	檢查並確保刀片罩已正確擰緊。
	電池的電量已耗盡 (LED 指示燈閃爍)。	給電池充電。