

11.0 Warranty and Service

For any information or problem, contact your local Philips dealer or authorized service center. For a list of authorized Philips service centers visit: www.philips.co.in or contact our consumer care at 1800 102 2929 (Toll free) or 1860 180 1111 (standard call rates apply)

11.1 Warranty Card

This apparatus is covered under warranty against any defect due to defective material or workmanship for TWO YEARS from the date of purchase. Should a defect develop during the period of warranty, Philips Domestic Appliances India Ltd. undertakes to repair the apparatus FREE OF CHARGE through the dealer from whom it has been purchased or at any of the Philips authorized Service Centres.

The warranty is not valid in case:

- 1. Apparatus is not used according to user manual.
- 2. Defects caused by improper or reckless use.
- 3. Repairs done by persons other than Philips Authorized service centre.
- 4. Modifications of any nature made in the apparatus.
- 5. Tampered serial number.
- 6. Incomplete warranty card after purchase.
- 7. Product if used for commercial purpose (i.e. other than domestic use).
- 8. Usage of parts not recommended by Philips or those made by other manufacturers.

All consumables and parts susceptible to normal wear and tear are not covered under warranty.

Week/S.No.
Date of Purchase _____

Dealer's Name: _____

Dealer's Stamp: _____

Customer's Name and Address: _____

Model No.: _____

Dealer's Signature: _____



www.philips.co.in
100% recycled paper

www.philips.com/welcome



Mixer Grinder

Please read the guidelines provided in this DFU on important instructions, appliance usage & warranty before using the product.

PHILIPS

Problem	Cause	Solution
1 Appliance does not work.	No electricity supply.	Ensure that the plug is plugged in well.
2 The appliance suddenly stops working while in use.	The appliance is equipped with an 'Over Load Protector' (OLP) switch. If appliance overheats, it automatically cuts off power supply.	Unplug appliance and let it cool for 2-3 minutes. Remove jar from base unit. At the bottom of base unit there is a red coloured switch (OLP). Reset OLP by pressing it. Put plug back into wall socket and switch on appliance again (see heading 'OverloadProtection').
3 Blade unit is blocked.	The quantity being processed is probably too large.	Switch off appliance. Remove ingredients that are blocking the blade unit.
4 Appliance gives an unpleasant smell during first few times of use.	This is normal for the first few times.	<ul style="list-style-type: none">• Ensure that jars are clean and there are no ingredients stuck inside it.• Ensure that appliance has been assembled correctly.
5 Appliance makes a lot of noise.	Jar lid has not been properly locked.	Make sure jar lid has been properly and tightly locked.
	Jar has not been properly locked.	Remove ingredients from jar and tighten the blade in anti-clockwise direction with spatula.
6 There are fumes from the appliance.	Appliance may have been used for too long.	Switch off appliance and let it cool for 60 minutes.
7 Unsatisfactory grinding/ blending/ mixing performance.	Incorrect jar selection.	Use correct jar as per the application.
	Large size of ingredients.	Cut ingredients into appropriate size.
8 Leakage from jar lid.	Gasket has not been fit properly.	Unplug appliance. Remove jar from base unit. Remove lid to check if gasket has been assembled correctly.

Always there to help
Philips Contact
Register your product for further support at www.philips.co.in
Or Call 1800 102 2929 (Toll Free)
1860 180 1111 "Standard call rates apply"

In case these measures do not work, contact the nearest PHILIPS service center or call at customer care numbers.
1800 102 2929 (Toll free) or 1860 180 1111 "standard call rates apply"

1. **Base unit** : Containing the motor, speed switch, mains cord and overload protector switch

2. **Guide for jar lock** : To aid in locking of jar on base unit.

3. **Speed selector knob** : for different speed adjustment.

4. **Anti slip rubber feet**

5. **Overload protection switch** :*
6. **Wet grinding jar with removable blade** : suitable for wet grinding, liquidizing and blending.

7. **Dry grinding jar with removable blade** : for dry grinding.

8. **Chutney grinding jar with fixed blade** : for small quantity grinding such as chutney, pepper, dry masala, coffee beans.

9. **Spatula** : To clean sides of jars from inside and use as a spanner for blades.
- * located below at the base of the unit

Model No.	HL7750/00
Voltage	230V~50Hz
Wattage	650W max.
Motor	Universal motor
No load at max. speed	3 2100 rpm (approx.)
With load at max. speed	3 11500 rpm (approx.)
Speed Control	Rotary switch with 3 speed and incher
Insulation	Class F
Protection	Class II
Rating	Ordinary Total rated ON time 30 minutes (max.) Continuous ON for 5 minutes (max.) and Off for 2 minutes (min.) Rest time 45 minutes

Technical Specifications

Philips brings to you a mixer grinder with 3 steel jars - wet, dry and chutney jar.

1.0 Introduction

3.0 Trouble shooting

4.0 Important instructions

We recommend that you read the following instructions carefully, before using the appliance.

1. Check if the voltage indicated on the base of the appliance, corresponds to the local electrical mains voltage before you connect the appliance.

2. Do not use the appliance when the mains cord, the plug or other components are damaged. Only the company or a service centre authorized by Philips must replace it.

3. Always unplug the appliance after use.

4. Never immerse the base unit in water or any other liquid. Do not rinse it either.

5. Always unplug the appliance before reaching in to the jar with your fingers or an object e.g. spatula.

6. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
7. Always ensure that speed selector knob is at 'O' position before fixing accessories.

8. Do not operate the mixer without the dome or lid in place or with an empty jar.

9. Handle the blades carefully. Wash them under running water and do not rub by hand.

10. Do not use mixer on wet/inclined surface

11. Do not run mixer for more than 30 minutes continuously.

12. Keep mixer away from hot gas burner, electric hot plate or similar appliances.


13. This appliance is strictly for household use.

14. Do not drop base unit or jar.

15. Never use accessories or parts not recommended by Philips or those made by other manufacturers else the warranty will become invalid.

16. Do not use the jars as storage containers.

17. Do not leave unit unattended while in operation.

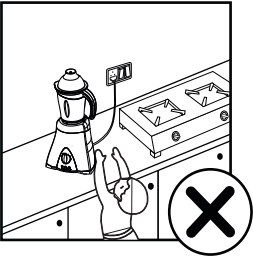18. Always ensure that accessories have been fixed properly before grinding
- 

8.0 Overload Protection

Mixer is fitted with an automatic power shut off mechanism to avoid motor burning due to overloading. if mixer stops due to overloading, the red knob at the bottom will come out. Switch off the mixer. Remove excess load from jar. Wait for 2-3 minutes. Press red knob and start mixer again.

9.0 Maximum Jar Capacity


No.	Type of Jar	Capacity	Wet capacity (rated) max.	Dry capacity (rated) max.
1	Wet grinding jar	1.5L	0.6L	NA
2	Dry grinding jar	1.0L	NA	0.5L
3	Chutney grinding jar	0.3L	NA	0.2L

Recommendations:-
Wet grinding jar recommended for wet applications only
Dry grinding jar recommended for dry applications only
Chutney grinding jar recommended for chutney grinding & dry applications only

5.0 Using the product

1. How to fit the blades

Hold the coupler on the underside of the jar and with the spanner; tighten by rotating in anti-clockwise direction till the blade is securely locked. This procedure is applicable for both wet & dry jars.

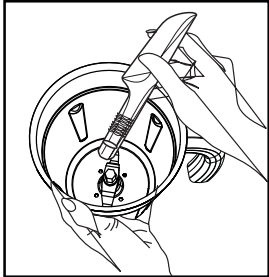

7.0 Cleaning and Maintenance

1. Remove main plug from wall socket. Do not immerse unit in water.

2. Wipe base unit with a damp cloth and non-abrasive liquid cleaner.

3. Disassemble other parts after use. Wash them in soapy water, rinse with clean water and dry thoroughly. Do not wash in a dishwasher. Cleaning is easiest done immediately after use.
4. Take soapy water in jars, fix jar on motor, run for 10 seconds on 'I' speed and then wash the jar.

5. Store mixer grinder standing on its heel in a safe and dry place.

10.0 Standard Recipes

No.	Recipe	Quantity	Time
1	Urad daal	150g+400ml water soaked for6-8 hrs. Add 50ml water	1.5 min
2	Garam masala	150g of assorted spices roasted and cooled	2.0 min
3	Wet masala	150g onion + 100g tomato	1.0 min
4	Ginger garlic paste	50g ginger + 50g garlic	1.5 min
5	Milk shake	300ml milk + 50g ice-cream (optional) + 30g Strawberry crush (sugar as per taste)	1.0 min
6	Tomato Puree	250g medium sized tomatoes cut in 4's	1.0 min
7	Lassi	250g curd + salt / sugar (as per taste) + crushed ice	30 sec

For wet/dry/chutney grinding use speed 'I' and speed 'II' for 10-15 seconds, thereafter use speed 'III' till you finish grinding. Remove the plug from the socket after use.