
注册您的产品并在以下网站链接中了解详情www.philips.com/welcome

HD2658





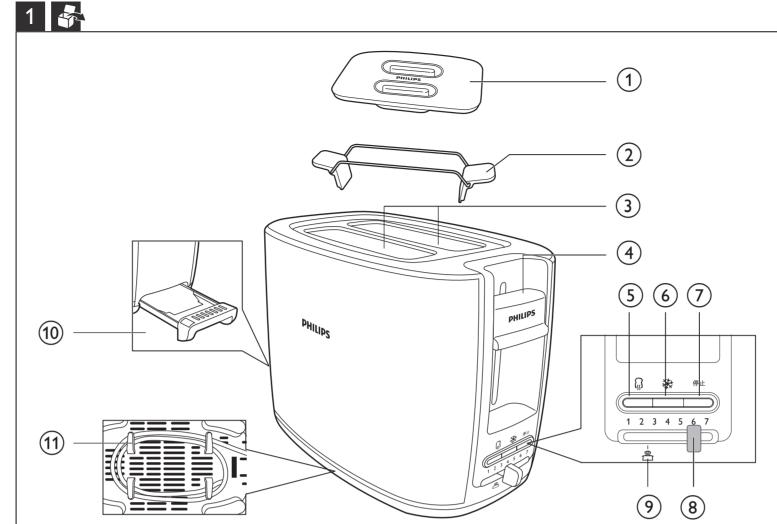

English

- 1 Dust cover
- (2) Warming rack
- 3 Toasting slots
- (4) Toasting lever
- (5) Reheat button @
- 3 Refleat button »
- 6 Defrost button ₩
- (7) Stop button
- 8 Browning setting slide
- 9) Bun warming function 🖺
- (10) Crumb tray
- (1) Cord storage brackets

简体中文

- ① 防尘罩
- ② 烘烤架
- ③ 烘烤槽
- ④ 烘烤杆
- ⑤ 重新加热按钮 🖟
- ⑥ 解冻按钮 ※
- ⑦ 停止按钮
- ⑧ 烘烤程度设置滑块
- ⑨ 面包加热功能 凸
- 10) 面包屑底盘
- ⑴ 电线存放篮

PHILIPS

产品 : 飞利浦面包片烘烤器

型号 : HD2658 额定电压 : 220V ~

额定频率 : 50Hz 额定输入功率 : 900 W

生产日期: 请见产品本体产地: 中国广东清远

飞利浦(中国)投资有限公司 上海市天目西路 218 号 1602 - 1605 全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005 GB4706.14-2008 制造

English

Important

Read this important information leaflet carefully before you use the appliance and save it for future reference.

Danger

Never immerse the appliance in water.

Do not insert oversize foods and metal foil packages into the toaster, as this may cause fire
or electric shock.

Warning

- If the power cord is damaged, you must have it replaced by Philips, a service centre authorized by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- To avoid the risk of fire, frequently remove crumbs from the crumb tray (see User Manual Chapter "Cleaning").
- Do not operate the appliance under or near curtains or other flammable materials or under wall cabinets, as this may cause fire.
- Check if the voltage indicated on the bottom of the appliance corresponds to the local power voltage before you connect the appliance.
- Do not let the appliance operate unattended.
- Do not place the dust cover (specific model) or any other object on top of the toaster when the appliance is switched on or when it is still hot, as this can cause damage or fire.
- Immediately unplug the toaster if fire or smoke is observed.
- Keep the power cord away from hot surfaces.
- This appliance is only intended for toasting bread. Do not put any other ingredients in the appliance.
- The accessible surfaces may become hot during use.
- The appliance is not intended to be operated by means of an external timer or a separate remote control system.

 Do not wind the power cord around the toaster after use or during storage as this may damage the cord.

Caution

- The toaster is intended for household use only and may only be used indoors, It is not intended for commercial or industrial use.
- Only connect the appliance to an earthed wall socket.
- Do not let the power cord hang over the edge of the table or worktop on which the appliance stands,
- Always unplug the appliance after use.
- Do not place the toaster on a hot surface
- The warming rack (specific model) is only intended for warming up rolls or croissants.

 Do not put any other ingredients on the warming rack, as this may lead to a hazardous situation.
- Do not hold the appliance upside down and do not shake it to remove the crumbs.

Electromagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

This symbol on a product means that the product is covered by European Directive 2012/19/EU. Inform yourself about the local separate collection system for electrical and electronic products. Follow local rules and never dispose of the product with normal household waste. Correct disposal of old products helps prevent negative consequences for the environment and human health.

Guarantee & service

If you need service or information or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Consumer Care Centre in your country (you can find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

简体中文

重要信息

使用产品之前,请仔细阅读本重要信息单页,并妥善保管以供日后参考。

危险

- 切勿将产品浸入水中。
- 请勿将过大的食物和金属箔纸包装的食物放入烤面包机中,否则可能会导致火灾或电击。

警告

- 如果电源软线损坏,为了避免危险,必须由制造商、 其维修部或类似部门的专业人员更换。
- 本产品适合由8岁或以上年龄的儿童以及肢体不健全、 感觉或精神上有障碍或缺乏相关经验和知识的人士使 用,但前提是有人对他们使用本产品进行监督或指导, 以确保他们安全使用,并且让他们明白相关的危害。不 得让儿童玩耍本产品。不要让儿童进行清洁和保养,除 非儿童已年满8周岁且在有人监督的情况下。
- 应将产品及其线缆置于 8 周岁以下儿童触及不到的地方。
- · 为避免火灾危险,请经常清除面包屑底盘中的面包屑 (请参阅用户手册中的"清洁"一章)。
- 不得在窗帘及其它可燃材料下方或附近(或壁橱下方)使用本产品,否则可能引起火灾。
- 在将产品接通电源以前,首先确认产品底部所标示的 电压是否与当地的电源电压相符。





- 产品使用时必须有人看管。
- 当产品已接通电源或仍处于高温状态时,请勿将防尘 盖(特定型号)或任何其他物体置于烤面包机顶部, 以免造成损坏或火灾。
- 如果发现火焰或冒烟,请立即切断烤面包机电源。
- 不要让电源线接触到高温的表面。
- 本产品仅限于烘烤面包。切勿将任何其他原料放入产 品中
- 使用产品时,其可接触的表面可能会变得很热。
- 本产品不能利用外部定时器或独立的遥控器系统 操作。
- 请勿在使用后或存放期间将电源线缠绕在烤面包机 上, 这样做可能会损坏电源线

注意

- 本烤面包机仅限干家庭使用,而且只能干室内使用本 产品。不得将其用于商业或工业用途。
- 产品只能使用带接地线的插座。
- 不要将电源线悬挂在放置产品支架的桌子或工作台的 边缘上。
- 使用后务必拔下产品的插头。
- 请勿将本烤面包机置于高温的表面上。
- 烘烤架(特定型号)仅限于加热圆面包或羊角面包。 切勿将任何其它原料放在烘烤架上,否则可能会导致 危险情况。
- 请勿将产品倒置或摇动产品以倒出面包屑。


电磁场 (EMF)


本飞利浦产品符合与电磁场 (EMF) 相关的所有标准。目前 的科学依据证明, 如果正确使用并根据本用户手册中的说 明进行操作,则本产品是安全的。

产品上的该符号表示产品符合欧盟指令 2012/19/ EU。请熟悉当地针对电子和电器产品制订的分门别 类的收集机制。遵循当地规章制度,不要将产品与 一般的生活垃圾一同弃置。正确弃置旧产品有助干避免对 环境和人类健康造成负面影响。


保修与服务


如果您需要服务或信息,或者有任何疑问,请访问飞利 浦网站: www.philips.com。您也可与您所在国家/地区的飞 利浦客户服务中心联系(可从全球保修卡中找到其电话 号码)。如果您所在的国家/地区没有飞利浦客户服务中 心, 请向当地的飞利浦经销商求助。

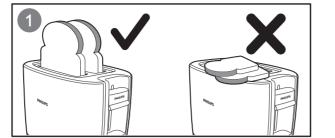

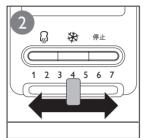




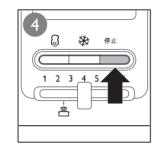


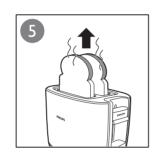

3 4



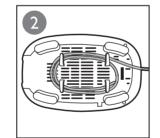

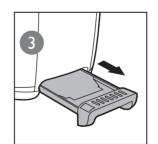





English

Do not use any tool to clean the

简体中文

请勿使用任何工具清

English

Before first use

Put the toaster in a properly ventilated room and select the highest browning setting. Let the toaster complete a few toasting cycles without bread in it. This burns off any dust and prevents unpleasant smells

Toast, reheat, or defrost bread (Fig. 2)

Select reheat ($\ensuremath{\wp}$), defrost ($\ensuremath{\mathfrak{B}}$), or the desired browning setting.

- Select a low setting (1-2) for lightly toasted bread.
- Select a high setting (5-7) for darkly toasted bread.

- You can stop the toasting process and pop up the bread at any time by pressing the stop
- The reheat function has a preset duration. The toasting time does not change when you move the browning setting slide to another setting.

Bun warm

Turn the browning control to the bun warming function ($\stackrel{\triangle}{\Box}$) between setting 2 and 3.



 Never put the rolls to be warmed up directly on top of the toaster. Always use the warming rack to avoid damage to the toaste

Cleaning (Fig. 3)

↑ Warning

• Never use scouring pads, abrasive cleaning agents or aggressive liquids to clean the appliance.

简体中文

首次使用之前

将烤面包机放在通风良好的房间里,并选择最高烘烤设 置。在不放入面包的情况下, 让烤面包机完成数次烘烤过 程。这样可将灰尘烧掉,以免产生难闻的气味。

烘烤、重新加热或解冻面包(图 2)

按步骤操作。

选择重新加热(象)、解冻(*)或所需的烘烤程度设置。

- 选择较低的烘烤程度设置 (1-2) 可对面包进行轻度 烘烤。
- 选择较高的烘烤程度设置 (5-7) 可将面包烘烤成 褐黄色。

注意 注意

- 可以随时按下烤面包机上的停止按钮,停止烘烤过 程, 使面包弹出。
- 重新加热功能具有预设时间。将烘烤程度设置滑块移 至其它设置时,烘烤时间不变。

面包加热

将烘烤程度控制钮转至设置 2 和设置 3 之间的面包烘烤 功能(高)。

注意

· 切勿将圆面包直接置干烤面包机的顶部加热。请始终 使用烘烤架,以免损坏烤面包机。

清洁(图3)

↑ 警告

切勿使用钢丝绒、研磨性清洁剂或腐蚀性液体清洁 产品。

故障种类和处理方法

如果出现问题并且您无法用下面的信息解决, 请与贵国 的飞利浦客户服务中心联系(见"保修和服务"一章)。

问题 解决方法 不能启动 确保插头已正确插入电源插座。 烤面包机。 如果烤面包机仍然无法启动, 请联 系飞利浦授权的维修服务中心进行 检查。

面包卡在产品中。

首先从电源插座中拔出插头, 让产 品冷却, 然后从产品中小心地取出 面包。在取出面包时, 小心不要损 坏加热元件。切勿使用金属物件取 出面包。

深或太浅。

烘烤的面包颜色太 您选择了过高或过低的烘烤程度设 置。如果面包颜色太深,下次请选 择较低的设置; 如果面包颜色太 浅,下次请选择较高的设置。

烤面包机有冒烟 现象。

依据您放进去烘烤的面包类型,您 选择了过高的烘烤程度设置。请按 取消按钮停止烘烤程序。

电源线损坏。

如果电源软线损坏, 为了避免危 险,必须由制造商、其维修部或类 似部门的专业人员更换。

使用加热功能时, 无法改变烘烤 程度设置。

这是正常的。烤面包机在加热小圆 面包或羊角面包时, 为了取得最佳 效果,温度设定是固定的。

程度设置。

使用重新加热功能 这是正常的,烤面包机有一个自动 时,无法改变烘烤 重新加热功能,可以翻热面包而不 会加重其烘烤程度。但是,如果在 已加热的面包弹出后立即将其重新 加热,面包将变得稍许焦黄。

烤的情況下立即 弹出。

面包将在几乎未烘 确保将烘烤杆完全推下。如果面包 不能保持在下方,则请将产品送到 飞利浦授权的客户服务中心进行 检查。