

HD4928
HD4929
HD4938

EN Safety leaflet

PHILIPS



English

Read this safety leaflet carefully before you use the appliance and save it for future reference.

Danger

- Never immerse the appliance in water or rinse it under the tap.

Warning

- **WARNING:** If the surface of the cooking plate is cracked, switch off the appliance and do not use it anymore to prevent the risk of electric shock, short circuiting or fire.
- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Only connect the appliance to an earthed wall socket. Always make sure the plug is inserted firmly into the socket.
- Do not use the appliance if the plug, the mains cord or the appliance itself is damaged.
- If the mains cord is damaged, you must have

it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

- This appliance is intended for household use only. If the appliance is used improperly or for professional or semi-professional purposes or if it is not used according to the instructions in the user manual, the guarantee becomes invalid and Philips refuses any liability for damage caused.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep the appliance and its cord out of reach of children less than 8 years. Do not let the mains cord hang over the edge of the table or worktop on which the appliance stands.
- The appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- The temperature of accessible surfaces may be high when the appliance operates.
- Make sure the cooking plate is clean and dry before you switch on the appliance.



- Do not cover the air outlets while the induction cooker is operating.
- Do not plug in the appliance or operate the control panel with wet hands.
- Do not touch the cooking plate after cooking, as it retains heat from the cookware.
- Metallic objects such as knives, forks, spoons and lids should not be placed on the induction cooker since they can get hot.
- Do not insert external objects such as iron wires and bolts into the appliance.
- Do not cover any part of the cooking plate with aluminum to prevent the risk of electric shock, short circuiting or fire.

Caution

- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts,

- your guarantee becomes invalid.
- Do not expose the induction cooker to high temperatures, hot gas, steam or damp heat. Do not place the induction cooker on or near an operating or still hot stove or cooker.
- Always switch off the appliance before you unplug it.
- Always unplug the appliance and let it cool down before you clean it.
- This appliance is intended for household use only. If the appliance is used improperly or for professional or semi-professional purposes or if it is not used according to the instructions in the user manual, the guarantee becomes invalid and Philips refuses any liability for damage caused.
- Place the induction cooker on a stable, horizontal and level surface and make sure

- there is at least 10cm free space around it to prevent overheating.
- Do not use the induction cooker on a gas cooker or metal plate.
- For better ventilation, do not block the air inlet and outlets while the appliance is operating, e.g. do not operate the appliance on a plastic tablecloth.
- Do not place anything between the cookware and the cooking plate.
- Do not put heavy objects on the induction cooker.
- Beware of hot steam that comes out of the cookware during cooking or when you remove the lid.
- Do not lift and move the induction cooker while it is operating.
- Never put empty cookware on the switched-on induction cooker, as this could cause the cookware to become distorted or the heating coil to become damaged.

- Do not store flammable materials and liquids near or on the induction cooker.
- Avoid hard contact between the cookware or other objects and the cooking plate.
- Always place the cookware on the cooking zone during cooking.
- Always use cookware with a bottom diameter from 12cm to 20cm during cooking.

Automatic shut-off

The appliance is equipped with automatic shut-off. It switches off automatically in the following situations:

- If cookware with a bottom diameter less than 6cm, or small objects like knives, forks, or spoons are placed on the plate during cooking.
- If the voltage is lower than 120±5V or higher than 280±5V.
- If no cookware is put on the cooking zone when the induction cooker is working for 1 minute.
- If the induction cooker has been idle for 3 hours.
- If the temperature of the central plate is higher than 300°C, or if the internal temperature of the induction cooker is too high.

Electromagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.