


Register your product and get support at
请登录以下网址并得到相应的帮助

www.philips.com/welcome

GC800 series

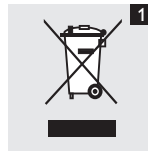

PHILIPS



www.philips.com

 100% recycled paper
100% papier recyclé
100% 循环再造纸

4239.000.8035.1

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Important

Read this user manual carefully before you use the appliance and save it for future reference.

Danger

- Never immerse the iron and the stand in water.

Warning

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Do not use the appliance if the plug, the mains cord, the stand or the iron shows visible damage, or if the appliance has been dropped or leaks.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- Never leave the appliance unattended when it is connected to the mains.
- Always unplug the appliance before you fill the water tank with water.
- This appliance can be used by children aged 8 or above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given instructions in safe use of the appliance and supervision to establish safe use and if they have been made aware of the hazards involved.
- Do not allow children to play with the appliance.
- Children are only allowed to clean and maintain the appliance under supervision.
- Keep the iron, the stand and the mains cord out of reach of children aged 8 years or below when the appliance is hot, when it is plugged in and when the appliance is cooling down after it has been unplugged.
- Do not let the mains cord come into contact with the hot soleplate of the iron.
- Only use the iron with the stand supplied.

Caution

- Only connect the appliance to an earthed wall socket.
- Check the mains cord regularly for possible damage.
- The soleplate of the iron can become extremely hot and may cause burns if touched.
- When you have finished ironing, before you clean the appliance, before you fill or empty the water tank and also when you leave the iron even for a short while: set the steam control to the 'no steam' position, put the iron on its stand and remove the mains plug from the wall socket.
- Always place and use the iron and its stand on a stable, level and horizontal surface.
- Do not put perfume, vinegar, starch, descaling agents, ironing aids or other chemicals in the water tank.
- This appliance is intended for household use only.

Electromagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

Environment

- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment (Fig. 1).

Guarantee & service

If you need service or information or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Consumer Care Centre in your country. You find its phone number in the worldwide guarantee leaflet. If there is no Consumer Care Centre in your country, go to your local Philips dealer.

简介

感谢您的惠顾，欢迎光临飞利浦！为了您能充分享受飞利浦提供的支持，请在 www.philips.com/welcome 上注册您的产品。

注意事项

使用本产品之前，请仔细阅读本使用说明书，并妥善保管以备日后参考。

危险

- 切勿将熨斗或熨斗底座浸入水中。

警告

- 在产品连接电源之前，请先检查产品所标电压与当地的供电电压是否相符。
- 如果插头、电源线、熨斗座或熨斗已经明显损坏，或产品曾坠落或出现渗漏，请勿再使用产品。
- 如果电源软线损坏，为了避免危险，必须由制造商、其维修部或类似部门的专业人员来更换。
- 在产品接通电源期间，使用者不得离开。
- 在向水箱中注水之前，务必拔下产品的电源插头。
- 本产品不适合由8岁或以上的儿童以及肢体不健全、感觉或精神上有障碍或缺乏相关经验和知识的人使用，除非有人已指导他们如何安全使用本产品、监督他们掌握安全使用方法，同时他们已经意识到相关的危险。
- 切勿让儿童玩耍本产品。
- 儿童只有在监督下才可清洁和维护本产品。
- 当产品很热、接通电源及拔下电源后冷却时，请将熨斗、熨斗座和电源线放在8岁或以下年龄的儿童接触不到的地方。
- 切勿让电源线触及高温电熨斗底板。
- 该熨斗只能使用随附的熨斗座。

注意

- 产品只能使用带接地线的插座。
- 定期检查电线，防范潜在的危害。
- 熨斗的底板会变得非常烫，如触摸喷嘴，则会导致烫伤。
- 完成熨烫后，清洁产品、注水或将水倒出水箱以及即使短时间离开熨斗之前：将蒸汽控制旋钮调至“无蒸汽”位置，将熨斗放在熨斗座上并从插座中拔下电源插头。
- 一定要在稳固、平整且水平的表面上放置和使用熨斗及熨斗座。
- 切勿将香水、醋、淀粉、除垢剂、烫衣剂或其它化学品注入水箱内。
- 本产品仅限于家用。

电磁场 (EMF)

这款飞利浦产品符合关于电磁场 (EMF) 的相关标准。据目前的科学证明，如果正确使用并按照本用户手册中的说明进行操作，本产品是安全的。

■ 环保

- 弃置产品时，请不要将其与一般生活垃圾堆放在一起；应将其交给官方指定的回收点。这样做有利于环保。(图 1)

■ 保修与服务

如果您需要服务或更多信息，或者有任何疑问，请访问飞利浦网站：www.philips.com。您也可与您所在国家/地区的飞利浦客户服务中心联系（可从全球保修卡中找到其电话号码）。如果您所在的国家/地区没有飞利浦客户服务中心，请与当地的飞利浦经销商联系。