



## ENGLISH

### Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

### Important

Read this important information carefully before you use the appliance and save it for future reference.

#### Danger

- Never vacuum up water or any other liquid. Never vacuum up flammable substances and do not vacuum up ashes until they are cold.
- Never immerse the appliance or the adapter in water or any other liquid, nor rinse it under the tap.

#### Warning

- Check if the voltage indicated on the adapter corresponds to the local mains voltage before you connect the appliance.
- Do not use the vacuum cleaner or the adapter if it is damaged.
- If the adapter is damaged, always have it replaced with one of the original type in order to avoid a hazard.
- The adapter contains a transformer. Do not cut off the adapter to replace it with another plug, as this causes a hazardous situation.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Care must be taken to ensure that children do not play with the appliance.
- Keep the appliance and its cord out of the reach of children.
- The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.

#### Caution

- Only charge the vacuum cleaner with the adapter supplied. During charging, the adapter feels warm to the touch. This is normal.
- Always switch off the vacuum cleaner after use and when you charge it.
- Never block the exhaust air openings during vacuuming.
- Always use the vacuum cleaner with the filter unit assembled.
- Make sure that the appliance is installed with the wall fixture mounted to the wall according to the instructions in the user manual.
- Be careful when you drill holes in the wall to attach the wall fixture, to avoid the risk of electric shock.

#### Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

### Ordering accessories

To buy accessories or spare parts, visit [www.shop.philips.com/service](http://www.shop.philips.com/service) or go to your Philips dealer. You can also contact the Philips Consumer Care Centre in your country (see the worldwide guarantee leaflet for contact details).

### Recycling

Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

### Guarantee and support

If you need information or support, please visit [www.philips.com/support](http://www.philips.com/support) or read the separate worldwide guarantee leaflet.

### Troubleshooting

This chapter summarises the most common problems you could encounter with your appliance. If you are unable to solve the problem with the information below, visit [www.philips.com/support](http://www.philips.com/support) for a list of frequently asked questions or contact the Philips Consumer Care Centre in your country.

Problem	Cause	Solution
The appliance does not work when I push the button.	The battery light flashes fast because the batteries are low.	To charge the batteries, insert the small plug into the socket on the appliance and insert the adapter into a wall socket.
	You cannot use the appliance because the appliance is still charging.	You have to remove the small plug from the socket on the appliance before you can switch on the appliance.

# PHILIPS

## PHILIPS

产品 : 飞利浦立式充电式吸尘器  
型号 : FC6170  
额定电压 : 220V~  
额定频率 : 50Hz  
额定输入电流 : 0.35A  
生产日期 : 请见产品本体  
产地 : 中国

制造商: 飞利浦电子香港有限公司  
香港新界沙田香港科学园科技道东五号

经销单位: 飞利浦(中国)投资有限公司  
上海市天目西路218号1602-1605  
全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005, GB4706.7-2014, GB4343.1-2009及GB17625.1-2012制造

保留备用  
发行日期: 04/07/2016

### 产品中有害物质的名称及含量

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电源适配器	○	○	○	○	×	×

本表格依据 SJ/T 11364 的规定编制。  
○: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。  
×: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。



[www.philips.com](http://www.philips.com)

100% recycled paper  
100% 循环再造纸

4222.003.4113.3

Problem	Cause	Solution
	You have to press two buttons.	First press the on/off button to switch on the appliance. Then press the MAX button to get maximum suction power.
The vacuum cleaner has a lower suction power than usual.	The filter and the cyclone are dirty.	Clean the filter and the cyclone.
	You have not connected the dust bucket, the dust separator and the cyclone properly. Incorrect assembly of these parts causes air leakage, which leads to loss of suction power.	Connect the dust bucket, the dust separator and the cyclone properly.
Dust escapes from the vacuum cleaner.	The filter is dirty.	Clean the filter.
The brush does not turn anymore.	The brush has encountered too much resistance.	Clean the brush with a pair of scissors or by hand. If you clean the roller brush by hand, pull the hairs or threads from the widest side to the narrowest side of the roller brush (see user manual).

简体中文

简介

感谢您的惠顾，欢迎光临飞利浦！为了您能充分享受飞利浦提供的支持，请在 [www.philips.com/welcome](http://www.philips.com/welcome) 上注册您的产品。

注意事项

使用产品之前，请仔细阅读本重要信息，并妥善保管以供日后参考。

危险

- 切勿吸入水或其它液体。切勿吸入易燃物质，也不要吸入未冷却的灰烬。
- 切勿将本产品或适配器浸入水或其它任何液体中，也不要将它们放在水龙头下冲洗。

警告

- 在将本产品连接电源前，务必检查当地的电压是否与电源适配器所标电压一致。
- 如果吸尘器或充电器已损坏，请不要使用。
- 如果适配器已损坏，则务必更换原装型号适配器，以免发生危险。
- 电源适配器内含有一个变压器。切勿自行更换插头，否则将导致严重后果。
- 产品不打算由有肢体、感官或精神能力缺陷或缺少使用经验和知识的人（包括儿童）使用，除非有负责他们安全的人对他们进行与产品使用有关的监督或指导。
- 应照看好儿童，确保他们不玩耍本产品
- 将产品及其线缆放在儿童接触不到的地方。
- 清洁或维护产品之前，必须先从插座拔掉插头。

注意

- 只能用随附的适配器为吸尘器充电。充电期间，适配器会有微热，这是正常现象。
- 使用后和充电时，请务必关闭吸尘器。
- 吸尘时切勿阻塞排气口。
- 使用吸尘器时，请确保装上过滤部件。
- 请确保按照用户手册中的说明，用壁装装置将产品安装到墙上。

- 请注意，在墙上钻孔安装壁装装置时，请避免触电风险。

电磁场 (EMF)

本飞利浦产品符合所有有关暴露于电磁场的适用标准和法规。

订购附件

要购买附件和备件，请访问 [www.shop.philips.com/service](http://www.shop.philips.com/service) 或 请联系飞利浦经销商。您也可以联系您所在国家/地区的飞利浦客户服务中心（联系详情，请参阅全球保修卡）。

回收

弃置产品时，请不要将其与一般生活垃圾堆放在一起；应将其交给官方指定的回收点。这样做有利于环保。

保修和支持

如果您需要信息或支持，请访问 [www.philips.com/support](http://www.philips.com/support) 或阅读单独的全球保修卡。

故障种类和处理方法

本章归纳了您在使用本产品时最常见的一些问题。如果您无法根据以下信息解决问题，请访问 [www.philips.com/support](http://www.philips.com/support) 查阅常见问题列表，或联系您所在国家/地区的飞利浦客户服务中心。

问题	原因	解决方法
按下按钮时，产品不工作。	由于电池电量低，电池指示灯快速闪烁。	要为电池充电，请将小插头插入产品的电源插孔，然后将适配器插入插座。
	您不能使用正在充电的产品。	您必须将小插头从产品的电源插孔拔出，然后才能开启产品。
	您必须按两个按钮。	首先按开/关按钮开启产品。然后按 MAX（最大）按钮获得最大吸力。
真空吸尘器的吸力比往常要小。	过滤网和旋风滤网不干净。	清洁过滤网和旋风滤网。
	您没有正确连接集尘桶、灰尘分离器 and 旋风滤网。这些部件安装不正确会导致空气泄露，致使吸力损失。	正确连接集尘桶、灰尘分离器和旋风滤网。
尘土从吸尘器中溢出。	过滤网变脏。	清洁过滤网。
滚刷不再旋转。	滚刷遇到阻力太大。	用剪刀或用手清洁滚刷。如果用手清洁滚刷，请将毛发或线头从滚刷的最宽侧拉动到最窄侧（请参见用户手册）。