

Warranty and Service

For any information or problem, contact your local Philips dealer or authorized service center. For a list of authorized Philips service centers visit: www.philips.co.in or contact our consumer care at 1800 102 2929 (Toll free) or 1860 180 1111 (standard call rates apply)

Warranty Card

This apparatus is covered under warranty against any defect due to defective material or workmanship for TWO YEARS from the date of purchase. Should a defect develop during the period of warranty, Philips Domestic Appliances India Ltd. undertakes to repair the apparatus FREE OF CHARGE through the dealer from whom it has been purchased or at any of the Philips authorized Service Centres.

The warranty is not valid in case:

- 1. Apparatus is not used according to user manual.
- 2. Defects caused by improper or reckless use.
- 3. Repairs done by persons other than Philips Authorized service centre.
- 4. Modifications of any nature made in the apparatus.
- 5. Tampered serial number.
- 6. Incomplete warranty card after purchase.
- 7. Product if used for commercial purpose (i.e. other than domestic use).
- 8. Usage of parts not recommended by Philips or those made by other manufacturers.

All consumables and parts susceptible to normal wear and tear are not covered under warranty.

Week/S.No.
Date of Purchase _____

Dealer's Name: _____

Dealer's Stamp: _____

Customer's Name and Address: _____

Model No.: _____

Dealer's Signature: _____



www.philips.co.in

HL7510/00



PHILIPS

EN Mixer Grinder

Please read the guidelines provided in this DFU on Important Instructions, Appliance Usage & Warranty before using the product.

 
Always there to help

Questions? Contact Philips
Register your product for further support at www.philips.co.in
Or Call 1800 102 2929 (Toll Free)
1860 180 1111 "Standard call rates apply"

In case these measures do not work, contact the nearest PHILIPS service center or call at customer care numbers. 1800 102 2929 (Toll free) or 1860 180 1111 "standard call rates apply"

No.	Problem	Cause	Solution
1	Appliance does not work.	No electricity supply.	Ensure that the plug is plugged in well.
2	Appliance suddenly stops working while in use.	The appliance is equipped with an 'Over Load Protector' (OLP) switch. If appliance overheats, it automatically cuts off power supply.	At the bottom of base unit there is a red coloured switch (OLP). Reset OLP by pressing it. Put plug back into wall socket and switch on appliance again (see heading 'Overload Protection').
3	Blade unit is blocked.	The quantity being processed is probably too large.	Switch off appliance. Remove ingredients that are blocking the blade unit. Refer inside for Max. jar capacities.
4	Base unit gives an unpleasant smell during first few times of use.	This is normal for the first few times.	If appliance continues to smell after using a few times: Ensure that jars are clean and there are no ingredients stuck inside it. Ensure that appliance has been assembled correctly.
5	Appliance makes a lot of noise.	Jar lid has not been properly placed. Jars have not been properly locked.	Make sure lid has been properly and tightly locked. Make sure jar has been properly and tightly locked.
6	There are fumes from the appliance.	Appliance may have been used for too long.	Switch off appliance and let it cool for 60 minutes.
7	Unsatisfactory grinding/ blending/ mixing performance.	Incorrect jar selection. Ingredients overloading in jar.	Use correct jar as per the application. Refer inside for Max. jar capacities.
		Large size of ingredients.	Cut ingredients into appropriate size.
		Chutney not grinding well.	inch 5-7 times to powder ingredients. Add water as required and grind on speed 3.
		Gasket has not been fit properly.	Unplug appliance. Remove jar from base unit. Remove lid to check if gasket has been assembled correctly.
		Leakage from jar lid.	

Trouble shooting

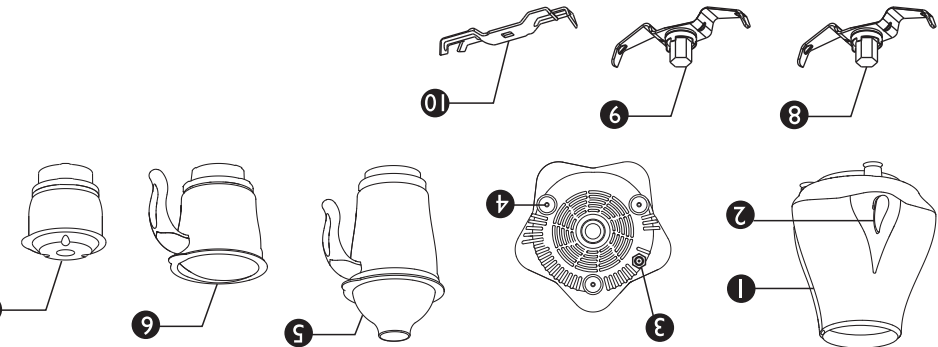

- 1. Base unit: the motor, speed switch, mains cord and overload protector switch.
- 2. Speed selector knob: for different speed adjustment.
- 3. Overload Protection switch: Red coloured switch located below the base of the unit
- 4. Anti slip rubber feet
- 5. Wet grinding jar: for liquidizing and blending.
- 6. Dry grinding jar: for dry grinding.
- 7. Chutney grinding jar: for small quantity grinding such as chutney & pepper.
- 8. Stainless steel wet grinding blade: detachable. Best for wet grinding applications like tomato onion paste, vegetable / fruit puree, rice and dal batter.
- 9. Stainless steel dry grinding blade: detachable. Best for dry grinding applications like dry masalas, rice and dal powder.
- 10. Stainless steel chutney grinding blade: fixed. Best for making chutneys, pastes in small quantities and lesser quantities of masalas.

General description

 
- Philips brings to you a range of mixer grinder with high quality steel jars. Please note accessories for your model. HL7510/00 - wet, dry and chutney jar.
- Technical specifications
- Model No. : HL7510/00
 - Voltage : 230V~50Hz
 - Wattage : 550W max.
 - Motor : Universal motor
 - No load at max. speed 3 - 18000 rpm (approx.)
 - With load at max. speed 3 - 10500 rpm (approx.)
 - Speed control : Rotary switch with 3 speed and incher
 - Rating : Ordinary Total rated ON time 30 minutes (max). Continuous ON for 5 minutes (max). and Off for 2 minutes (min.). Rest time 45 minutes

Introduction


Important instructions

We recommend that you read the following instructions carefully, before using the appliance.


1. Check if the voltage indicated on the base of the appliance, corresponds to the local electrical mains voltage before connecting the appliance.

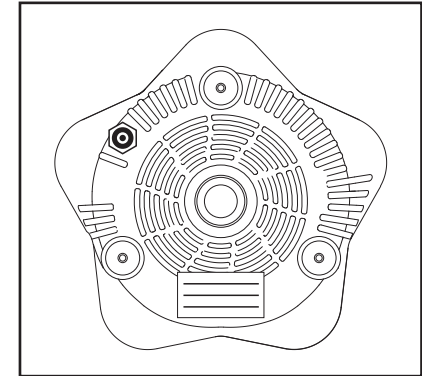

 
2. Do not use the appliance when the mains cord, the plug or other components are damaged. Only the company or a service centre authorized by Philips must replace it.

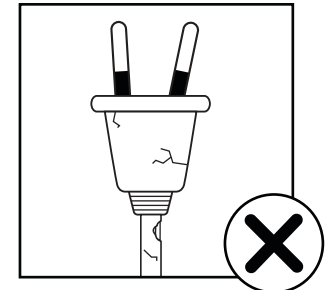

 
3. Always unplug the appliance after use.

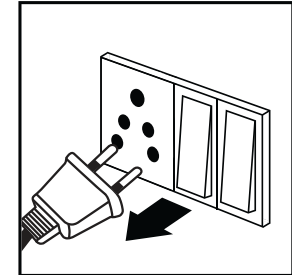

 
4. Never immerse the motor unit in water.

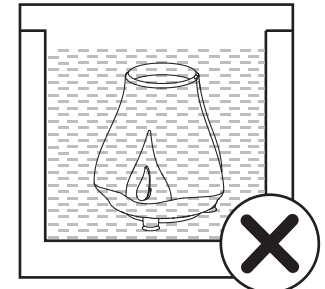

 
5. Always unplug the appliance before reaching into the jar with your fingers or an object e.g. spatula.

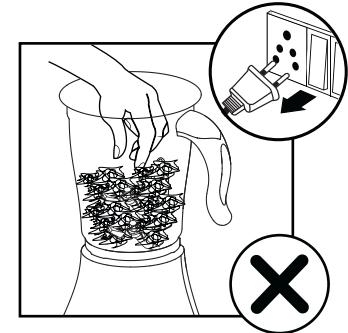

 
6. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

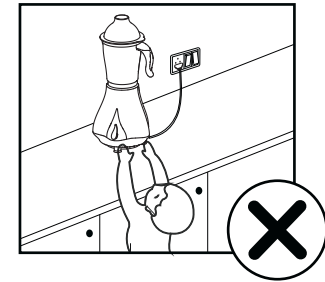

 
7. Always ensure that speed selector knob is at '0' position before fixing accessories.

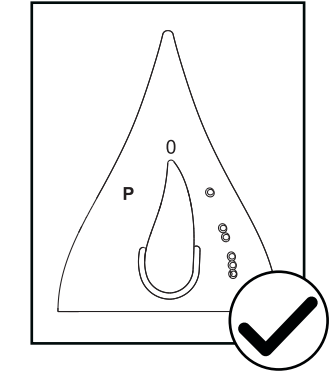

 
8. Do not operate the mixer without the lid in place or with an empty jar.

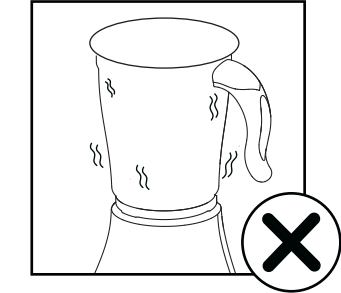

 
9. Handle the blades carefully. Wash them under running water and do not rub by hand.

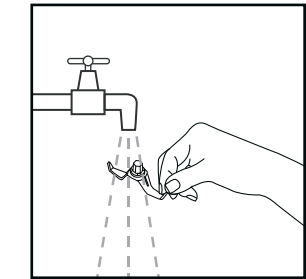

 10. Do not use mixer on wet surface.

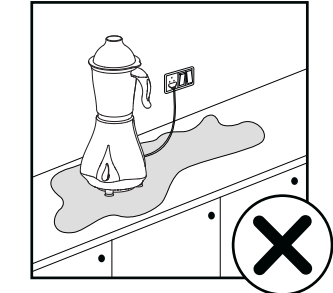

 11. Keep mixer away from hot gas burner, electric hot plate or similar appliances.

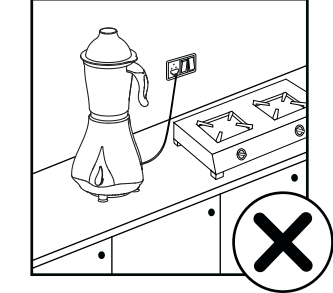

12. This appliance is strictly for household use.

13. Do not drop the main unit or jars.

14. Never use accessories or parts not recommended by Philips or those made by other manufacturers, else the warranty will become invalid.

 
15. Do not use the jars as storage containers.

16. Do not leave unit unattended while in operation.

17. It is not advisable to run the mixer continuously for more than 30 minutes.


Using the product

1. How to fit jar to base unit
After fitting the blades, carefully insert the jar on top of the base unit. Ensure that lock of the jar fits the slot of the base unit. Rotate the jar clockwise until it locks.

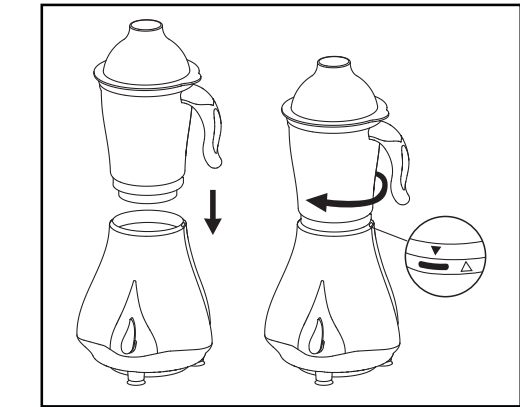


Operation

 
1. Before the first use Thoroughly clean parts that come in contact with food.
2. Preparation for use Cool the hot ingredients before putting in jar.

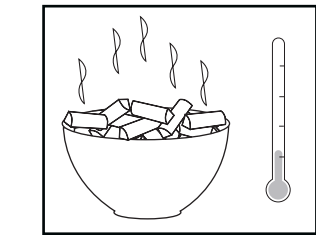

 
Cut large ingredients into small pieces of approx 2cm before processing.

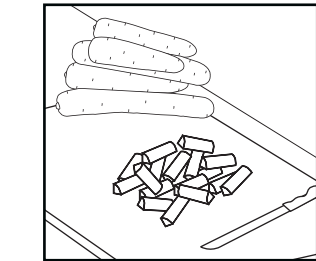

 Check speed selector knob is at '0'
Connect mains plug to wall socket after fixing jar. Switch on main supply. Turn speed selector to required position and speed. After operation, turn selector knob to '0' and check. Repeat till desired results are obtained.

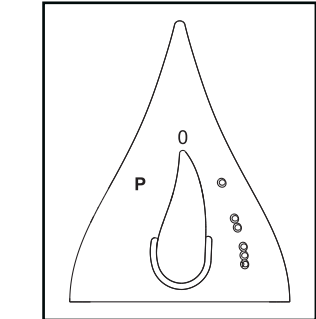


 For blending/liquidizing/pureeing, use 'pulse' on speed knob. This will activate the whipping till you release the button.

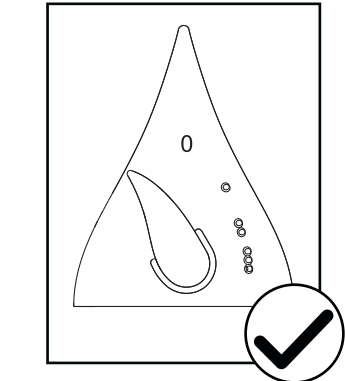


Overload protection

 Mixer is fitted with an automatic power shut off mechanism to avoid motor burning due to overloading. If mixer stops due to overloading, the red knob at the bottom will come out. Switch off the mixer. Remove excess load from jar. Wait for 2-3 minutes. Press red button and start mixer again.

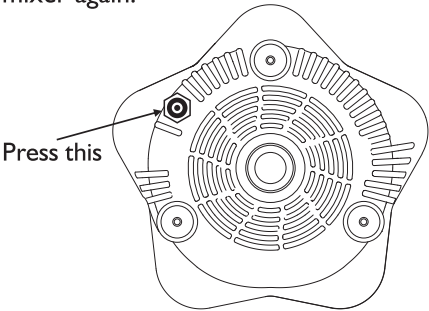

Cleaning and maintenance

 1. Remove main plug from wall socket. Do not immerse base unit in water.
2. Wipe base unit with a damp cloth and non-abrasive liquid cleaner.
3. Disassemble other parts after use. Wash them in soapy water, rinse with clean water and dry thoroughly. Do not wash in a dishwasher. Cleaning is easiest done immediately after use.
4. Take soapy water in jar and assemble it on base unit. Pulse 5-6 times and wash the jar.
5. Store mixer grinder standing on its heel in a safe and dry place.

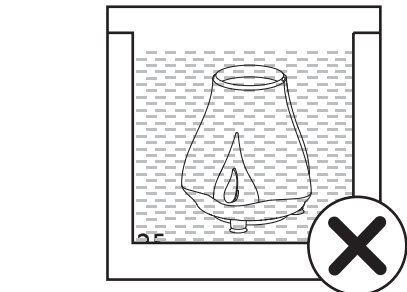

Standard Recipes

Recipe	Quantity	Procedure	Time
Urad dal	100g dal+225ml water	Soak it for 6-8 hrs. Add 45ml water	1.5 min
Garam Masala	75g cloves + 75g cinnamon + 75g black pepper + 10g cardamom	Heat ingredients in microwave at 600W for 1+1+1 minute. Toss ingredients between each heating	Run machine at speeds 'I' for 15sec + 'II' for 15sec + 'III' for 30sec + pause + 'III' for 30sec + pause + 'III' for 30sec (Toss ingredients during each interval)
Tomato Onions paste	100g tomatoes + 150g onions	Cut tomatoes and onions into 4s	Whip ingredients 5 to 6 times. Run machine at speeds 'I' for 10sec + 'II' for 10sec + 'III' for 15sec + pause + 'III' for 15sec (Toss ingredients during each interval)
Banana Milkshake	300ml milk + 100g banana + 3tbsp sugar	Cut banana and it to the milk along with sugar	Run machine at speed 'I' for 5sec + 'II' for 15 sec + 'III' for 30sec
Ginger garlic paste	50g ginger + 50g garlic	Peel ginger and garlic. Cut ginger into linch pieces	Run machine at speeds 'I' for 15sec + 'II' for 15sec + 'III' for 15sec + pause + 'III' for 30sec (Toss ingredients during each interval)

For wet/dry/chutney grinding use speed 'I' and speed 'II' for 10-15 seconds, thereafter use speed 'III' till you finish grinding. Remove the plug from the socket after use.

Maximum jar capacities

No.	Type of jar	Capacity	Wet capacity (rated) Max.	Dry capacity (rated) Max.
1	Wet grinding jar	1.2 L	0.5 L	0.6 L
2	Dry grinding jar	0.7 L	0.3 L	0.4 L
3	Chutney grinding jar	0.3 L	—	0.17 L