



ENGLISH

Important safety information

Read this important information carefully before you use the appliance and its accessories and save it for future reference. The accessories supplied may vary for different products.

Danger

- Never vacuum up water or any other liquid. Never vacuum up flammable substances and do not vacuum up ashes until they are cold.
- Never immerse the appliance or the adapter in water or any other liquid, nor rinse it under the tap.

Warning

- Check if the voltage indicated on the adapter corresponds to the local mains voltage before you connect the appliance.
- Always check the appliance and adapter before use. Do not use the appliance or the adapter if it is damaged. Always replace a damaged part with one of the original type.
- Do not use the appliance or the adapter if it is damaged.
- If the adapter is damaged, always have it replaced with one of the original type in order to avoid a hazard.
- Do not open the appliance to replace the rechargeable battery.
- The adapter contains a transformer. Do not cut off the adapter to replace it with another plug, as this causes a hazardous situation.
- To prevent damage, never put ethereal oils or similar substances in the water tank or let the appliance pick them up.
- Do not lift or tilt the nozzle when the water tank is assembled and full, as water may spray out of the water tank.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep the appliance and its cord out of the reach of children.
- The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.

Caution

- Only charge the appliance with the adapter supplied. During charging, the adapter feels warm to the touch. This is normal.
- Do not plug in, unplug or operate the appliance with wet hands.
- Do not unplug the appliance by pulling at the cord. Always unplug by pulling the small plug (Fig. 1) out of the appliance and the adapter out of the wall socket (Fig. 2).
- Always switch off the appliance after use and when you charge it.
- Never block the exhaust air openings during vacuuming.
- Always use the vacuum cleaner with the filter unit assembled.
- Make sure that the appliance is installed with the wall fixture mounted to the wall according to the instructions in the user manual.
- Be careful when you drill holes in the wall to attach the wall fixture, to avoid risk of electric shock.
- Maximum noise level: Le = 85 dB(A)

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Ordering accessories

To buy accessories or spare parts, visit www.shop.philips.com/service or go to your local Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

Warranty and support

If you need information or support, please visit www.philips.com/support or read the international warranty leaflet.

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- This product contains a built-in rechargeable battery which shall not be disposed of with normal household waste. Please take your product to an official collection point or a Philips service center to have a professional remove the rechargeable battery.
- Follow your country's rules for the separate collection of electrical and electronic products and rechargeable batteries. Correct disposal helps prevent negative consequences for the environment and human health.

Removing the rechargeable battery

Only remove the rechargeable battery when you discard the product. Before you remove the battery, make sure that the product is disconnected from the wall socket and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the product and when you dispose of the rechargeable battery.

To remove the rechargeable battery, follow the instructions below.

- 1 Let the appliance run until it stops.
- 2 Remove the dust container and the cyclone from the handheld vacuum cleaner (Fig. 3).
- 3 Undo two screws on the inside of the handheld vacuum cleaner (Fig. 4).
- 4 Turn the handheld vacuum cleaner and remove four screws on the other side (Fig. 5).
- 5 Remove the back panel from the handheld vacuum cleaner (Fig. 6).
- 6 Insert a screwdriver and push it down to remove the panel on the left side of the appliance (Fig. 7).
- 7 Remove two screws from the bottom (Fig. 8).
- 8 Remove four screws on the left side of the appliance (Fig. 9).
- 9 Remove the left housing part (Fig. 10).
- 10 Take out the rechargeable battery and cut the wires connected to it one by one (Fig. 11).

Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Center in your country.

Problem

Possible cause

Solution

| | | |
|--|--|---|
| The appliance does not work when I push the button. | The battery light flashes fast because the batteries are low. | To charge the batteries, insert the small plug into the socket and insert the adapter into a wall socket. |
| You cannot use the appliance because the appliance is still charging. | You have to remove the small plug from the socket on the appliance before you can switch on the appliance. | |
| You have to press two buttons. | First press the on/off button to switch on the appliance. Then press the MAX button to get maximum suction power. | |
| The appliance has a lower suction power than usual. | Clean the filter and the cyclone. | |
| You have not connected the dust bucket, the dust separator and the cyclone properly. Incorrect assembly of these parts causes air leakage, which leads to loss of suction power. | Connect the dust bucket, the dust separator and the cyclone properly. | |
| Dust escapes from the appliance. | The filter is dirty. | Clean the filter. |
| The brush does not turn anymore. | Clean the brush with a pair of scissors or by hand. If you clean the roller brush by hand, pull the hairs or threads from the widest side to the narrowest side of the roller brush (see user manual). | |
| You switched on the appliance by pressing the on button on the handheld vacuum cleaner. | Switch off the appliance by pressing the on button on the handheld vacuum cleaner again. Then switch it on again by pressing the on button on the stick. | |

BAHASA MELAYU

Maklumat keselamatan penting

Baca maklumat penting ini dengan teliti sebelum anda menggunakan perkakas dan aksesori yang simpan dan simpan untuk rujukan pada masa hadapan. Aksesori yang dibekalkan mungkin berbeza-beza untuk berlainan produk.

Bahaya

- Jangan memvakum air atau sebarang cecair lain. Jangan sekali-kali sedut bahan mudah bakar dan jangan sedut abu selagi itu belum sejuk.
- Jangan sekali-kali merendam perkakas atau penyesuai dalam air atau sebarang cecair lain, atau membilasnya di bawah paip.

Amaran

- Pastikan bahwaan woltan yang dinyatakan pada penyesuai adalah berpadanan dengan voltan seserus kuasa tempatan anda sebelum anda menyambungkan perkakas ini.
- Pastikan anda memerlukan perkakas dan penyesuai setiap kali sebelum menyambungkanannya. Jangan gunakan perkakas atau penyesuai sekiranya rosak. Bahagian yang rosak hendaklah digantikan dengan jenis yang asli sahaja.
- Jangan gunakan perkakas atau penyesuai sekiranya rosak.
- Jika penyesuai rosak, sentiasa gantikan dengan jenis asli bagi mengelakkan bahaya.
- Jangan buka perkakas tersebut untuk menggantikan bateri boleh cas semula.

- Penyesuai mengandungi pengubah. Jangan potong penyesuai untuk menggantikannya dengan plag lain, kerana ini membawa kepada situasi berbahaya.

- Untuk mengelakkan kerosakan, jangan masukkan minyak bereter atau bahan yang serupa dalam tangki air atau membarkan perkakas ini.
- Jangan angkat atau condongkan muncung apabila tangki air dipasang dan pernah, kerana air mungkin akan tersemur keluar daripada tangki air.
- Perkakas ini tidak dimaksudkan untuk digunakan oleh orang (termasuk kanak-kanak) yang kurang upaya dari segi fizikal, deria atau mental, atau kurang berpengalaman atau pengetahuan, kecuali mereka telah dibenarkan oleh arahan dan penggunaan perkakas ini dengan penggunaan perkakas ini oleh orang yang bertanggungjawab atas keselamatan mereka.
- Kanak-kanak hendaklah diawasi untuk memastikan bahawa mereka tidak bermain dengan perkakas ini.
- Jauhkan perkakas dan kordnya dari capaian kanak-kanak.
- Cabut palam daripada soket sesasul sebelum membersihkan atau menyelenggarakan perkakas.

Awas

- Hanya cas perkakas dengan penyesuai yang dibekalkan. Semasa mengecas, penyesuai perlu tahan panas untuk disentuh. Ini perkara biasa.
- Jangan pasang palam, cabut palam atau kendalikan perkakas dengan tangan yang basah.
- Jangan cabut palam perkakas dengan menarik kord. Sentiasa cabut palam dengan menarik palam kecil (Raj. 1) keluar daripada perkakas dan penyesuai keluar daripada soket dinding (Raj. 2).
- Sentiasa matikan perkakas selepas menggunakanannya dan apabila anda mengelakkan.
- Jangan sekali-kali menghalang buka udara ekzos semasa memvakum.
- Selalu gunakan pembersih vakum dengan unit turas yang dipasang.
- Pastikan bahawa perkakas ini dipasang dengan lekat dinding yang dilekapkan pada dinding, mengikut arahan dalam manual pengguna.
- Untuk mengelakkan risiko kejutan elektrik, berhati-hatilah semasa menggerudi lubang pada dinding untuk memasang lekat dinding ini.
- Paras hinggap maksimum: Le = 85 dB(A)

Medan elektromagnet (EMF)

Perkakas Philips ini mematuhi semua piawaian dan peraturan yang berkaitan dengan pendendaan kepada medan elektromagnet.

Medan elektromagnet (EMF)

Perkakas Philips ini mematuhi semua piawaian dan peraturan yang berkaitan dengan pendendaan kepada medan elektromagnet.

Memesan aksesi

Untuk membeli aksesi atau alat ganti, lawati www.shop.philips.com/service atau pergi ke penjaja Philips anda. Anda juga boleh menghubungi Pusat Penjagaan Pengguna Philips di negara anda (lihat risalah jaminan antarabangsa seluruh dunia untuk maklumat perhubungan).

Jaminan dan sokongan

Jika anda memerlukan maklumat atau sokongan, sila lawati www.philips.com/support atau baca risalah jaminan antarabangsa.

Mengatari semula

- Jangan buang produk bersama sampah rumah biasa di akhir hayatnya. Sebaliknya buang ke pusat pungutan rasmii untuk dikitar semula. Dengan berbuat demikian, anda membantu untuk memelihara persekitaran.
- Produk ini mengandungi bateri boleh cas semula bina dalam yang tidak harus dibuang bersama sampah rumah biasa. Kami menasihatkan anda untuk membawa produk anda ke pusat pungutan rasmii atau pusat khidmat Philips supaya bateri boleh cas semula itu dilikeluarkan oleh seorang profesional.
- Iktu peraturan negara anda bagi pemungutan produk elektrik dan elektronik serta bateri boleh cas semula secara berasingan. Pembuangan secara betul membantu mengelakkan akibat negatif bagi kesihatan manusia dan persekitaran.

Mengeluarkan bateri boleh cas semula

Hanya keluar bateri boleh cas semula apabila anda membuat produk ini. Sebelum anda mengeluarkan bateri, pastikan produk dicabut daripada soket dinding dan bateri kosong sepenuhnya.

Lakukan sebarang langkah berjaya-jaya yang perlu apabila anda mengelakkan akibat negatif bagi kesihatan manusia dan mengelakkan akibat boleh cas semula

Untuk mengeluarkan bateri boleh cas semula, ikut arahan di bawah.

- 1 Biarkan perkakas berjalan sehingga berhenti.
- 2 Tanggalkan bekas habuk dan silikon daripada pembersih (Raj. 3) vakum kendalian tangan.
- 3 Tanggalkan dua skru pada bahagian dalam pembersih (Raj. 4) vakum kendalian tangan.
- 4 Putar pembersih vakum kendalian tangan dan tanggalkan empat skru pada sebelah (Raj. 5) yang satu lagi.
- 5 Tanggalkan panel belakang daripada pembersih (Raj. 6) vakum kendalian tangan.
- 6 Maklumat pemutur skru dan tekan ke bawah untuk menanggalkan panel di bahagian kiri perkakas (Raj. 7).
- 7 Tanggalkan dua skru dan bahagian bawah (Raj. 8).
- 8 Tanggalkan empat skru di bahagian kiri perkakas (Raj. 9).
- 9 Tanggalkan bahagian (Raj. 10) perubahan sebelah kiri.

- 10 Keluar bateri boleh cas semula dan potong dawai yang bersambung dengan bateri boleh cas semula itu satu demi satu (Raj. 11).

Removing the rechargeable battery

Only remove the rechargeable battery when you discard the product. Before you remove the battery, make sure that the product is disconnected from the wall socket and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the product and when you dispose of the rechargeable battery.

To remove the rechargeable battery, follow the instructions below.

- 1 Let the appliance run until it stops.
- 2 Remove the dust container and the cyclone from the handheld vacuum cleaner (Fig. 3).
- 3 Undo two screws on the inside of the handheld vacuum cleaner (Fig. 4).
- 4 Turn the handheld vacuum cleaner and remove four screws on the other side (Fig. 5).
- 5 Remove the back panel from the handheld vacuum cleaner (Fig. 6).
- 6 Insert a screwdriver and push it down to remove the panel on the left side of the appliance (Fig. 7).
- 7 Remove two screws from the bottom (Fig. 8).
- 8 Remove four screws on the left side of the appliance (Fig. 9).
- 9 Remove the left housing part (Fig. 10).
- 10 Take out the rechargeable battery and cut the wires connected to it one by one (Fig. 11).

Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Center in your country.

Problem

Possible cause

Solution

| | | |
|--|--|---|
| The appliance does not work when I push the button. | The battery light flashes fast because the batteries are low. | To charge the batteries, insert the small plug into the socket and insert the adapter into a wall socket. |
| You cannot use the appliance because the appliance is still charging. | You have to remove the small plug from the socket on the appliance before you can switch on the appliance. | |
| You have to press two buttons. | First press the on/off button to switch on the appliance. Then press the MAX button to get maximum suction power. | |
| The appliance has a lower suction power than usual. | Clean the filter and the cyclone. | |
| You have not connected the dust bucket, the dust separator and the cyclone properly. Incorrect assembly of these parts causes air leakage, which leads to loss of suction power. | Connect the dust bucket, the dust separator and the cyclone properly. | |
| Dust escapes from the appliance. | The filter is dirty. | Clean the filter. |
| The brush does not turn anymore. | Clean the brush with a pair of scissors or by hand. If you clean the roller brush by hand, pull the hairs or threads from the widest side to the narrowest side of the roller brush (see user manual). | |
| You switched on the appliance by pressing the on button on the handheld vacuum cleaner. | Switch off the appliance by pressing the on button on the handheld vacuum cleaner again. Then switch it on again by pressing the on button on the stick. | |

ESPAÑOL

Información de seguridad importante

Antes de utilizar el aparato y sus accesorios, lea atentamente esta información importante y consérvela para si necesita consultarla en el futuro. Los accesorios suministrados pueden variar según los diferentes productos.

Danger

- No aspire agua ni ningún otro líquido. No aspire nunca sustancias inflamables ni cenizas hasta que estén frías.
- No sumerja el aparato ni el adaptador en agua ni en ningún otro líquido; tampoco los enjuague bajo el grifo.

Advertencia

- Antes de encender el aparato, compruebe si el voltaje indicado en el adaptador se corresponde con el voltaje de red local.
- Compruebe siempre el aparato y el adaptador antes de utilizarlo. No utilice el aparato ni el adaptador si están dañados. Sustituya las piezas dañadas por repuestos originales.
- Si el adaptador está dañ

