



ZH-S 用户手册 3 EN User manual 25



目录

1	重要事项 安全	4 4
2	您的空气净化器 产品概述 控件概览	6 6 7
3	使用入门 安装过滤网 Wi-Fi 连接	8 8 9
4	使用空气净化器 了解空气质量指示灯 打开和关闭 更改自动模式设置 更改风扇速度 使用灯光开/关功能 设置童锁	10 10 10 11 12 13 13
5	清洁 清洁计划 清洁空气净化器的机身 清洁出风口盖 清洁空气质量传感器 清洁预过滤网	14 14 14 14 15 15
6	更换过滤网 过滤网更换指示灯 更换滤网 过滤网强制重置 更换过滤网类型	17 17 17 18 19

7	存放	20
8	故障排除	21
9	保修与服务 订购部件或附件	23 23
10	注意事项 电磁场 (EMF) 回收	24 24 24
	注意事项	24

御体中な

1 重要事项

安全

使用本产品之前,请仔细阅读 本用户手册,并妥善保管以备 日后参考。

危险

- 切勿让水或任何其它液体或 易燃性清洁剂进入产品,以 免发生触电和/或火灾。
- 切勿用水或任何其它液体或 (易燃性)清洁剂来清洁产 品,以免发生触电和/或 火灾。
- 切勿在产品周围喷洒杀虫剂 或香水等任何可燃材料。

警告

- 在将产品连接电源之前,请
 先检查产品所标电压与当地
 的供电电压是否相符。
- 如果电源软线损坏,为避免 危险,必须由制造厂或其维 修部或类似的专职人员来 更换。
- 如果插头、电源线或产品本 身受损,请勿再使用本 产品。
- 本产品适合由8岁或以上年 龄的儿童以及肢体不健全、
 感觉或精神上有障碍或缺乏
 相关经验和知识的人士使

用,但前提是有人对他们使 用本产品进行监督或指导, 以确保他们安全使用,并且 让他们明白相关的危害。不 得让儿童玩耍本产品。请勿 让儿童在无人监督的情况下 清洁和保养产品。

- 请勿堵塞进风和出风口,例
 如不要将物体放置在出风口
 上或进风口前方。
- 确保异物未通过出风口进入 产品内部。

小心

- 本产品不能替代正常通风、
 日常吸尘或者在烹饪时使用
 的抽油烟机。
- 如果连接产品的电源插座接 触不良,则产品的插头可能 会变得很热。确保所连接的 电源插座接触良好。
- 一定要在干燥、稳固、平整 且水平的表面上放置和使用 本产品。
- 产品的后侧及两侧均要留出
 至少 20 厘米的空间,产品
 上方至少要留出 30 厘米的
 空间。
- 切勿在本产品上放置任何物品。
- 请勿坐在或站在产品上面。
 坐在或站在产品上面可能导
 致潜在的人身伤害。
- 切勿将产品直接放在空调下 方,以防冷凝水滴到产品中。

4 ZH-S

- 打开产品电源之前,务必确 保已经正确安装所有过 滤网。
- 只能使用飞利浦专门为本产 品设计的原装过滤网。切勿 使用任何其它过滤网。
- 燃烧滤网可能会造成不可逆 转的人体危害和/或危及其 他生命。请勿将滤网用作燃 料或类似用途。
- 请勿用硬物敲击本产品(尤 其是进风口和出风口)。
- 始终通过产品背面的手柄提 起或移动产品。
- 请勿将手指或物体插入出风口或进风口,以防止产品出现物理损坏或发生故障。
- 当您使用室内喷雾式驱虫剂 或在充满油污、易燃气体或 化学烟雾的地方时,请勿使 用本产品。
- 请勿在气体用具、加热装置 或火炉附近使用本产品。
- 使用之后和清洁产品或执行 其他维护或更换滤网之前, 请务必先拔掉产品的电源 插头。
- 请勿在温度变化较大的房间 内使用本产品,因为这可能 导致产品内部的冷凝。
- 为防止产生干扰,产品与使用无线电波的电器(例如电视机、收音机和无线电控制时钟)之间至少应保持2米距离。

- 本产品仅限于家用并在正常 运行条件下使用。
- 请勿在潮湿环境或高温环境
 中(例如浴室、卫生间或厨
 房)使用本产品。
- 本产品不能去除一氧化碳
 (CO) 或氡 (Rn),因此在发生
 燃烧和危险化学品事故时, 不能作为安全设备使用。
- 如果需要移动产品,请先断 开产品的电源。
- 请勿通过拉扯电源线来移动 产品。
- 更换滤网后,请务必清洗 双手。

2 您的空气净化器

感谢您的惠顾,欢迎光临飞利浦! 为了您能充分享受飞利浦提供的支持,请在以下网站注册您的产品: www.philips.com/welcome。

产品概述



型号	过滤器
FY8197	纳米级劲护滤网 专业S3型*

*在下文统称为"空气净化滤网"。

控件概览 控制按钮



显示面板



控制按钮

U	电源开/关按钮	۲	风速按钮
`ď	光线开/关按钮	ło	童锁按钮
	自动模式按钮	Ð	过滤网重置按钮

显示面板

PM2.5	PM2.5 显示		预滤网清洁提醒
Gas	气态污染物读数		过滤网更换提醒
IAI	室内过敏原指数	~	速度1
C	睡眠模式	%	速度 2
PM2.5	去污染原模式	%	速度 3
ê	去甲醛模式	٢	劲速
*	去过敏原模式	(((•	Wi-Fi 指示灯
	童锁指示灯		

ZH-S 7

3 使用入门

安装过滤网

在使用本产品之前,先拆掉过滤网的所 有包装。请按以下所述拆掉过滤网的包 装,然后将其放入产品中:

┣ 注意

- 确保先从电源插座上拔下空气净化 器的插头,然后再安装过滤网。
- 产品的两侧各有一组滤网。每侧均 配备一个预过滤网和一个空气净化 滤网。
- •确保先在产品内放入空气净化滤 网,然后再放置预过滤网。
- 确保在安装过滤网时带拉片的一面 朝向您。
- 1 拆掉空气净化滤网的所有包装材料。



2 拉出侧面板的上半部分以将其从产品上卸下。



3 向下按两个固定夹,然后朝您自己的方向拉动预过滤网。



4 将无包装的空气净化滤网放回产 品内。



5 将预过滤网放回产品内部。





• 确保带两个固定夹的一面朝向自 己,并确保预过滤网的所有挂钩均 已正确连接到空气净化器上。 6 要重新安装侧面板,请先将面板安装到产品的底部(1)。然后,朝产品机身方向轻推面板(2)。



7 重复上述步骤,组装产品另一侧的 滤网。

Wi-Fi 连接

首次设置 Wi-Fi 连接

 请从苹果应用程序商店或安卓应用 市场下载并安装 "飞利浦智净家" 应用程序。



- 2 将空气净化器的插头插入电源插座, 然后轻触(り以打开空气净化器。
 - ➡ Wi-Fi 指示灯 令 初次亮起时呈 橙色闪烁。
- 3 确保您的智能设备已成功连接至您 的 Wi-Fi 网络。
- 4 启动"飞利浦智净家"应用程序。 点击屏幕上方的"连接新设备"或 者"+"按钮,按照屏幕上的说明 将空气净化器连接至您的网络。
- 5 配对和连接成功后,Wi-Fi指示灯 令将呈白色亮起。如果配对未成功,请参阅故障排除部分,或访问 "飞利浦智净家"应用程序中的帮助部分以获得大量最新的故障排除 技巧。

二 注意

- •此说明仅在首次设置空气净化器时 有效。如果网络已更改,或需要重 新执行设置,请参阅第 9 页的"重 置 Wi-Fi 连接"部分。
- 如果您想要将多个空气净化器连接 到您的智能手机或者平板电脑,则 必须逐一执行这些步骤。先完成对 一个空气净化器的设置,然后再打 开其他空气净化器。
- 确保智能手机或者平板电脑与空气 净化器之间的距离小于 10 米,且 两者之间不存在任何障碍物。
- 此应用程序支持 Android 和 iOS 的最新版本。请查看
 www.philips.com/cleanhome 了 解与受支持的操作系统和设备有关的最新更新。

重置 Wi-Fi 连接

| 注意

- 当净化器连接的默认网络发生变化
 时,即会应用此操作。
- 默认网络已更改时,重置 Wi-Fi 连接。
- 将空气净化器的插头插入电源插 座,然后轻触 ()以打开空气净 化器。
- 2 同时轻触 和 貸 3 秒钟,直至您 听到蜂鸣声。
 - → 空气净化器将进入配对模式。
 - → Wi-Fi 指示灯 🗢 呈橙色闪烁。
- **3** 遵循 "首次设置 Wi-Fi 连接"一节 中的步骤 4-5。

ZH-S 9

简体中文

4 使用空气净化器

了解空气质量指示灯

空气质量指示灯 颜色	空气质量级别
蓝色	良好
蓝紫色	一般
紫红色	较差
红色	非常差

空气净化器打开后,空气质量指示灯将 自动亮起,并按顺序亮起所有颜色。大 约 30 秒后,空气质量传感器将选择与 环境空气悬浮颗粒质量相对应的颜色。 空气质量指示灯的颜色取决于 PM 2.5、 IAI (室内过敏原指数)和 Gas (气态污 染物读数)中值最高的那个参数。

PM2.5

即使是空气中最细微的颗粒变化, AeraSense 灵智感应技术也可精确 地检测并快速响应。它提供实时的 PM2.5 反馈,让您安枕无忧。

大多数室内空气污染物属于 PM2.5 -它是指小于 2.5 微米的悬浮颗粒污染 物。常见的室内微粒源有烟草烟雾、烹 饪、点燃的蜡烛等。此外,一些悬浮细 菌、最小的霉菌芽孢、宠物过敏原和尘 螨过敏原颗粒也属于 PM2.5。

PM2.5 水平	空气质量指示灯颜色
≤12	蓝色
13-35	蓝紫色
36-55	紫红色
>55	红色

IAI

专业级 AeraSense 传感器可检测室内 空气过敏原的级别,然后用1至12之 间的数字进行级别反馈,显示室内空气 过敏原的潜在风险级别。1表示最佳空 气质量。

IAI 级别	空气质量指示灯颜色
1-3	蓝色
4-6	蓝紫色
7-9	紫红色
10-12	红色

气态污染物显示

使用高级气体传感器,范围为 L1 至 L4 的显示值可显示检测到的潜在有害气 体(包括VOC、异味等)变化情况。L1 表示最佳空气质量。

Gas 水平	空气质量指示灯颜色
L1	蓝色
L2	蓝紫色
L3	紫红色
L4	红色

打开和关闭

三 注意

- 务必将空气净化器置于稳固、水平 且平坦的表面上,使装置的正面背 向墙壁或家具。
- •为了获得出色的净化性能,请关闭 门窗。
- 使窗帘远离进风口或出风口。
- 1 将空气净化器的插头插入电源 插座。

2 轻触也可打开空气净化器。



- → 空气净化器将发出蜂鸣音。
- → 默认情况下,空气净化器将以去 污染原模式运行。
- ➡ 空气净化器预热时,屏幕上会显示"---"。在仅测量空气中的可吸入颗粒物后,空气净化器会显示 PM2.5/IAI/空气等级,空气质量传感器会自动选择相应的空气质量指示灯颜色。
- ➡ 空气净化器将在自动模式下 工作,并且屏幕上会显示 ▲ 图标。



3 轻触并按住 ○3 秒可关闭空气净 化器。

| 注意

• 如果空气净化器关闭后仍与电源插 座连接,则再次打开后,其将以之 前的设置运行。

更改自动模式设置

您可以选择去污染原模式()。)、 去甲醛模式()合)或去过敏原模式 ()物)。

去污染原模式

专门设计的去污染原模式可有效去除 PM2.5 等空气污染物。

- 轻触自动模式按钮 以选择去污染
 原模式。
 - ▶ 🖪 图标将显示在屏幕上。



去甲醛模式

独特的去甲醛模式旨在快速去除室内甲 醛,并将该物质在空气中的含量保持在 安全级别。

- 轻触自动模式按钮 ③ 可选择去甲醛 模式。
 - → @ 图标将显示在屏幕上。



简体中文

ZH-S 11

去过敏原模式

超敏感的去过敏原模式经过精心设计, 旨在对周围空气中的微小过敏原等级变 化作出反应。

- 轻触自动模式按钮 ③ 以选择去过敏 原模式。
 - → 卷图标将显示在屏幕上。



更改风扇速度

除了自动模式,还有其他几种风速可供 选择。

使用手动风速设置时,空气净化器仍将 监控空气质量,但如果检测到空气质量 变化,它不会自动调节风速。

睡眠模式(🕻)

在睡眠模式下,空气净化器将以非常低 的速度安静地运行。

• 轻触风速按钮 🕱 以选择睡眠模式。

→ 睡眠模式指示灯 () 将亮起。



手动

- 反复轻触风速按钮 🕃 选择所需的 风速。
 - ✓ (速度1)



★ 提示

如果空气质量环形指示灯呈蓝色亮起,表明空气质量良好,您可以选择较低的风速。另一方面,如果空气质量环形指示灯呈红紫色或红色亮起,则表明空气质量不健康,您可以选择较高的风速,以便更快地净化空气。

劲速

在劲速模式下,空气净化器会以劲速 度运行。



使用灯光开/关功能

借助灯光开/关按钮,您可以打开或关 闭空气质量指示灯、显示屏和功能指示 灯(如果需要)。

 轻触灯光开/关按钮 掌一次,空气 质量指示灯将熄灭,显示面板将会 变暗并显示 -。



2 再次轻触灯光开/关按钮堂,所有 指示灯都会亮起。



设置童锁

- 1 轻触并按住童锁按钮 ♣ 3 秒可激 活童锁。
 - → 童锁图标 🗞 将显示在屏幕上。
 - → 打开童锁时,其他所有按钮均 将没有反应。



- 2 再次轻触并按住童锁按钮 ♣ 3 秒 可禁用童锁。
 - → 童锁图标 🔓 消失。



• 即使已启用童锁功能,您仍可通过 该应用程序控制本产品。 简体中文

5 清洁

금 注意

- 清洁产品前,务必先将电源插头 拔掉。
- 切勿将本产品浸入水中或任何其它 液体中。
- 切勿使用研磨性、腐蚀性或易燃性 清洁剂(例如漂白剂或酒精)清洁 本产品的任何部件。
- 只有预过滤网可以用水清洗。空气 净化滤网不可水洗,也不可用吸尘 器清洁。
- 请勿尝试用吸尘器清洁滤网或空气 质量传感器。

清洁计划

频率	清洁方法
必要时	使用干软布擦拭产 品表面
	清洁出风口盖
每两个月	使用干棉签清洁空 气质量传感器
预过滤网清洁 指示灯 ■	清洁预过滤网

清洁空气净化器的机身

定期清洁空气净化器的内侧和外侧,以 防止灰尘积聚。

- 1 使用柔软的干布清洁空气净化器的 内部和外部。
- 2 出风口也可用柔软的干布进行清洁。

清洁出风口盖

 要解锁出风口盖,请握住盖子上的 手柄,然后向上拉动。



2 用刷子清洁出风口盖。



3 以正确的方式重新安装此盖板。



14 ZH-S

简体中文

清洁空气质量传感器

每2个月清洁一次空气质量传感器, 确保产品以最佳性能运行。



- 如果将空气净化器用于多尘环境,则可能需要更频繁地进行清洁。
- 如果室内的湿度非常高,则空气质 量传感器上可能会形成冷凝水,即 使空气质量确实很好,空气质量指 示灯也可能会指示空气质量较差。 如出现此情况,请清洁空气质量传 感器或以手动速度设置使用空气净 化器。
- 关闭空气净化器,从电源插座上拔 下插头。
- 2 使用软刷清洁空气质量传感器的进 风口和出风口。



3 打开空气质量传感器保护盖。



4 使用湿棉签清洁空气质量传感器、 进风口和出风口。



- 5 使用干棉签彻底擦干所有部件。
- 6 重新装上空气质量感应器的保护盖。



清洁预过滤网

当屏幕上显示 FO 且预过滤网清洁提示 ■ 亮起时,请清洁预过滤网。



- 关闭空气净化器,从电源插座上拔 下插头。
- 2 拉出侧面板的上半部分以将其从空 气净化器上卸下。



3 向下按两个固定夹,然后朝您自己的方向拉动预过滤网。



4 如果很脏,请使用软刷清除上面的 灰尘。然后,在水龙头下清洗预过 滤网。



- 5 待预过滤网完全晾干后再将其装回 空气净化器中。
- 6 将预过滤网装回空气净化器中。



┣ 注意

- 要优化预滤网的使用寿命,请确保 清洁后将其完全晾干。
- •拆装滤网后,请清洗双手。
- 确保带两个固定夹的一面朝向自 己,并确保预过滤网的所有挂钩均 已正确连接到空气净化器上。
- 7 要重新安装侧面板,请先将面板安装到产品的底部(1)。然后,朝产品机身方向轻推面板(2)。



- 8 将空气净化器的插头插入墙上 插座。
- 9 轻触 🕛 按钮启动产品。
- 10 轻触并按住重置按钮 → 3 秒可重置预过滤网清洁时间。
- 11 安装滤网后,彻底洗净双手。

6 更换过滤网

过滤网更换指示灯

该空气净化器配有滤网更换指示灯,旨在 确保空气净化器运行时,空气净化滤网处 于最佳工作状态。当需要更换过滤网时, 屏幕上会显示过滤网代码(请参阅过滤网 提示图),且过滤网更换提醒(』)指示 灯将呈红色亮起。

如果未及时更换过滤网,则空气净化器 将停止运行并自动锁定,以保护房间中 的空气质量。应尽快根据过滤网代码更 换过滤网。

更换滤网

- 注意

- 过滤网不可水洗,也不可重复 使用。
- 在更换过滤网之前,务必先关闭 空气净化器并从电源插座上拔下 插头。
- •请勿用吸尘器清洁滤网。
- •如果预滤网已损毁、磨损或损坏, 请勿使用。请访问 www.philips.com/support或 联系您所在国家/地区的客户服务 中心。

滤网提示灯状态	动作	
屏幕上显示 A3, 且过滤网更换提醒 ₽ 会亮起。	更换纳米级劲护 滤网 专业S3型 (FY8197)	简体中文



- 关闭空气净化器,从电源插座上拔 下插头。
- 2 取出产品两侧的预过滤网。
- **3** 取出已过期的过滤网。丢弃用过的 过滤网。



二 注意

 请勿接触滤网的褶皱面,或闻滤网 的气味,因为其包含从空气中收集 的污染物。 4 拆掉新滤网上的所有包装材料。



- 5 将新过滤网装入空气净化器。
- 6 将空气净化器的插头插入电源插 座。
- 7 轻触 () 按钮启动产品。
- 8 轻触并按住重置按钮 → 3 秒可重 置过滤网使用寿命计数器。

┣━ 注意

- •更换滤网后,请洗净双手。
- 本空气净化器不含其他可供用户 维修的部件。如需获取帮助,请与 您所在国家/地区的客户服务中心 联系。

过滤网强制重置

即使屏幕上没有显示过滤网更换代码, 您也可以更换过滤网。在更换过滤网 后,您需要手动重置过滤网使用寿命 计数器。

- 1 同时轻触 ♀ 和 → 3 秒钟,即可进入过滤网重置模式。
 - ▶ 纳米级劲护滤网 专业S3型的代码 (A3) 会显示在屏幕上。



2 轻触并按住 → 3 秒可强行重置过 滤网使用寿命计数器。



3 重置过滤网后,屏幕上将显示--。



简体中文

4 轻触并按住 → 3 秒钟可退出过滤 网重置模式。



更换过滤网类型

- 1 同时触摸 ♣ 和 → 3 秒钟即可进入过滤网类型更改模式。
 - → 纳米级劲护滤网 专业S3型的代码 (A3) 会显示在屏幕上。



2 轻触 ♣ 即可为您要使用的新过滤 网选择过滤网代码。



3 轻触并按住 **→** 3 秒即可确认新过 滤网的过滤网代码。



二注意

- **4** 一旦确认新过滤网代码, -- 将显示 在屏幕上。







→ 如果您没有第二个过滤网,则只需轻击并按住 → 3秒钟确认过滤网代码,然后退出过滤网类型更改模式。





 如需详细了解适合您产品的不同过 滤网组合,请参阅过滤网包装内随 附的单独手册。

7 存放

- 关闭空气净化器,从电源插座上拔 下插头。
- 2 清洁空气滤网、空气质量传感器 和预过滤网(请参阅"清洁"一 章)。
- **3** 待所有部件完全晾干后再进行 存放。
- 4 将滤网和预过滤网分别装入密封的 塑料袋中。
- 5 将空气净化器、滤网和预过滤网存 放在阴凉干燥处。
- 6 拆装滤网后,务必彻底洗净双手。

简体中文

8 故障排除

本章归纳了您在使用产品时最常遇到的问题。如果您无法根据下面的信息解决问题,请与您所在国家/地区的客户服务中心联系。

问题	可能的解决方法
产品即使接通电源也 无法工作。	 •检查上盖是否安装正确。 •滤网更换指示灯持续亮起,但您未更换相应的滤网。结果是本产品现在已被锁定。在此情况下,更换过滤网并 重置过滤网使用寿命计数器。
出风口排出的气流比 之前明显减弱。	• 预过滤网变脏。清洁预过滤网(请参阅"清洁"一章)。
即使在产品已经运 行很长时间以后,空 气质量也未见显著 改善。	 •检查滤网包装材料是否已去除。 •某一过滤网可能没有放在产品内部。确保按照以下顺序 安装所有滤网,先从最里面的滤网开始: 1)纳米级劲护滤网 专业S3型 (FY8197); 2)预过滤网。 •空气质量感应器是湿的。室内湿度过高,因此形成了冷 凝水。确保空气质量传感器清洁干燥 (请参阅"清洁"一章)。
空气质量指示灯 的颜色始终保持 不变。	• 空气质量感应器变脏。清洁空气质量传感器(请参阅 "清洁"一章)。
产品散发出一种奇怪 的味道。	 前几次使用产品时,其可能会产生塑料味。这是正常的。但是,如果产品在取出过滤网后依然发出烧焦的气味,请联系飞利浦经销商或经授权的飞利浦服务中心。由于吸收室内气体,该过滤网可能会在使用后发出气味。过滤网经过日晒之后即可重复使用,建议您采用这种方式再次激活过滤网。如果异味仍然存在,建议更换过滤网。
产品声音过大。	 如果产品声音过大,您可以将风速更改为较低的风速级 别。当夜间在卧室使用本产品时,可选择静音低速。

问题	可能的解决方法
我已经更换过了过 滤网,但是产品还是 一直指示需要更换 滤网。	 可能是您未重置滤网使用寿命计数器。启动产品。然后 轻触并按住重置按钮(一)3秒钟。
屏幕上显示错误代 码"E1"。	 马达出现故障。请与您所在国家/地区的客户服务中心 联系。
屏幕上显示"E2"、 "E3"、"E4" 或"E5"错误 代码。	• 传感器出现故障。请与您所在国家/地区的客户服务中心 联系。
Wi-Fi 设置 不成功。	 如果您的净化器连接到的路由器为双频段目当前未连接 到 2.4GHz 网络,请切换至同一路由器 (2.4GHz) 的另一 频段并尝试再次将净化器配对。不支持 5GHz 网络。 不支持 Web 验证网络。 检查净化器是否在 Wi-Fi 路由器的范围内。您可以尝试 使空气净化器更靠近 Wi-Fi 路由器。 检查网络名称是否正确。网络名称区分大小写。 检查 Wi-Fi 密码是否正确。密码区分大小写。 使用 "在网络已更改时设置 Wi-Fi 连接"部分中的说明 重试设置。 Wi-Fi 连接可能被电磁或其他干扰中断。使本产品远离可 能造成干扰的其他电子设备。 检查移动设备是否处于飞行模式。确保在连接 Wi-Fi 网 络时禁用飞行模式。 参阅应用程序中的帮助部分,以获得广泛和最新的故障 排除技巧。

9 保修与服务

如果您需要了解信息或有任何疑问,请 访问飞利浦网站 www.philips.com 或 联系您所在国家/地区的飞利浦客户服 务中心(可在全球保修卡中找到飞利浦 客户服务中心的电话号码)。如果您所 在的国家/地区没有飞利浦客户服务中 心,请向当地的飞利浦经销商求助。

订购部件或附件

如果您必须更换部件或需要购买额外的 部件,请联系您的飞利浦经销商或访问 www.philips.com/support。 如果获取部件有问题,请与您所在 国家/地区的飞利浦客户服务中心联 系(可在全球保修卡中找到其电话号 码)。

10 注意事项

电磁场 (EMF)

本飞利浦产品符合所有有关暴露于电磁 场的适用标准和法规。

符合 EMF 标准

Koninklijke Philips N.V.主要面向广大 消费者制造和销售各类产品,包括通 常能发射和接收电磁信号的各种电子 设备。

飞利浦的主要业务原则之一就是要对自 己的产品采取各种必要的健康和安全措 施,使其符合所有相应的法律要求, 并在制造产品时严格遵照适用的 EMF 标准。

飞利浦致力于开发、生产和销售对人体 健康无任何危害的产品。飞利浦确认, 据目前的科学证明,如果其产品使用得 当,则对人体毫无危害。

长期以来,飞利浦始终在国际 EMF 和 安全标准的制定工作中扮演着积极的角 色,这就使飞利浦总能预知标准的发展 趋势,并率先应用到其产品中去。

回收

弃置产品时,请不要将它与一般生活垃 圾一同丢弃,应将其交给官方指定的回 收中心。这样做有利于环保。

请遵循您所在国家/地区的电器及电子 产品分类回收规定。正确弃置产品有 助于避免对环境和人类健康造成负面 影响。

注意事项

App Store 是 Apple Inc. 的服务商标。 这款飞利浦产品和**飞利浦智净家**应用程 序已应用于多种开源软件,如需获取本 产品中所用开源软件副本的许可文本, 请访问以下网站: www.philips.com/cleanhome。

Contents

1	Important Safety	26 26
2	Your air purifier	29
	Product Overview	29
	Controls overview	30
3	Getting started	31
	Installing filters	31
	Wi-Fi connection	32
4	Using the air purifier	34
	Understanding the air	
	quality light	34
	Turning on and off	35
	Changing the Auto mode	
	setting	36
	Changing the fan speed	37
	Using the light on/off	
	function	38
	Setting the child lock	38
5	Cleaning	39
	Cleaning schedule	39
	Cleaning the body of the air	20
	purifier	39
	Cleaning the air outlet cover Cleaning the air quality	39
	sensor	40
	Cleaning the pre-filter	41

rs 42 indicator 42 's 43
44 e 45
46
47
vice 50 essories 50

1 Important

Safety

Read this user manual carefully before you use the appliance, and save it for future reference.

Danger

- Do not let water or any other liquid or flammable detergent enter the appliance to avoid electric shock and/or a fire hazard.
- Do not clean the appliance with water, any other liquid, or a (flammable) detergent to avoid electric shock and/ or a fire hazard.
- Do not spray any flammable materials such as insecticides or fragrance around the appliance.

Warning

- Check if the voltage indicated on the appliance corresponds to the local power voltage before you connect the appliance.
- If the power cord is damaged, you must have

it replaced by Philips, a service center authorized by Philips, or similarly qualified persons in order to avoid a hazard.

- Do not use the appliance if the plug, the power cord, or the appliance itself is damaged.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Child shall not play with the appliance. Cleaning and maintenance shall not be made by children without supervision.
- Do not block the air inlet and outlet, e.g. by placing items on the air outlet or in front of the air inlet.
- Make sure that foreign objects do not fall into the appliance through the air outlet.

English

Caution

- This appliance is not a substitute for proper ventilation, regular vacuum cleaning, or use of an extractor hood or fan while cooking.
- If the power socket used to power the appliance has poor connections, the plug of the appliance becomes hot. Make sure that you plug the appliance into a properly connected power socket.
- Always place and use the appliance on a dry, stable, level, and horizontal surface.
- Leave at least 20cm free space behind and on both sides of the appliance and leave at least 30cm free space above the appliance.
- Do not place anything on top of the appliance.
- Do not sit or stand on the appliance. Sitting or standing on the appliance may lead to potential injuiry.

- Do not place the appliance directly below an air conditioner to prevent condensation from dripping onto the appliance.
- Make sure all filters are properly installed before you switch on the appliance.
- Only use the original Philips filters specially intended for this appliance. Do not use any other filters.
- Combustion of the filter may cause inreversible human hazard and/or jeopardize other lives. Do not use the filter as fuel or for similar purpose.
- Avoid knocking against the appliance (the air inlet and outlet in particular) with hard objects.
- Always lift or move the appliance by the handle on back side of the appliance.
- Do not insert your fingers or objects into the air outlet or the air inlet to prevent physical injury or malfunctioning of the appliance.

- Do not use this appliance when you have used indoor smoke-type insect repellents or in places with oily residues, burning incense, or chemical fumes.
- Do not use the appliance near gas appliances, heating devices or fireplaces.
- Always unplug the appliance after use and before cleaning, or carrying out other maintenance or replacing the filters.
- Do not use the appliance in a room with major temperature changes, as this may cause condensation inside the appliance.
- To prevent interference, place the appliance at least 2 meters away from electrical appliances that use airborne radio waves such as TVs, radios, and radio-controlled clocks.
- The appliance is only intended for household use under normal operating conditions.

- Do not use the appliance in wet surroundings or in surroundings with high ambient temperatures, such as the bathroom, toilet, or kitchen.
- The appliance does not remove carbon monoxide (CO) or radon (Rn). It cannot be used as a safety device in case of accidents with combustion processes and hazardous chemicals.
- If you need to move the appliance, disconnect the appliance from the power supply first.
- Do not move the appliance by pulling its power cord.
- Always cleanse your hands after changing the filters.

2 Your air purifier

Congratulations on your purchase, and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.



Type number	Filter
FY8197	NanoProtect filter Pro S3*

*Hereinafter referred to as "air purification filter".

Controls overview

Control buttons



Control buttons

U	Power on/off button	۲	Fan speed button
`ݣٟ	Light on/off button	łø	Child lock button
A	Auto mode button	Ð	Filter reset button

Display panel

PM2.5	PM2.5 display		Pre-filter cleaning alert
Gas	Gas display		Filter replacement alert
IAI	Indoor Allergen Index display	\sim	Speed 1
Ċ	Sleep mode	%	Speed 2
PM2.5	Pollution mode	%	Speed 3
ê	Formaldehyde mode	٢	Turbo speed
*:	Allergen mode	(((+	Wi-Fi indicator
ł	Child lock indicator		

English

3 Getting started

Installing filters

Remove all packaging of the filters before using the appliance. Unpack them and place them into the appliance described as follows:

	Ν	ote
--	---	-----

- Make sure the air purifier is unplugged from the electrical outlet before installing the filters.
- There is one set of filters on each side of the appliance. Each side is equipped with one pre-filter and one air purification filter.
- Make sure that you place the air purification filter in the appliance first and then the pre-filter.
- Make sure that the side with the tag is pointing towards you when installing filters.
- 1 Remove all packaging materials of the air purification filters.



2 Pull the top part of the side panel to remove it from the appliance.



3 Press the two clips down and pull the pre-filter towards you.



4 Put the unpacked air purification filter back into the appliance.



5 Put the pre-filter back into the appliance.



Note

- Make sure the side with the two clips is pointing towards you, and that all hooks of the prefilter are properly attached to the purifier.
- 6 To reattach the side panel, mount the panel onto the bottom of the appliance first (1). Then, gently push the panel against the body of the appliance (2).



7 Repeat the above steps and assemble the filter for the other side of the appliance.

Wi-Fi connection

Setting up the Wi-Fi connection for the first time

1 Download and install the Philips "Clean Home+" app from the App Store or Android market.



- 2 Put the plug of the air purifier in the power socket and touch to turn on the air purifier.
 - → The Wi-Fi indicator <a>> blinks orange for the first time.
- **3** Make sure that your smart device is successfully connected to your Wi-Fi network.
- 4 Launch the "Clean Home+" app and click on "Connect a New Device" or press the "+" button on the top of the screen. Follow the onscreen instructions to connect the air purifier to your network.

Note

- This instruction is only valid when the air purifier is being set up for the first time. If the network has changed or the setup needs to be performed again, consult section "Reset the Wi-Fi connection" on page 33.
- If you want to connect more than one air purifier to your smartphone or tablet, you have to do this one by one. Complete the set up of one air purifier before you turn on the other air purifier.
- Make sure that the distance between your smartphone or tablet and the air purifier is less than 10 m without any obstructions.
- This App supports the latest versions of Android and iOS. Please check <u>www.philips.com/cleanhome</u> for the latest update of supported operating systems and devices.

Reset the Wi-Fi connection

Note

- This applies when the default network to which your purifier is connected has changed.
- Reset the Wi-Fi connection when your default network has changed.
- 1 Put the plug of the air purifier in the power socket and touch 也 to turn on the air purifier.
- 2 Touch () and [™]g['] simultaneously for 3 seconds until you hear a beep.
 - → The air purifier goes to pairing mode.
 - → The Wi-Fi indicator *⇒* blinks orange.
- **3** Follow the steps 4-5 in "Setting up the Wi-Fi connection for the first time" section.

4 Using the air purifier

Understanding the air quality light

Air quality light color	Air quality level
Blue	Good
Blue-purple	Fair
Purple-red	Poor
Red	Very poor

The air quality light automatically goes on when the air purifier is switched on, and lights up all colors in sequence. After approximately 30 seconds, the air quality sensors select the color that corresponds to the surrounding air quality of airborne particles.

The color of the air quality light is determined by the highest level among PM2.5, IAI and Gas readings.

PM2.5

AeraSense sensing technology accurately detects and quickly responds to even the slightest particle change in the air. It provides you with reassurance with real-time PM2.5 feedback. Most of the indoor air pollutants fall under PM2.5 – which refers to airborne particle pollutants smaller than 2.5 micrometers. Common indoor sources of fine particles are tobacco smoke, cooking, burning candles. Some airborne bacteria and the smallest mold spores, pet allergen and dust mite allergen particles also fall under PM2.5.

PM2.5 level	Air quality light color
≤12	Blue
13-35	Blue-purple
36-55	Purple-red
>55	Red

IAI

The professional-grade **AeraSense** sensor detects the level of indoor air allergen and with numerical feedback from 1 to 12 the potential risk level of indoor air allergens can be displayed. 1 indicates best air quality.

IAI level	Air quality light color
1-3	Blue
4-6	Blue-purple
7-9	Purple-red
10-12	Red

GAS

With an advanced gas sensor, a display ranging from L1 to L4 shows the level change of potential harmful gases (incl. VOC, odor, etc.) detected. L1 indicates best air quality.

Gas level	Air quality light color
L1	Blue
L2	Blue-purple
L3	Purple-red
L4	Red

Turning on and off

- Note

- Always place the air purifier on a stable, horizontal, and level surface with the front of the unit facing away from walls or furniture.
- For optimum purification performance, close doors and windows.
- Keep curtains away from the air inlet or air outlet.
- 1 Put the plug of the air purifier in the power socket.
- 2 Touch 也 to switch on the air purifier.



- → The air purifier beeps.
- → The air purifier operates under the Pollution mode by default.
- When the air purifier is warming up, "---" displays on the screen. After measuring the particulate matter only in the air, the air purifier shows the PM2.5/ IAI/Gas level, the air quality sensor automatically selects the appropriate air quality light color.
- → The air purifier operates in the auto mode with displayed on the screen



3 Touch and hold the **(**) button for 3 seconds to switch off the air purifier.

Note

 If the air purifier stays connected to the electrical outlet after turning OFF, the air purifier will operate under the previous settings when turned ON again.

English

Changing the Auto mode setting

You can choose the Pollution mode (), the Formaldehyde mode () or the Allergen mode ().

Pollution mode

The specially designed pollution mode can effectively remove airborne pollutants such as PM2.5.

- Touch the Auto mode button (A) to select Pollution mode .
 - → The km icon displays on the screen.



Formaldehyde mode

The unique Formaldehyde mode is designed to quickly remove your indoor formaldehyde and maintain it at safe level.

- Touch the Auto mode button
 to select the Formaldehyde mode.
 - → The reprint of the or the screen.



Allergen mode

The extra-sensitive allergen mode is designed to react to even a small change in allergen levels in the surrounding air.

- Touch the Auto mode button (A) to select Allergen mode.
 - → The 卷 icon displays on the screen.


English

Changing the fan speed

In addition to the Auto modes, there are several fan speeds available.

When using the manual fan speed settings, the air purifier will still monitor the air quality, but it will not automatically adjust the fan speed if it detects changes in the air quality.

Sleep mode (🕻)

In sleep mode, the air purifier operates quietly at a very low speed.

- Touch the fan speed button (8) to select the sleep mode.
 - → The sleep mode indicator

 €-goes on.



Manual

Touch the fan speed button
 repeatedly to select the fan speed you need:

∽ (Speed 1)

Speed 2) ∞

ऑ (Speed 3)



⊁ Tip

 If the air quality ring lights up blue, it indicates that the air quality is good, and you can select a lower fan speed. On the other hand, if the air quality ring lights up purple-red or red, it indicates that the air quality is unhealthy, and you can select a higher fan speed to purify the air more quickly.

Turbo

In Turbo mode, the air purifier operates on the highest speed.

- Touch the fan speed button (8) to select the Turbo mode.
 - → The turbo speed indicator @ goes on.



Using the light on/off function

With the light on/off button, you can switch on or off the air quality light, the display screen and the function indicator if desired.

 Touch the light on/off button [™]/₂ once, the air quality light will be off, the display panel will be dimmed with - displayed.



2 Touch the light on/off button "ǧ" again, all lights will be on.



Setting the child lock

- Touch and hold the child lock button ♣ for 3 seconds to activate child lock.
 - ➡ The child lock icon to displays on the screen.
 - ➡ When the child lock is on, all the other buttons are not responsive.



- 2 Touch and hold the child lock button ♣ for 3 seconds again to deactivate child lock.
 - → The child lock icon to disappears.

- Note

• You can still control the appliance through the App even child lock is activated.

nglish

5 Cleaning

Note

- Always unplug the appliance before you clean it.
- Never immerse the appliance in water or any other liquid.
- Never use abrasive, aggressive, or flammable cleaning agents such as bleach or alcohol to clean any part of the appliance.
- Only the pre-filter is washable. The air purification filter is not washable nor vacuum cleanable.
- Do not attempt to clean the filters or air quality sensor with a vacuum.

Cleaning schedule

Frequency	Cleaning method		
When necessary	Wipe the surface of the appliance with a soft dry cloth		
	Clean the air outlet cover		
Every two months	Clean the air quality sensor with a dry cotton swab		
When the pre- filter cleaning indicator indicator fo displays on the screen	Clean the pre- filter		

Cleaning the body of the air purifier

Regularly clean the inside and outside of the air purifier to prevent dust from collecting.

- Use a soft, dry cloth to clean both the interior and exterior of the air purifier.
- 2 The air outlet can also be cleaned with a dry, soft cloth.

Cleaning the air outlet cover

1 To unlock the air outlet cover, grab the handle on the cover and pull the cover up.



2 Clean the cover with a brush.



3 Reattach the cover properly.



Cleaning the air quality sensor

Clean the air quality sensor every two months for optimal functioning of the appliance.



Note

- If the air purifier is used in a dusty environment, it may need to be cleaned more often.
- If the humidity level in the room is very high, condensation may develop on the air quality sensor and the air quality light may indicate a more poor air quality even though the air quality is actually good. If this occurs, clean the air quality sensor or use the air purifier on a manual speed setting.

- 1 Switch off the air purifier and unplug from the power socket.
- 2 Clean the inlet and outlet of the air quality sensor with a soft brush.



3 Open the air quality sensor cover.



4 Clean the air quality sensor, the dust inlet and the dust outlet with a damp cotton swab.



5 Dry all parts thoroughly with a dry cotton swab.

6 Reattach the air quality sensor cover.



Cleaning the pre-filter

Clean the pre-filter when **FO** is displayed on the screen and the pre-filter cleaning alert **Q** is on



- 1 Switch off the air purifier and unplug from the power socket.
- 2 Pull the top part of the side panel to remove it from the air purifier.



3 Press the two clips down and pull the pre-filter towards you.



4 If the pre-filter is very dirty, use a soft brush to brush away the dust. Then wash the pre-filter under running tap water.



- 5 Allow the pre-filter to air dry thoroughly before placing back in the air purifier.
- 6 Put the pre-filter back into the air purifier.



Note

- To optimize the lifetime of the pre-filter, make sure it air dries completely after cleaning.
- Wash your hands after handling the filter.
- Make sure the side with the two clips is pointing towards you, and that all hooks of the prefilter are properly attached to the air purifier.
- 7 To reattach the side panel, mount the panel onto the bottom of the appliance first (1). Then, gently push the panel against the body of the appliance (2).



- 8 Put the plug of the air purifier in the wall outlet.
- 9 Touch the ⊕ button to switch on the appliance.
- 10 Touch and hold the reset button → for 3 seconds to reset the pre-filter cleaning time.
- 11 Wash your hands thoroughly after installing filters.

6 Replacing the filters

Filter replacement indicator

This air purifier is equipped with a filter replacement indicator to make sure that the air purification filter is in optimal condition when the air purifier is operating. When the filters need to be replaced, the filter code displays on the screen (see Filter alert chart) and the filter replacement alert ($\mathbf{E}^{\mathbf{Z}}$) lights up.

If the filters are not replaced in time, the air purifier will stop operating and automatically lock to protect the air quality in the room. Replace the filters as soon as possible according to the filter code.

Replacing the filters

Note

- The filters are not washable or reusable.
- Always turn off the air purifier and unplug from the electrical outlet before replacing the filters.
- Do not clean the filters with a vacuum.
- If the pre-filter is damaged, worn or broken, do not use. Visit www.philips.com/support or contact the Consumer Care Center in your country.

Filter alert light status	Action		
A3 displays on the screen and the filter replacement alert 🗗 goes on.	Replace the NanoProtect filter Pro S3 (FY8197)		



- 1 Turn off the air purifier and unplug from the power socket.
- 2 Take out the pre-filters on both sides of the appliance.
- **3** Take out the expired filters. Discard used filters.



- Note

- Do not touch the pleated filter surface, or smell the filter as it has collected pollutants from the air.
- 4 Remove all packaging material of the new filters.



- 5 Place the new filters into the air purifier.
- 6 Put the plug of the air purifier in the power socket.
- 7 Touch the 🕁 button to switch on the appliance.
- Touch and hold the reset button
 for 3 seconds to reset the filter lifetime counter

Note

- Wash your hands after changing a filter.
- This air purifier has no other user-serviceable parts. For assistance, contact the Consumer Care Center in your country.

Filter force reset

You can replace filters even if there is no filter replacement code displayed on the screen. After replacing a filter, you need to reset the filter lifetime counter manually.

- Touch to and → simultaneously for 3 seconds to enter the filter reset mode.
 - Gode (A3) of the NanoProtect filter Pro S3 displays on the screen.



2 Touch and hold → for 3 seconds to force reset the filter lifetime counter.



3 After the filter is reset, -- displays on the screen.



4 Touch and hold → for 3 seconds to exit the filter reset mode.



Changing filter type

- Touch to and → simultaneously for 3 seconds to enter the filter type change mode.
 - → Code (A3) of the NanoProtect filter Pro S3 displays on the screen.



2 Touch to select filter code of the new filter you will use.



3 Touch and hold for 3 seconds to confirm the filter code of the new filter.



- Note

- After you have selected the filter code of the new filter using the button, if you do not touch any other buttons in 10 seconds, the appliance will automatically confirm the filter code of the new filter.
- 4 After the new filter code is confirmed, -- displays on the screen.



 → If you have the second filter to change the filter type, tap
 If is to choose the new filter code, and then tap and hold → for 3 seconds to confirm the selection and exist the filter type change mode.





➡ if you don't have the second filter, just tap and hold ➡ for 3 seconds to confirm the filter code and exist the filter type change mode.





Note

• Refer to the separate leaflet that comes with the filter for more information on different filter combinations for your choice.

7 Storage

- 1 Turn off the air purifier and unplug from the power socket.
- 2 Clean the air purifier, air quality sensor and pre-filter (see chapter 'Cleaning').
- 3 Let all parts air dry thoroughly before storing.
- 4 Wrap the filters and pre-filter separately in air tight plastic bags.
- 5 Store the air purifier, filters and pre-filters in a cool, dry location.
- 6 Always thoroughly wash hands after handling filters.

8 Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, contact the Consumer Care Center in your country.

Problem	Possible solution		
The appliance does not work even though it is plugged in.	 Check if the top cover is properly installed. The filter replacement light has been on continuously but you have not replaced the corresponding filter. As a result, the appliance is now locked. In this case, replace the filter and reset the filter lifetime counter. 		
The airflow that comes out of the air outlet is significantly weaker than before.	• The pre-filter is dirty. Clean the pre-filter (see the chapter "Cleaning").		
The air quality does not improve, even though the appliance has been operating for a long time.	 Check if the packing material is removed from the filters. One of the filters has not been placed in the appliance. Make sure that all filters are properly installed in the following order, starting with the innermost filter: NanoProtect filter Pro S3 (FY8197); 2) pre-filter. The air quality sensor is wet. The humidity level in your room is high and causes condensation. Make sure that the air quality sensor is clean and dry (see the chapter "Cleaning"). 		
The color of the air quality light always stays the same.	• The air quality sensor is dirty. Clean the air quality sensor (see the chapter "Cleaning").		

Problem	Possible solution		
The appliance produces a strange smell.	• The first few times you use the appliance, it may produce a plastic smell. This is normal. However, if the appliance produces a burnt smell even if removing filters, contact your Philips dealer or an authorized Philips service center. The filter may produce smell after being used for a while because of the absorption of indoor gases. It's recommended that you reactivate the filter by putting it in direct sunlight for repeated use. If odor still exists, replace the filter.		
The appliance is extra loud.	 If the appliance is too loud, you can change the fan speed to a lower fan speed level. When using the appliance in a bedroom at night, choose the silent speed. 		
The appliance still indicates that I need to replace a filter, but I already did.	 Perhaps you did not reset the filter lifetime counter. Switch on the appliance. Then touch and hold the reset button () for 3 seconds. 		
Error code "E1" displays on the screeen.	• The motor has malfunctions. Contact the Consumer Care Center in your country.		
Error codes "E2", "E3", "E4" or "E5" displays on the screen.	• The sensor has malfunctions. Contact the Consumer Care Center in your country.		

Problem	Possible solution
The Wi-Fi setup is not successful.	 If the router your purifier is connected to is dual – band and currently it is not connecting to a 2.4GHz network, please switch to another band of the same router (2.4GHz) and try to pair your purifier again. 5Ghz networks are not supported. Web authentication networks are not supported. Check if the purifier is within range of the Wi-Fi router. You can try to locate the air purifier closer to the Wi-Fi router. Check if the network name is correct. The network name is case-sensitive. Check if the Wi-Fi password is correct. The password is case-sensitive. Retry the setup with the instructions in section 'Set up the Wi-Fi connectivity can be interrupted by electromagnetic or other interferences. Keep the appliance away from other electronic devices that may cause interferences. Check if the mobile device is in airplane mode. Make sure to have the airplane mode deactivated when connecting to the Wi-Fi network. Consult the help section in the App for extensive and up-to-date troubleshooting tips.

9 Guarantee and service

If you need information or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Consumer Care Center in your country (you can find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Center in your country, go to your local Philips dealer.

Order parts or accessories

If you have to replace a part or want to purchase an additional part, go to your Philips dealer or visit www.philips.com/support.

If you have problems obtaining the parts, please contact the Philips Consumer Care Center in your country (you can find its phone number in the worldwide guarantee leaflet).

10 Notices

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Compliance with EMF

Koninklijke Philips N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.

Recycling

Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

Notice

App Store is a service mark of Apple Inc.

This Philips appliance and Clean Home+ app applied multiple open source softwares, Copies of open source software license text used in this product can be derived from website: <u>www.philips.com/</u> <u>cleanhome</u>.



保修及服务:

此产品是一件设计精良, 用高品质元件制造之家用电 器,在正常使用及保养下应能 发挥其优越性能。在购买日期 后二年内,若发生任何因制造 工艺或元器件造成之损坏, 飞利浦中国维修服务中心将为 持证用户提供免费门市维修服 务,视情况更换零件或整个产 品。无论在保期中或保期后 只要飞利浦正式行销该产品的 任何国家皆可获得维修服务。 若飞利浦在当地无行销该项产 品,飞利浦同样提供维修服务, 但可能因未储备所需零件,维修 时间可能较长,敬请见谅。请联 络当地飞利浦经销商,或飞利浦 服务部门。若您需洽询相关资 讯,或遇困难事项时,请联络 当地飞利浦维修服务中心, 或向飞利浦服务热线咨询。

中国顾客服务热线: 4008 800 008(用户需承

担本地通话费)。

网址: www.philips.com.cn

- 网上会员注册与产品注册:
- 1 登陆 www.philips.com.cn/ welcome
- 2 点击"创建新账户" 创建您的飞利浦账号
- 3 点击"注册产品", 通过产品名称或产品型号查 找产品,完成产品注册

保修条例:

- 在购买日期后二年内,凡经
 本公司特约维修站人员确认
 为正常使用情况下,因制造
 工艺或元器件造成之损坏, 您都将获得免费保修服务。
- 一 此免费服务不包括需时常更 换的易耗零配件(吸尘机纸 袋,布袋,空气清新机滤
 网,滤芯,活性碳,咖啡壶
 过滤网)及附件(如须刀网 膜、刀头,咖啡杯,食品加 工机杯/刀具等),辅助装
 置,运输费及维修人员上门 服务费。
- 用户请保留此联。
- 此证若经涂改即作废。

- 此证须联同发票正本使用方 为有效。
- 以下情况将不能获得免费 服务。
- 使用不当引起的人为损坏, 例如接入不适当电源、使用 不适当配件、不适当之安 装、不依说明书使用、错误 使用或疏忽而造成损坏等。
 因运输及其他意外而造成之 损坏。非经本公司认可之维 修和改装。其他因不可抗力 (如自然灾害、电压异常 等)造成的损坏。
- 2 一般家庭以外使用(如工业、 商业用)而造成的损坏。
- 3 正常使用引起的产品老化、 磨损等,但不影响产品的正 常使用。
- 保修证作为在规定期限及条件之内进行免费维修的保证,并不限制消费者的法定权利。

飞利浦提供2年全球联保服务,在产品由飞利浦正式销售的所有国家中,都提供保修和保修期满的维修服务。要求保修时,您需提供发票正本,目请求保修的日期还在保修期限之内。

服务须知

需要此产品的售后服务,拨打 服务热线:4008 800 008 在维修服务过程中有任何意 见,欢迎致函飞利浦(中国) 投资有限公司解决疑难。

飞利浦(中国)投资有限公 司上海市静安区灵石路718 号A1幢

产品中有害物质的名称及含量

有毒有害物质或元素								
铅(Pb)	汞(Hg)	镉(Cd)	六价铬 (Cr6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)			
×	×	×	0	0	0			
×	0	0	0	0	0			
×	0	0	0	0	0			
×	0	0	0	0	0			
本表格依据SJ/T 11364的规定编制。 〇 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572 规定的限量要求以下。 × 表示该有害物质至少在该部件的某一均质材料中的含量超出								
	× × × 11364的 初质在该 题求以下。	× × × ○	 铅(Pb) 汞(Hg) 镉(Cd) × × × × ○ ○ × ○ ○ × ○ ○ 11364的规定编制。 加质在该部件所有均质材: 取求以下。 	铅(Pb) 汞(Hg) 镉(Cd) 六价铬 (Cr6+) × × × ○ × ○ ○ ○ × ○ ○ ○ × ○ ○ ○ × ○ ○ ○ × ○ ○ ○ × ○ ○ ○ × ○ ○ ○ × ○ ○ ○ × ○ ○ ○ 11364的规定编制。 ○ ○ 0 ○ ○ ○ 11364的规定编制。 ○ ○ 0 ○ ○ ○ 0 ○ ○ ○ 11364的规定编制。 ○ ○ ○ 0 ○ ○ ○ ○ 0 ○ ○ ○ ○ 1364的规定编制。 ○ ○ ○ 0 ○ ○ ○ ○ 0 ○ ○ ○ ○ 0	铅(Pb) 汞(Hg) 镉(Cd) 六价铬 (Cr6+) 多溴联苯 (PBB) × × × ○ × ○ ○ ○ × ○ ○ ○ × ○ ○ ○ × ○ ○ ○ × ○ ○ ○ × ○ ○ ○ × ○ ○ ○ × ○ ○ ○ 11364的规定编制。 ○ ○ ○ 11364的规定编制。 ○ ○ ○ 0 ○ ○ ○ 11364的规定编制。 ○ ○ ○ 0 ○ ○ ○ 0 ○ ○ ○ ○ 1364的规定编制。 ○ ○ ○ 0 ○ ○ ○ ○ 0 ○ ○ ○ ○ 1364 ○ ○ ○ ○ 0 ○ ○ ○ ○ 0			

*该表格中所显示的"有害物质"在产品正常使用情况下不会对人身和 环境产生任何伤害。

*该表格中所显示的"有害物质"及其存在的部件向消费者和回收处理从业者提供相关物质的存在信息,有助于产品废弃时的妥善处理。

保留备用 出版日期:2019-11-21





© 2019 Koninklijke Philips N.V. 保留所有权利



4241 211 02553