

EN Your appliance has been designed to be used with tap water. In case you live in an area with hard water, fast scale build-up may occur. Therefore, it is recommended to use water without minerals such as distilled or purified water to prolong the lifetime of your appliance.

Note: Do not add perfume, vinegar, mineral water, starch, descaling agents, ironing aids, chemically treated water or other chemicals as they may cause water spotting, brown staining, or damage to your appliance.

DE Ihr Gerät wurde für die Verwendung mit Leitungswasser entwickelt. Falls Sie in einem Gebiet mit hartem Wasser leben, kann sich schnell Kalk ablagern. Daher ist es empfehlenswert, Wasser ohne Mineralien zu verwenden, z. B. destilliertes oder gefiltertes Wasser, um die Lebensdauer Ihres Geräts zu verlängern.

Hinweis: Geben Sie kein Parfüm, Essig, Mineralwasser, Stärke, Entkalkungsmittel, Bügelzusätze, keine Stärke, Entkalkungsmittel, Bügelzusätze, keine Stärke, Entkalkungsmittel hinzu, da dies zu Auströten von Wasser, braunen Flecken oder Schäden am Gerät führen kann.

NL Uw apparaat is ontworpen voor gebruik met kraanwater. Als u in een gebied met hard water woont, kan er snel kalkaanlaag ontstaan. Daarom wordt u aangeraden water zonder mineralen te gebruiken, zoals gedistilleerd of gezuiverd water, om de levensduur van het apparaat te verlengen.

Opmerking: Voeg geen parfum, azijn, mineralwater, stijfjes, ontkalkingsmiddelen, strijkconcentraat, chemisch ontkalkt water of andere chemicaux toe. Deze kunnen bruine vlekken en schade aan uw apparaat veroorzaken en ervoor zorgen dat uw apparaat water gaat sputteren.

FR Votre appareil a été conçu pour être utilisé avec de l'eau du robinet. Si vous habitez dans une zone où l'eau est calcaire, des dépôts de calcaire peuvent se former rapidement. Il est donc recommandé d'utiliser de l'eau sans minéraux, comme de l'eau distillée ou de l'eau purifiée pour prolonger la durée de vie de votre appareil.

Remarque: n'ajoutez pas de parfum, de vinaigre, d'eau minérale, d'amidon, de détartrants, de produits d'aide au repassage ou d'autres agents chimiques dans le réservoir d'eau car ils peuvent entraîner des projections d'eau, des taches marron ou des dommages à votre appareil.

SV Apparaten är utformat för att användas med kranvattnet. Om du bor i ett område med hårt vatten kan det snabbt bildas kalkavlägringar. Du bör därför använda vatten utan mineraler, som destillerat eller renat vatten, för att förlänga apparatens livslängd.

Obs! Använd inte parfym, ättika, mineralvatten, stärke, avalkningsmedel, strykjärnsmedel, kemiskt avläkarkal, vattenfilter eller skräddare på apparaten.

FI Laite on suunniteltu käytämään vesijohtovettä. Jos asut alueella, jossa on kova vesi, vältä vettä, joka sisältää mineraaleja, kuten kalsiumia.


Huomautus: Älä käytä laitetta vettä, joka sisältää mineraaleja, kuten kalsiumia.

DA Apparatet er udviklet til bruk med vann fra kranen. Hvis du bor i et område med hårdt vann, kan der hurtigt komme kalkaflejringer. Det anbefales der at bruge vand uden mineraler, som ekstrakt eller renset vann, for at forlænge apparatets levetid.

Bemærk: Tilset ikke parfume, eddik, mineralvand, stivelse, avalkningsmidler, strykjernemidler, kemiskt avläkarkal vann eller andre kjemikalier, ettersom dette kan føre til ynnspur, brunne flekker eller skade på apparatet.

NO Apparatet er utformet for bruk med springvann. Hvis du bor i et område med hårdt vann, kan det raskt dannet seg mye kalk. Derfor anbefaler vi at du bruker vann uten mineraler, som destillerat eller renset vann, for å forlenge levetiden til apparatet.

Merk: Ikke tilsett parfyme, eddik, mineralvann, stivelse, avalkningsmidler, strykjernemidler, kjemiskt avläkarkal vann eller andre kjemikalier, ettersom dette kan føre til ynnspur, brunne flekker eller skade på apparatet.

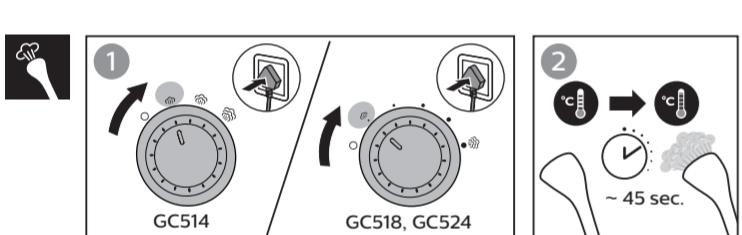

EN Caution: Do not attach or detach the brush/pleat maker while the steam is on or the steamer head is hot.

DE Achtung: Setzen Sie die Bürste/-den Faltenbügler nicht auf, und nehmen Sie sie wieder ab, wenn der Dampfgenerator eingeschaltet oder der Kopf der Dampfeinheit heiß ist.

NL Let op: verwijder de borstel/-plissémaker niet tijdens het stomen of wanneer de stoomkop heet is.


FR Attention : ne fixez et ne détachez pas la brosse/l'accessoire à plis lorsque la vapeur est produite ni lorsque la tête du défriseur est chaude.

SV Varning! Montera eller demontera aldrig bort-/plissérsfunktionen när ångan aktiverats eller om ånghuvudet är varmt.

FI Varoitus: älä kiinnitä tai irrota lättäteen päässäosa, kun höyrytoiminto on käytössä tai kun höyrykuori on kuumaa.

DA Forsigtig: Undlad at til- eller frakoble borsten/plissétilbehøret, mens dampen er tændt, eller damphovedet er varmt.

NO Forsiktig: Ikke koble til eller fra borsten/folderen mens dampen er slått på, eller hvis damphovedet er varmt.

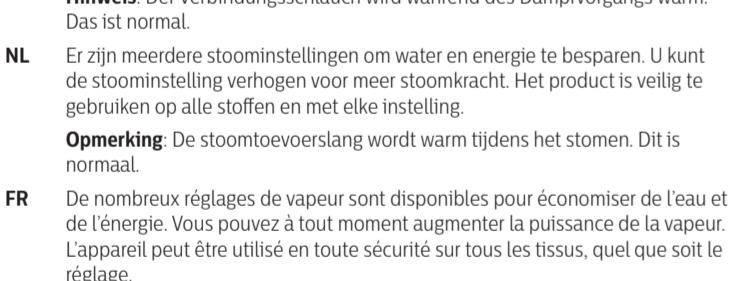

EN Multi steam settings are provided to save water and energy. You can increase the steam setting for more steam power at any point of time. The appliance is safe to use on all fabrics at any setting.

Note: The steam supply hose becomes warm during steaming. This is normal.

DE Es gibt mehrere Dampfstellungen, um Wasser und Energie zu sparen. Sie können die Dampfstellung jederzeit auf eine höhere Dampfleistung einstellen. Das Gerät kann in allen Einstellungen bedenkenlos für alle Stoffe verwendet werden.

Hinweis: Die Verbindungsschlauch wird während des Dampfvorgangs warm. Das ist normal.

NL Er zijn meerdere stoominstellingen om water en energie te besparen. U kunt de stoominstelling verhogen voor meer stoomkracht. Het product is veilig te gebruiken op alle stoffen met elke instelling.

Opmerking: De stoomvoorziening wordt warm tijdens het stomen. Dit is normaal.

FR De nombreux réglages de vapeur sont disponibles pour économiser de l'eau et de l'énergie. Vous pouvez à tout moment augmenter la puissance de la vapeur. L'appareil peut être utilisé en toute sécurité sur tous les tissus, quel que soit le réglage.

SV Det finns flera ånginställningar som du kan använda för att spara på vatten och energi. Du kan nära som helst öka ånginställningen för att få mer kraft för ångan. Det är säkert att använda apparaten på vilket tyg som helst oavsett vilken inställning som används.

FI Käytävissä on useita höyryasetustuksia ja energia säästämiseksi. Voit lisätä höyrytuloa lisäämällä höyryasetusta milloin tahansa. Laite on turvallinen kaikille tekstillisiä kankailla asetuksilla.


Huomautus: Höyrytulo lämpenee hörytyksen aikana. Tämä on normaalia.

DA Der findet flere Dampfstellungen für at spare vann og energi. Du kan til enhver tid øge dampinstillingen for at få mere dampkraft. Apparatet er sikret til anvende på alle stofftyper med alle indstillingen.

Bemærk: Dampslangen bliver varm under dampning. Dette er normalt.

NO Flere dampinstillingar er gitt for å spare vann og energi. Du kan øke dampinstillingen for å få mer damp når som helst. Apparatet er trygt å bruke på alle typer stoff på alle innstillingene.

Merk: Dampslangen blir varm under dampningen. Dette er normalt.

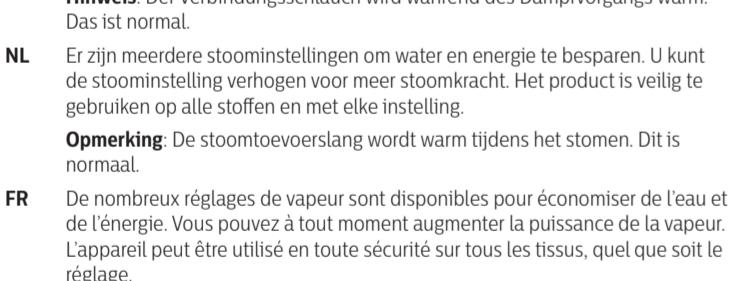

EN To maintain optimal steam performance and prolong the lifetime of the appliance, it is important to remove scales and impurities inside the appliance regularly. Therefore, it is recommended to perform the de-calc process at least once a month.

Note: Before you start de-calc process, make sure there is some water in the water tank.

DE Für eine optimale Dampfleistung und eine längere Lebensdauer des Geräts ist es wichtig, Kalk und Verunreinigungen im Gerät regelmäßig zu entfernen. Daher wird empfohlen, den De-Calc-Vorgang mindestens einmal pro Monat durchzuführen.

Gewissenheit: Sie sich vor dem De-Calc-Vorgang, dass sich Wasser im Wasserbehälter befindet.

NL Voor optimale stoomprestaties en een langere levensduur van het apparaat is het belangrijk om regelmatig kalkaanlaag en onzuivereheden uit het apparaat te verwijderen. Het is daarom raadzaam om het de-calc-proces minstens eenmaal per maand uit te voeren.

Controleer voordat u het de-calc-proces start of het waterreservoir wat water bevat.

FR Pour conserver des performances optimales et prolonger la durée de vie de l'appareil, il est important d'éliminer régulièrement les particules de calcaire et autres impuretés à l'intérieur. Il est dès lors recommandé d'effectuer la procédure de détartrage au moins une fois par mois.

SV Ta regelbundet bort fôrkalkningar och föroreningar inuti apparaten för att få bästa ångprestationen och förlänga apparatens livslängd. Du bör därför genomföra avalkningsprocessen minst en gång i månaden.

FI Kalkki ja epäpuhtaudet on poistettava laitteesta sisäosista säännöllisesti, jotta laitteet höyrytuloa pysyi paahana mahdollisena ja laitteet käyttöön on mahdollisimman pitkä. Tästä syystä on suositeltavaa poistaa laitteesta kalkki vähintään kerran kuukaudessa.


DA Ennen kuin aloitat kalkinpoiston, varmista että vesisäiliössä on hieman vettä.

DA For at opnænde de optimaler dampyddeevne og for at forlænge levetiden til apparatet, skal der fjernes partikler af kalk og andre urenheder i apparatet. Det er vigtigt, at kalkaflejringer og urenheder inde i apparatet fjernes regelmæssigt. Der anbefales det at udføre avalkningsprocessen minst en gang i måneden.

For du starter avalkningsprocessen, skal du sørge for, at der er noget vand i vandtanken.

NO For å opprettholde optimal dampydelse og for å forlenge levetiden til apparatet må du jevnlig fjerne kalkrester og urenheter inne i apparatet. Det anbefales derfor at du utfører avalkningsprocessen minst en gang i måneden.

Merk: For du begynner avalkningsprocessen, må du kontrollere at det er vann i vannbeholderen.

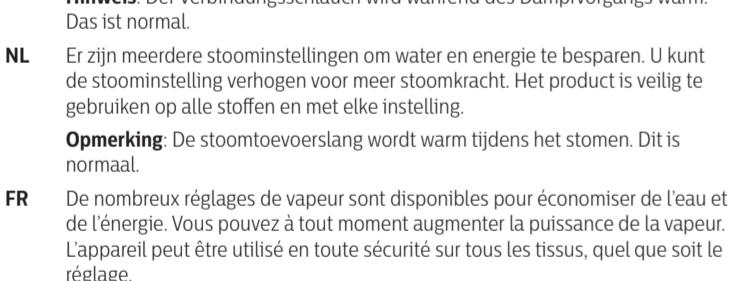

EN Note: Clean the appliance and wipe any deposits off the steamer head with a damp cloth and non-abrasive liquid cleaning agent.

DE Hinweis: Reinigen Sie das Gerät, und wischen Sie etwaige Ablagerungen auf dem Kopf der Dampfeinheit mit einem feuchten Tuch und einem milden Reinigungsmittel ab.

Hinweis: Reinigen Sie den Wasserbehälter nach jedem Gebrauch, um Kalkbildung zu verhindern.


FR Remarque: Nettoyez l'appareil et essuyez les dépôts de la tête du défriseur avec un chiffon humide et un détartrant liquide non abrasif.

SV Not: Rengör apparaten och tvätta bort eventuella avrester i steamerhuvudet med en fuktig trasa och ett icke-hårt rengöringsmedel.

FI Huomautus: Puhdistusta latte ja pyyhdyksistä päästäkö lähtöön ja vähennä kalkkivirtoa.

DA Bemærk: Rengør apparatet, og tværs over aflejringen af dampheovedet med en fugtig klud og et ikke-rudeende flydende rengøringsmedel.

NO NO: Sætt hanken på hånden du bruker til å holde opp plagget. Hanken beskytter hånden mot damp fra damphovedet.

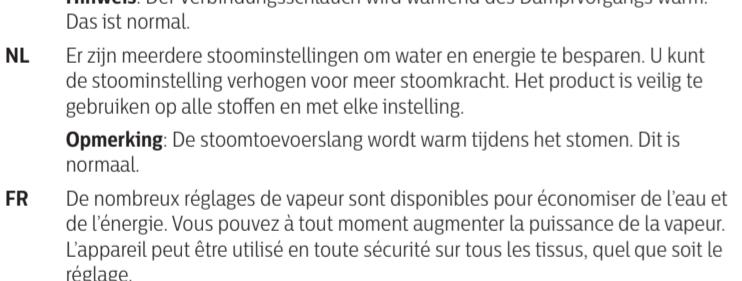

EN Always empty the water tank after usage, to prevent calc-build up and maintain good steam performance.

DE Hinweis: Entleeren Sie den Wassertank nach jedem Gebrauch, um Kalkbildung zu verhindern.

Hinweis: Reinigen Sie den Wassertank nach jedem Gebrauch, um Kalkbildung zu verhindern.


FR Remarque: Veuillez toujours vider le réservoir d'eau après utilisation pour éviter la formation de dépôts de calcaire et maintenir une bonne performance vapeur.

SV Not: Töm vattenbehältern efter användning för att förhindra att kalk bildas och för att bibehålla god ångprestation.

FI Huomautus: Puhdistusta latte ja pyyhdyksistä päästäkö lähtöön ja vähennä kalkkivirtoa.

DA Bemærk: Rengør apparatet, og tværs over aflejringen af dampheovedet med en fugtig klud og et ikke-rudeende flydende rengøringsmedel.

NO NO: Sætt hanken på hånden du bruker til å holde opp plagget. Hanken beskytter hånden mot damp fra damphovedet.

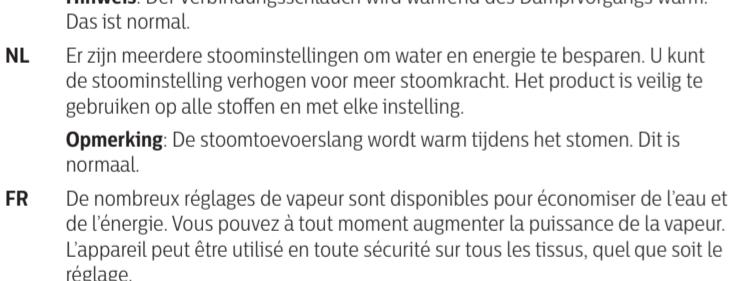

EN When the water tank is full, turn the tank cap clockwise to close the tank.

DE Wenn der Wassertank voll ist, drehen Sie den Wassertankdeckel im Uhrzeigersinn, um den Wassertank zu schließen.

Hinweis: Schließen Sie den Wassertank, sobald dieser voll ist.


FR Fermez complètement le bouchon du réservoir d'eau lorsque le réservoir est plein.

SV Släpp inte loss vattenbehältern när den är full.

FI Sulje veden täysin ja sulje veden täysin.

DA Lukk venstre vandtanken, når den er fuld.

NO Lukk venstre vannreservoaret når den er full.

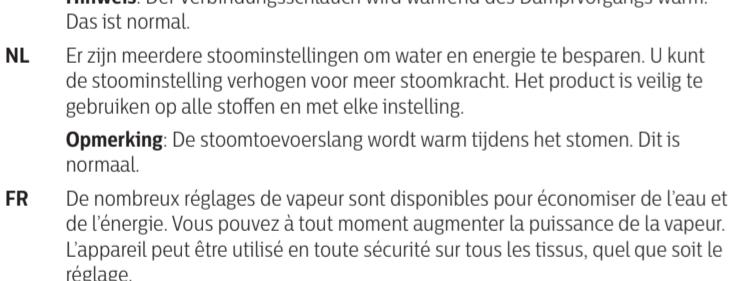

EN Note: Clean the appliance and wipe any deposits off the steamer head with a damp cloth and non-abrasive liquid cleaning agent.

DE Hinweis: Reinigen Sie das Gerät, und wischen Sie etwaige Ablagerungen auf dem Kopf der Dampfeinheit mit einem feuchten Tuch und einem milden Reinigungsmittel ab.

Hinweis: Reinigen Sie den Wassertank nach jedem Gebrauch, um Kalkbildung zu verhindern.


FR Remarque: Nettoyez l'appareil et essuyez les dépôts de la tête du défriseur avec un chiffon humide et un détartrant liquide non abrasif.

SV Not: Rengör apparaten och tvätta bort eventuella avrester i steamerhuvudet med en fuktig trasa och ett icke-hårt rengöringsmedel.

FI Huomautus: Puhdistusta latte ja pyyhdyksistä päästäkö lähtöön ja vähennä kalkkivirtoa.


DA Bemærk: Rengør apparatet, og tværs over aflejringen af dampheovedet med en fugtig klud og et ikke-rudeende flydende rengøringsmedel.

NO NO: Sætt hanken på hånden du bruker til å holde opp plagget. Hanken beskytter hånden mot damp fra damphovedet.

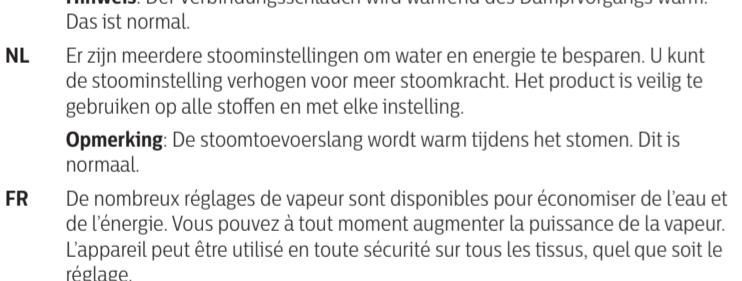

EN Note: Clean the appliance and wipe any deposits off the steamer head with a damp cloth and non-abrasive liquid cleaning agent.

DE Hinweis: Reinigen Sie das Gerät,

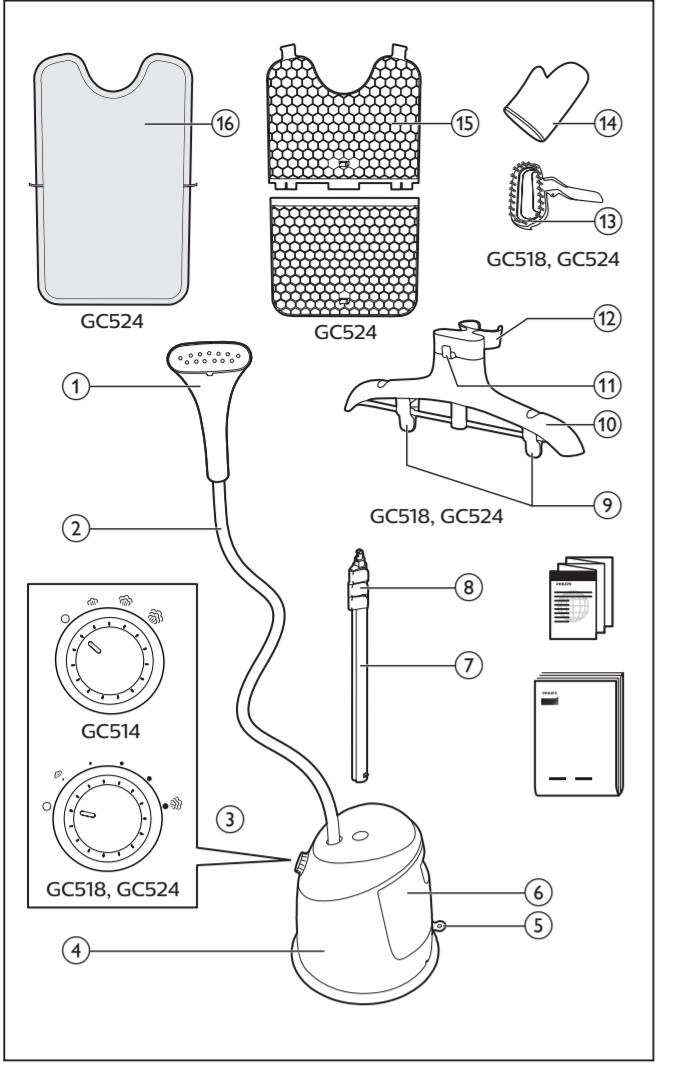

EN

- (1) Steamer head
- (2) Steam supply hose
- (3) Steam dial
- (4) Base
- (5) De-calc knob
- (6) Water tank
- (7) Pole
- (8) Pole lock clip
- (9) Pants clip (GC518, GC524)

DE

- (1) Kopf der Dampfeinheit
- (2) Verbindungsschlauch
- (3) Dampfregler
- (4) Gerätekabel
- (5) De-Calc-Verschluss
- (6) Wasserbehälter
- (7) Stange
- (8) Spannhalterungsschleife
- (9) Hosesymbol (GC518, GC524)

NL

- (1) Stoomkop
- (2) Stoomvoerlaag
- (3) Stoomregelaar
- (4) Voet
- (5) De-calc-knop
- (6) Waterreservoir
- (7) Stang
- (8) Spanngrendelingsklem
- (9) Broekje (GC518, GC524)

FR

- (1) Tête du défriseur
- (2) Cordon d'alimentation de la vapeur
- (3) Thermostat
- (4) Socle
- (5) Bouton de détartrage
- (6) Réservoir d'eau
- (7) Mât
- (8) Clip de sécurité du mât
- (9) Pinces pour pantalon
- (10) Cintre
- (11) Crochet
- (12) Support pour la tête du défriseur
- (13) Accessoire à plis et brosse (GC518, GC524)
- (14) Gant
- (15) Planche (GC524)
- (16) Housse de la planche (GC524)

SV

- (1) Anghuvudet
- (2) Angsladd
- (3) Angratt
- (4) Bas
- (5) Avalkningsknapp
- (6) Vattenbehältere
- (7) Stäng
- (8) Låsklämmer för stängen
- (9) Byxklämmer (GC518, GC524)

FI

- (1) Hörystimen pää
- (2) Höryleketu
- (3) Höryyltisin
- (4) Runko
- (5) Kalkipistonpotti
- (6) Vesissäiliö
- (7) Varsi
- (8) Varen luktisin
- (9) Housuklammari (GC518, GC524)

DA

- (1) Dampfmed
- (2) Dampsangle
- (3) Drejeknap til damp
- (4) Basisenhed
- (5) Afalkningsknap
- (6) Vandtank
- (7) Stang
- (8) Læsespænde
- (9) Bukspænde (GC518, GC524)

NO

- (1) Dampfmede
- (2) Dampsangle
- (3) Dampfbyter
- (4) Sokkel
- (5) Håndtak for kalkrens
- (6) Vannbeholder
- (7) Stang
- (8) Stangens låseklemme
- (9) Boksklemme (GC518, GC524)

English

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Important

Read the separate important information leaflet and the user manual carefully before you use the appliance. Save both documents for future reference.

This appliance has been designed for domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.

Danger

- Never immerse the appliance in water or any other liquid, nor rinse it under the tap.

Warning

- Check if the voltage indicated on the type plate corresponds to the local mains voltage before you connect the appliance.

- The plug must be plugged to a power outlet of the same technical characteristics of the plug only.

- Do not use the appliance if the plug, the mains cord, the steam supply hose or the appliance itself shows visible damage or if the appliance has been dropped or leaks.

- If the mains cord or the steam supply hose is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

- The appliance must not be left unattended while it is connected to the supply mains.

- The appliance can be used by children aged from 8 years or above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Children shall not play with the appliance.

- Cleaning and user maintenance shall not be made by children without supervision.

- Keep the appliance and its cord out of reach of children less than 8 years of age when the appliance is switched on or cooling down.

- Do not let the mains cord and steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture. Care should be taken when using the appliance due to the emission of steam.

- Do not use the mains cord or steam supply hose come into contact with the hot steam head.