

General description (fig. 1).

- Ⓐ Temperature control dial
- Ⓑ Steam control dial
○ = no steam
△ = moderate steam
▲ = maximum steam
• = Calc-Clean function
- Ⓒ Spray button (types GC1121, GC1120, GC1115 and GC1015)
- Ⓓ Spray nozzle (types GC1121, GC1120, GC1115 and GC1015)
- Ⓔ Water filling opening
- Ⓕ Water tank
- Ⓖ Type plate
- Ⓗ Cord
- Ⓘ Extra Steam function (press steam control dial) (type GC1121 and GC1120)

Important

For optimal safety, read these instructions carefully and look at the illustrations before you start using the appliance.

Keep these instructions for future reference.

- Never leave the iron unattended when it is connected to the mains.
- This appliance is not intended for use by children.
- Keep an eye on children to make sure that they do not play with the appliance.
- The soleplate of the iron can become extremely hot and may cause burns if touched.
- Never use the appliance if it is damaged in any way.
- When you have finished ironing, when you clean the appliance, when you fill or empty the water tank and also when you leave the iron even for a short while: set the steam control to position O, put the iron on its heel and remove the mains cord from the wall socket.
- If the supply cord is damaged, it must be replaced by a special cord or assembly available from Philips or a service agent.
- Check if the voltage indicated on the type plate corresponds to the local mains voltage before you connect the appliance.

Before first use

- 1 Remove sticker or protective foil from the soleplate if there is any.
- 2 Heat up the iron to the maximum temperature and pass the iron over a piece of damp cloth for several minutes to remove any residues from the soleplate.

The iron may give off some smoke when you use it for the first time. This will cease after a short while.

Filling the water tank

Never immerse the iron in water.

- 1 Remove the mains plug from the wall socket.
- 2 Set the steam control to position O (= no steam) (fig. 2).

3 Tilt the iron backwards.

- 4 Fill the water tank with cold tap water up to the maximum level (fig. 3).

Do not fill the water tank beyond the MAX indication.

Only use water: Do not use vinegar, starch, ironing concentrates or chemically treated water.

If the tap water in your area is very hard, we advise you to mix it with an equal amount of distilled water or to use distilled water only.

Setting the temperature

- 1 Put the iron on its heel.

Check the garment label for the required ironing temperature:

- Synthetic fabrics (e.g. acrylic, viscose, polyamide, polyester)
- Silk
- Wool
- Cotton, linen

If you do not know what kind of fabric(s) a garment is made of, determine the right ironing temperature by ironing a part that will be invisible when you wear the garment.

Silk, woollen and synthetic materials: iron the reverse side of the fabric to prevent shiny patches. Avoid using the spray function to prevent stains.

Start ironing the articles that require the lowest ironing temperature, such as those made of synthetic fibres.

- 3 Set the temperature control dial to the required ironing temperature by turning it to the appropriate temperature indication (fig. 4).

- 4 Put the mains plug in an earthed wall socket.

- 5 When the temperature pilot light has gone out, wait a while before you start ironing (fig. 5).

The pilot light will go on from time to time during ironing.

Steam ironing

- 1 Make sure that there is enough water in the water tank.

- 2 Set the temperature control dial to the recommended position.

See 'Setting the temperature'.

- 3 After the temperature pilot light has gone out, set the steam control to the appropriate steam position (fig. 6).

- △ for moderate steam (temperature settings •• to MAX)

- ▲ for maximum steam (temperature settings ••• to MAX)

The iron will start producing steam as soon as the set temperature has been reached.

Ironing without steam

- 1 Set the steam control dial to position O (= no steam).

- 2 Set the temperature control dial to the recommended position.

See 'Setting the temperature'.

Other features**Spray function**

Types GC1121, GC1120, GC1115 and GC1015.

To remove stubborn creases at any temperature

- Make sure there is enough water in the water tank.

- 1 Press the spray button several times to moisten the article to be ironed (fig. 7).

Extra Steam

Type GC1121 and GC1120.

This function provides extra steam to remove very stubborn creases.

- The Extra Steam function only works at temperature settings between ••• and MAX.

- 1 Set the steam control dial to the maximum position ▲ (fig. 8).

- 2 Press and hold the steam control dial for maximal 5 seconds (fig. 9).

- 3 Release the steam control dial and wait at least 1 minute before using this function again to prevent water from dripping out of the soleplate.

Cleaning and maintenance**Calc-Clean function**

The Calc-Clean function removes scale and impurities.

Use the Calc-Clean function once every two weeks. If the water in your area is very hard (i.e. when flakes come out of the soleplate during ironing), you should use the Calc-Clean function more frequently.

- 1 Set the steam control dial to position O.

- 2 Set the temperature control dial to MAX.

- 3 Fill the water tank to the maximum level.

Do not pour vinegar or other descaling agents into the water tank.

- 4 Put the plug in the wall socket.

- 5 Unplug the iron when the temperature pilot light has gone out.

- 6 Hold the iron over the sink and set the steam control to the Calc-Clean position * (fig. 10).

- 7 Pull the steam control dial slightly upwards and gently shake the iron until all water has been used up.

Steam and boiling water will come out of the soleplate, flushing out impurities and scale.

- 8 Press the steam control dial back to its original position and set it to position O after having used the Calc-Clean function.

- 9 Repeat the Calc-Clean process if the iron still contains a lot of impurities.

- 10 To clean the steam control needle, pull the steam control out of the appliance (fig. 11). Use vinegar to remove scale, if any, from the needle (fig. 12).

Do not bend or damage the steam control needle.

- 11 Reinsert the steam control needle by placing the point of the needle exactly in the centre of the hole and by fitting the small projection on the side of the needle into the slot (fig. 13).

- 12 Set the steam control to position O.

After the Calc-Clean process

- 1 Connect the iron to the mains to let the soleplate dry.

- 2 Unplug the iron when the pilot light has gone out.

- 3 Move the iron gently over a piece of used cloth to remove any water stains that may have formed on the soleplate.

- 4 Let the iron cool down before you store it.

Cleaning after ironing

- 1 Make sure the plug has been removed from the wall socket and the iron has cooled down.

- 2 Wipe scale and any other deposits off the soleplate with a damp cloth and a non-abrasive (liquid) cleaner.

Keep the soleplate smooth: avoid contact with metal objects.

- 3 Clean the upper part of the appliance with a damp cloth.

- 4 Regularly rinse the water tank with water. Empty the water tank after cleaning.

Storage

- 1 Make sure the plug has been removed from the wall socket and the iron has cooled down. Set the steam control to position O.

- 2 Empty the water tank (fig. 14).

- 3 Wind the mains cord round the cord storage facility.

- 4 Store the iron standing on its heel in a safe and dry place (fig. 15).

Information & service

If you need information or if you have a problem, please visit the Philips Web site at www.philips.com or contact the Philips Customer Care Centre in your country (you will find its phone number in the worldwide guarantee leaflet). If there is no Customer Care Centre in your country, turn to your local Philips dealer or contact the Service Department of Philips Domestic Appliances and Personal Care BV.

Troubleshooting

This chapter summarises the most common problems you could encounter with your iron. Please read the different sections for more details. If you are unable to solve the problem, please contact the Philips Customer Care Centre in your country. You can find its telephone number in the worldwide guarantee leaflet.

Problem	Possible cause(s)	Solution(s)
---------	-------------------	-------------

The iron is plugged in but the soleplate is cold.

The temperature control dial has been set to MIN.

The iron does not produce any steam.

The steam control dial has been set to position O.

The iron is not hot enough.

The Extra Steam function does not work (type GC1121 and GC1120).

The Extra Steam function has been used too often in a short period.

The iron is not hot enough.

Water leaks from the soleplate when I use the Extra Steam function (type GC1121, GC1120).

The spray function does not work (types GC1121, GC1120, GC1115 and GC1015).

Flakes and impurities come out of the soleplate during ironing.

Water leaks from the soleplate during ironing.

Water leaks from the soleplate while the iron is cooling down or after it has been stored.

The set temperature is too low.

You have been using hard water, which has caused scale flakes to develop inside the soleplate.

The set temperature is too high.

The iron has been put in horizontal position while there is still water in the water tank.

Empty the water tank and set the steam control to position O before storing the iron (see 'Storage'). Place the iron on its heel.

Use the Calc-Clean function a few times (see 'Calc-Clean').

Set the temperature control dial to a temperature suitable for steam ironing (●● to MAX).

Put the iron on its heel and wait until the pilot light has gone out before you start ironing.

Wait at least 1 minute before using the Extra Steam function again.

Fill the water tank (see 'Filling the water tank').

Press and hold the steam control dial for maximal 5 seconds.

Wait at least 1 minute before using the Extra Steam function again (see 'Extra Steam').

Fill the water tank (see 'Filling the water tank').

Set the temperature control dial to a temperature suitable for steam ironing (●● to MAX).

Put the iron on its heel and wait until the pilot light has gone out.

Wait at least 1 minute before using the Extra Steam function again.

Fill the water tank (see 'Filling the water tank').

Set the temperature control dial to a temperature suitable for steam ironing (●● to MAX).

Put the iron on its heel and wait until the pilot light has gone out.

Wait at least 1 minute before using the Extra Steam function again.

Fill the water tank (see 'Filling the water tank').

Set the temperature control dial to a temperature suitable for steam ironing (●● to MAX).

Put the iron on its heel and wait until the pilot light has gone out.

Wait at least 1 minute before using the Extra Steam function again.

Fill the water tank (see 'Filling the water tank').

Set the temperature control dial to a temperature suitable for steam ironing (●● to MAX).

Put the iron on its heel and wait until the pilot light has gone out.

Wait at least 1 minute before using the Extra Steam function again.

Fill the water tank (see 'Filling the water tank').

Set the temperature control dial to a temperature suitable for steam ironing (●● to MAX).

</

一般说明(图一)

- A** 温度控制旋转钮
B 蒸汽控制旋转钮
 ○ =无蒸汽
 △ =输出蒸汽
 ▲ =最大输出蒸汽量
 • =C ALC CLEAN Function (自动除垢)
C 喷雾钮(只限于GC1121/GC1120/GC1115/GC1015型号)
D 温度指示灯
E 注水孔
F 水槽
G 型号铭牌
H 电源线
I 加强蒸功能(按蒸汽控制旋转钮)(只限于GC1121/GC1120型号)

重要说明

为了保证最佳安全,在开始使用本产品前,请仔细阅读本使用说明书,并查看示图。

请妥善保管使用说明书。

► 在熨斗接人电源后,切勿离开熨斗使它处于无人监看的状态。

► 儿童若无人监督,不得使用本产品。

► 电熨斗的底板会变得非常烫,如触摸底板,可能会引起烫伤。

► 如果电熨斗损坏,切勿再使用。

► 在完成熨烫之后,或当您注水/倒出水箱时,又或当您离开熨斗(即使只有一会儿)时,必须从墙壁插座拔下电源插头、将蒸汽控制旋转钮调至位置○,并把熨斗竖放。

► 本产品的电源线有任何损坏时,只能用本产品专用的电源线更换。需要更换时,请与飞利浦产品经理或与飞利浦特约服务部联系。

► 在本产品连接电源之前,应检查型号铭牌上指示的电压是否与您家中的电源电压相同。

首次使用之前

1 除去底板上的所有粘贴或保护膜。

2 将熨斗升至最高温度,把熨斗放在一块湿布上熨烫几分钟,以除去底板上的任何残留物。

在首次使用时,熨斗可能会放出一些烟气。经过短时间后,烟气现象就会停止。

注水入水箱

切勿把熨斗浸在水中。

1 把电源插头从墙壁插座上拔下。

2 把蒸汽控制旋转钮调至位置○(=无蒸汽)。(图2)

3 将熨斗倾斜。

4 把自来水注入水箱至最大水位(MAX)。(图3)

不要注水超出MAX(最大)标记。

不要注入醋、淀粉或化学除垢水。

如果您的自来水很硬,我们建议您使用对半蒸馏水或只使用蒸馏水。

设定温度

1 把熨斗竖放。

2 把温度控制旋转钮调至所需的熨烫温度(图4)。

3 检查服装标签,以了解衣物所需的熨烫温度。

● 合成纤维(例如丙烯酸、粘胶、尼龙、涤纶纤维)

● 纤维

● 羊毛

●● 棉、亚麻

如果您不知衣服是用什么织物制成的,熨烫一块您穿著时看不见的地方,来确定正确的熨烫温度。丝綢、羊毛和合成材料:反至织物的内面熨烫,以防出现反光的小块。为防止水渍印,避免使用喷雾功能。

先熨烫要求最低熨烫温度的衣物,如用合成织物制成的衣物。

4 将电源插头插入有接地的墙壁插座中。

5 当温度指示灯熄灭后,等一会儿再开始熨烫(图5)。

在整个熨烫期间,温度指示灯会时亮时灭。

蒸汽熨烫

1 确保水箱内有足够的水。

2 将温度旋钮调至建议的位置。

参见设定温度一节。

3 当温度指示灯熄灭后,把蒸汽控制旋转钮调至合适的蒸汽位置(图6)。

△ 中等程度蒸汽(温度设定为●●至MAX)。

△ 最大蒸汽(温度设定为●●●至最大(MAX))。

一旦达到设定温度,熨斗底板就会开始放出蒸汽。

无蒸汽熨烫

1 将蒸汽控制旋转钮调至位置○(=无蒸汽)。

2 把温度控制旋转钮调至建议的位置。

参见设定温度一节。

其它功能

喷雾
只限于GC1121/GC1120/GC1115/GC1015型号

在任何熨烫温度下除去顽固的皱褶。

► 请确保水箱中一定要有足够的水。

1 按喷雾钮数次,使衣物变湿(图7)。

► 加强蒸气
只限于GC1121/GC1120型号

提供加强蒸气以去除较顽固的皱褶。

► 加强蒸气只适用于熨烫温度由●●●至最高(MAX)之间。

1 将蒸汽控制旋转钮调至最大蒸汽▲。(图8)

2 按压加强蒸气钮最长5秒钟。(图9)

3 然后释放按钮。最少于一分钟后才可再次使用加强蒸气功能,以避免水从底板流出。

清洁和保养

自动除垢功能(CALC CLEAN)

自动除垢功能帮助去除水垢和杂质。

请至少每两周使用一次自动除垢功能。如您居住的地区的水质很硬(即在熨烫过程中,底板出现锈片时),就应更频密使用自动除垢功能。

1 将蒸汽控制旋转钮调至位置○。

2 把温度控制旋转钮调至最大(MAX)。

3 把水箱注满至最高水位(MAX)。

不要把醋或其它除垢剂注入水箱。

4 将插头插入墙壁插座中。

5 当温度指示灯熄灭后,拔下熨斗的插头。

6 拿住熨斗,移到锌盆上方,将蒸汽控制旋转钮调至位置x(自动除垢CALC CLEAN)。(图10)

7 将蒸汽控制旋转钮轻微向上拉起,然后轻轻摇动熨斗,直至水箱中的水全部流出。

热水及蒸气便会将水垢及杂质从底板冲出来。

8 完成自动除垢程序后,轻压蒸汽控制旋转钮至原本位置并调至位置○。

9 如有大量水垢及杂质,请反复使用自动除垢功能。

10 要去除附在蒸汽控制针上的水垢及杂质,您可将蒸汽控制钮调至自动除垢(CALC CLEAN)位置,然后向上拉出蒸汽控制针(图11)。再用醋清洁。(图12)

不要弄弯或损坏蒸汽控制针。

11 然后放回蒸汽控制针。将针端放入人口正中心点,再对准切口位置放回蒸汽控制针。(图13)

12 轻压蒸汽控制旋转钮至原本位置,并调至位置○。

完成自动除垢程序后。

13 插上熨斗的插头,让底板变干。

14 当温度指示灯熄灭后,拔下熨斗插头。

15 把熨斗放在一块用过的布上轻轻前后移动,以去除留在底板上的水渍。

16 让熨斗冷却,然后存放好。

熨烫后之清洁

1 从墙壁插座拔下电源插头,让熨斗冷却。

2 用湿布和非腐蚀性(液体)清洁剂抹去底板上的水垢和其他沉积物。
请勿使用金属物件接触熨斗底板,以防刮花。

3 用湿布揩擦熨斗的上部。

4 定期用水冲洗水箱。并在清洗之后将水箱中的水全部倒出。

存放

1 把电源插头从墙壁插座拔下,把蒸汽控制旋转钮调至位置○。

2 将水箱中的水全部倒出。(图14)

3 让熨斗冷却。把电源线绕在存线装置上。

4 将熨斗竖直放置在稳固的表面上。(图15)

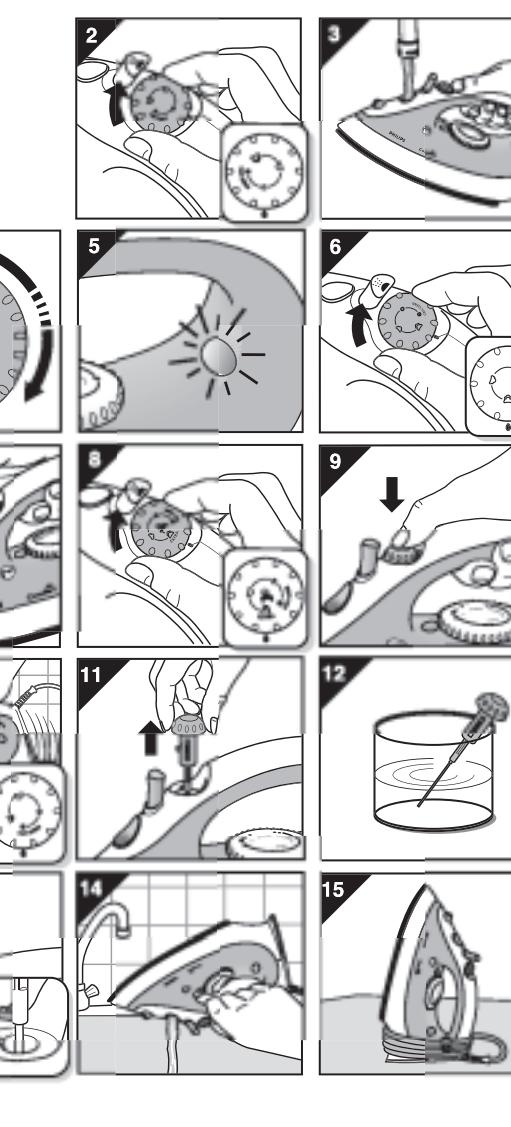
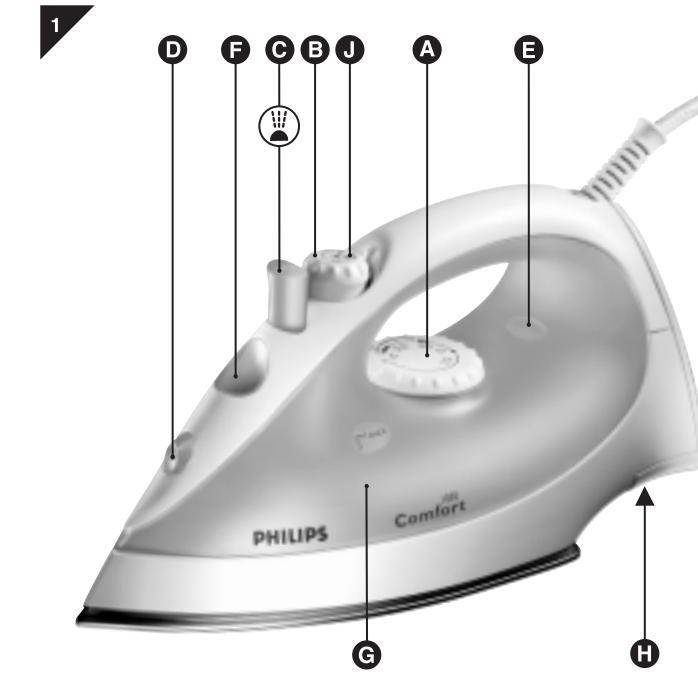
信息及维修服务

如果您需要信息,或如果你有问题,请浏览飞利浦公司的互联网站址:

www.philips.com 或与贵国的飞利浦顾客服务中心联系(您可以在产品全球维修保证书中找到电话号码)。如果贵国没有飞利浦顾客服务中心,请与当地的飞利浦经销商或与飞利浦家庭小电器的售后服务部联系。

排除故障指南

本章归纳了一些使用熨斗时最常见的问题,详细说明请参阅各有关章节。如果您无法解决问题,请与贵国的飞利浦服务中心或其它代表联系。您可以在产品全球维修保证书中找到飞利浦的电话号码。

**在除钙程序后**

1 将熨斗连接到电源使底盤变乾。

2 当指示灯熄灭时,请拔出熨斗的插头。

3 在用过的布料上轻轻移动熨斗,以移除任何可能在底盤上所形成的水垢。

4 在您将熨斗收藏前,请先让它冷却。

熨烫后的清理

1 请确定插头已从插座拔出,而且熨斗也已冷却。

2 用湿布和无腐蚀性的(液体)清洁剂擦拭底盤上之水垢和其他任何沉积物。

为了保持底盤的光滑,请避免与金属物体接触。

3 用湿布清理熨斗的上方部份。

4 定期使用清水冲洗熨斗水箱。在清理水箱后,请将水倒乾。

储存

1 请确定插头已插出,而且熨斗也已冷却。将蒸汽控制设定为○的位置。

2 将水箱内的水清空(图14)。

3 将电源线缠绕在熨斗捲線軸處。

4 将熨斗直立在其根部上,并储存在安全和乾燥的地方(图15)。

資訊和服務

如果您要查询任何讯息或是有任何問題,歡迎蒞臨飛利浦公司的網頁www.philips.com,或是與在您國家的飛利浦客戶服務中心聯繫(您可在全球保證書上找到這電話號碼)。如果您的國家沒有客戶服務中心,則請找當地飛利浦經銷商或與飛利浦在當地的服務部門聯繫。

疑难排解

本章節綜合您使用熨斗時可能會遇到最常見的問題。請參閱不同章節以獲得更詳細的資訊。如果您的問題仍未解決,請聯繫貴國內的飛利浦客戶服務中心。您可在全球保證書上找到服務中心的電話號碼。

問題**可能原因****解答**

熨斗已經插電,但是底盤仍是冷的。
檢查插頭是否正確地連接到插座。

溫度控制設定最小。
將溫度控制設定到所需的溫度。

熨斗不會產生蒸汽。
水箱中水量不夠。
裝水到水箱(請參閱「裝水到水槽」部份)。

蒸汽控制設定到○的位置。
將蒸汽控制設置△或▲的位置。

熨斗不夠燙。
設定溫度到適合於蒸氣熨燙的溫度(從●●到MAX)。將熨斗直立放置在根部上,並先等候直到指示燈熄滅後才開始熨燙。

強力的蒸氣功能不能作用(GC1121和GC1120型)。
蒸汽控制鈕的時間最長僅可以有5秒鐘。

強力的蒸氣功能在短時間內使用過度。
再次使用強力蒸氣功能之前,請至少先等候1分鐘。

熨斗不夠燙。
將溫度控制設定介於●●●和MAX之間的溫度。將熨斗直立放置其根部上,並等候指示燈熄滅。

水箱中的水量不夠。
裝水到水箱(請參閱「裝水到水槽」部份)。

當使用強力蒸氣功能時,底盤會漏水(GC1121和GC1120型)。
將溫度控制設定介於●●●和MAX之間的溫度。將熨斗直立放置在根部上,並等候指示燈熄滅。

強力蒸氣功能在短時間內使用過度。
再次使用強力蒸氣功能之前,請至少先等候1分鐘(請參閱「強力蒸氣部份」)。

水箱中的水量不夠。
裝水到水箱(請參閱「裝水到水箱」部份)。

因您使用的是硬水,故會在底盤上形成水垢。
使用除鈣功能數次(請參閱「除鈣(Calc-Clean)功能部份」)。

在熨燙過程中會有小薄片和雜質從底盤中產生。
將溫度控制設定到適合蒸氣熨燙的溫度(從●●到MAX)。將熨斗直立放置其根部上,並在開始熨燙前等候指示燈熄滅。</