# Always there to help you 始终如一地为您提供帮助

TY5080





EN User manual 3 ZHS 用户手册 23

Read this user manual carefully before you use the appliance.

Save it for future reference. 使用产品前请仔细阅读本使用说明书 保留备用





### Contents

1	<b>Important</b> Safety	<b>4</b> 4
2	Your air purifier	6
	Product Overview	6
	Controls overview	7
3	Getting started	8
	Install filters	8
4	Using the appliance	10
	Understand the air quality light	10
	Switch on	10
	Change the fan speed	11
5	Cleaning	13
	Cleaning schedule	13
	Clean the body of the appliance	13
	Clean the air outlet cover	13
	Clean the air quality sensor	14
	Clean the pre-filter	15
6	Replacing the air purification filter Understand the healthy air protect	16
	lock	16
	Replace the air purification filter	16
7	Resetting the filter lifetime	
	counter	17
8	Troubleshooting	18
9	Guarantee and service	20
	Order parts or accessories	20

10	Notices	20
	Electromagnetic fields (EMF)	20
	Recycling	20

### 1 Important

### Safety

Read this user manual carefully before you use the appliance, and save it for future reference.

#### Danger

- Do not let water or any other liquid or flammable detergent enter the appliance to avoid electric shock and/or a fire hazard.
- Do not clean the appliance with water, any other liquid, or a (flammable) detergent to avoid electric shock and/ or a fire hazard.
- Do not spray any flammable materials such as insecticides or fragrance around the appliance.

#### Warning

- Check if the voltage indicated on the appliance corresponds to the local power voltage before you connect the appliance.
- If the power cord is damaged, you must have it replaced by Philips, a service center authorized by Philips, or similarly qualified persons in order to avoid a hazard.
- Do not use the appliance if the plug, the power cord, or the appliance itself is damaged.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a

- safe way and understand the hazards involved. Child shall not play with the appliance. Cleaning and maintenance shall not be made by children without supervision.
- Do not block the air inlet and outlet, e.g. by placing items on the air outlet or in front of the air inlet.
- Make sure that foreign objects do not fall into the appliance through the air outlet.

#### Caution

- This appliance is not a substitute for proper ventilation or regular vacuum cleaning.
- If the power socket used to power the appliance has poor connections, the plug of the appliance becomes hot. Make sure that you plug the appliance into a properly connected power socket.
- Always place and use the appliance on a dry, stable, level, and horizontal surface.
- Leave at least 20cm free space behind and on both sides of the appliance and leave at least 30cm free space above the appliance.
- Do not place anything on top of the appliance.
- Do not sit or stand on the appliance.
   The appliance is equipped with omni wheels. Sitting or standing on the appliance may lead to potential injuiry.
- Do not place the appliance directly below an air conditioner to prevent condensation from dripping onto the appliance.
- Make sure all filters are properly installed before you switch on the appliance.

#### 4 EN


- Only use the original Philips filters specially intended for this appliance.
   Do not use any other filters.
- Avoid knocking against the appliance (the air inlet and outlet in particular) with hard objects.
- Always lift or move the appliance by both handles at the sides of the appliance.
- Do not insert your fingers or objects into the air outlet or the air inlet to prevent physical injury or malfunctioning of the appliance.
- Do not use this appliance when you have used indoor smoke-type insect repellents or in places with oily residues, burning incense, or chemical fumes
- Do not use the appliance near gas appliances, heating devices or fireplaces.
- Always unplug the appliance after use and before cleaning or carrying out other maintenance.
- Do not use the appliance in a room with major temperature changes, as this may cause condensation inside the appliance.
- To prevent interference, place the appliance at least 2m away from electrical appliances that use airborne radio waves such as TVs, radios, and radio-controlled clocks.
- This appliance is only intended to be used indoor under normal operating conditions.
- Do not use the appliance in wet surroundings or in surroundings with high ambient temperatures.
- The appliance does not remove carbon monoxide (CO) or radon (Rn). It cannot be used as a safety device in case of accidents with combustion processes and hazardous chemicals.

- If you need to move the appliance, disconnect the appliance from the power supply first. The appliance is equipped with omni wheels and is easy to move.
- When moving the appliance, do it slowly and do not push it rapidly.
- Do not move the appliance by pulling its power cord.

### 2 Your air purifier

Read this user manual carefully before you use the appliance, and save it for future reference.


### **Product Overview**

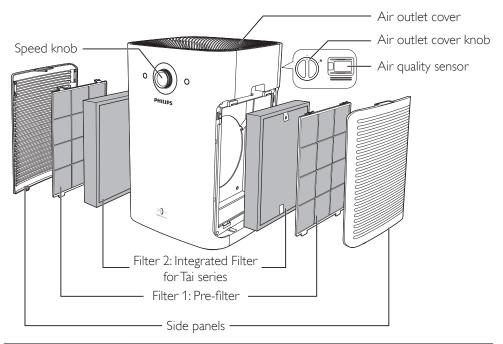

Type number	Filter
TY5089	Integrated Filter for Tai series*

<sup>\*</sup>Hereinafter referred to as "air purification filter".

### Controls overview

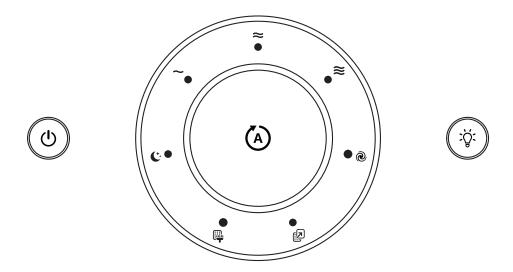

(b): On/Off button	(a):Turbo speed
<b>C</b> : Silent speed	: Pre-filter cleaning alert
	: Air purification filter replacement alert
	: Air quality light button
<b>≋</b> : Speed 3	(Auto button

### 3 Getting started

#### Install filters

Remove the packaging of the filters before using the appliance. Unpack them and place them back into the appliance described as follows:

### Note


- There is one set of filters on each side of the appliance. Each side is equipped with one pre-filter and one air purification filter.
- Insert the filters in the correct position.
- Make sure that you place the air purification filter in the appliance first and then the pre-filter.
- Make sure that the side with the tag is pointing towards you.
- 1 Unlock the side panel from the appliance, and then gently pull the bottom of the side panel towards you.




2 To take out the pre-filter, press the two clips down and pull the filter towards you.



3 Take out the air purification filter from the appliance.

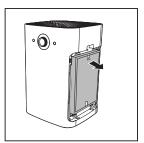


4 Remove the packaging materials of the air purification filter.

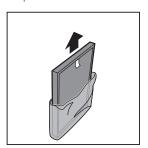

**5** Put the unpacked air purification filter back into the appliance.



**6** Put the pre-filter back into the appliance.

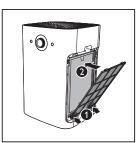



• Make sure that the side with the two clips is pointing towards you, and that all hooks of the pre-filter are properly attached to the purifier.

7 To reattach the side panel, mount the panel onto the bottom of the appliance first (1). Then, gently push the panel against the body of the appliance (2).



**8** Repeat all steps for the other side of the appliance.

### 4 Using the appliance

### Understand the air quality light

Color of the air quality light	Air quality level
Blue	Good
Dark purple	Fair
Pink	Unhealthy
Red	Very unhealthy


The air quality light automatically goes on when the appliance is switched on, and lights up all colors in sequence. In a short while the air quality sensor selects the color that corresponds to the ambient air quality.



• The built-in air quality sensor measures the air quality and automatically selects the appropriate color of the air quality light. When the air is clean, the color of the air quality light is in blue. When the air quality deteriorates, the color of the air quality light changes to dark purple, purple or red.

### Switch on

- 1 Put the plug of the appliance into the wall socket.
  - → The appliance beeps.
  - → All lights go on once and then go out again.
- 2 Press (1) to switch on the appliance.

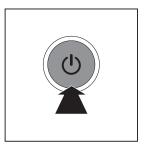

- After measuring the air quality for a short time, the air quality sensor automatically selects the appropriate color of the air quality light.
- The default fan speed is (AUTO).
- 3 Press () again to switch off the appliance.

### Change the fan speed

### (A) (AUTO)

In auto mode, the appliance selects the appropriate fan speed in accordance with the ambient air quality.

- Press (A) to select the auto mode.
  - → A and one of the fan speed indicators light up.



- 2 Press (A) again to deactivate the auto mode.
  - → The appliance operates in manual mode.




• You can also turn the speed knob and select another fan speed to switch from auto mode to manual mode.

#### Manual

You can mannually select the fan speed you need.

- Turn the speed knob to select the fan speed:
  - **∼** (Speed 1)
  - **≈** (Speed 2)
  - **≋** (Speed 3)
  - (Silent speed)
  - (Turbo speed)

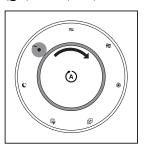

### \* Tip

• If the air quality light lights up blue, the air quality is good, and you can select a lower fan speed. On the other hand, if the air quality light lights up pink or red, the air quality is unhealthy, and you can select a higher fan speed to purify the air more quickly.

### Set the sensitivity of the air quality sensor


This appliance allows you to adjust the sensitivity of the air quality sensor. There are three sensitivity levels:

- Extra sensitive (default setting)
- Sensitive
- Standard

You can adjust the sensitivity of the air quality sensor in the following way:




- At higher sensitivity level, the purifier is more sensitive to air pollutants.
   When the purifier is in auto mode, it is more likely to choose a higher fan speed. The air quality sensor selects the appropriate color of the air quality light in accordance with the higher sensitivity.
- 1 Unplug the appliance first, plug it in again and switch it on. Within 5 to 30 seconds from the appliance is switched on, press and hold (a) and (b) for 3 seconds.
  - → The corresponding fan speed light flashes to show the current sensitivity level of the air quality sensor.

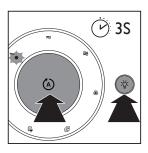

Fan speed light	Sensitivity level
~	Extra sensitive
≈	Sensitive
≋	Standard

2 Turn the speed knob to adjust the sensitivity level of the air quality sensor.

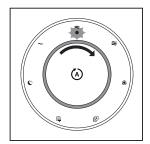

When the desired sensitivity level is selected, press and hold and for 3 seconds again to save the setting.



- When you are changing the sensitivity level, if you do not change any setting within 10 seconds, or do not press and hold (a) and (b) for 3 seconds after you have changed the sensitivity level, the appliance will resume normal work without saving any changes.
- After the sensitivity level is changed and saved, the appliance operates at the latest setting of the sensitivity level whenever you switch on the appliance.

#### 5 **Cleaning**

### Note

- Always unplug the appliance before you clean it.
- Never immerse the appliance in water or any other liquid.
- Never use abrasive, aggressive, or flammable cleaning agents such as bleach or alcohol to clean any part of the appliance.
- Only the pre-filter is washable. The air purifier filter is not washable nor vacuum cleanable.

### Cleaning schedule

Frequency	Cleaning method
When necessary	Wipe the surface of the appliance with a soft dry cloth.
	Clean the air outlet cover
Every two months	Clean the air quality sensor with a dry cotton swab.
When the filter cleaning indicator lights up	Clean the pre-filter.
When the filter replacement indicator 🗗 starts flashing	Replace the air purification filter.


### Clean the body of the appliance

Regularly clean the inside and outside of the appliance to prevent dusts from collecting.


- Wipe away dust with a soft dry cloth from the body of the appliance.
- 2 Clean the air inlet and the air outlet with a soft dry cloth.

#### Clean the air outlet cover

To unlock the air outlet cover, turn the cover knob clockwise, and pull up the cover to remove.

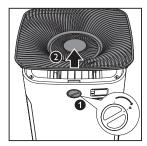

Clean the cover with a brush.

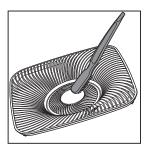


To reattach the cover mount it onto the top of the appliance first, and then turn the cover knob anti-clockwise to lock the cover.



### Clean the air quality sensor

Clean the air quality sensor every two months for optimal functioning of the appliance. Clean it more frequently if you use the appliance in a dusty environment.


Clean the inlet and outlet of the air quality sensor with a soft brush.

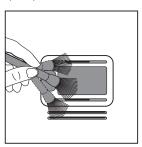

2 Open the cover of the air quality sensor.



3 Clean the sensor, the dust inlet and outlet with a lightly moistened cotton swab, and finish with a dry cotton swab.

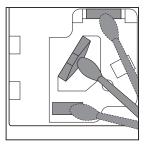

4 Close the sensor cover.




### Clean the pre-filter

Filter alert light status	Follow this
lights up.	Clean the pre-filter



• Filter light 📦 lights up approximately once a month.

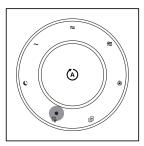

1 Call the Philips Consumer Care Center (4009200180) immediately to clean the pre-filter.


### 6 Replacing the air purification filter

### Understand the healthy air protect lock

This appliance is equipped with the healthy air protect lock to make sure that the filters are in optimal condition when the appliance is operating. When the filter is almost full and has to be replaced, the air purification filter replacement light ([2]) starts to flash.

When you do not replace the filter in time:

- → The air purification filter replacement light (2) remains
- → The appliance stops operating and is locked. Call the Philips Consumer Care Center (4009200180) immediately to replace the filter.

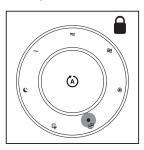


### Replace the air purification

Filter alert light status	Follow this
lights up.	Replace the air purification filter.



• The air purification filter is not washable nor vacuum cleanable.

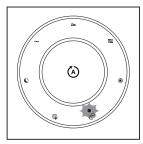


- Take out the pre-filters on both sides of the appliance.
- Take out the air purification filter on both sides of the appliance using the tag on the filter and gently put them into the trash bin.



#### Note

- Do not touch the pleated filter surface, or smell the filter as it has collected pollutants from the air.
- Wash your hands after disposing of the used filters.
- Remove all packaging material of the new filters.

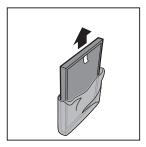

4 Put the new filters into the appliance on both sides.




5 After the pre-filters are properly put back in the appliance, reset the filter lifetime counter. (Refer to chapter 7 "Resetting the filter lifetime counter".)

### Resetting the filter 7 lifetime counter

When you replace the filters, it is important that you also reset the filter lifetime counter afterwards. This allows the appliance to be in sync with the filter lifetime.

- Press and hold (v) for 3 seconds.
  - → The filter light goes out, and the appliance resumes working automatically.

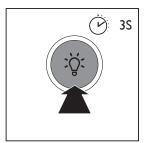

#### Troubleshooting 8

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, contact the Consumer Care Center in your country.

Problem	Possible solution
The appliance does not work even though it is plugged in.	The filter replacement light has been on continuously but you did not replace the corresponding filter, it is now locked. In this case, replace the filter and reset the filter time.
No air comes out of the air outlet.	Put the plug of the appliance into the power socket and switch on.
The airflow that comes out of the air outlet is significantly weaker than before.	<ul> <li>The pre-filter is dirty. Clean the pre-filter (see the chapter "Cleaning").</li> <li>Make sure that you have removed all packaging material from the filters.</li> </ul>
The air quality does not improve, even though the appliance has been operating for a long time.	<ul> <li>One of the filters has not been placed in the appliance. Make sure that all filters are properly installed in the following order, starting with the innermost filter: 1) air purification filter; 2) prefilter.</li> <li>The air quality sensor is wet. The humidity level in your room is high and causes condensation. Make sure that the air quality sensor is clean and dry (see the chapter "Cleaning").</li> </ul>
The color of the air quality light always stays the same.	The air quality sensor is dirty. Clean the air quality sensor (see the chapter "Cleaning").
The appliance produces a strange smell.	The first few times you use the appliance, it may produce a plastic smell. This is normal. However, if the appliance produces a burnt smell, contact your Philips dealer or an authorized Philips service centre. The appliance may also produce an unpleasant smell when one of the filters is dirty. In this case, clean or replace the filter concerned.

Problem	Possible solution
I need cleaner air because I have an allergy.	You can change the air quality sensor sensitivity (see the chapter "Use the appliance, section "Set the sensitivity of the air quality sensor") to make the appliance clean the air even better.
The appliance is extra loud.	<ul> <li>Please check if you have removed all the packaging material from the filters.</li> <li>If the appliance is still too loud, you can change the fan speed to a lower fan speed level.</li> </ul>
The appliance still indicates that I need to replace a filter, but I already did.	Perhaps you did not reset the filter lifetime counter. Switch on the appliance. Then press and hold (**) for 3 seconds.

## 9 Guarantee and service

If you need information or if you have a question, please contact the Philips Consumer Care Center in your country (4009200180). If there is no Consumer Care Center in your country, go to your local Philips dealer:

### Order parts or accessories

If you have to replace a part or want to purchase an additional part, please contact the Philips Consumer Care Center in your country (4009200180).

### 10 Notices

### Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

#### Compliance with EMF

Koninklijke Philips N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay

well within the EMF standards applicable at the time of producing the products. Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.

### Recycling

Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.





### 目录

1	重要事项	24
	安全	24
2	您的空气净化器	26
	产品概览	26
	控制面板概览	27
3	使用入门	28
	安装过滤网	28
4	使用产品	30
	了解空气质量指示灯	30
	打开	30
	更改风速	31
5	清洁	33
	清洁计划	33
	清洁产品机身	33
	清洁出风口盖	33
	清洁空气质量传感器	34
	清洁预过滤网	35
6	更换空气净化过滤网	36
	了解健康空气智能锁	36
	更换空气净化过滤网	36
7	重置滤网使用寿命计数器	37
8	故障排除	38
9	保修与服务	39
	订购部件或附件	39

10 注意事项	39
电磁场 (EMF)	39
回收	39

### 1 重要事项

### 安全

使用产品前请仔细阅读本使用说明书,并妥善保管以备日后参考。 危险

- 切勿让水或任何其它液体或易燃性清洁剂进入产品,以免发生触电和/或火灾。
- 切勿用水或任何其它液体或(易燃性)清洁剂来清洁产品,以免发生触电和/或火灾。
- 切勿在产品周围喷洒杀虫剂或 香水等仟何可燃材料。

#### 警告

- 在将产品连接电源之前,请先 检查产品所标电压与当地的供 电电压是否相符。
- 如果电源软线损坏,为了避免 危险,必须由制造商、其维修 部或类似部门的专业人员更换。
- · 如果插头、电源线或产品本身 受损、请勿再使用本产品。
- · 器具不打算由有肢体、感官或精神能力缺陷或缺少使用经验和知识的人(包括儿童)使用,除非有负责他们安全的人对他们进行与器具使用有关的监督或指导。应照看好儿童,确保他们不玩耍本器具。

- 请勿堵塞进风和出风口,例如不要将物体放置在出风口上或进风口前方。
- 确保异物不会从出风口掉入机器内部。

#### 警告

- 本产品不能替代正常通风, 日常吸尘的电器设备。
- 如果连接产品的电源插座接触不良,则产品的插头可能会变得很热。确保所连接的电源插座接触良好。
- 一定要在干燥、稳固、平整且水平的表面上放置和使用本产品。
- · 产品的后侧及两侧均要留出至少 20 厘米的空间,产品上方至少要留出 30 厘米的空间。
- 切勿在本产品上放置任何物品。
- 请勿坐在或站在产品上面。产品配有全向轮。坐在或站在产品上面可能导致潜在的人身伤害。
- 切勿将产品直接放在空调下方, 以防冷凝水滴到产品中。
- 打开产品电源之前,务必确保 已经正确安装所有过滤网。
- 只能使用飞利浦专门为本产品 设计的原装过滤网。切勿使用 任何其它过滤网。
- 请勿用硬物敲击本产品(尤其 是进风口和出风口)。

24 简体中文


- 请务必通过产品两端的手柄提起或移动产品。
- 请勿将手指或物体插入出风口 或进风口,以防止产品出现物 理损坏或发生故障。
- 当您使用室内喷雾式驱虫剂或 在充满油污、易燃气体或化学 烟雾的地方时,请勿使用本产品。
- 请勿在气体用具、加热装置或 火炉附近使用本产品。
- 使用之后和清洁产品或执行其 他维护之前,务必将电源插头 拔掉。
- 请勿在温度变化较大的房间内 使用本产品,因为这可能导致 产品内部的冷凝。
- · 为防止产生干扰,产品与使用 无线电波的电器(例如电视机、 收音机和无线电控制时钟)之 间至少应保持 2 米距离。
- 本产品仅限于室内使用并在正常运行条件下使用。
- 请勿在潮湿环境或高温环境中 使用本产品。
- 本产品不能去除一氧化碳 (CO) 或氡 (Rn), 因此在发生 燃烧和危险化学品事故时, 不 能作为安全设备使用。
- 如果需要移动产品,请先断开 产品的电源。产品配有全向轮, 便于移动。
- 移动产品时,务必缓慢,不要快速推动。

• 请勿通过拉扯电源线来移动产 品。

### 2 您的空气净化器

使用本产品之前,请仔细阅读本用户手册,并妥善保管以备日后参考。


### 产品概览

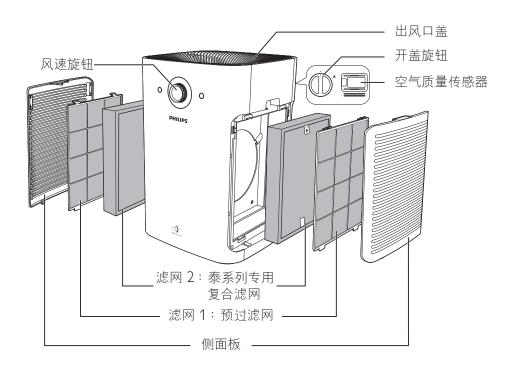

滤网型号	滤网名称
TY5089	泰系列专用复合滤网*

<sup>\*</sup>以下统称"空气净化过滤网"。

### 控制面板概览

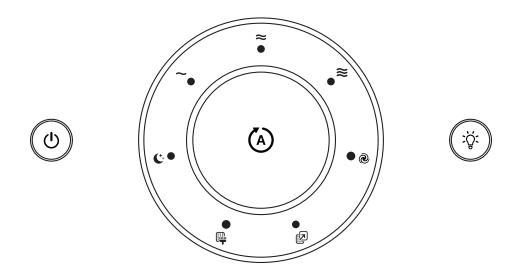

②: 开关按钮	❷: 强力风速
<b>ぐ</b> :静音风速	<b>-</b> :清洁预过滤网指示灯
~: 一档风速	<b>!</b> : 更换空气净化过滤网指示灯
≈: 二档风速	❤️: 空气质量指示灯按钮
≋: 三档风速	<b>(A)</b> : 自动模式按钮

### 3 使用入门

### 安装过滤网


使用产品之前,务必先除去过滤网的包装。请按以下所述拆掉滤网的包装,然 后将其重新放回产品中。

### 注意

- 产品的两侧各有一组滤网。每侧均配备一个预过滤网和一个空气净化过滤网。
- 将过滤网插到正确位置。
- 确保先将空气净化过滤网放入产品, 然后再放入预过滤网。
- 确保带拉片的一面朝向您。
- **1** 将手指放在侧面板上方凹槽处并将 其朝外拉,然后将侧面板从产品上 取出。




**2** 要取出预过滤网,请向下按两个固定夹,然后朝自己的方向拉动滤网。

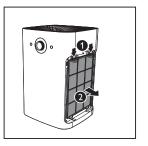

3 从产品中取出空气净化过滤网。



4 拆掉空气净化过滤网的包装材料。

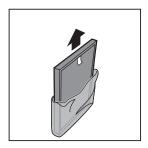

**5** 将已拆去包装的空气净化过滤网放入产品。



6 将预过滤网放回产品内部。



### 注意

- 确保带两个固定夹的一面朝向您, 并确保预过滤网的所有挂钩均已正 确连接到净化器上。
- **7** 要重新安装侧面板,请先将面板安装到产品的底部 (1)。然后,朝产品机身方向轻推面板 (2)。



8 在产品的另一侧重复执行所有步骤。

### 4 使用产品

### 了解空气质量指示灯

空气质量指示灯的颜色	空气质量级别
蓝色	良好
深紫色	一般
粉红色	不健康
红色	非常不健康


产品打开后,空气质量指示灯会自动亮起,并按顺序亮起所有颜色。片刻后,空气质量传感器会选择与环境空气质量相对应的颜色。

### 注意

内置空气质量传感器能够测量空气质量并自动选择空气质量指示灯的适当颜色。当空气清洁时,空气质量指示灯的颜色为蓝色。当空气质量恶化时,空气质量指示灯的颜色将变为深紫色、紫色或红色。

### 打开

- 1 将产品插头插入电源插座。
  - → 产品发出蜂鸣音。
  - → 所有指示灯均亮起一次,然后 再熄灭。
- 2 按 ⑩ 打开产品。

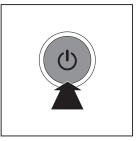

- → 测量空气质量片刻后,空气质 量传感器会自动选择空气质量 指示灯的适当颜色。
- → 默认风速为 (自动)。
- 3 再次按 ⑩ 可关闭产品。

### 更改风速

### (A) (自动)

在自动模式下,产品会按照环境空气质量选择相应的风速。

- 1 按 (A) 可选择自动模式。
  - → **(A)** 指示灯与其中一个风速指示 灯会亮起。



2 再次按 (A) 可关闭自动模式。 → 产品会以手动模式运行。


### 注意

 您也可以转动速度旋钮,选择其他 风速以从自动模式切换至手动模式。

#### 手动

您可以手动选择所需的风速。

- 1 转动速度旋钮可选择以下风速:
  - ~ (一档风速)
  - ≈ (二档风速)
  - ≋ (三档风速)
  - ₾ (静音风速)
  - @ (强力风速)

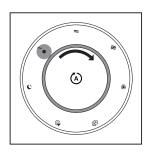

### ★ 提示

 如果空气质量指示灯呈蓝色亮起, 表明空气质量良好,您可以选择较低的风速。另一方面,如果空气质量指示灯呈粉红色或红色亮起,则表明空气质量较差,您可以选择较高的风速,以便快速净化空气。

### 设置空气质量传感器的灵敏度

本产品可以调整空气质量传感器的灵敏 度。灵敏度分为三个级别:

- 超级灵敏(默认设置)
- 灵敏
- 标准

您可通过以下方法调节空气质量传感器 的灵敏度:


### 注意

- 将产品设置为较高灵敏度时,净化器会对空气中的污染物变得更加敏感。当净化器处于自动模式时,其很可能会选择更高的风速。空气质量传感器会按照较高的灵敏度选择空气质量指示灯的适当颜色。
- **1** 拔掉插头后,重新插上并启动产品。 在产品打开后的 5 至 30 秒内,同 时按住 ③ 和 **(A)** 3 秒钟。
  - → 相应的风速指示灯将开始闪烁, 以指明空气质量传感器的当前 灵敏度级别。



风速指示灯	灵敏度级别
~	超级灵敏
≈	灵敏
≋	标准

2 转动速度旋钮可调节空气质量传感器的灵敏度级别。

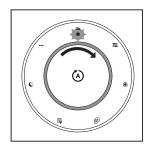

3 选中所需的灵敏度级别后,再次按 住 ② 和 **(A)** 3 秒钟可保存设置。

### 注意

- 更改灵敏度级别时,如果您在 10 秒钟未更改任何设置,或在更改灵敏度级别后没有同时按住 ② 和 (A) 达 3 秒钟,则产品将恢复正常工作而不保存任何更改。
- 更改灵敏度级别并保存后,只要打开产品,其就会按照最近设置的灵敏度级别运行。

### 5 清洁

### 注意

- 清洁产品前,务必先将电源插头拔掉。
- 切勿将本产品浸入水中或任何其它液体中。
- 切勿使用研磨性、腐蚀性或易燃性 清洁剂(例如漂白剂或酒精)清洁 本产品的任何部件。
- 只有预过滤网可以用水清洗。空气 净化过滤网不可水洗,也不可用吸 尘器清洁。

### 清洁计划

频率	清洁方法
必要时	使用干软布清洁产品表面。
	清洁出风口盖
每两个月	使用干棉签清洁空 气质量传感器。
当滤网清洁指示 灯 瞬 亮起时	清洁预过滤网。
当滤网更换指示灯 4 开始闪烁时	更换空气净化过滤 网。

### 清洁产品机身

定期清洁产品的内侧和外侧, 防止灰尘积聚。

- **1** 使用柔软的干布擦去产品机身上的灰尘。
- **2** 使用柔软的干布清洁进风口和出风口。

### 清洁出风口盖

**1** 要解锁出风口盖,请顺时针转动开 盖旋钮,然后向上拉动盖子即可将 其卸下。



2 用软刷除去盖子上的灰尘。




**3** 要重新安装出风口盖,请先将带凸缘的一面插入机器,然后轻压另一侧直到出风口盖正确锁定。



### 清洁空气质量传感器

每 2 个月清洁一次空气质量传感器,确保产品以最佳性能运行。如果产品用在多尘的环境中,请经常进行清洁。


**1** 使用软刷清洁空气质量传感器的进 风口和出风口。

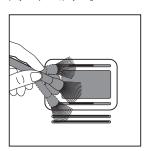

2 打开空气质量传感器的盖子。



**3** 使用稍微浸湿的棉签清洁传感器、 进风口和出风口,最后用干棉签擦 干。

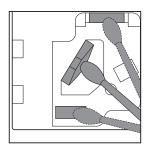

4 关闭传感器盖。




### 清洁预过滤网

滤网提示灯状态	按此操作
₩ 亮起	清洁预过滤网

### 注意

• 滤网清洁指示灯 🖷 大约每月亮起一次。

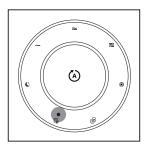


1 请立即致电飞利浦售后服务中心 (4009200180) 清洁预过滤网。

# 6 更换空气净化过滤网

### 了解健康空气智能锁

本产品具有健康空气智能锁,旨在确保产品运行过程中,滤网在最佳条件下工作。当滤网快满载并且必须进行更换时,更换滤网指示灯(图)将开始闪烁。如果您不及时更换过滤网:

- → 更换滤网指示灯(**②**)会持续 亮起。
- → 产品将停止运行并且锁定。 请立即致电飞利浦售后服务中 心(4009200180)更换滤网。

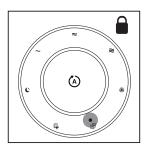


### 更换空气净化过滤网

滤网提示灯状态	按此操作
L 17/7),	更换空气净化过滤网

### 注意

 空气净化过滤网不可水洗,也不可 用吸尘器清洁。

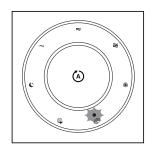


- 1 取出产品两侧的预过滤网。
- 2 使用滤网上的标签取出产品两侧的 空气净化过滤网,轻轻将其放入垃 圾桶。



### 注意

- 请勿接触滤网的褶皱面,或闻滤网的气味,因为其包含从空气中收集的污染物。
- 弃置用过的滤网后,请洗净双手。
- 3 拆掉新滤网上的所有包装材料。

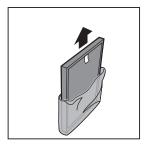

#### 36 简体中文

### 4 将新滤网放入产品两侧。



5 将预过滤网正确放回产品后,重置空气净化过滤网使用寿命计数器。 (请参阅第7章"重置滤网使用寿命计数器"。)

### 7 重置滤网使用寿 命计数器

更换过滤网后,请务必也重置过滤网使 用寿命计数器。这可使产品与过滤网使 用寿命同步。

- 1 按住 ♥ 保持 3 秒钟。
  - → 滤网指示灯熄灭,产品将自动 恢复工作。



### 8 故障排除

本章归纳了您在使用产品时最常遇到的问题。如果您无法根据下面的信息解决问题,请与您所在国家/地区的客户服务中心联系。

问题	可能的解决方法
产品即使接通电源也无法工作。	• 过滤网更换指示灯持续亮起后,您尚未更换相应的过滤网,此时机器会被锁定。在此情况下,更换过滤网并重置过滤网时间。
出风口中无空气排出。	将插头插入插座,然后打开产品。
出风口排出的气流比之 前明显减弱。	<ul><li>预过滤网变脏。清洁预过滤网(请参阅"清洁"一章)。</li><li>请确保您已拆除过滤网的所有包装材料。</li></ul>
即使在产品已经运行很长时间以后,空气质量也未见显著改善。	<ul> <li>某一过滤网可能没有放在产品内部。请确保按以下顺序正确安装所有滤网,首先从最里面的滤网开始:1)空气净化过滤网:2)预过滤网。</li> <li>空气质量传感器湿了。室内湿度过高,因此形成了冷凝水。确保空气质量传感器清洁干燥(请参阅"清洁"一章)。</li> </ul>
空气质量指示灯的颜色 始终保持不变。	空气质量传感器变脏。清洁空气质量传感器(请参阅"清洁"一章)。
产品散发出一种奇怪的 味道。	前几次使用产品时,其可能会产生塑料味。这是正常的。不过,如果产品发出烧焦的气味,请联系飞利浦经销商或经授权的飞利浦服务中心。当滤网很脏时,产品也可能会发出难闻的气味。在这种情况下,请清洁或更换相关的滤网。
我是过敏症患者,需要 更干净清新的空气。	您可以更改空气质量传感器的灵敏度(请参阅"使用产品"一章的"设置空气质量传感器的灵敏度"部分),使产品能够更全面细微地净化空气。
产品声音过大。	• 请检查是否已经除去过滤网上的所有包装材料。 • 如果产品声音仍然太大,您可以将风速更改为较低的风速级别。
我已经更换过了过滤网, 但是产品还是一直指示 需要更换滤网。	可能是您未重置滤网使用寿命计数器。启动产品。然后,按住 ③ 3 秒钟。

### 9 保修与服务

如果您需要了解信息或有任何疑问,请与您所在国家/地区的飞利浦客户服务中心联系(4009200180)。如果您所在的国家/地区没有飞利浦客户服务中心,请向当地的飞利浦经销商求助。

### 订购部件或附件

如果您必须更换部件或需要购买额外的部件,请与您所在国家/地区的飞利浦客户服务中心联系(4009200180)。

### 10 注意事项

### 电磁场 (EMF)

本飞利浦产品符合所有有关暴露于电磁场的适用标准和法规。

#### 符合 EMF 标准

Koninklijke Philips N.V. 主要面向广大 消费者制造和销售各类产品,包括通常 能发射和接收电磁信号的各种电子设备。 飞利浦的主要业务原则之一就是要对自 己的产品采取各种必要的健康和安全措 施,使其符合所有相应的法律要求,并 在制造产品时严格遵照适用的 EMF 标 准。

飞利浦致力于开发、生产和销售对人体健康无任何危害的产品。飞利浦确认,据目前的科学证明,如果其产品使用得当,则对人体毫无危害。

长期以来,Philips 始终在国际 EMF 和安全标准的制定工作中扮演着积极的角色,这就使 Philips 总能预知标准的发展趋势,并率先应用到其产品中去。

### 回收

弃置产品时,请不要将它与一般生活垃圾一同丢弃,应将其交给官方指定的回收中心。 这样做有利于环保。

产品 : 飞利浦空气净化器泰系列TY5080

型号: KJ710G-T01

额定电压 : 220V~ 额定频率 : 50Hz

额定输入功率: 65 W 生产日期 : 请见产品本体

产地 : 韩国

经销单位:飞利浦(中国)投资有限公司

上海市天目西路218号1602-1605 全国顾客服务热线: 4009 200 180

本产品根据国标GB4706.1-2005,

GB4706.45-2008制造

出版日期: 2015-07-10



