

ENGLISH

General description (Fig.1)

- 1 Spray nozzle
- 2 Cap of filling opening
- 3 Steam control
- **CALC CLEAN** = Calc-Clean function
- ∞ = dry ironing
- **ECO** = optimal steam
- \oplus = maximum steam
- \ominus = steam clean
- 4 Steam boost button
- 5 Spray button
- 6 Temperature dial
- 7 Temperature light (specific types only: with safety-auto off indication)
- 8 Mains cord
- 9 Type plate
- 10 Water tank with MAX water level indication
- 11 Soleplate

Using the appliance

Filling the water tank

Note: Your appliance has been designed to be used with tap water. If you live in an area with very hard water, fast scale build-up may occur. In this case, it is recommended to mix 50% distilled water and 50% tap water to prolong the lifetime of your appliance.

Note: Do not put perfume, vinegar, starch, descaling agents, ironing aids, chemically descaled water or other chemicals in the water tank.

- 1 Set the steam control to position ∞ (dry ironing). (Fig. 2)
- 2 Fill the water tank up to the MAX indication (Fig. 3).
- 3 Close the cap of the filling opening.

Selecting temperature and steam setting

Table 1

Fabric type	Temperature setting	Steam setting	Steam boost	Spray
Linen	MAX	\ominus , \oplus	Yes	Yes
Cotton	•••	\ominus , \oplus	Yes	Yes
Wool	••	ECO	No	Yes
Silks	•	∞	No	No
Synthetic fabrics (e.g. acrylic, nylon, polyamide, polyester)	•	∞	No	No

Note: As indicated in the table above, do not use steam or steam boost at a low temperature, otherwise hot water may leak from the iron.

- 1 Consult table 1 to set the temperature dial to the appropriate setting for your garment (Fig. 4).
- 2 Put the iron on its heel and plug it in. The temperature light goes on to indicate that the iron is heating up (Fig. 5).
- 3 When the temperature light goes out, the iron has reached the correct temperature.
- 4 Consult table 1 to select a steam setting that corresponds to the temperature you have set (Fig. 6).

Note: To use turbo steam \ominus , keep the steam control pressed to the turbo steam position \ominus continuously.

Features

Spray function

- Press the spray button to moisten the article to be ironed. This helps remove stubborn creases (Fig. 7).

Steam boost function

- Press and release the steam boost button for a powerful boost of steam to remove stubborn creases (Fig. 8).

Vertical steam

- You can use the steam boost function when you hold the iron in vertical position for removing creases from hanging clothes, curtains etc. (Fig. 9).

Safety auto-off function (specific types only)

- The iron switches off automatically if it has not been moved for 30 seconds in horizontal position or 8 minutes in vertical position. The auto-off light starts flashing (Fig. 10).
- To let the iron heat up again, pick up the iron or move it slightly until the auto-off light goes out.

ECO steam setting

- Select the ECO steam setting instead of the maximum steam setting \oplus to save energy yet to achieve satisfactory ironing results. (Fig. 11)

Dry ironing

- Set the steam control to ∞ (dry ironing) to iron without steam. (Fig. 2)

Cleaning and maintenance

Cleaning

- 1 Set the steam control to ∞ (dry ironing), unplug the iron and let it cool down. (Fig. 2)
- 2 Pour any remaining water out of the water tank.
- 3 Wipe flakes and any other deposits off the soleplate with a damp cloth and a non-abrasive (liquid) cleaning agent.

Caution: To keep the soleplate smooth, avoid hard contact with metal objects. Never use a scouring pad, vinegar or other chemicals to clean the soleplate.

Note: Regularly rinse the water tank with tap water. Empty the water tank after rinsing.

Calc-Clean function

IMPORTANT: To prolong the lifetime of your appliance and to maintain good steaming performance, use the Calc-Clean function once every two weeks. If the water in your area is very hard (i.e. when flakes come out of the soleplate during ironing), use the Calc-Clean function more frequently.

- 1 Make sure the appliance is unplugged and the steam control is set to ∞ (dry ironing). (Fig. 2)
- 2 Fill the water tank to the MAX indication (Fig. 3).

Do not pour vinegar or other descaling agents into the water tank.

- 3 Plug the iron and set the temperature dial to MAX (Fig. 12).
- 4 Unplug the iron when the temperature light goes out.
- 5 Hold the iron over the sink. Push the steam control to the Calc-Clean position and hold it (Fig. 13).
- 6 Gently shake the iron until all water in the water tank has been used up (Fig. 14).

Caution: While scale is flushed out, steam and boiling water also come out of the soleplate.

- 7 Set the steam control back to ∞ (dry ironing). (Fig. 2)

Note: Repeat the Calc-Clean process if the water that comes out of the iron still contains scale particles.

After the Calc-Clean process

- 1 Plug in the iron. Let the iron heat up to let the soleplate dry.
- 2 Unplug the iron when the temperature light goes out.
- 3 Move the iron gently over a piece of cloth to remove any water stains on the soleplate.
- 4 Let the iron cool down before you store it.

Storage

- 1 Unplug the iron and set the steam control to ∞ (dry ironing). (Fig. 2)
- 2 Wind the mains cord round the cord storage facility and store the iron on its heel (Fig. 15).

Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Centre in your country (see the worldwide guarantee leaflet for contact details).

Problem	Possible cause	Solution
Water drops from the soleplate or wet spots appear on the garment during ironing.	The set temperature is too low for steam ironing.	Set an ironing temperature that is suitable for steam ironing. See table 1.
You have put an additive in the water tank.	Rinse the water tank and do not put any additive in the water tank.	
You have used the steam boost function too often within a very short period.	Wait a while before you use the steam boost function again.	
You have used the steam boost function at a too low temperature.	Set an ironing temperature at which the steam boost function can be used ($\bullet\bullet\bullet$ to MAX).	
Flakes and impurities come out of the soleplate during ironing.	Hard water forms flakes inside the soleplate.	Use the Calc-Clean function (see chapter 'Cleaning and maintenance', section 'Calc-Clean function').
Water drops from the soleplate after the iron has cooled down or has been stored.	You have put the iron in horizontal position while there was still water in the water tank.	Empty the water tank and set the steam control to position 'dry' after use. Store the iron on its heel.
Water leaks from the cap of the filling opening.	You have overfilled the water tank.	Do not fill the water tank beyond the MAX indication. Pour excess water out of the water tank.
When I push the steam control to the turbo steam position, the steam control jumps back.	You did not keep the steam control in the turbo steam position.	If you want to use turbo steam, you have to keep the steam control in the turbo steam position continuously. For other steam settings, this is not necessary.

INDONESIA

Gambaran umum (Gbr. 1)

- 1 Nozel semprotan
- 2 Tutup lubang pengisian
- 3 Kontrol uap
- **CALC CLEAN** = Fungsi Calc-Clean
- ∞ = kerja kering
- **ECO** = uap optimal
- \oplus = uap maksimum
- \ominus = uap turbo
- 4 Tombol semprotan uap
- 5 Tombol semprotan
- 6 Putaran suhu
- 7 Lampu suhu (hanya tipe tertentu dengan indikasi pengaman mati-otomatis)
- 8 Cakram terikat
- 9 Pelat kimia
- 10 Tangki air dengan tanda batas air MAX
- 11 Tapai setrika

Menggunakan alat
Mengisi tangki air

Catatan: Jangan memasukkan parfum, cuka, kanji, zat pembersih kerak, alat bantu penyeterikaan, bahan kimia pembersih kerak atau bahan kimia lainnya ke dalam tangki air.

- 1 Atur kontrol uap ke posisi ∞ (dry ironing). (Gbr. 2)
- 2 Isi tangki air hingga tanda MAX (Gbr. 3).
- 3 Pasang tutup lubang pengisian.

Note: Jangan menambahkan parfum, cuka, kanji, zat pembersih kerak, alat bantu penyeterikaan, bahan kimia pembersih kerak atau bahan kimia lainnya ke dalam tangki air.

- 1 Set the steam control to position ∞ (dry ironing). (Fig. 2)
- 2 Fill the water tank up to the MAX (Gbr. 3).
- 3 Close the cap of the filling opening.

Note: Do not put perfume, vinegar, starch, descaling agents, ironing aids, chemically descaled water or other chemicals in the water tank.

- 1 Set the steam control to position ∞ (dry ironing). (Fig. 2)
- 2 Isi tangki air hingga tanda MAX (Gbr. 3).
- 3 Pasang tutup lubang pengisian.

Memilih setelan suhu dan uap

Tabel 1

Jenis kain	Setelan suhu	Setelan uap	Sembur uap	Semprotan
Linen	MAKS	\ominus , \oplus	Ya	Ya
Katun	•••	\ominus , \oplus	Ya	Ya
Wol	••	ECO	Tidak	Ya
Sutera	•	∞	Tidak	Tidak
Bahan sintetis (contoh: akrilik, nilon, poliamida, polyester)	•	∞	Tidak	Tidak

Catatan: Seperti yang ditunjukkan pada tabel di atas, jangan gunakan uap atau semburan uap pada suhu yang rendah karena air panas dapat bocor dari setrika.

- 1 Baca tabel 1 untuk mengatur putaran suhu ke setelan yang sesuai untuk kain Anda (Gbr. 4).
- 2 Letakkan setrika pada sumurnya lalu colokkan. Lampu suhu menyalu untuk mendanakan setrika sedang dipanaskan (Gbr. 5).
- 3 Saat lampu suhu mati, setrika telah mencapai suhu yang benar.
- 4 Baca tabel 1 untuk memilih setelan uap yang sesuai dengan suhu yang telah Anda atur (Gbr. 6).

Catatan: Gunakan uap turbo \ominus , tekan terus kontrol uap di posisi uap turbo \ominus .

- 1 Tekan tombol semprotan untuk melembabkan pakaian yang akan diseterika. Hal ini membantu menghilangkan kusut yang membendung.
- 2 Untuk setrika yang dilengkapi fungsi semprotan uap, gunakan fungsi semprotan uap.
- 3 Saat lampu suhu mati, setrika telah mencapai suhu yang benar.
- 4 Baca tabel 1 untuk memilih setelan uap yang sesuai dengan suhu yang telah Anda atur (Gbr. 6).

Catatan: Gunakan uap turbo \ominus , tekan terus kontrol uap di posisi uap turbo \ominus .

- 1 Tekan tombol semprotan untuk melembabkan pakaian yang akan diseterika. Hal ini membantu menghilangkan kusut yang membendung.
- 2 Untuk setrika yang dilengkapi fungsi semprotan uap, gunakan fungsi semprotan uap.
- 3 Saat lampu suhu mati, setrika telah mencapai suhu yang benar.
- 4 Baca tabel 1 untuk memilih setelan uap yang sesuai dengan suhu yang telah Anda atur (Gbr. 6).

Catatan: Gunakan uap turbo \ominus , tekan terus kontrol uap di posisi uap turbo \ominus .

- 1 Tekan tombol semprotan untuk melembabkan pakaian yang akan diseterika. Hal ini membantu menghilangkan kusut yang membendung.
- 2 Untuk setrika yang dilengkapi fungsi semprotan uap, gunakan fungsi semprotan uap.
- 3 Saat lampu suhu mati, setrika telah mencapai suhu yang benar.
- 4 Baca tabel 1 untuk memilih setelan uap yang sesuai dengan suhu yang telah Anda atur (Gbr. 6).

Catatan: Gunakan uap turbo \ominus , tekan terus kontrol uap di posisi uap turbo \ominus .

- 1 Tekan tombol semprotan untuk melembabkan pakaian yang akan diseterika. Hal ini membantu menghilangkan kusut yang membendung.
- 2 Untuk setrika yang dilengkapi fungsi semprotan uap, gunakan fungsi semprotan uap.
- 3 Saat lampu suhu mati, setrika telah mencapai suhu yang benar.
- 4 Baca tabel 1 untuk memilih setelan uap yang sesuai dengan suhu yang telah Anda atur (Gbr. 6).

Catatan: Gunakan uap turbo \ominus , tekan terus kontrol uap di posisi uap turbo \ominus .

- 1 Tekan tombol semprotan untuk melembabkan pakaian yang akan diseterika. Hal ini membantu menghilangkan kusut yang membendung.
- 2 Untuk setrika yang dilengkapi fungsi semprotan uap, gunakan fungsi semprotan uap.
- 3 Saat lampu suhu mati, setrika telah mencapai suhu yang benar.
- 4 Baca tabel 1 untuk memilih setelan uap yang sesuai dengan suhu yang telah Anda atur (Gbr. 6).

Catatan: Gunakan uap turbo \ominus , tekan terus kontrol uap di posisi uap turbo \ominus .

- 1 Tekan tombol semprotan untuk melembabkan pakaian yang akan diseterika. Hal ini membantu menghilangkan kusut yang membendung.
- 2 Untuk setrika yang dilengkapi fungsi semprotan uap, gunakan fungsi semprotan uap.
- 3 Saat lampu suhu mati, setrika telah mencapai suhu yang benar.
- 4 B