




EN User manual ID Buku Petunjuk Pengguna

PHILIPS  
PENANAK NASI  
HD3053  
437W  
220V - 50-60Hz  
Negara Pembuat: Cina  
Dilimpor oleh:  
PT Philips Indonesia Commercial  
Jl Buncit Raya Kav 99 Jakarta 12510  
Indonesia  
No. Reg.: I.21.PIC1.02134.0817

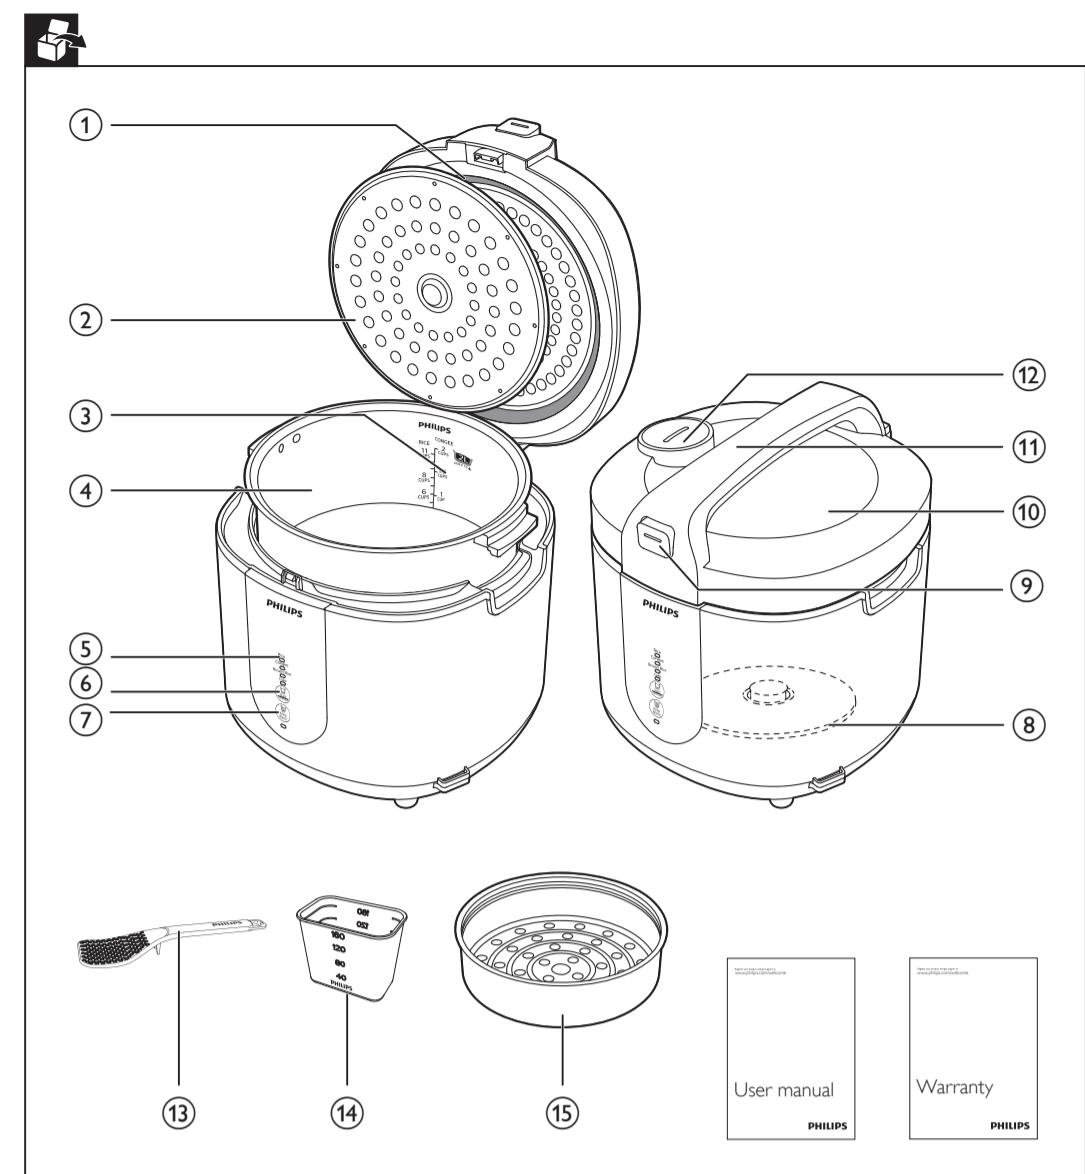

©2018 Koninklijke Philips N.V.  
All rights reserved.  
HD3053\_UM\_ID\_v2.0

## English

### 1 Your rice cooker

Congratulations on your purchase, and welcome to Philips!  
To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

### 2 Important

Read this important information leaflet carefully before you use the rice cooker and save it for future reference.


#### Danger

- The appliance must not be immersed.

#### Warning

- This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance should be positioned in a stable situation with the handles (if any) positioned to avoid spillage of the hot liquids.
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;

- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.
- Make sure that the damaged power cord is replaced by Philips, a service center authorized by Philips or similarly qualified persons in order to avoid a hazard.
- The appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- CAUTION:** Surface of the heating element is subject to residual heat after use.
- WARNING:** Make sure to avoid spillage on the power connector to avoid a potential hazard.
- Always follow the instructions and use the appliance properly to avoid potential injury.
- Check if the voltage indicated on the appliance corresponds to the local power voltage before you connect it.
- Only connect the appliance to a grounded power outlet. Always make sure that the plug is inserted firmly into the power outlet.
- Do not use the appliance if the plug, the power cord, the inner pot, the sealing ring, or the main body is damaged.
- Do not let the power cord hang over the edge of the table or worktop on which the appliance stands.
- Make sure the heating element, the temperature sensor, and the outside of the inner pot are clean and dry before you put the plug in the power outlet and switch it on.
- Do not place the inner pot directly over an open fire to cook rice.
- Do not use the inner pot if it is deformed.
- The accessible surfaces may become hot when the appliance is operating. Take extra caution when touching the appliance.
- Beware of hot steam coming out of the steam vent during cooking or out of the appliance when you open the lid. Keep hands and face away from the appliance to avoid the steam.
- Do not lift and move the appliance while it is operating.
- Do not exceed the maximum water level indicated in the inner pot to prevent overflow.

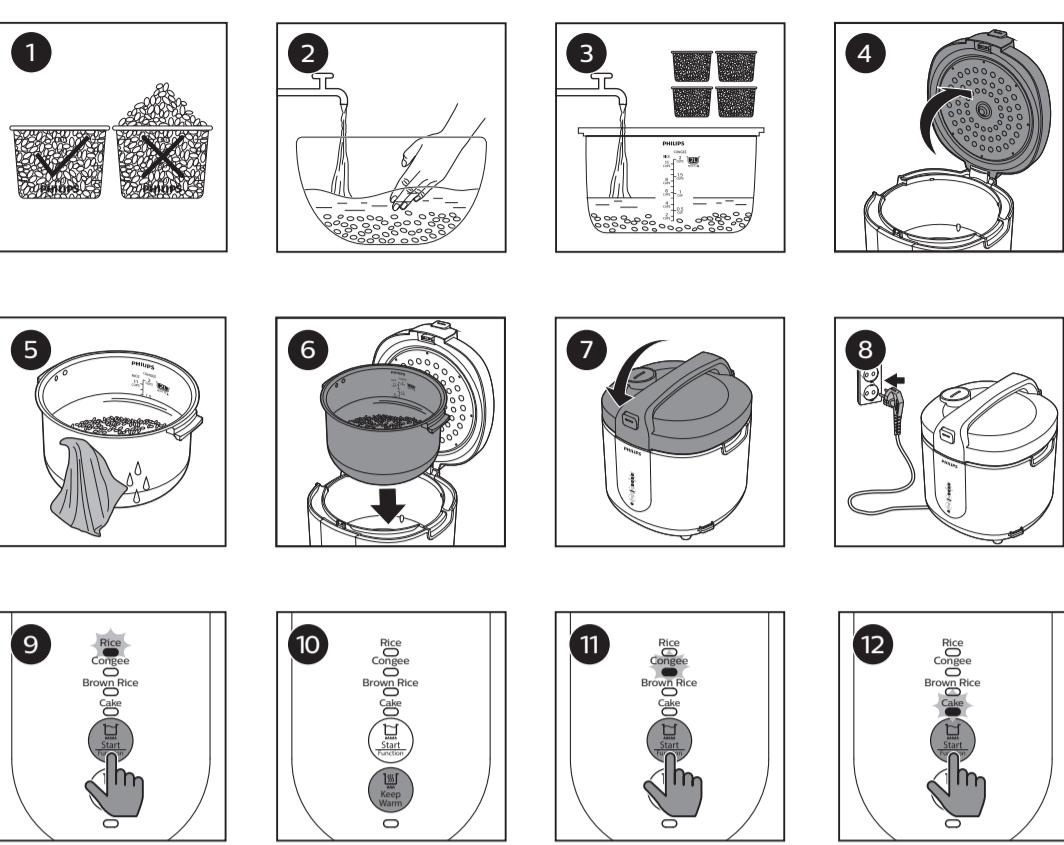

#### Note

- Each cup of uncooked rice normally gives 3 cups of cooked rice. Do not exceed the quantities indicated on the inside of the inner pot.
- The level marked inside the inner pot is just an indication. You can always adjust the water level for different types of rice and your own preference. If the voltage is unstable at the area you live, it is possible that the rice cooker overflows.
- Besides following the water level indications, you can also add rice and water at 1:1-1:2 ratio for rice cooking. Do not exceed the quantities indicated on the inside of the inner pot.
- Use a separate container to wash the rice to avoid damaging the non-stick coating of the inner pot.
- Make sure that the outside of the inner pot is dry and clean, and that there is no residue on the heating element or the magnetic switch.

#### Cooking Rice

- Follow the steps in "Preparations before use".
- Press the Start/Function button (Fig. 9).
  - The Rice or Brown Rice indicator lights up.
- Press and hold the Start/Function button (Fig. 9) for 3 seconds to start the cooking process.
- When the cooking is finished, the rice cooker switches to the keep-warm mode automatically, and the Keep Warm (Fig. 10) indicator lights up (Fig. 10).

#### Note

- Do not exceed the volume indicated nor exceed the maximum water level indicated in the inner pot, as this may cause the rice cooker to overflow.
- Do not open the lid right after the rice cooker enters the keep-warm mode and ensure that rice is in keep-warm mode for 15 minutes if you cook much rice.
- After the cooking process is started, you can press the Keep Warm button to terminate the current work, and the appliance goes to standby mode.

#### Making Congee

- Put the food and ingredients of the porridge or soup in the inner pot.
- Follow the steps in "Preparations before use".
- Press the Start/Function button (Fig. 9) repeatedly (Fig. 11).
  - The Congee indicator lights up.
- Press and hold the Start/Function button (Fig. 9) for 3 seconds to start the cooking process.
- When the cooking is finished, the rice cooker switches to the keep-warm mode automatically, and the Keep Warm (Fig. 10) indicator lights up (Fig. 10).

#### Note

- You can cook porridge by following the water level indications in the inner pot or by the ratio of rice and water 1:8.
- Do not exceed the maximum water level indicated in the inner pot, as this may cause the rice cooker to overflow.
- The porridge may be thicker if it's in keep-warm mode for a long time.

#### Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

### 3 What's in the box

Rice cooker main unit	Rice scoop
Measuring cup	Steam basket
User manual	Warranty card

#### Overview

① Sealing ring	⑨ Lid release button
② Detachable inner lid	⑩ Top lid
③ Water level indications	⑪ Handle
④ Inner pot	⑫ Steam vent cap*
⑤ Cook function indicators	⑬ Rice scoop
⑥ Start/Function button	⑭ Measuring cup
⑦ Keep-warm button	⑮ Steam basket
⑧ Heating element	

\*The steam vent cap is detachable from inside and undetachable from outside.

### 4 Using the rice cooker

#### Before first use

- Take out all the accessories from the inner pot. Remove the packaging material of the inner pot.
- Clean the parts of the rice cooker thoroughly before using the rice cooker for the first time (see chapter "Cleaning").

#### Note

- Make sure all parts are completely dry before you start using the rice cooker.

#### Preparations before use

Before using the rice cooker, you need to follow the preparation:

- Measure the rice using the measuring cup provided (Fig. 1).
- Wash the rice thoroughly (Fig. 2).
- Put the pre-washed rice in the inner pot.
- Add water to the level indicated on the scale inside the inner pot that corresponds to the number of cups of rice used (Fig. 3). Then smooth the rice surface.
- Press the lid release button to open the lid (Fig. 4).
- Wipe the outside of the inner pot dry (Fig. 5), then put the inner pot in proper contact with the heating element.
- Close the lid of the rice cooker (Fig. 7), put the plug in the power socket (Fig. 8).

#### Tip

- You can adjust the ratio of the ingredients according to personal taste.

- Separate the egg white and egg yolk in two containers.
- Add the castor sugar into egg white and egg yolk. Use the egg beater to beat the cream till puffy and creamy.

#### Tip

- Use 40°C water to warm the egg if it's cold, so that the cake is soft and fluffy.
- The container and the egg beater must be clean and free from grease. Otherwise, the egg cannot be milky. Do not stir in the inner pot to avoid damaging the non-sticky coating.

- Add the cake mix flour and stir well.

- Add milk and the melted butter (heat the butter until it melts), quickly stir the ingredients.

