



EN User manual

ID Petunjuk Pengguna

English

1 Important

Read this important information leaflet carefully before you use the rice cooker and save it for future reference.

Danger

- The appliance must not be immersed.

Warning

- This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance should be positioned in a stable situation with the handles (if any) positioned to avoid spillage of the hot liquids.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- Surface of the heating element is subject to residual heat after use.
- WARNING:** Make sure to avoid spillage on the power connector to avoid a potential hazard.
- WARNING:** Always follow the instructions and use the appliance properly to avoid potential injury.
- According to the instructions prescribed in this user manual, use a soft damp cloth to clean the surfaces in contact with food and make sure to remove all the food residues stuck to the appliance.
- Check if the voltage indicated on the appliance corresponds to the local power voltage before you connect it.
- Only connect the appliance to a grounded power outlet. Always make sure that the plug is inserted firmly into the power outlet.
- Do not use the appliance if the plug, the power cord, the inner pot, the sealing ring, or the main body is damaged.
- Do not let the power cord hang over the edge of the table or worktop on which the appliance stands.
- Make sure the heating element, the temperature sensor, and the outside of the inner pot are clean and dry before you put the plug in the power outlet.
- Do not plug in the appliance or press any of the buttons on the control panel with wet hands.

Caution

- The device must not be located immediately below a socket outlet.
- CAUTION:** To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.
- The aluminum board of the top lid is not intended to contact with acidic foods PH≤4.5.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not expose the appliance to high temperatures, nor place it on a working or still hot stove or cooker.
- Do not expose the appliance to direct sunlight.
- Place the appliance on a stable, horizontal, and level surface.
- Always put the inner pot in the appliance before you put the plug in the power outlet and switch it on.
- Do not place the inner pot directly over an open fire to cook rice.
- Do not use the inner pot if it is deformed.
- The accessible surfaces may become hot when the appliance is operating.
- Take extra caution when touching the appliance.
- Beware of hot steam coming out of the steam vent during cooking or out of the appliance when you open the lid. Keep hands and face away from the appliance to avoid the steam.
- Do not lift and move the appliance while it is operating.
- Do not exceed the maximum water level indicated in the inner pot to prevent overflow which might cause potential hazard.
- Do not place the cooking utensils inside the pot while cooking, keeping warm or reheating rice.
- Only use the cooking utensils provided. Avoid using sharp utensils.
- To avoid scratches, it is not recommended to cook ingredients with crustaceans and shellfish. Remove the hard shells before cooking.
- Do not insert metallic objects or alien substances into the steam vent.
- Do not place a magnetic substance on the lid. Do not use the appliance near a magnetic substance.
- Always let the appliance cool down before you clean or move it.
- Always clean the appliance after use. Do not clean the appliance in a dishwasher.
- Always unplug the appliance if not used for a longer period.
- If the appliance is used improperly or for professional or semiprofessional purposes, or if it is not used according to the instructions in this user manual, the guarantee becomes invalid and Philips refuses liability for any damage caused.

Electromagnetic fields (EMF)

This appliance complies with the applicable standards and regulations regarding exposure to electromagnetic fields.

2 Your rice cooker

Congratulations on your purchase, and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

What's in the box

Main unit	Rice & Soup ladle
Measuring cup	Steaming basket
User manual	

Product overview (fig. 1)

① Top lid	⑧ Cooking/Keep warm button
② Water level indication	⑨ Heating element
③ Inner pot	⑩ Lid release button
④ Power plug	⑪ Steam vent
⑤ Measuring cup	⑫ Keep warm indicator
⑥ Rice&Soup ladle	⑬ Cooking indicator
⑦ Steaming basket	

3 Using the rice cooker

Before first use

- Remove all packaging materials from the appliance.
- Take out all the accessories from the inner pot.
- Clean the parts of the rice cooker thoroughly before using it for the first time (see chapter "Cleaning and Maintenance").

Note

- Make sure all parts are completely dry before you start using the rice cooker.

Preparations before cooking

Before using the rice cooker to cook food, follow below preparation steps:

- Measure the rice using the measuring cup provided (fig 2).
- Wash the rice thoroughly (fig 3).
- Put the pre-washed rice in the inner pot.
- Add water to the level indicated on the scale inside the inner pot that corresponds to the number of cups of rice used. Then smooth the rice surface (fig 4).
- Press the lid release button to open the lid (fig 5).
- Wipe the outside of the inner pot dry, then put the inner pot in the rice cooker (fig 6). Check if the inner pot is in proper contact with the heating element.
- Close the lid of the rice cooker, put the plug in the power socket (fig 7).

Note

- Each cup of uncooked rice normally gives 3 cups of cooked rice. Do not exceed the quantities indicated on the inside of the inner pot.
- The level marked inside the inner pot is just an indication. You can always adjust the water level for different types of rice and your own preference. If the voltage is unstable at the area you live, it is possible that the rice cooker overflows.
- Besides following the water level indications, you can also add rice and water at 1:1-1.2 ratio for rice cooking. Do not exceed the quantities indicated on the inside of the inner pot.
- Use a separate container to wash the rice to avoid damaging the non-stick coating of the inner pot.
- Make sure that the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element or the magnetic switch.

Cooking rice

- Follow the steps in "Preparations before use".
- Press the cook button, and the Cooking indicator lights up (fig 8).
- When the cooking is finished, the cooking indicator will be off.
- The rice cooker switches to the keep warm mode automatically, and the keep warm indicator lights up (fig 9).



Note

- Do not exceed the volume indicated nor exceed the maximum water level indicated in the inner pot, as this may cause the rice cooker to overflow.
- Do not open the lid right after the rice cooker enters the keep-warm mode and ensure that rice is in keep-warm mode for 15 minutes if you cook much rice.
- The keep warm time can last for up to 48 hours.

4 Cleaning and Maintenance

Note

- Unplug the rice cooker before starting to clean it.
- Wait until the rice cooker has cooled down sufficiently before cleaning it.

Interior

Inside of the top lid and the main body:

- Wipe with wrung out and damp cloth.
- Make sure to remove all the food residues stuck on the top lid.

Heating element:

- Wipe with wrung out and damp cloth.
- Remove food residues with wrung out and damp cloth.

Sealing ring:

- Soak in warm water and clean with sponge.

Exterior

Surface of the top lid and outside of the main body:

- Wipe with a cloth damped with soap water.
- Only use soft and dry cloth to wipe the control panel.
- Make sure to remove all the food residues around the control buttons.

Accessories

Rice&Soup ladle, measuring cup, inner pot and steam basket:

- Soak in hot water and clean with sponge.

5 Specifications

Model Number	HD3003
Cooking power input	400W
keep warm power input	77W
Rated capacity	5.0L
Rice capacity	1.8L

Note

- Always unplug the appliance if not used for a longer period.

6 Recycling

Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

7 Warranty and support

Versuni offers a two-year warranty after purchase on this product. This warranty is not valid if a defect is due to incorrect use or poor maintenance. Our warranty does not affect your rights under law as a consumer. For more information or for invoking the warranty, please visit our website www.philips.com/support.

8 Troubleshooting

If your electric pressure cooker does not function properly or if the cooking quality is insufficient, consult the table below. If you are unable to solve the problem, contact a Philips service center or the Consumer Care Center in your country.

The lights on the buttons does not go on.	<ul style="list-style-type: none">• There is a connection problem. Check if the power cord is connected to the cooker properly and if the plug is inserted firmly into the power outlet.• The light is defective. Take the appliance to your Philips dealer or a service center authorized by Philips.
The rice is not cooked.	<ul style="list-style-type: none">• There is not enough water. Add water according to the scale on the inside of the inner pot. You did not press down the control key.• Make sure that there is no foreign residue on the heating element and the outside of the inner pot before switching the rice cooker on.• The heating element is damaged, or the inner pot is deformed. Take the cooker to your Philips dealer or a service center authorized by Philips.
The rice is not well cooked.	<ul style="list-style-type: none">• Add more water.
The cooker does not switch to keep warm mode automatically in "Rice Cooking" mode.	<ul style="list-style-type: none">• The temperature control is defective. Take the appliance to your Philips dealer or a service center authorized by Philips.
The rice is scorched.	<ul style="list-style-type: none">• You have not rinsed the rice properly. Rinse the rice until water runs clear.
Water spills out of the rice cooker during cooking.	<ul style="list-style-type: none">• Make sure that you add water to the level indicated on the scale inside the inner pot that corresponds to the number of cups of rice used.• Make sure the water does not exceed the next level on the scale, as this may cause the appliance to overflow during cooking.
Rice smells bad after cooking.	<ul style="list-style-type: none">• Clean the inner pot with some washing detergent and warm water.• After cooking, make sure the steam vent cap, inner lid and inner pot is cleaned thoroughly.

Bahasa Indonesia

1 Penting

Baca buklet informasi penting ini dengan cermat sebelum Anda menggunakan penanak nasi dan simpanlah untuk referensi nanti.

PHILIPS
PENANAK NASI
HD3003
Daya memasak: 400W
Daya menghangatkan: 77W
220V ~ 50Hz
Negara Pembuat: Indonesia
Diproduksi oleh:
PT BORINE TECHNOLOGY INDONESIA
KENDAL INDUSTRIAL PARK
Jl. WANAMARTA RAYA NO.32
Desa/Kelurahan Wonorejo,
Kec. Kaliwungu, Kab. Kendal,
Provinsi Jawa Tengah, 51372, Indonesia
Negara Pembuat: Indonesia
No. Reg.: PMKG.03.01.2024

Bahaya

- Jangan merendam alat dalam air.

Peringatan

- Alat ini tidak dimaksudkan untuk digunakan oleh orang (termasuk anak-anak) dengan cacat fisik, indera atau kecakapan mental yang kurang, atau kurang pengalaman dan pengetahuan, kecuali jika mereka diberikan pengawasan atau petunjuk mengenai penggunaan alat oleh orang yang bertanggungjawab bagi keselamatan mereka.
- Anak kecil harus diawasi untuk memastikan mereka tidak bermain-main dengan alat ini.
- Alat ini sebaiknya diletakkan di tempat yang stabil dan pegangannya (bila ada) diposisikan sedemikian rupa agar cairan panas di dalamnya tidak tumpah.
- Alat ini dimaksudkan untuk digunakan di rumah tangga dan pemakaian yang serupa seperti:
 - area dapur staf di toko, kantor, dan lingkungan kerja lainnya;
 - rumah ladang;
 - oleh klien di hotel, motel, dan lingkungan berjenis tempat tinggal lainnya;
 - lingkungan yang menyediakan tempat tidur dan sarapan.
- Jika kabel listrik rusak, maka harus diganti oleh produsen, agen servis, atau personel dengan kualifikasi setara untuk menghindari bahaya.
- Alat ini tidak ditujukan untuk dioperasikan dengan menggunakan timer eksternal atau sistem remote-control yang terpisah.
- Permukaan elemen pemanas bisa menyimpan sisa panas setelah penggunaan.
- PERINGATAN: Pastikan tidak ada tumpahan yang mengenai konektor daya untuk mencegah kemungkinan bahaya.
- PERINGATAN: Selalu ikuti petunjuk dan gunakan alat dengan benar untuk mencegah kemungkinan bahaya.
- Sesuai dengan instruksi yang tercantum dalam petunjuk pengguna ini, gunakan kain lembap yang lembut untuk membersihkan permukaan yang bersentuhan dengan makanan dan pastikan untuk membersihkan semua sisa makanan yang menempel pada alat.
- Periksa apakah voltase pada alat sesuai dengan voltase listrik di rumah Anda sebelum menghubungkan alat.
- Hanya hubungkan alat ke stopkontak yang telah dihubungkan ke arde. Selalu pastikan steker dipasang dengan benar pada stopkontak listrik.
- Jangan menggunakan alat ini jika steker, kabel listrik, panci bagian dalam, gelang penyegel, atau badan utama rusak.
- Pastikan elemen pemanas, sensor suhu, dan sisi luar dari panci bagian dalam, bersih dan kering sebelum memasang steker ke stopkontak listrik.
- Jangan menghubungkan steker pada alat atau menekan tombol apa pun pada panel kontrol saat tangan basah.

Perhatian

- Perangkat tidak boleh diletakkan tepat di bawah stopkontak.
- PERHATIAN: Untuk mencegah kerusakan pada alat, jangan gunakan bahan pembersih berbahar alkali saat membersihkan alat. Gunakan kain lembap dan detergen ringan.
- Papan aluminium pada tutup atas tidak dimaksudkan untuk bersentuhan dengan makanan asam (acidic food) dengan kadar pH ≤4,5.
- Jangan sekali-kali menggunakan aksesorai atau komponen apa pun dari produsen lain atau yang tidak secara khusus direkomendasikan oleh Philips. Jika Anda menggunakan aksesorai atau komponen tersebut, garansi Anda menjadi batal.
- Jangan biarkan alat ini terkena suhu yang tinggi atau menempatkannya di atas kompor atau alat memasak lainnya yang sedang bekerja atau masih panas.
- Jangan biarkan alat terkena sinar matahari langsung.
- Letakkan alat pada permukaan yang stabil, datar dan rata.
- Selalu masukkan panci bagian dalam pada alat sebelum Anda menghubungkan ke stopkontak listrik dan menghidupkannya.
- Jangan menempatkan panci bagian dalam secara langsung di atas nyala api untuk memasak nasi.
- Jangan menggunakan panci bagian dalam jika sudah berubah bentuk.
- Permukaan alat akan menjadi panas pada saat dioperasikan.
- Beri perhatian ekstra saat menyentuh alat.
- Berhati-hatilah terhadap uap panas yang keluar dari lubang uap sewaktu memasak atau yang keluar dari alat sewaktu tutupnya dibuka. Jauhkan tangan dan wajah Anda dari alat untuk menghindari uap.
- Jangan mengangkat dan memindahkan alat selagi dioperasikan.
- Jangan masukkan air melebihi ukuran maksimum yang ditunjukkan pada panci bagian dalam guna mencegah luapan cairan berlebih yang dapat menimbulkan bahaya.
- Jangan menaruh perabot masak di panci bagian dalam selagi memasak, menghangatkan atau memanaskan nasi.
- Gunakan hanya perabot memasak yang disediakan. Hindari menggunakan perabot yang tajam.
- Untuk mencegah tergeser, tidak disarankan memasak bahan yang bercampur dengan krustasea (udang-udangan) dan kerang. Singkirkan kulit yang keras sebelum memasak.
- Jangan memasukkan barang logam atau benda asing ke dalam lubang uap.
- Jangan melekatkan benda bermagnet pada penutup. Jangan menggunakan alat di dekat benda bermagnet.
- Selalu biarkan alat menjadi dingin terlebih dahulu sebelum membersihkan atau memindahkannya.
- Selalu bersihkan setiap kali selesai menggunakan alat. Jangan membersihkan alat dengan mesin cuci piring.
- Selalu cabut steker dari alat apabila tidak digunakan dalam waktu yang lama.
- Jika alat digunakan dengan cara yang tidak semestinya atau untuk tujuan profesional atau semi-profesional, atau tidak digunakan sesuai instruksi dalam petunjuk penggunaan ini, garansi akan dianggap tidak berlaku dan Philips tidak bertanggung jawab atas kerusakan yang ditimbulkan.

Medan elektromagnetik (EMF)

Alat ini memenuhi semua standar dan peraturan yang berlaku terkait paparan medan elektromagnet.

2 Penanak nasi Anda

Selamat atas pembelian Anda dan selamat datang di Philips!

Untuk memanfaatkan sepenuhnya dukungan yang ditawarkan Philips, daftarkan produk Anda di www.philips.com/welcome.

Isi kemasan

Unit utama
Gelas takar
Petunjuk Pengguna

Centong nasi dan sendok sup
Keranjang kukus

Tinjauan umum produk (gbr. 1)

