



ENGLISH

Congratulations on acquiring your new Philips kettle! In these instructions for use you will find all important information, so you can optimally enjoy your kettle as long as possible.

Description

- 1) On/Off switch (I/O)
- 2) Pilot lamp
- 3) Safety lid
- 4) Spout
- 5) Water-level indicator
- 6) Base
- 7) Scale filter
- 8) Double-action filter
- 9) Triple-action filter
- 10) Filter

Important

- This kettle is only meant to be used for boiling water.
- Never fill the kettle beyond the maximum level indication. If the kettle has been overfilled, there is a risk that boiling water will be ejected from the spout.
- Never fill the kettle below the minimum level. In case of kettles with a flat heating element: never put less than 0.1 litre of water in the kettle to prevent the kettle from boiling dry. In case of kettles with a spiral heating element: never put less than 0.4 litre of water in the kettle, unless the water-level indicator indicates a different minimal water-level. In case of metal kettles: never put less than 0.2 litre of water in the kettle.
- Some condensation may appear on the base of the kettle. This is perfectly normal and does not mean that the kettle has any defects.
- Depending on the hardness of the water in your area, small spots may appear on the heating element of your kettle when you use it. This phenomenon is the result of scale build-up on the heating element and on the inside of the kettle over time. The harder the water, the faster scale will build up. Scale can occur in different colours. Although scale is harmless, too much scale can influence the performance of your kettle. Please follow the instructions for descaling the kettle given in this leaflet.
- 3100 watts kettle: This Philips rapid boil kettle can draw up to 13 amps from the power supply in your home. Make sure that the electrical system in your home and the circuit to which the kettle is connected can cope with this level of power consumption. Do not let too many other appliances draw power from the same circuit while the kettle is being used.
- Keep the kettle and the cord out of the reach of children.
- Excess cord can be stored in or around the base of the kettle.
- Boiling water can cause serious burns. Please take care when the kettle contains hot water.
- Directly removing the lid after brewing can cause hot steam coming out of the kettle.
- Only use the kettle in combination with its original base.
- If your kettle is damaged in any way, please contact a service centre authorised by Philips. Do not attempt to make any repairs yourself.

Boil-dry protection

The heating element of your kettle is protected by a safety cut-out device. This device will automatically switch the kettle off if it is accidentally switched on without any water or with insufficient water. The on/off switch will stay in the 'I' position and the pilot light, if available, will stay on. Please switch the kettle off and wait 10 minutes for the kettle to cool down. Then lift the kettle from its base to reset the boil-dry protection. The kettle is ready for use again.

Using the kettle

- 1 Place the kettle base on a flat surface and put the plug in the wall socket.
- 2 Fill the kettle with water either through the spout or through the open lid.
- 3 Close the lid.

Make sure that the lid is properly closed to prevent the kettle from boiling dry.

- 4 Set the on/off switch to on (I)

The kettle starts heating up.

For kettles without a base

- 1 Close the lid.

- 2 Put the plug in the wall socket

The kettle starts heating up.

Only for metal kettles

Be careful, the body of a metal kettle becomes hot!

- The kettle switches off ('O' position) automatically when the water has reached boiling point.
- You can interrupt the boiling process by setting the on/off switch to 'O'.

Cleaning and descaling the kettle

- 1 Remove the plug from the wall socket.

- 2 Clean the outside of the kettle with a soft, damp cloth moistened with warm water and some mild cleaning agent.

Do not use any abrasive cleaning agents, scourers etc. to clean the kettle.

Never immerse the kettle or its base in water.

- Regular descaling will prolong the life of the kettle.

In case of normal use (up to 5 times a day), the following descaling frequency is recommended:

- 1) once every 3 months for soft water areas (up to 18 dH)

- 2) once every month for hard water areas (more than 18 dH)

Descaling the kettle

- 1 Fill the kettle with water up to three-quarters of the maximum level and bring the water to the boil.

- 2 After the kettle has switched off, add white vinegar (8%) to the maximum level.

- 3 Leave the solution in the kettle overnight.

- 4 Empty the kettle and rinse the inside thoroughly.

- 5 Fill the kettle with clean water and boil the water.

- 6 Empty the kettle and rinse it with clean water again.

- 7 Repeat the procedure if there is still some scale in the kettle.

You can also use an appropriate descaler.

Cleaning the filter

Scale is not harmful to your health but it may give your drink a powdery taste. The scale filter prevents scale particles from ending up in your drink. Models with a double-action filter and triple-action filter have also been equipped with a mesh that attracts scale from the water. Clean the scale filter regularly.

- The mesh of filters is to be cleaned by squeezing and rotating it under a running tap.

The triple-action filter can be cleaned as follows:

- 1) Remove the basket from the filter by sliding it.
- 2) Take the stainless steel mesh out of the basket and clean it by squeezing and rotating it under a running tap (fig. I-3).

- 3) All filters can be cleaned by:

- leaving it in the kettle during descaling the whole appliance
- gently brushing the filter with a soft nylon brush under a running tap
- in the dishwasher.

Replacement

Replacement filters for Philips kettles can only be purchased from your Philips dealer or your local Philips service centre. The table below indicates which filters are suitable for which type of kettle.

If the kettle or the mains cord of the appliance is damaged, it may only be replaced by a service centre authorised by Philips, as special tools and/or parts are required.

Information and service

If you need information or if you have a problem, please visit the Philips Web site at www.philips.com or contact the Philips Customer Care Centre in your country (you will find its phone number in the world-wide guarantee leaflet). If

there is no Customer Care Centre in your country, turn to your local Philips dealer or contact the Service Department of Philips Domestic Appliances and Personal Care BV.

Kettle type(s)

HD4628

Filter type(s)

HD4966 (normal filter) or HD4970 (double action filter)

HD4637

HD4967

HD4642

HD4960

HD4650

HD4973

HD4651 and HD4659

HD4971 (normal filter)

HD4652

HD4977 (triple-action filter)

HD4653 and HD4657

HD4976 (triple-action filter)

HD4602 and HD4603

HD4978

HD4672 and HD4673

HD4974

Degistirme

Cihaz filtreleri sadece orjinal Philips filtreleri ile değiştirilmeli ve sadece yetkili Philips bayilerinden ve servislerinden temin edilmelidir. Aşağıdaki tablodan hangi model filtrenin hangi model su ısıtıcı için uygun olduğunu bulabilirsiniz.

Eğer cihazın kordonu hasar görürse, degistirmek için yetkili Philips servislerine başvurunuz.

Bilgi ve servis

Eğer bir probleminiz olursa, Philips web sayfasını ziyaret ederek (www.philips.com.tr) veya Philips Tüketiciler Danışma Hattını (0800 261 33 02) arayarak yardım alabilirsiniz.

Su ısıtıcı modelleri(ler)

HD4628

HD4966 (normal filtre) veya HD4970 (double action filtre)

HD4637

HD4967

HD4642

HD4960

HD4650

HD4973

HD4651 ve HD4659

HD4971 (normal filtre)

HD4652

HD4977 (triple-action filtre bulunmaktadır)

HD4653 ve HD4657

HD4976 (triple-action filtre bulunmaktadır)

HD4602 ve HD4603

HD4978

HD4672 ve HD4673

HD4974

ΕΛΛΗΝΙΚΑ

Συγχαρητήρια για την αγορά του νέου σας βραστήρα Philips! Σε αυτές τις οδηγίες χρήσης θα βρείτε όλες τις απαραίτητες πληροφορίες, έτσι ώστε να μπορέστε να απολαύσετε τη χρήση του βραστήρα σας για όσο δυνατόν περισσότερο χρόνο.

Περιγραφή

- | | |
|----------------------------|---------------------------|
| 1) Διακόπτης On/Off (I/O) | 6) Βάση |
| 2) Ενδικτικό λαμπτήρα | 7) Φίλτρο κατά των αλάτων |
| 3) Καπάκι ασφαλείας | 8) Φίλτρο διπλής δράσεως |
| 4) Στόμιο | 9) Φίλτρο τριπλής δράσεως |
| 5) Ενδεικτής στάθμης νερού | 10) Φίλτρο |

Σημαντικό

- Ο βραστήρας πρέπει να χρησιμοποιείται μόνο για βράσιμο νερού.
- Μη γεμίζετε ποτέ το βραστήρα πάνω από τη μέγιστη ένδειξη. Αν ο βραστήρας παραγεμέσται, υπάρχει κίνδυνος να βγει το βραστό νερό από το στόμιο.
- Μη γεμίζετε ποτέ το βραστήρα κάτω από το ελάχιστο πεπίτεδο. Σε βραστήρες με επίπεδη αντίσταση: μην τοποθετείτε ποτέ λιγότερο από 0,1 λίτρα νερού στο βραστήρα, εάν ο ενδείκτης στάθμης νερού δεν υποδεικνύεται μια διαφορετική ελάχιστη στάθμη. Σε μεταλλικούς βραστήρες: μην τοποθετείτε λιγότερο από 0,2 λίτρα νερού στο βραστήρα.

- Μπορείτε να παρουσιάστε συγκεντρωτικά αλάτων στη βάση του βραστήρα. Αυτό είναι απολύτως φυσιολογικό και δεν σημαίνει ότι ο βραστήρας παραγεμέσται.
- Ανάλογα με τη σκληρότητα του νερού στην αντίσταση του βραστήρα σας, μπορεί να εμφανιστούν μικρές κτήλεις στην αντίσταση του βραστήρα σας όταν τον χρησιμοποιείτε. Αυτό το φαινόμενο είναι αποτέλεσμα του βραστήρα με τη πέρασμα του χρόνου. Όσο πιο σκληρό είναι το νερό, τόσο πιο γρήγορα θα δημιουργηθούν στα αλάτων.

- Μπορείτε να παρουσιάστε στην αντίσταση του βραστήρα του περισσότερα αλάτων στην περιοχή σας, μπορεί να εμφανιστούν στα διάφορα χρώματα. Πάρολό που τα αλάτων είναι ακίνητα, όταν δημιουργηθούν πολλά επιπρόσθια αλάτων στην περιοχή σας, παρακαλούμε ακολουθήστε τις ειδικές οδηγίες για την αφαίρεση του βραστήρα που δίνονται σε αυτό το φύλλο.
- Βραστήρας 3100 watt: Αυτός ο ταχύβραστης της Philips μπορεί να καταναλώσει έως και 13 ampάρια από την περιοχή σας. Μεταβαθμίστ

