



Important information




Read and keep me

To enjoy the most out of your new steam generator, please read carefully.

For further information on usage and troubleshooting, please read the user manual.

1. Usage of right water type

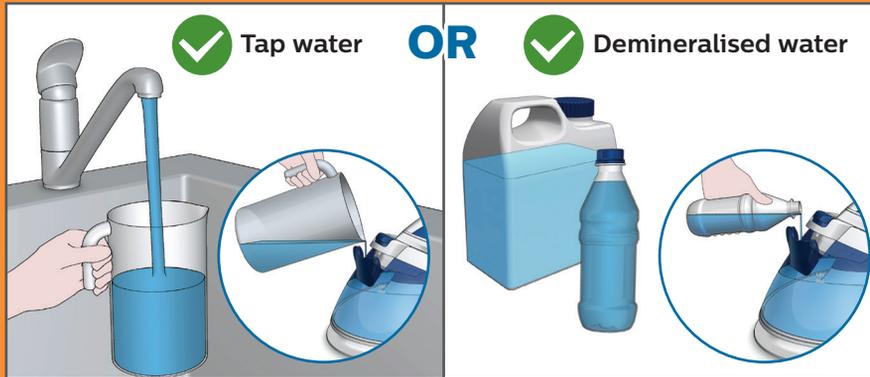

DO NOT USE:
Perfumed water, vinegar, descaling agents, ironing aids etc.

Recommended to use:
Tap water
(ANTI-CALC Cartridge to be replaced when exhausted)

OR
Demineralised water
(Replacement of ANTI-CALC Cartridge will not be necessary)

2. Steam control

Steam will enhance your ironing performance.
Control the steam while ironing by using the steam trigger.



FOR FIRST USE:
Press the steam trigger continuously for up to 30 seconds for steam.

Press and hold the steam trigger for steam during ironing.

Any questions?

Don't go back to store, Philips is here to help. Contact us directly.

0207 949 0240 015245443

www.philips.com/support



3. Sound and light reminder for replacement of ANTI-CALC Cartridge



Replace the ANTI-CALC cartridge once the descaling light flashes and the appliance beeps.




The steam function will be disabled automatically if the ANTI-CALC cartridge is not replaced.


4. Replacing the ANTI-CALC Cartridge



Remove the iron from the iron platform and open the ANTI-CALC cartridge compartment.

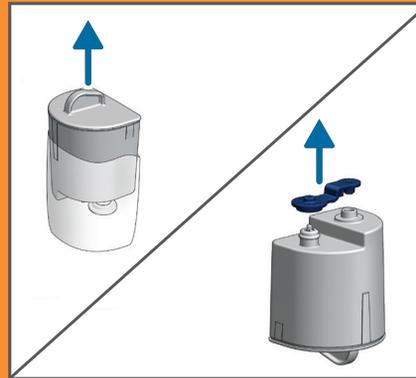

Pull out the rubber cap from the bottom of the ANTI-CALC cartridge.

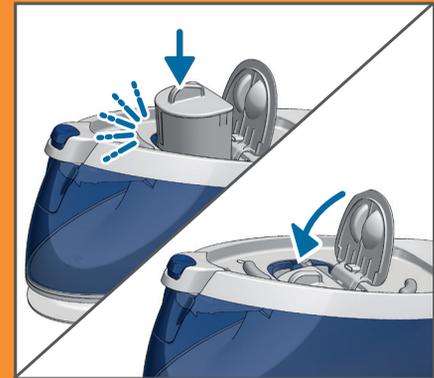

Press down the ANTI-CALC cartridge in the compartment until it **locks into place** and close the lid.

- If you do not want to replace the ANTI-CALC cartridge, you have to use demineralized water or descaled water from the IronCare.
- In that case, you need to leave the exhausted cartridge in the compartment.

! AFTER REPLACEMENT OF THE ANTI-CALC CARTRIDGE:
Press the trigger continuously for up to 30 seconds for steam.

