

**Philips Consumer Lifestyle**

Service Manual

PRODUCT INFORMATION

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

TECHNICAL INFORMATION

- Voltage : 220 - 240 V, 50 - 60 Hz
- Power consumption : 850 W
- Power standby : 0.5 W
- Dimensions (w x d x h) : 275 x 420 x 305 mm
- Length power cable : 1.35 Meter
- Colour setting : Black
- SAP coding : HD9040

DISASSEMBLY- AND RE-ASSEMBLY ADVISE

- **Before you start dismantling!**



For your safety be sure the plug is disconnected from the mains!

REPAIR INSTRUCTIONS

- No specific issues

OPTIONAL (accessories)

- No specific issues

Pos	Service code	Description
1	4222 459 46020	Paddle (1 piece)
2	4222 459 46030	Bread pan assy
3	4222 459 46040	Control panel assy
4	4222 459 46050	Lid assy
5	4222 459 45787	Spoon
6	4222 459 45788	Measuring cup
7	4222 459 45882	Hook
8	4222 459 45990	Brush
10	4222 459 46010	Knife
11	4222 459 46060	Baking rack

Electrical diagram:



