 
 
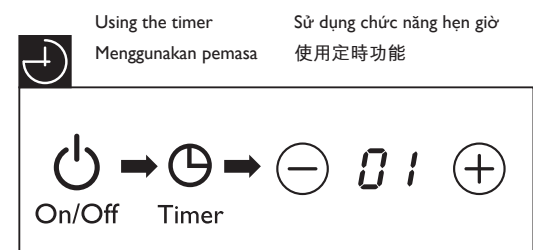 
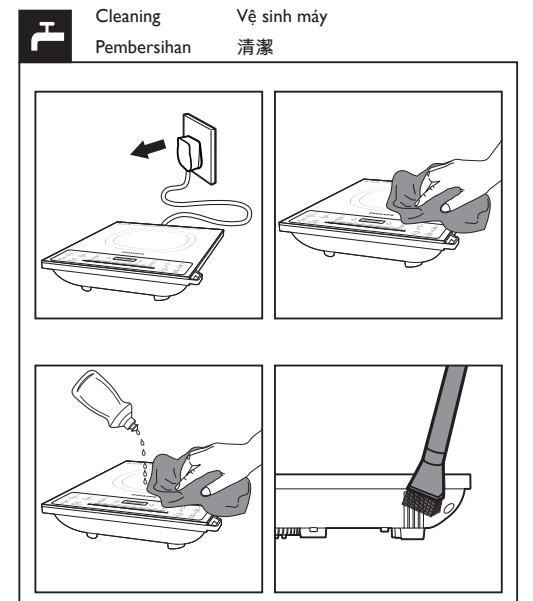 
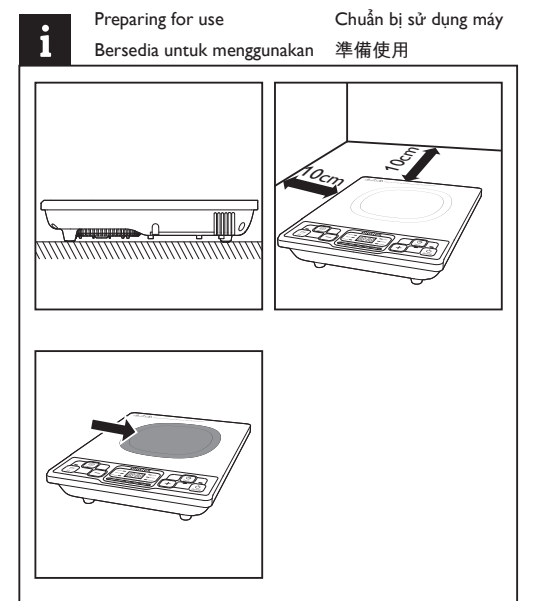 
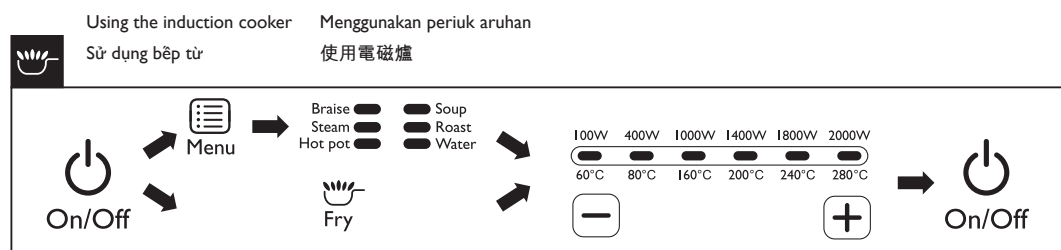 


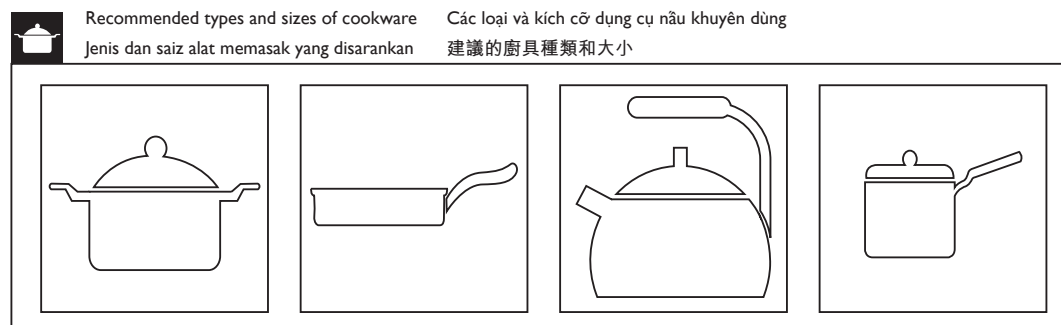

EN	User manual	VI	Hướng dẫn sử dụng
MS-MY	Manual pengguna	ZH-HK	使用手冊

PHILIPS

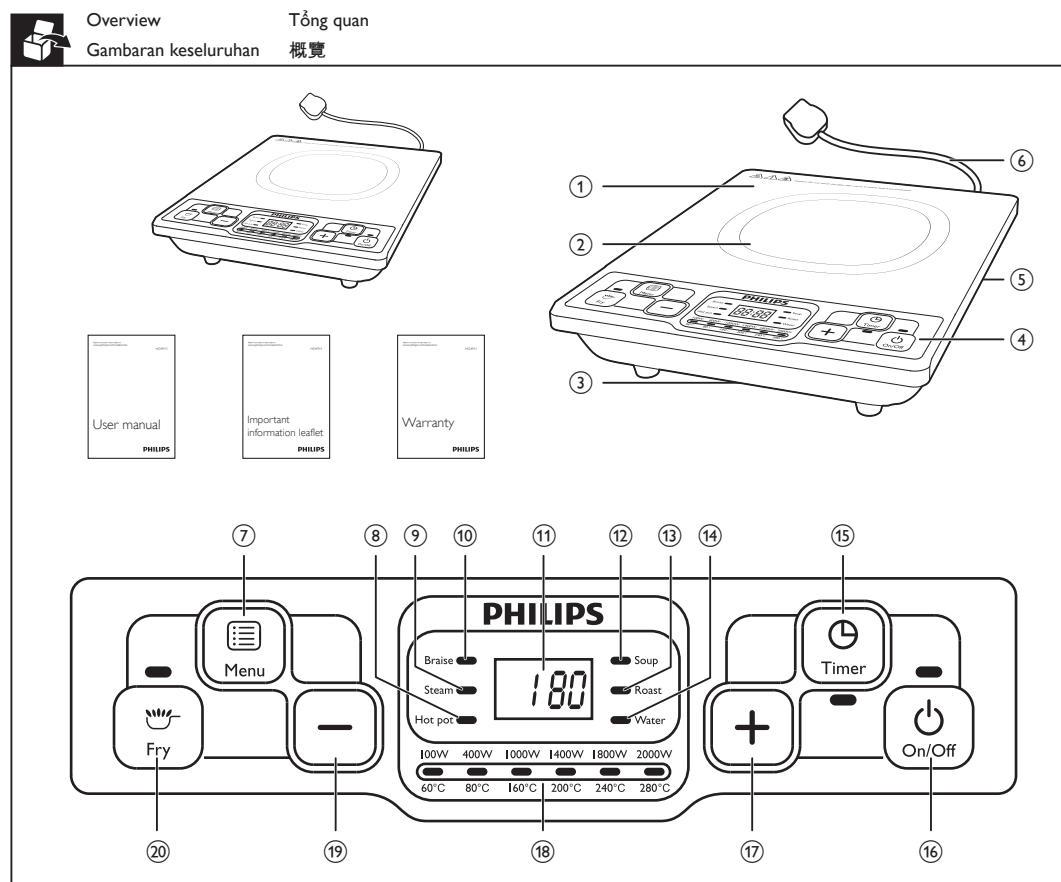

All registered and unregistered trademarks are property of their respective owners.
© 2012 Koninklijke Philips Electronics N.V.
All rights reserved.

HD4921_ASEAN_UM_V1.0



English

1 Your induction cooker

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

2 What's in the box

Induction cooker main unit	Pot
Important information leaflet	User manual
Warranty card	

Overview

① Cooking plate	④ Control panel
② Cooking zone	⑤ Air outlets
③ Air inlet	⑥ Power cord

Controls overview

⑦ Menu button	⑭ Water indicator
⑧ Hot pot indicator	⑮ Timer button
⑨ Steam indicator	⑯ On/Off button
⑩ Braise indicator	⑰ Increase button
⑪ Screen	⑱ Cooking power and temperature
⑫ Soup indicator	⑲ Decrease button
⑬ Roast indicator	⑳ Fry button

3 Before first use

Remove all packaging materials from the induction cooker.

Preparing for use

- Place the appliance on a dry, stable and level surface.
- Make sure there is at least 10cm free space around the appliance to prevent overheating.
- Always place the cookware on the cooking zone during cooking.
- Make sure you use cookware of the correct types and sizes (see the table below).

Recommended types and sizes of cookware

Material	Cookware with a bottom made of iron or magnetic stainless steel
Shape	Cookware with a flat bottom
Size	Cookware with a bottom diameter of 10-23cm, depending on the cooking mode

4 Using the induction cooker

There are seven cooking modes: Fry (Fry), Braise (Braise), Hot pot (Hot pot), Soup (Soup), Roast (Roast), Water (Water) and Steam (Steam).

- Follow the steps in "Preparing for use".
- Press the On/Off button (On/Off), the On/Off indicator lights up.

3 Press the Fry button (Fry) to cook with fry mode. Press the Menu button repeatedly (Menu) to choose the other cooking modes. The corresponding indicator lights up and the induction cooker starts working in the selected cooking mode.

- When the cooking is finished, press the On/Off button (On/Off) to switch off the appliance.
- Unplug the induction cooker after the fan stops working.

Note

- During cooking, you can change the power level by pressing the Increase (+) or Decrease (-) button.
- In Water (Water), Soup (Soup) and Steam (Steam) modes, the cooking power automatically changes for better cooking result.

Cooking time and power

Refer to below table for the cooking time and power of different cooking modes.

Cooking mode	Default cooking time (minutes)	Default cooking power	Power adjusting range
Fry (Fry)	120	1000W	100-1000W
Braise (Braise)	120	1000W	100-1000W
Hot pot (Hot pot)	120	1800W	100-2000W
Soup (Soup)	180	1000W	100-2000W
Roast (Roast)	120	1000W	100-1000W
Water (Water)	20	1800W	100-2000W
Steam (Steam)	60	1800W	100-2000W

Using the timer

You can use the Timer button to decide how much time you want the appliance to work at different cooking modes (not applicable in Water (Water) mode).

- Follow the steps in "Preparing for use".
- Press the On/Off (On/Off) button, the On/Off (On/Off) indicator lights up.
- Choose the desired cooking mode.
- Press the Timer button (Timer) and the timer indicator lights up.
- Press the Increase (+) or Decrease (-) button to adjust the time.
- When the time has elapsed, the induction cooker turns off automatically.

Note

- After you have selected the cooking time, wait for a few seconds before the induction cooker automatically confirms it.
- After the time is set, you can press the Timer button (Timer) again to cancel the timer.

5 Cleaning

Unplug the appliance after the fan stops working and let it cool down. Clean the appliance with a damp cloth and, if necessary, with some mild cleaning agent.

6 Environment

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

7 Guarantee and service

If you need service or information or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Consumer Care Centre in your country (you will find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

8 Troubleshooting

If your induction cooker does not function properly or if the cooking quality is insufficient, consult the table below. If you are unable to solve the problem, contact a Philips service centre or the Consumer Care Centre in your country.

Problem	Solution
The On/Off button (On/Off) does not respond.	There is a connection problem. Check if the induction cooker is connected to the mains and if the plug is inserted firmly into the wall socket.
The appliance beeps continuously and then stops working.	You may have put unsuitable cookware on the cooking plate or you may have removed the cookware from the cooking plate during cooking. Make sure the cookware is made of steel, iron or aluminum with stainless steel cladding base and has a base diameter larger than 10cm. You may have placed the cookware outside of the cooking zone.
The cookware does not heat up to the required temperature.	The bottom of the cookware may not be flat. Use cookware with a flat bottom. If the problem still exists, take the appliance to your Philips dealer or a service center authorised by Philips.
The appliance stops working suddenly.	The temperature of the cookware might be too high. Let the cookware cool down for a while.
When I press one of the cooking mode buttons, the light of the selected mode does not go on.	The light is defective. Take the appliance to your Philips dealer or a service center authorised by Philips.
The fan works but the appliance has not started working.	You have to select a cooking mode after you have pressed the ON/OFF (On/Off) button.
Error code E0, E1, E2, E3, E4, E7, E8 or E9 is displayed on the screen.	The induction cooker has malfunction. Take the appliance to your Philips dealer or a service center authorised by Philips.
Error code E5 or E6 is displayed on the screen.	The voltage is either too high or too low. Check if the voltage in your home is suitable for the induction cooker.

Bahasa Melayu

1 Periuk aruhan anda

Tahniah atas pembelian anda dan selamat menggunakan Philips! Untuk mendapatkan manfaat sepenuhnya daripada sokongan yang ditawarkan oleh Philips, daftar produk anda di www.philips.com/welcome.

2 Apa dalam kotak ini

Unit utama periuk aruhan	Periuk
Risalah maklumat penting	Manual pengguna
Kad waranti	

Gambaran keseluruhan

① Plat memasak	④ Panel kawalan
② Zon masak	⑤ Saluran keluar udara
③ Salur masuk udara	⑥ Kord kuasa

Gambaran keseluruhan kawalan

⑦ Butang menu	⑭ Penunjuk Air
⑧ Penunjuk Hot Pot	⑮ Butang pemasa
⑨ Penunjuk Stim	⑯ Butang Hidup/Mati
⑩ Penunjuk Tumis	⑰ Butang Tingkatkan
⑪ Skrin	⑱ Kuasa dan suhu memasak
⑫ Penunjuk Sup	⑲ Butang Kurangkan
⑬ Penunjuk Panggang	⑳ Butang Goreng

3 Sebelum penggunaan pertama

Keluarkan semua bahan pembungkusan dari periuk aruhan.

Bersedia untuk menggunakan

- Letak perkakas di atas permukaan yang kering, stabil dan rata.
- Pastikan terdapat sekurang-kurangnya 10cm ruang kosong di sekeliling perkakas untuk mengelakkan daripada pemanasan melampau.
- Sentiasa letakkan alat memasak pada zon memasak apabila memasak.
- Pastikan anda menggunakan jenis dan saiz alat memasak yang betul (lihat jadual di bawah).

Jenis dan saiz alat memasak yang disarankan

Bahan	Alat memasak dengan dasar yang dibuat daripada besi atau keluli tahan karat magnetik
Bentuk	Alat memasak dengan dasar yang leper
Saiz	Alat memasak dengan garis pusat bawah 10-23cm, bergantung pada mod memasak

4 Menggunakan periuk aruhan

Terdapat tujuh mod memasak: Goreng (Fry), Tumis (Braise), Hot pot (Hot pot), Sup (Soup), Panggang (Roast), Air (Water) dan Stim (Steam).

- Ikuti langkah-langkah dalam "Bersedia untuk menggunakan".
- Tekan butang Hidup/Mati (On/Off), lampu penunjuk Hidup/Mati beryala.

