

PHILIPS

STE3170



EN User manual



















SC 用户手册


Please read this instruction carefully
before using the appliance.

使用产品前请仔细阅读本使用说明书。





Please keep this instruction book for future reference.



保留备用。

	3		12		
	4		12		
	5		13		
	6			16	
	7		17		
	9		18		
		10			19
	11				

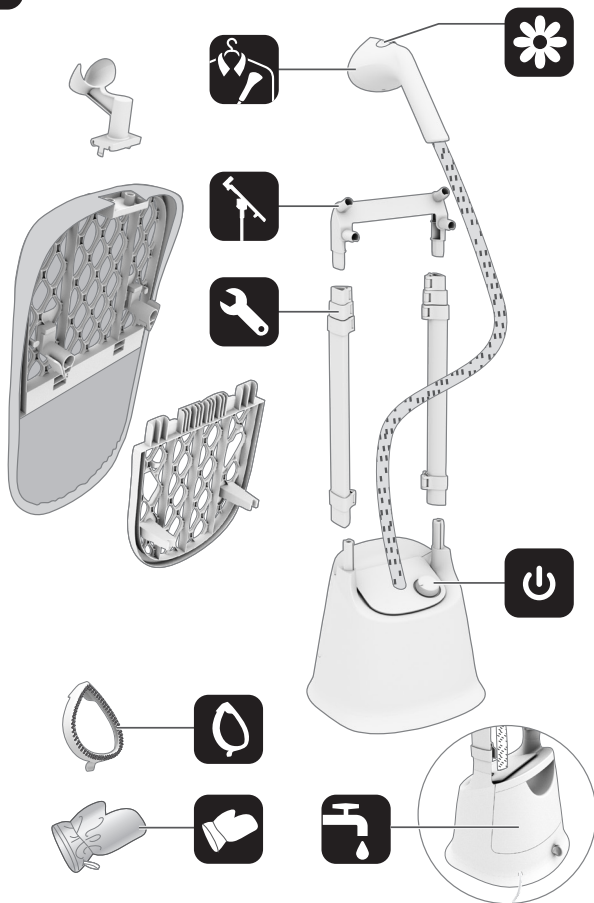



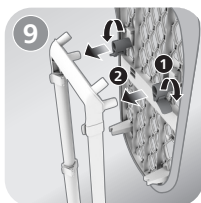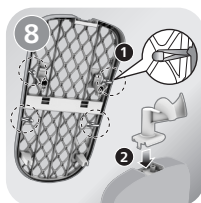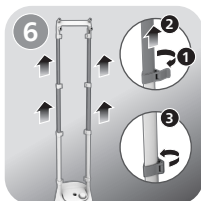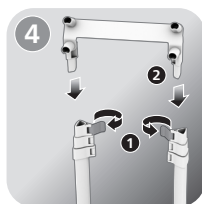

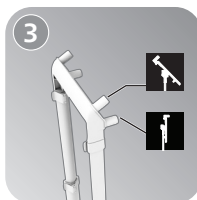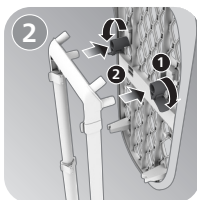





EN The appliance is suitable to be used with tap water. However, if you live in an area with hard water, we recommend that you mix an equal amount of tap water with distilled or demineralized water.


This will prevent fast scale build up and prolong the lifetime of the appliance.


Warning: Do not use perfumed water, water from the tumble dryer, vinegar, starch, descaling agents, ironing aids, chemically descaled water or other chemicals, as they may cause water spitting, brown staining or damage to your appliance.




SC 本产品可使用自来水。但如果您居住的区域水质较硬，我们建议您将等量的自来水与蒸馏水或软化水混合使用。这样可以防止水垢快速积聚，从而延长产品的使用寿命。


警告：切勿使用香水、转筒式干燥机中的水、醋、淀粉、除垢剂、熨衣剂、化学除垢水或其他化学品，因为它们可能会导致喷水、留下褐色污垢或损坏产品。

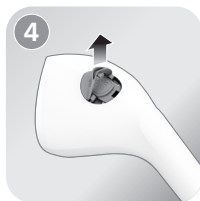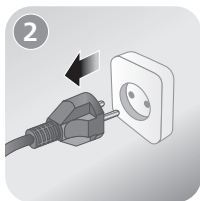

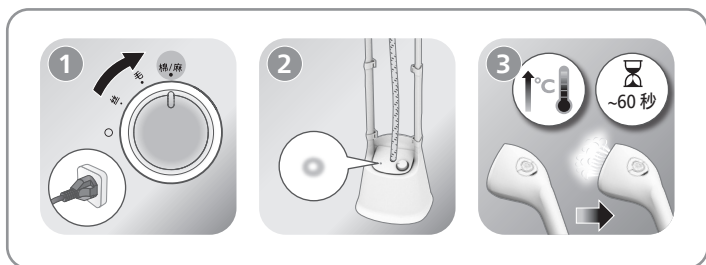

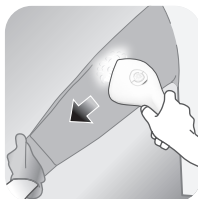

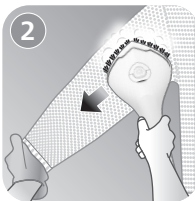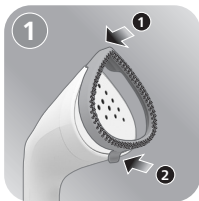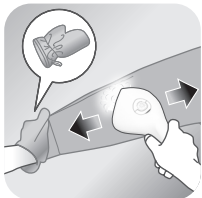



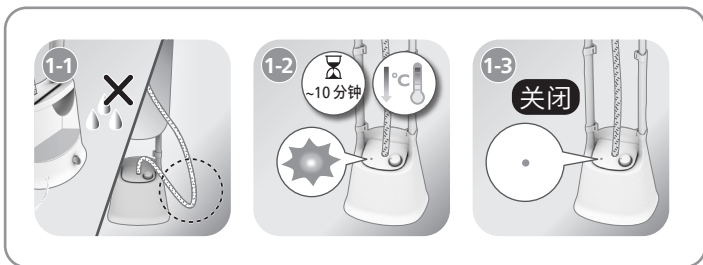





EN Figure 1-1: The appliance will go into auto-off mode (LED light will blink) when the water tank is empty or when the steam hose is bent.



Figure 1-3: It switches off automatically after 10 minutes if the water tank is not refilled or the steam hose is not straightened.


SC 图 1-1: 当水箱为空或蒸汽管弯折时，产品将进入自动关闭模式（LED 指示灯将闪烁）。


图 1-3: 如果水箱未重新加水或蒸汽管未拉直，则 10 分钟后，产品会自动关闭。

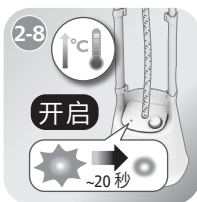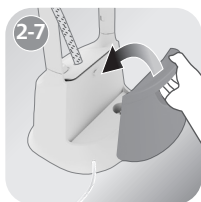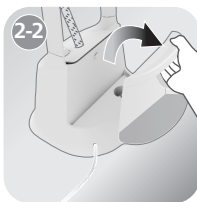

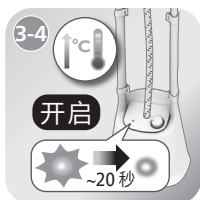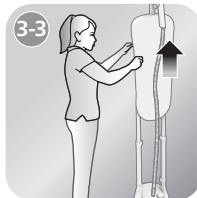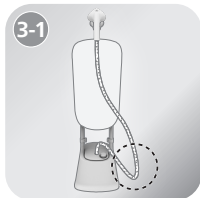

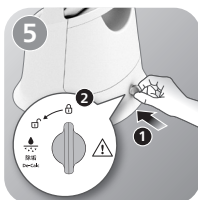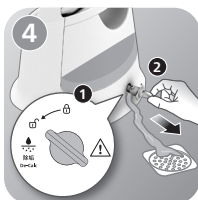

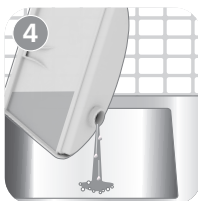

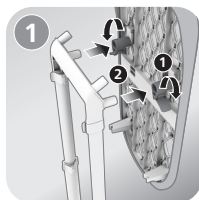







EN If you have any problems, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Center in your country.

Problem	Possible cause	Solution
The appliance produces no steam or irregular steam.	The steamer has not heated up sufficiently.	Let the appliance heat up for approximately 1 minute.
	Steam has condensed in the hose.	Lift the steamer head to straighten the hose vertically. This allows any condensation to flow back.
	Low water level in the tank or the tank is not inserted properly.	Refill the water tank and insert it properly.
	Too much scale has built up in the appliance.	Perform calc-clean process. Refer to  section.
Water droplets drip from the steamer head or the appliance produces a croaking sound.	The steamer head and/or steam supply hose have been left in low position for a long time (≥ 5 mins).	Lift the steamer head to straighten the hose vertically. This allows any condensation to flow back.
	When pole height is brought down, hose follows to be lowered. Steam is unable to pass through hose smoothly and thus forming condensation in the hose.	Lift the steamer head to straighten the hose vertically. This allows any condensation to flow back.
An excessive amount of water drips out of the steamer head when the appliance is heating up.	The water in the appliance is dirty or has been left inside the appliance for a long time.	Perform calc-clean process. Refer to  section.

Water leaks out from the steamer base.	You have not closed the water tank cap or de-calc knob securely.	Close the water tank cap or de-calc knob securely.
	The water tank is not inserted properly.	Insert the tank properly.
	The steamer head and/or steam supply hose have been left in low position for a long time (≥ 5 mins).	Lift steamer head to straighten the hose vertically. This allows pressure to be released inside the tank.
	Low water level in the tank resulting to pressure build up inside tank	Remove the water tank and fill it to at least half of the tank.

SC 如果您有任何问题，请访问 www.philips.com/support 查阅常见问题列表，或联系您所在国家/地区的客户服务中心。

问题	可能的原因	解决方法
产品无法产生蒸汽或产生的蒸汽不连贯。	蒸汽挂烫机未充分加热。	让产品加热约 1 分钟。
	有蒸汽凝结在输送管内。	提起蒸汽喷头以垂直拉直蒸汽输送管。这样做可使冷凝水流回水箱中。
	水箱中的水位低或水箱未正确插入。	为水箱加水并正确装入。
	产品内积聚的水垢太多。	执行除垢过程。请参阅  部分。

问题	可能的原因	解决方法
水滴从蒸汽喷头上滴下或产品发出咕噜声。	蒸汽喷头和/或蒸汽输送管长时间处于低位 (≥ 5 分钟)。	提起蒸汽喷头以垂直拉直蒸汽输送管。这样做可使冷凝水流回水箱中。
	衣架杆高度下降时，输送管随之降低。蒸汽无法顺畅穿过蒸汽输送管，因此导致在软管内形成冷凝。	提起蒸汽喷头以垂直拉直蒸汽输送管。这样做可使冷凝水流回水箱中。
产品加热时有过多的水从蒸汽喷头中滴出。	产品中的水变脏或留在产品内很长时间。	执行除垢过程。请参阅  部分。
蒸汽挂烫机底座漏水。	水箱盖未盖好或除垢旋钮未拧紧。 水箱未正确插入。	盖好水箱盖或拧紧除垢旋钮。 请正确插入水箱。
	蒸汽喷头和/或蒸汽输送管长时间处于低位 (≥ 5 分钟)。	提起蒸汽喷头以垂直拉直蒸汽输送管。这样可以在水箱内释放压力。
	水箱中的低水位导致水箱内压力增大。	取出水箱并将水位加注至水箱一半的位置。

PHILIPS

产品： 飞利浦蒸汽挂烫机
型号： STE3170
额定电压： 220 V~
额定频率： 50 Hz
额定输入功率： 2000 W
生产日期： 请见产品本体
产地： 中国浙江慈溪

范颂尼(中国)投资有限公司
上海市静安区灵石路728弄20号201室
全国顾客服务热线: 4008 203 160

本产品根据国标 GB4706.1-2005,
GB4706.84-2007 制造

保留备用

发行日期: 2023-07-21





PHILIPS and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

飞利浦及飞利浦盾徽标志是Koninklijke Philips N.V. 的注册商标且经许可使用。

This product has been manufactured by and is sold under the responsibility of Versuni Holding B.V., and Versuni Holding B.V. is the warrantor in relation to this product.

本产品由 Versuni Holding B.V. 负责生产并销售，且 Versuni Holding B.V.是本产品的担保方。

2023 © Versuni Holding B.V.

4239.001.2376.2

