

# Always there to help you

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)



AC4001



EN User manual 3

ZH-TW 使用手冊 16

# PHILIPS



# Contents

<b>1 Important</b>	4
Safety	4
<b>2 Your air purifier</b>	6
Overview	6
<b>3 Getting started</b>	7
Install filters	7
<b>4 Using the air purifier</b>	8
Switch on	8
Select the fan speed	8
Set the timer	8
Play music	9
Set the music player timer	9
<b>5 Clean your air purifier</b>	10
<b>6 Replacing the filters</b>	10
Replace the activated carbon filter and the HEPA filter	10
<b>7 Troubleshooting</b>	12
<b>8 Guarantee and service</b>	13
Order parts or accessories	13
<b>9 Notices</b>	14
Electromagnetic fields (EMF)	14
Recycling	14

# 1 Important

## Safety

Read this user manual carefully before you use the appliance, and save it for future reference.

## Dangers

- Do not let water or any other liquid or flammable detergent enter the appliance to avoid electric shock and/or a fire hazard.
- Do not clean the appliance with water, any other liquid, or a (flammable) detergent to avoid electric shock and/or a fire hazard.

## Warnings

- Check if the voltage indicated on the bottom or indicated at the rear of the appliance corresponds to the local power voltage before you connect the appliance.
- If the power cord is damaged, you must have it replaced by Philips, a service center authorized by Philips, or similarly qualified persons in order to avoid a hazard.
- Do not use the appliance if the plug, the power cord, or the appliance itself is damaged.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and maintenance shall not be made by children without supervision.
- Do not block the air inlet and outlet, e.g. by placing items on the air outlet or in front of the air inlet.

## Cautions

- The appliance can be used in tropical or moderate climate.
- The appliance power plug shall remain readily operable.
- Do not expose the appliance to dripping or splashing. No object filled with liquids, such as vases, shall be placed on the appliance.
- This appliance can only be used in regions no more than 2000m above sea level.



- This appliance is not a substitute for proper ventilation, regular vacuum cleaning, or use of an extractor hood or fan while cooking.
- If the power socket used to power the appliance has poor connections, the plug of the appliance becomes hot. Make sure that you plug the appliance into a properly connected power socket.
- Always place and use the appliance on a dry, stable, level, and horizontal surface.
- Leave at least 20cm free space behind and on both sides of the appliance and leave at least 30cm free space above the appliance.
- Do not place anything around the appliance nor sit on it.
- Do not place the appliance directly below an air conditioner to prevent condensation from dripping onto the appliance.
- Make sure all filters are properly installed before you switch on the appliance.
- Only use the original Philips filters specially intended for this appliance. Do not use any other filters.
- Avoid knocking against the appliance (the air inlet and outlet in particular) with hard objects.
- Do not insert your fingers or objects into the air outlet.
- Do not use this appliance when you have used indoor smoke-type insect repellents or in places with oily residues, burning incense, or chemical fumes.



- Do not use the appliance near gas appliances, heating devices or fireplaces.
- If you switch on your mobile phones in the vicinity of the appliance may cause interference with the appliance's music function .
- Radio interference is inevitable and may have an effect on the sound quality of the appliance's music.
- Always unplug the appliance after use and before you clean it.
- Do not use the appliance in a room with major temperature changes, as this may cause condensation inside the appliance.
- To prevent interference, place the appliance at least 2m away from electrical appliances that use airborne radio waves such as TVs, radios, and radio-controlled clocks.
- The appliance is only intended for household use under normal operating conditions.
- Do not use the appliance in wet surroundings or in surroundings with high ambient temperatures, such as the bathroom, toilet, or kitchen.
- The appliance does not remove carbon monoxide (CO) or radon (Rn). It cannot be used a a safety device in case of accidents with combustion processes and hazardous chemicals.

 
## 2 Your air purifier

Congratulations on your purchase, and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at [www.Philips.com/welcome](http://www.Philips.com/welcome). Read this user manual carefully before you install and use the unit. Save it for future reference.

### Overview

Check and identify the product parts.

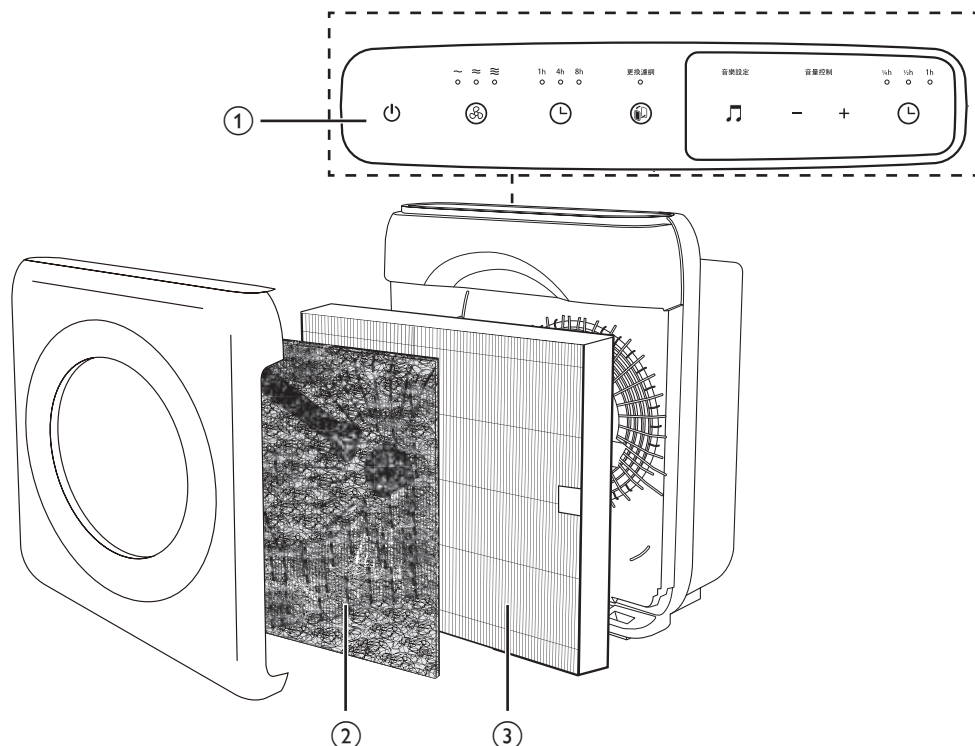

① Control panel

② Filter 1: Activated carbon filter AC4120 \*

③ Filter 2: HEPA filter AC4120 \*

\* AC4120 is a combination of filter 1 and filter 2.

# 3 Getting started

## Install filters

The appliance comes with all filters fitted inside, but you have to remove the packaging of the filters before you can use the appliance. Remove all filters, unpack them, and place them back into the appliance as described below.



### Tip

 
- When you remove or insert filters, place the appliance against a wall for more stability.





### Note

- Insert the filters in the correct position.


- 1 Place your fingers in the recesses of the side panels and gently pull the top part of the front panel towards you.

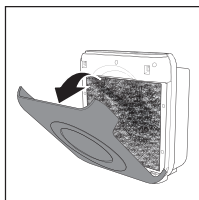

 
 
- 2 Lift the hooks at the bottom of the panel out of the bottom of the appliance.
- 3 Remove all the filters from the appliance.

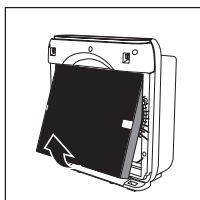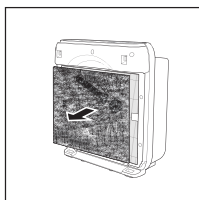

 - 4 Remove all packaging material from the filters.

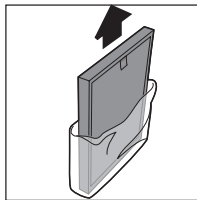

 
 
- 5 Put the air purifier filter back into the appliance.

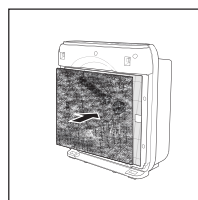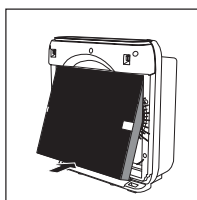

### Note

- Make sure that the side with the tag is pointing towards you.

  - 6 To reattach the front panel, insert the bottom hooks into the bottom of the appliance first. Then, push the panel against the body of the appliance.

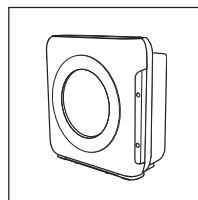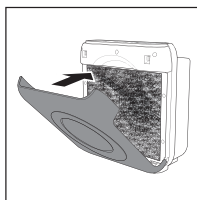


### Note

- Make sure that the side with the two projections is pointing towards you, and that all hooks are properly attached to the appliance.

## 4 Using the air purifier

### Switch on

 
- 1 Put the plug of the air purifier into the wall socket.

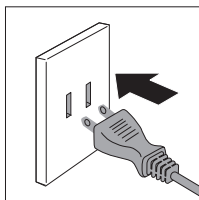

↳ All lights go on from left to right in cycle. Then, the lights go out again.

- 2 Press the  button to switch on the purifier.

 ↳ The indicator of fan speed  goes on.

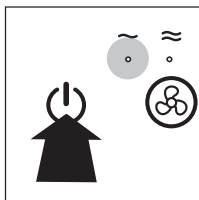


 

- 3 Press the  button to switch off the purifier.





### Select the fan speed


You can select the desired fan speed.


 
#### Note



 
- When you select a fan speed, you can also use the timer function (see section "Set the timer"). In this case, one of the lights ( or  or ) and the HOUR light (1h, 4h, or 8h) are on.

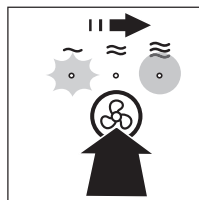
- 1 Press the  button once or more times to select the desired fan speed (,  or ).





### Set the timer

 With the timer function, you can let the purifier operate for a set number of hours. When the set time has elapsed, the purifier automatically switches off.

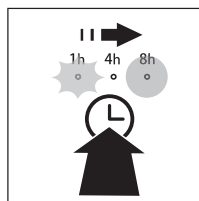- 1 Press the  button to switch on the purifier.
- 2 Press the  button to activate the timer.  
↳ The timer indicator (1h, 4h, or 8h) goes on.
- 3 Press the  button repeatedly to choose the number of hours you want the purifier to operate. The corresponding indicator (1h, 4h, or 8h) goes on.




To deactivate the timer function, press the  button repeatedly until the  indicator (1h, 4h, or 8h) is out.


## Play music

 
This air purifier features preset music player inside the unit, which not only allows you to benefit from breathing in clean air; but also to relax in soothing sound.

### Note

- The music player can play independently from the air purifier control.


- 1 Press the  button to start the music player:

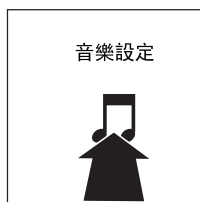


- 2 Press the  button continuously to choose the songs you want to listen. There are 6 songs available for your choice.

 - Rain
- Ocean Wave
- Cricket
- Schubert Lullaby
- Brahms Lullaby
- Babylight Lullaby



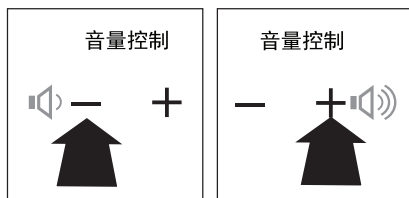

- 3 Press the + button to increase the volume, and press the - button to lower the volume.






- 4 Press and hold the  button for 3 seconds to stop the music player:

## Set the music player timer

 With the music player timer function, you can let the music player to operate for a set number of minutes. When the set time has elapsed, the music player automatically switches off.

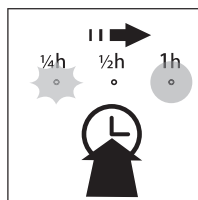- 1 Press the  button to switch on the purifier.
- 2 Press the  button to switch on the music player.
- 3 Press the  button to activate the timer:  
→ The timer indicator ( $\frac{1}{4}h$ ,  $\frac{1}{2}h$ , or  $1h$ ) goes on.
- 4 Press the  button repeatedly to choose the number of minutes you want the music player to operate. The corresponding indicator ( $\frac{1}{4}h$ ,  $\frac{1}{2}h$ , or  $1h$ ) goes on.



To deactivate the music timer function, press the  button repeatedly until the  indicator ( $\frac{1}{4}h$ ,  $\frac{1}{2}h$ , or  $1h$ ) is out.


## 5 Clean your air purifier
 
### Notes

- Always unplug the purifier before you clean it.
- Never immerse the purifier in water or any other liquid.
- Never use abrasive, aggressive, or flammable cleaning agents such as bleach or alcohol to clean any part of the purifier.
- All air purifier filters are NOT washable nor vacuum cleanable.


Regularly clean the inside and outside of the purifier body to prevent dust from collecting.

- 1 Wipe away dust with a soft dry cloth from the body of the purifier.

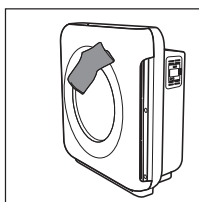

- 2 Clean the air inlet and the air outlet with a soft dry cloth.

## 6 Replacing the filters

The indicator of the filter replacement  indicates the filters have to be replaced.

### Replace the activated carbon filter and the HEPA filter

#### Note

- The activated carbon filter and the HEPA filter are not washable nor vacuum cleanable.

Replace both the activated carbon filter and HEPA filter when the indicator of the filter replacement goes on. This will last for approximately 2 weeks.



#### Tip

- When you remove or insert filters, place the purifier against a wall for more stability.

#### Notes

 
- Insert the filters in the correct position.
- Make sure you place the filters in the order of HEPA filter, and then the activated carbon filter.
- Make sure that the side with the tag is pointing towards you.

- 1 Switch off the purifier and unplug it.
- 2 Place your fingers in the recesses of the side panels and gently pull the front panel towards you.
- 3 Lift the panel off the hooks at the bottom of the purifier.
- 4 Remove the filters using the tag on the filter. Take the filters by both sides and gently deposit them into the house hold trash bin.


#### Note



- Do not touch the pleated filter surface, or smell the filter as it has collected pollutants from the air.
- Wash your hands after disposing of the used filters.

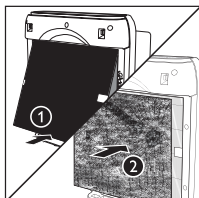 
- 5 Remove all packaging material from the new filters.
- 6 Place the new HEPA filter in the purifier first. Then, place the new activated carbon filter in the purifier.

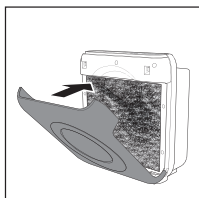

 - 7 To reattach the front panel, insert the bottom hooks into the bottom of the purifier first. Then, push the panel against the body of the purifier.





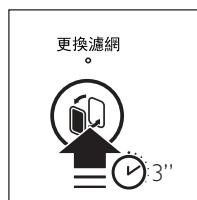



- 8 Plug the air purifier into the power supply. Then, press the  button to switch on the purifier.
- 9 Press and hold the  button for 3 seconds to reset the filter.
  - ➔ The filter replacement indicator goes off.



## 7 Troubleshooting

This chapter summarizes the most common problems you could encounter with the purifier. If you are unable to solve the problem with the information below, contact the Consumer Care Center in your country.

Problem	Possible solution
The indicator of  has been on continuously.	The filter is full. Replace the filter.
No air comes out of the air outlet.	The purifier is not connected to the power supply. Plug the purifier into the power supply and switch on.
The airflow that comes out of the air outlet is significantly weaker than before.	<ul style="list-style-type: none"><li>• You have not removed all packaging material from the filters. Make sure that you have removed all packaging material.</li></ul>
The air quality does not improve, even though the purifier has been operating for a long time.	<ul style="list-style-type: none"><li>• One of the filters has not been placed in the purifier. Make sure that all filters are properly installed in the following order, starting with the innermost filter: 1) HEPA filter; 2) activated carbon filter.</li><li>• The air quality sensor is wet. The humidity level in your room is high and causes condensation. Make sure that the air quality sensor is clean and dry (see 'Clean the air quality sensor').</li></ul>
The purifier is extra loud.	<ul style="list-style-type: none"><li>• Please check if you have removed all the packaging material from the filters.</li><li>• If the appliance is still too loud, you can change the fan speed to a lower fan speed level.</li></ul>
The purifier still indicates that I need to replace a filter, but I already did.	Perhaps you did not press the  button properly. Plug in the purifier, press the  button and press and hold the  button for 3 seconds.
The music player does not turn off after pressing the  button.	Music player control works independently from the air purifier. To stop playing the music, press and hold the  button for 3 seconds.



## 8 Guarantee and service

If you need information or if you have a problem, please visit the Philips website at [www.philips.com](http://www.philips.com) or contact the Philips Consumer Care Center in your country (you will find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Center in your country, go to your local Philips dealer.

---

### Order parts or accessories

If you have to replace a part or want to purchase an additional part, go to your Philips dealer or visit [www.philips.com/support](http://www.philips.com/support). If you have problems obtaining the parts, please contact the Philips Consumer Care Center in your country (you will find its phone number in the worldwide guarantee leaflet).

## 9 Notices

### Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

### Compliance with EMF

Koninklijke Philips N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.

### Recycling



Never dispose your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.



# 目錄

<b>1 重要事項</b>	17
安全	17
<b>2 您的空氣清淨機</b>	19
概覽	19
<b>3 快速入門</b>	20
安裝濾網	20
<b>4 使用空氣清淨機</b>	21
開機	21
選擇風扇速度	21
設定定時器	21
播放音樂	22
設定音樂播放機的定時器	22
<b>5 清潔空氣清淨機</b>	23
<b>6 更換濾網</b>	23
更換活性碳濾網和 HEPA 濾網	23
<b>7 疑難排解</b>	25
<b>8 保固與服務</b>	26
訂購零件或配件	26
<b>9 聲明</b>	27
電磁場 (EMF)	27
回收	27



# 1 重要事項

## 安全

在使用本產品前，請先仔細閱讀本使用手冊，並保留使用手冊以供日後參考。

### 危險

- 請勿讓水或其他液體，或是易燃清潔劑進入產品內，以避免電擊和 / 或火災。
- 請勿用水、其他液體，或是 (易燃) 清潔劑清潔產品，以避免電擊和 / 或火災。

### 警告

- 在連接本產品的電源之前，請確認本產品機體底部或後方所標示的電壓與本地的電源電壓是否相同。
- 如果電線損壞，您必須將其交由飛利浦、飛利浦授權之服務中心，或是具備相同資格的技師進行更換，以免發生危險。
- 當插頭、電源線或產品本身受損時，請勿使用本產品。
- 本產品可供 8 歲以上孩童、身體官能或心智能力退化者，或是經驗與使用知識缺乏者使用，但需要有人在旁監督或適當指示如何安全使用本產品，以及可能遭受的危險。請勿讓兒童把玩本產品。若無人在旁監督，不得讓孩童清潔與維護本產品。

- 請勿在出風口上方或進風口前面放置物品，擋住進出風口。

### 注意

- 本產品適用於熱帶和溫帶氣候。
- 產品電源插頭應保持隨時可操作。
- 請勿將產品置於容易滴水或濺水的環境。請勿在產品上放置盛有液體的容器，如花瓶等。
- 本產品只能用於不超過海平面以上 2000 公尺的地區。



- 本產品不可用來作為維持良好通風的設備、替代吸塵器清潔，或烹調時用來當作抽油煙機使用。
- 如果供應產品電力的電源插座接頭不良，產品插頭會發熱。請確定將產品插入接頭良好的插座。
- 請將本產品放置在乾燥平穩的水平面上使用。
- 產品的背面及側面須至少保留 20 公分的間隔距離，頂部則至少保留 30 公分的間隔距離。
- 請勿於產品上堆置任何物品或坐在產品上面。
- 請勿將產品放置在冷氣機正下方，以免冷氣機滴水，造成產品發生水滴凝結的現象。
- 請在開啟產品電源前，先確認所有濾網皆已正確安裝。



- 請僅使用產品專用的飛利浦原廠濾網。  
請勿使用其他濾網。
- 切勿使用堅硬的物體敲打產品 (特別是進風口及出風口)。
- 請勿將手指或任何物體放入出風口。
- 當您使用室內噴霧式驅蟲劑或在充滿油漬、燒香、香煙的火星或化學煙霧的地方時，請勿使用本產品。
- 請勿在氣體用品、加熱裝置或壁爐附近使用本產品。
- 如果您在產品附近開啟手機，可能會干擾產品的音樂功能。
- 無線電干擾是不可避免的，可能會影響產品音樂的音效品質。
- 使用完畢後或進行清潔之前，請務必先拔除電源插頭。
- 請勿在溫差變化極大的室內使用本產品，因為室溫差距太大會造成本產品內部凝結水珠。
- 請將本產品遠離使用無線電電波的電子電器至少 2 公尺以避免干擾，例如電視、無線電廣播、無線電信號控制的時鐘。
- 本產品為家用產品，僅限於在正常操作環境下使用。
- 請勿在極為潮濕或周遭溫度很高的環境下使用本產品，例如浴室、廁所或廚房。
- 本產品無法清除一氧化碳 (CO) 或氫氣 (Rn)。發生燃燒意外及危險化學物品意外時，本產品無法當作安全裝置使用。

## 2 您的空氣清淨機

 
感謝您購買本產品。歡迎來到飛利浦的世界！

請至 [www.Philips.com/welcome](http://www.Philips.com/welcome) 登錄您的產品，以獲得飛利浦提供的完整支援。

在您安裝和使用本裝置前，請先詳讀本使用手冊。敬請妥善保管本手冊，以供日後參考。

### 概覽

清點產品零件。

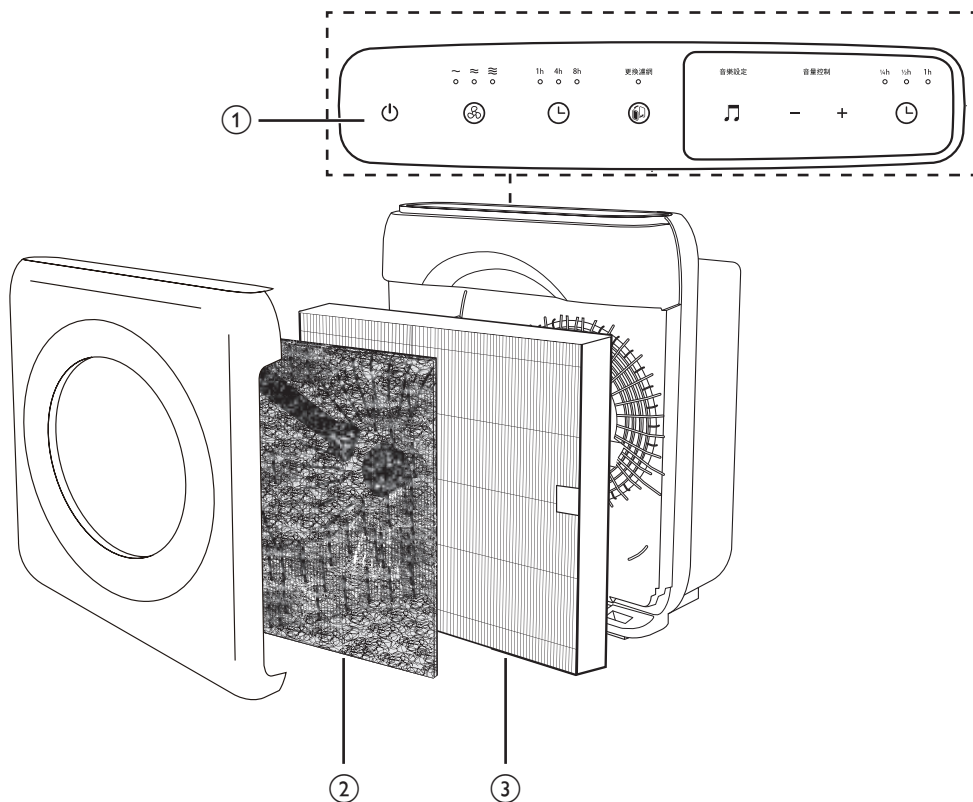

① 控制面板

② 濾網 1：活性炭濾網 AC4120 \*

③ 濾網 2：HEPA 濾網 AC4120 \*

\* AC4120 為濾網 1 和 2 的組合

## 3 快速入門

### 安裝濾網

本產品所有隨附的濾網皆已妥善安裝在機體內，但是在使用前，必須先拆下濾網包裝。請先取出所有濾網，拆下濾網包裝，然後把濾網放回產品中，如下所述。



#### 秘訣

 
- 取出或裝入濾網時，將本產品靠牆擺放可獲得較穩定的支撐。



#### 備註



- 將濾網裝入正確的位置。

- 將手指放入兩邊護板的凹處，朝自己的方向輕輕拉出產品正面護板的頂部。

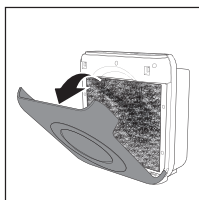


- 然後將護板底部的扣鉤自產品底部提起。

 
 
- 從產品內取出所有濾網。

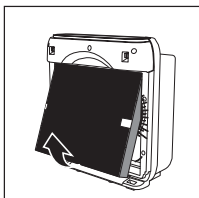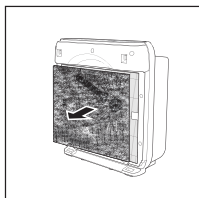

- 拆下濾網的所有包裝材料。

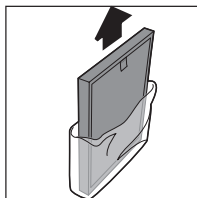 



- 將空氣清淨機濾網裝回產品。

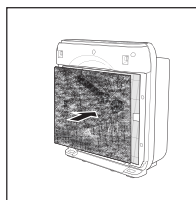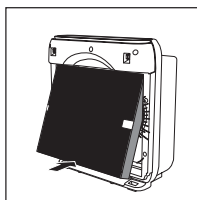  

#### 備註

- 請確認有拉片的那一側朝向自己。

  - 若要重新裝入正面護板，先將底部扣鉤裝入產品底部，然後將護板推入產品機體。

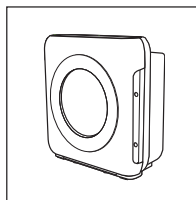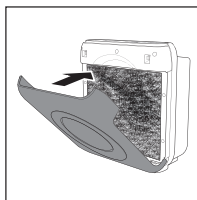

#### 備註

- 請確認有兩個凸出部分的那一側朝向自己，且所有扣鉤皆已正確裝入產品。

 






## 4 使用空氣清淨機


### 開機

- 1 將空氣清淨機的插頭插入牆上插座。

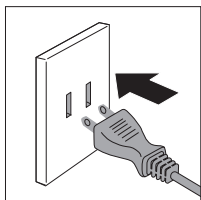

↳ 所有指示燈會從左至右循環閃爍。然後指示燈再次熄滅。

  - 2 按下  按鈕以開啟清淨機電源。  
↳ 風扇速度指示燈  會亮起。

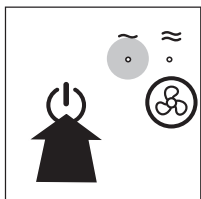 








- 3 按下  按鈕以關閉清淨機電源。


### 選擇風扇速度

  您可選擇想要的風扇速度。

#### 備註

 

 
- 選擇風扇速度時，也可以使用定時功能（請參閱「設定定時器」一節）。在此情況下，其中一個指示燈（、 或 ）以及小時（HOUR）指示燈（1h、4h 或 8h）會亮起。


- 1 按下  按鈕一次或多次，選擇想要的風扇速度（、 或 ）。

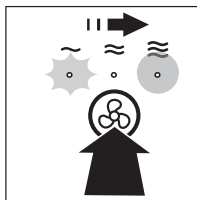 
 


### 設定定時器

您可以使用定時功能，讓清淨機在設定的小時數內運作。設定時間結束後，清淨機會自動關閉電源。

- 1 按下  按鈕以開啟清淨機電源。
- 2 按下  按鈕啟動定時功能。  
↳ 定時指示燈（1h、4h 或 8h）會亮起。
- 3 重複按下  按鈕，選擇想要清淨機運作的小時數。對應的指示燈（1h、4h、或 8h）會亮起。

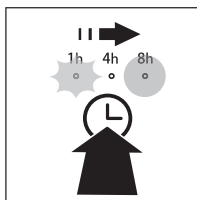

要關閉定時功能，請重複按下  按鈕，直到  指示燈（1h、4h 或 8h）熄滅。



## 播放音樂


本空氣清淨機在裝置內配備預設的音樂播放機功能，讓您不僅能呼吸乾淨的空氣，還能在輕柔的音樂中放鬆身心。

### 備註

- 音樂播放機可獨立播放，與空氣清淨機控制器無關。

 
- 1 按下  按鈕可啟動音樂播放機。



- 2 持續按下  按鈕可選擇想聽的歌曲。共有 6 首歌曲供您選擇。

- 雨聲
- 海潮聲
- 蟋蟀聲
- 舒伯特搖籃曲
- 布拉姆斯搖籃曲
- 嬰兒燈搖籃曲

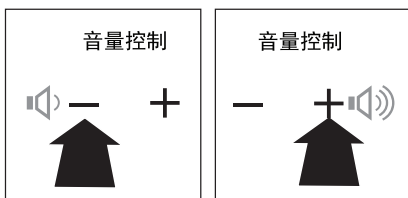


 
- 3 按下 + 按鈕可提高音量，按下 - 按鈕可降低音量。






- 4 按住  按鈕 3 秒鐘可停止音樂播放機。

## 設定音樂播放機的定時器

 您可以使用音樂播放機的定時器功能，讓音樂播放機在設定的分鐘數內運作。設定時間結束後，音樂播放機會自動關閉。

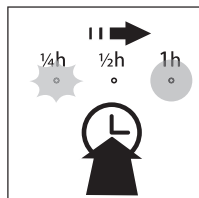- 1 按下  按鈕以開啟清淨機電源。
- 2 按下  按鈕以開啟音樂播放機。
- 3 按下  按鈕啟動定時功能。  
→ 定時指示燈 ( $\frac{1}{4}h$ 、 $\frac{1}{2}h$  或  $1h$ ) 會亮起。
- 4 重複按下  按鈕，選擇想要音樂播放機運作的分鐘數。對應的指示燈 ( $\frac{1}{4}h$ 、 $\frac{1}{2}h$  或  $1h$ ) 會亮起。



要關閉音樂定時功能，請重複按下  按鈕，直到  指示燈 ( $\frac{1}{4}h$ 、 $\frac{1}{2}h$  或  $1h$ ) 熄滅。




## 5 清潔空氣清淨機
 
### ≡ 備註

- 進行清潔前，請務必先拔掉清淨機的電源插頭。
- 切勿讓清淨機浸入水或其他液體中。
- 切勿使用漂白劑或酒精等具磨蝕性、刺激性或易燃洗劑清潔清淨機的任何部分。
- 所有的空氣清淨機濾網皆「不得」水洗或用吸塵器清潔。

定期清潔清淨機機體的內部與外殼，可避免累積灰塵。

### 1 請使用柔軟的乾布擦拭清淨機的機體。

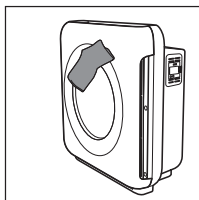

### 2 請使用柔軟的乾布清潔進風口及出風口。

## 6 更換濾網

濾網更換指示燈 (🔆) 指示必須更換濾網。

### 更換活性炭濾網和 HEPA 濾網

#### ≡ 備註

- 活性炭濾網和 HEPA 濾網皆不可水洗或用吸塵器清潔。

當濾網更換指示燈亮起時，請同時更換活性炭濾網和 HEPA 濾網。使用效期約為 2 週。



#### \* 秘訣

- 取出或裝入濾網時，將清淨機靠牆擺放可獲得較穩定的支撐。

#### ≡ 備註

- 將濾網裝入正確的位置。
- 請確認您先裝入 HEPA 濾網，再裝入活性炭濾網。
- 請確認有拉片的那一側朝向自己。

 


- 1 關閉清淨機電源，並拔除插頭。
- 2 將手指放入兩邊護板的凹處，朝自己的方向輕輕拉出產品正面護板。
- 3 將護板底部的扣鉤自清淨機底部提起。
- 4 使用濾網上的拉片取下濾網。從兩側握住濾網，輕輕丟棄至家用垃圾桶。


#### 備註


- 請勿碰觸有皺摺的濾網表面或嗅聞濾網，因為它收集了空氣中的污染物。
- 丟棄舊濾網後務必洗手。


- 5 拆下新濾網的所有包裝材料。
- 6 先將新 HEPA 濾網裝入清淨機。然後將新的活性炭濾網裝入清淨機。

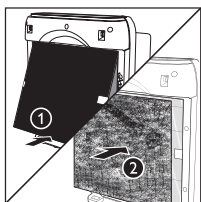


  - 7 若要重新裝入正面護板，先將底部扣鉤裝入清淨機底部。然後將護板推入清淨機機體。

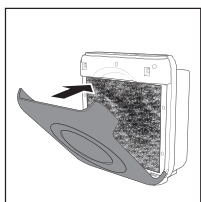

- 8 將空氣清淨機的插頭插入電源供應器。然後按下  按鈕以開啟清淨機電源。



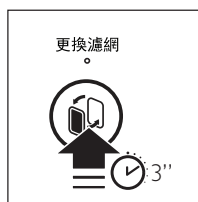 



- 9 按住  按鈕 3 秒鐘可重設濾網。  
↳ 濾網更換指示燈會熄滅。





## 7 疑難排解

 本單元概述您使用清淨機時最常遇到的問題。如果您無法利用以下資訊解決您遇到的問題，請聯絡您所在國家/地區的客戶服務中心。

問題	可能的解決方法
 指示燈持續亮起。	濾網已滿。請更換濾網。
出風口沒有空氣流出。	清淨機沒有連接至電源供應器。請將清淨機插頭插入電源供應器，然後開啟電源。
出風口流出的風速比之前慢很多。	<ul style="list-style-type: none"> <li>您尚未拆下濾網的所有包裝材料。請確認已拆下所有包裝材料。</li> </ul>
即使清淨機已經長時間運作，空氣品質仍未獲得改善。	<ul style="list-style-type: none"> <li>其中一個濾網尚未裝入清淨機內。請確認所有濾網都已按照下列順序正確安裝，濾網從內至外分別為：(1) HEPA 濾網；(2) 活性炭濾網。</li> <li>空氣品質感測器潮濕。室內的濕度等級很高，造成水珠凝結。請確認空氣品質感測器乾淨且乾燥 (請參閱「清潔空氣品質感測器」)。</li> </ul>
清淨機噪音很大。	<ul style="list-style-type: none"> <li>請檢查是否已拆下濾網的所有包裝材料。</li> <li>如果產品噪音仍然很大，可將風扇速度變更為較低的速度等級。</li> </ul>
清淨機不斷要求更換濾網，但濾網已經更換了。	您可能未確實按下  按鈕。請為清淨機插上電源，按下  按鈕並按住  按鈕 3 秒鐘。
按下  按鈕後，音樂播放機並未關閉。	音樂播放機控制器獨立運作，與空氣清淨機無關。若要停止播放音樂，請按住  按鈕 3 秒鐘。



## 8 保固與服務

若您需要相關資訊，或是有任何問題，請造訪飛利浦網站：[www.philips.com](http://www.philips.com)，或聯絡您所在國家/地區的飛利浦客戶服務中心（您可在全球保證書上找到電話號碼）。若當地沒有客戶服務中心，請洽詢當地的飛利浦經銷商。

---

### 訂購零件或配件

如果您必須更換零件或想購買其他零件，請聯絡您的飛利浦經銷商，或造訪

[www.philips.com/support](http://www.philips.com/support)。

如果您有取得零件方面的問題，請聯絡您所在國家/地區的飛利浦客戶服務中心（您可在全球保證書上找到電話號碼）。

## 9 聲明

### 電磁場 (EMF)

本飛利浦產品符合所有電磁場暴露的相關適用標準和法規。

#### 符合 EMF 標準

Koninklijke Philips N.V. 製造銷售多項消費性產品，這些產品就如同其他電器，通常能收發電磁訊號。

飛利浦的一大企業原則，就是針對自身的產品進行必要的健康與安全檢測，以符合所有適用的法律規定，以及在產品生產期間符合適用的 EMF 標準。

飛利浦致力於開發、生產及銷售不危害健康的產品。飛利浦保證，只要依照正確用途並妥善使用，根據現有的科學研究資料，使用本公司產品並無安全顧慮。

飛利浦積極參與國際 EMF 與安全標準的開發，因此得以掌握標準化的發展，及早將標準化與自身的產品整合。

### 回收



請勿將您的產品與其他家用廢棄物共同丟棄。請瞭解當地電子及電器廢棄物的垃圾分類相關法規。正確處理廢棄產品有助於避免對環境和人類健康帶來負面影響。



Specifications are subject to change without notice  
© 2014 Koninklijke Philips N.V.  
All rights reserved.  
4241 210 17321

