



## ENGLISH

### General description (Fig. 1)

- 1 Spray nozzle
- 2 Cap of filling opening
- 3 Steam control
- ☈ = steam ironing
- ☈ = dry ironing
- CALC CLEAN = Calc-Clean function
- 4 Steam boost button (Specific types only)
- 5 Spray button
- 6 Temperature dial
- 7 Temperature light (specific types only; with safety-auto off indication)
- 8 Mains cord
- 9 Type plate
- 10 Water tank with MAX water level indication
- 11 Soleplate

### Using the appliance

#### Filling the water tank

Note: Your appliance has been designed to be used with tap water. If you live in an area with hard water, fast scale build-up may occur. Therefore, it is recommended to use 100% distilled or demineralized water to prolong the lifetime of your appliance.

Note: Do not put perfume, vinegar, starch, descaling agents, ironing aids, chemically descaled water or other chemicals in the water tank.

- 1 Set the steam control to position ☈ (dry ironing). (Fig. 2)
- 2 Fill the water tank up to the MAX indication (Fig. 3).
- 3 Close the cap of the filling opening.

#### Selecting temperature and steam setting

Table 1

Fabric type	Temperature setting	Steam setting	Steam boost (specific types only)	Spray
Linen	MAX	✉	Yes	Yes
Cotton	●●●	✉	Yes	Yes
Wool	●●	✉	No	Yes
Silk	●●	✉	No	Yes
Synthetic fabrics (e.g. acrylic, nylon, polyamide, polyester)	●	✉	No	No

Note: As indicated in the table above, do not use steam or steam boost at a low temperature, otherwise hot water may leak from the iron.

- 1 Consult table 1 to set the temperature dial to the appropriate setting for your garment (Fig. 4).
- 2 Put the iron on its heel and plug it in. The temperature light goes on to indicate that the iron is heating up (Fig. 5).
- 3 When the temperature light goes out, the iron has reached the correct temperature.

- 4 Consult table 1 to select a steam setting that corresponds to the temperature you have set (Fig. 6).

### Features

#### Dry Ironing

- 1 Set the steam control to ☈ (dry ironing) to iron without steam. (Fig. 2)
- 2 Press the spray button to moisten the article to be ironed. This helps remove stubborn creases (Fig. 7).

#### Steam boost function (specific types only)

- 1 Press and release the steam boost button for a powerful boost of steam to remove stubborn creases (Fig. 8).

#### Vertical steam (specific types only)

- 1 You can use the steam boost function when you hold the iron in vertical position for removing creases from hanging clothes, curtains etc (Fig. 9).

#### Safety auto-off function (specific types only)

- 1 The iron switches off automatically if it has not been moved for 30 seconds in horizontal position or 8 minutes in vertical position. The auto-off light starts flashing (Fig. 10).

- 2 To let the iron heat up again, pick up the iron or move it slightly until the auto-off light goes out.

### Cleaning and maintenance

#### Cleaning

- 1 Set the steam control to ☈ (dry ironing), unplug the iron and let it cool down. (Fig. 2)
- 2 Pour any remaining water out of the water tank.

- 3 Wipe flakes and any other deposits off the soleplate with a damp cloth and a non-abrasive (liquid) cleaning agent.

Caution: To keep the soleplate smooth, avoid hard contact with metal objects. Never use a scouring pad, vinegar or other chemicals to clean the soleplate.

Note: Regularly rinse the water tank with tap water. Empty the water tank after rinsing it.

#### Calc-Clean function

**IMPORTANT:** To prolong the lifetime of your appliance and to maintain good steaming performance, use the Calc-Clean function once every two weeks. If the water in your area is very hard (i.e. when flakes come out of the soleplate during ironing), use the Calc-Clean function more frequently.

- 1 Make sure the appliance is unplugged and the steam control is set to ☈ (dry ironing). (Fig. 2)

- 2 Fill the water tank to the MAX indication. (Fig. 3).

Do not pour vinegar or other descaling agents into the water tank.

- 3 Plug in the iron and set the temperature dial to MAX (Fig. 11).

- 4 Unplug the iron when the temperature light goes out.

- 5 Hold the iron over the sink. Push the steam control to the Calc-Clean position and hold it. (Fig. 12).

- 6 Gently shake the iron until all water in the water tank has been used up (Fig. 13).

Caution: While scale is flushed out, steam and boiling water also come out of the soleplate.

- 7 Set the steam control back to ☈ (dry ironing). (Fig. 2)

Note: Repeat the Calc-Clean process if the water that comes out of the iron still contains scale particles.

#### After the Calc-Clean process

- 1 Plug in the iron. Let the iron heat up to let the soleplate dry.

- 2 Unplug the iron when the temperature light goes out.

- 3 Move the iron gently over a piece of cloth to remove any water stains on the soleplate.

- 4 Let the iron cool down before you store it.

#### Storage

- 1 Unplug the iron and set the steam control to ☈ (dry ironing). (Fig. 2)

- 2 Wind the mains cord round the backplate of the iron and store the iron on its heel (Fig. 14).

**Troubleshooting**  
This chapter summarises the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit [www.philips.com/support](http://www.philips.com/support) for a list of frequently asked questions or contact the Consumer Care Centre in your country (see the worldwide guarantee leaflet for contact details).

Problem	Possible cause	Solution
The iron is plugged in, but the soleplate is cold.	The temperature dial is set to MIN.	Set the temperature dial to the required position.
The iron does not produce any steam.	There is not enough water in the water tank.	Fill the water tank (see Fig. 3).
	The steam control is set to position ☈.	Set the steam slider to position ☈.
	The iron is not hot enough.	Set an ironing temperature that is suitable for steam ironing (●● to MAX). Put the iron on its heel and wait until the temperature light has gone off before you start ironing.
The iron does not produce a steam boost.	You have used the steam boost function too often within a very short period.	Continue ironing in horizontal position and wait a while before you use the steam boost function again.
	The iron is not hot enough.	Set an ironing temperature at which the steam boost function can be used (●●● to MAX). Put the iron on its heel and wait until the temperature light has gone off before you use the steam boost function.
	There is not enough water in the water tank.	Fill the water tank (see Fig. 3).
Water droplets drip onto the fabric during ironing.	You have not closed the cap of the filling opening properly.	Press the cap until you hear a click.
	You have put an additive in the water tank.	Rinse the water tank and do not put any additive in the water tank.
	The set temperature is too low for steam ironing.	Set a temperature of ●● or higher.
	You have used the steam boost function at a temperature setting below ●●●.	Set the temperature dial to a setting between ●●● and MAX.

Problem	Possible cause	Solution
Water drips from the Soleplate after the iron has cooled down or has been stored.	You have put the iron in horizontal position with water still left in the water tank.	Empty the water tank or put the iron on heel.
Flakes and impurities come out of the soleplate during ironing.	Hard water forms flakes inside the soleplate.	Use the Calc-Clean function one or more times (see the 'Calc-clean function' section).
Steam becomes weaker over time.	Hard water forms flakes inside the soleplate.	Use the Calc-Clean function one or more times (see the 'Calc-clean function' section).

## INDONESIA

### Keterangan umum (Gbr. 1)

- 1 Pipa semprotan
- 2 Tutup lubang pengisian
- 3 Kontrol uap
- ☈ = penyekretakan uap
- ☈ = penyekretakan kering
- CALC CLEAN = Fungsi Calc-Clean
- 4 Tombol semburan uap (Hanya tipe tertentu)
- 5 Tombol semprotan
- 6 Putaran suhu
- 7 Lampu suhu (hanya tipe tertentu: dengan indikasi pengaman mati otomatis)
- 8 Kabel utama
- 9 Jenis pelat
- 10 Tangki air dengan tanda batas air MAX
- 11 Tapak setrika

### Menggunakan alat

#### Mengisi tangki air.

Catatan: Alat ini dirancang untuk menggunakan air keran. Jika Anda tinggal di daerah dengan air yang sadar, kerak akan cepat terbentuk. Oleh karena itu, disarankan untuk menggunakan 100% air suling atau yang kandungan mineralnya dihilangkan untuk memperpanjang masa pakai alat.

Catatan: Jangan masukkan parfum, cuka, kanji, zat pembersih kerak, zat bantu penyekretakan, bahan kimia pembersih kerak atau bahan kimia lainnya ke dalam tangki air.

- 1 Atur kontrol uap ke posisi ☈ (penyekretakan kering). (Gbr. 2)
- 2 Isi tangki air hingga mencapai tanda MAX. (Gbr. 3).
- 3 Pasang tutup lubang pengisian.

#### Memilih pengaturan suhu dan uap

Tabel 1

Jenis kain	Setelan suhu	Setelan uap	Semburau uap (hanya tipe tertentu)	Semprotan
Linen	MAKS	✉	Y	Y
Katun	●●●	✉	Y	Y
Wol	●●	✉	NO	Y
Sutera	●●	✉	NO	Y
Kain sintetis (misalnya akrilik, nilon, poliamida, polyester)	●	✉	NO	NO

Catatan: Seperti yang ditunjukkan pada tabel di atas, jangan gunakan uap atau semburan uap pada suhu yang rendah karena air panas dapat bocor dari setrika.

- 1 Baca tabel 1 untuk mengatur putaran suhu ke setelan yang sesuai untuk kain Anda. (Gbr. 4).
- 2 Simpan setrika pada posisi berdiri dan colokkan stekernya. Lampu suhu menyalin yang menandakan setrika sedang memasak. (Gbr. 5).
- 3 Saat lampu suhu mati, setrika telah mencapai suhu yang benar.
- 4 Baca tabel 1 untuk memilih setelan uap yang sesuai dengan suhu yang telah Anda tetapkan. (Gbr. 6).

#### Fitur

##### Setrika kering

- 1 Atur kontrol uap ke ☈ (penyekretakan kering) untuk menyekretakan tanpa uap. (Gbr. 2)

##### Fungsi semprotan

- 2 Tekan tombol semprot untuk melembabkan pakaian yang akan disekretakan. Ini membantu menghilangkan kusut yang membundel. (Gbr. 7).

- 3 Simpan setrika pada posisi berdiri dan colokkan stekernya. Lampu suhu menyalin yang menandakan setrika sedang memasak. (Gbr. 8).

- 4 Tepatkan uap vertikal (hanya tipe tertentu)

- 5 Andi juga dapat menggunakan fungsi semburan uap saat Anda memegang setrika pada posisi vertikal untuk menghilangkan kusut dari baju yang digantung, tirai, dlt. (Gbr. 9).

##### Fungsi pengaman mati-otomatis (hanya tipe tertentu)

- 1 Setrika mati secara otomatis jika tidak digunakan selama 30 detik pada posisi horizontal atau 8 menit pada posisi vertikal. Lampu mati-otomatis mulai berkedip. (Gbr. 10).

- 2 Untuk membiarkan setrika memasak, tekan tombol uap yang sesuai dengan suhu yang telah Anda tetapkan. (Gbr. 11).

#### Fitur Calc-Clean

PENTING: Untuk memperpanjang masa pakai alat dan mempertahankan kinerja yang baik, gunakan fungsi Calc-Clean sekali tiap dua minggu. Jika kesadaran air di area Anda sangat tinggi (mis. jika serikan keluar dari tapak setrika saat menyekretakan), gunakan fungsi Calc-Clean lebih sering.

- 1 Pastikan alat sudah dicabut dari aliran listrik dan kontrol uap disetel ke ☈ (penyekretakan kering). (Gbr. 2)

- 2 Isi tangki air hingga mencapai tanda MAX. (Gbr. 3).

Jangan menuangkan cuka atau zat pembersih kerak lainnya ke dalam tangki air.