




HD3136  
HD3137  
Мультиварка  
Мультипіршігіш

EN User manual  
KK Қолданушының мүснекі

RU Руководство пользователя  
UK Паспорт користувача

PHILIPS

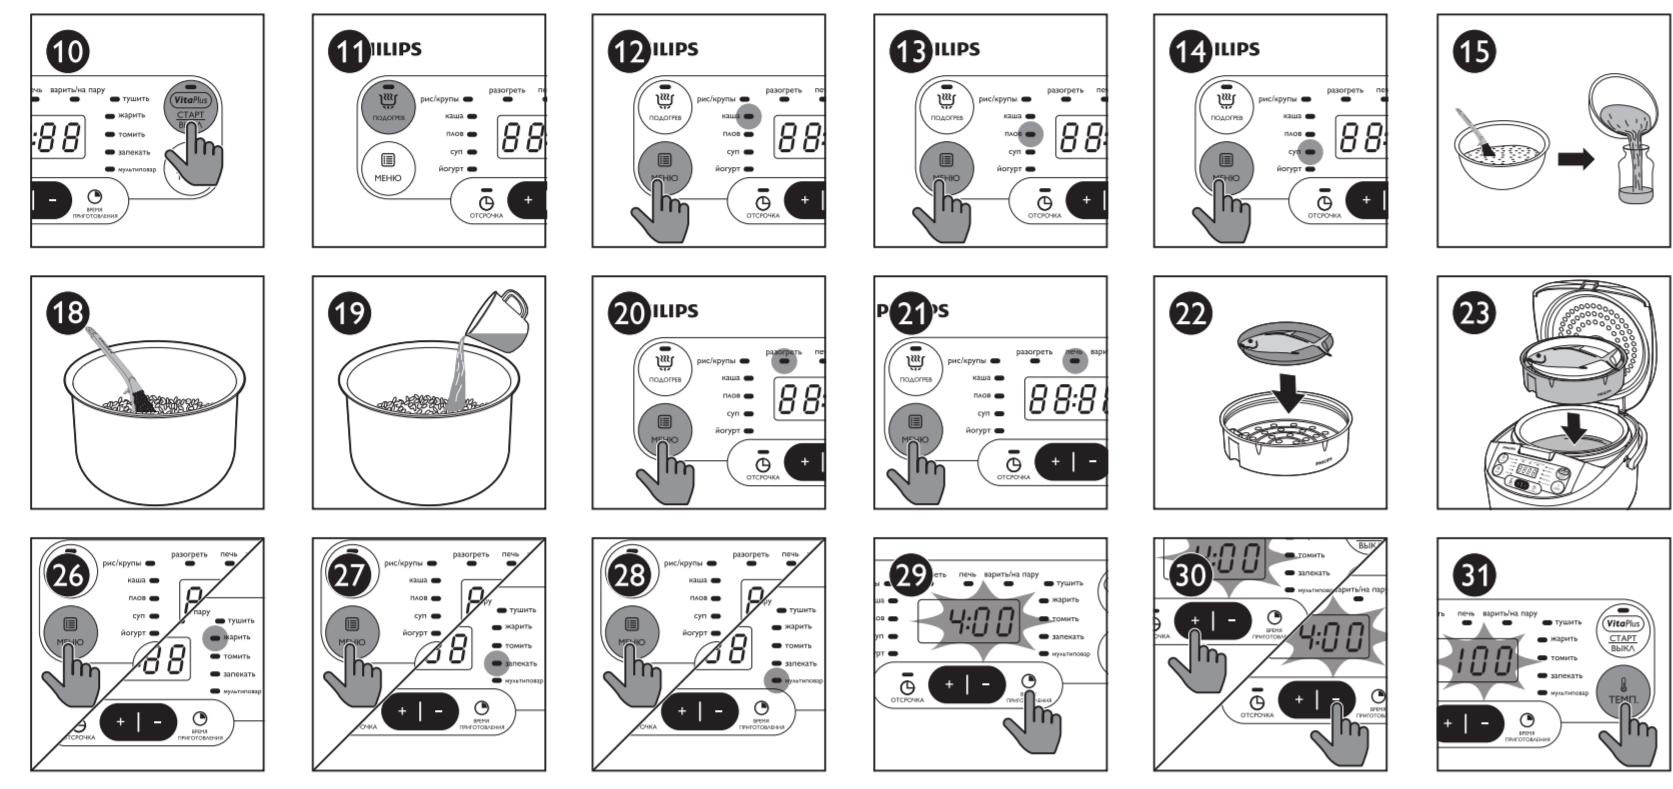

Specifications are subject to change without notice  
© 2015 Koninklijke Philips N.V.  
All rights reserved.

## English

### 1 Your multicooker

Congratulations on your purchase, and welcome to Philips!  
To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

### 2 What's in the box (fig.1)

Multicooker main unit	Measuring cup
Power cord	Steam basket
User manual	Recipe
Safety leaflet	Warranty card

### 3 Overview (fig.2)

① Detachable steam vent cap	⑦ Heating element
② Top lid	⑧ Power socket
③ Inner pot	⑨ Cooker handle
④ Lid release button	⑩ Water level indications
⑤ Control panel	⑪ Sealing ring
⑥ Main body	

### Note

• Two sets of water level indications are shown in the pictures. Either one of the water level indications could be used on the inner pot.

### Controls overview (fig.3)

⑭ Cooking functions	⑯ Decrease button
⑮ Keep-warm button	⑰ Cooking time button
⑯ Menu button	⑱ Temperature button
⑰ Preset button	⑲ Start/Cancel button
⑱ Increase button	⑳ Display

### Functions overview

Functions	Default cooking time	Adjustable cooking time	Preset time	Default cooking temperature
Rice/Grains (рис/зерна)	40 min	/	1-24 hr	130-140°C
Porridge (каса)	10 min	5 min - 2 hr	1-24 hr	90-100°C
Plov (плов)	35 min	/	1-24 hr	130-140°C
Soup (суп)	1 hr	20 min - 10 hr	1-24 hr	100°C
Yogurt (йогурт)	8 hr	6-12 hr	1-24 hr	40±3°C
Reheat (разогрев)	25 min	5-60 min	/	85°C
Bake (печь)	45 min	20 min - 2 hr	/	130°C
Steam/Boil (варіть/на пару)	20 min	5 min - 2 hr	1-24 hr	100°C
Stew (тушить)	1 hr	20 min - 10 hr	1-24 hr	90°C
Fry (жарить)	15 min	5-60 min	/	145-150°C
Slow cook (томить)	5 hr	1-15 hr	1-24 hr	80°C
Roast (запекать)	1 hr	/	1-24 hr	130°C
Manual (мультиовар)	2 hr	5 min - 10 hr	1-24 hr	100°C

### Note

• The cooking times for the baking and roasting functions can be selected separately. The baking function is between 40°C to 160°C, and select temperature for the manual function from 30°C to 160°C. The step is 10°C.  
• After the cooking has started you can press and hold the Start/Cancel button (СТАРТ/ВЫКЛ.) to deactivate the cooking process and the multicooker will enter the standby mode.

### 4 Using the multicooker

#### Before first use

1 Take out all the accessories from the inner pot. Remove the packaging material of the inner pot.  
2 Clean the parts of the multicooker thoroughly before using it for the first time (see chapter Cleaning and Maintenance).

#### Note

• Make sure all parts are completely dry before you start using the multicooker.

#### Preparations before cooking

Before using the multicooker, you need to do the following steps:  
1 Measure the grains using the measuring cup provided.  
2 Wash the grains thoroughly.  
3 Put the pre-washed grains in the inner pot.  
4 Add water to the level indicated on the scale inside the inner pot and smooth the grain surface.  
5 Press the lid release button to open the lid (fig.4).  
6 Wipe the outside of the inner pot dry (fig.5). Then put the inner pot in the multicooker (fig.6). Check if the inner pot is in proper contact with the heating element.  
7 Close the lid of the multicooker (fig.7) and put the plug in the power socket (fig.8).

Specifications are subject to change without notice  
© 2015 Koninklijke Philips N.V.  
All rights reserved.

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

1 2 3 4 5 6 7 8 9 10 11 1

