PHILIPS

AC1386



3

__||

| ___

目录

1	重要事项	4
2	您的空气净化器 产品概述 控件概览	6 6 7
3	使用入门 安装滤网	8
4	使用空气净化器 了解空气质量指示灯 打开和关闭 更改风扇速度 光传感器 智感睡眠模式 设置童锁	9 9 10 11 11
5	清洁 清洁空气净化器的机身 清洁空气质量传感器 清洁预过滤网	12 12 12 13
6	更换滤网 滤网更换指示灯 更换过滤网	15 15 15
7	存放	16
8	故障排除	17

9	保修与服务	19
	订购部件或附件	19
10	注意事项	19
	电磁场 (EMF)	19
	回收	19

1 重要事项

使用本产品之前,请仔细阅读本用户手册,并妥善保管以备日后参考。

危险

- · 切勿让水或任何其它液体或 易燃性清洁剂进入产品,以 免发生触电和/或火灾。
- · 切勿用水或任何其它液体或 (易燃性)清洁剂来清洁 产品,以免发生触电和/或 火灾。
- · 切勿在产品周围喷洒杀虫剂 或香水等任何可燃材料。

警告

- · 在将产品连接电源之前,请 先检查产品所标电压与当地 的供电电压是否相符。
- · 如果电源软线损坏,为避免 危险,必须由制造厂或其 维修部或类似的专职人员来 更换。
- · 如果插头、电源线或产品 本身受损,请勿再使用 本产品。
- · 在有人指导如何安全使用本产品,监督掌握安全使用方法的情况下,本产品适合8岁或以上的儿童以及肢体不健全、感觉或精神上有障碍或缺乏相关经验和知识的人士使用。但同时他们需要意识到相关的危险。不得让儿

- 童玩耍本产品。不要让儿童 在无人监督的情况下进行清 洁和保养。
- · 请勿堵塞进风和出风口,例 如不要将物体放置在出风口 上或进风口前方。
- · 确保异物未通过出风口进入 产品内部。

警告

- 本产品不能替代正常通风、 日常吸尘或者在烹饪时使用 的抽油烟机。
- 如果连接产品的电源插座接触不良,则产品的插头可能会变得很热。确保所连接的电源插座接触良好。
- 一定要在干燥、稳固、平整 且水平的表面上放置和使用 本产品。
- · 产品的后侧及两侧均要留出至少 20 厘米的空间,产品上方至少要留出 30 厘米的空间。
- · 切勿在本产品上放置任何 物品。
- · 请勿坐在或站在产品上面。 坐在或站在产品上面可能导 致潜在的人身伤害。
- · 切勿将产品直接放在空调 下方,以防冷凝水滴到 产品中。
- · 打开产品电源之前,务必确保已经正确安装所有 讨滤网。

4 简体中文

- · 只能使用飞利浦专门为本产 品设计的原装过滤网。切勿 使用任何其它过滤网。
- · 燃烧滤网可能会造成不可逆 转的人体危害和/或危及其他 生命。请勿将滤网用作燃料 或类似用途。
- ・ 请勿用硬物敲击本产品(尤 其是进风口和出风口)。
- · 始终通过产品背面的手柄提 起或移动产品。
- · 请勿将手指或物体插入出风口或进风口,以防止产品出现物理损坏或发生故障。
- · 当您使用室内喷雾式驱虫剂 或在充满油污、易燃气体或 化学烟雾的地方时,请勿使 用本产品。
- · 请勿在气体用具、加热装置 或火炉附近使用本产品。
- · 使用之后和清洁产品或执行 其他维护或更换滤网之前, 请务必先拔掉产品的电源 插头。
- · 请勿在温度变化较大的房间 内使用本产品,因为这可能 导致产品内部的冷凝。
- · 为防止产生干扰,产品与使用无线电波的电器(例如电视机、收音机和无线电控制时钟)之间至少应保持2米距离。

- · 本产品仅限于家用并在正常 运行条件下使用。一般运行 30-60分钟后达到完全稳定 状态。
- · 请勿在潮湿环境或高温环境中(例如浴室、卫生间或厨房)使用本产品。
- · 本产品不能去除一氧化碳 (CO) 或氡 (Rn),因此在 发生燃烧和危险化学品事故 时,不能作为安全设备 使用。
- · 如果需要移动产品,请先断 开产品的电源。
- · 请勿通过拉扯电源线来移动 产品。
- · 更换或清洁滤网之后,务必 彻底清洗双手。

2 您的空气净化器


感谢您的惠顾,欢迎光临飞利浦!

为充分享受飞利浦提供的支持,请在www.philips.com/welcome 注册您的产品。

全新上市的**飞利浦空气净化器1000系列** 迪士尼限量版,特有智感睡眠模式,为儿童带来安静的睡眠环境,让妈妈更安心使用。经过专门设计的去过敏原模式,可有效减少花粉和动物皮屑等常见的过敏原,让儿童呼吸更洁净的空气。


产品概述

- A 控制面板
- B 空气质量指示灯
- C 出风口
- D 空气质量传感器
- E 纳米级劲护滤网-专业S2型 (FY1417)
- F 预过滤网
- G 进风口
- H 前面板

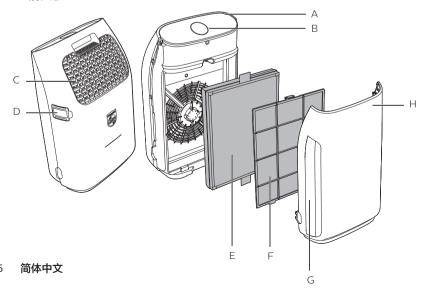

控件概览

- 开/关按钮
- 智感睡眠模式按钮 J
- K 显示屏
- 风扇速度按钮
- M 儿童锁按钮

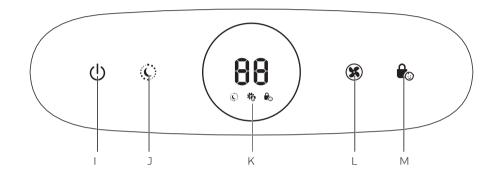

3 使用入门

安装滤网

=

注意


- 确保先从电源插座上拔下空气净化器的插 头,然后再安装滤网。
- 确保将滤网带标签的一面朝向自己。
- 拉动前面板的底部再轻微上提以将其从空气净化器上卸下。



2 向下按固定夹(①),然后朝自己的方向拉动预过滤网(②)。




3 移除滤网。

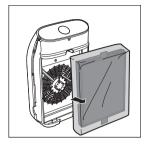

4 拆除滤网上的所有包装材料。



5 将滤网 (FY1417) 装入空气净化器。

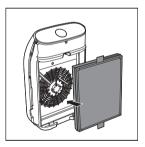

6 将预过滤网装回空气净化器中。



注意

- 确保将带固定夹的一面朝向自己, 并确保 预过滤网的所有挂钩均已正确连接到净化 器上。
- 重新安装前面板, 先将面板的顶部和空 气净化器顶部连接并贴合(1)。然 后,朝空气净化器机身方向轻推面板 (2)



8 安装滤网后,彻底洗净双手。

使用空气净化器

了解空气质量指示灯


空气质量指示灯 颜色	空气质量级别
蓝色	良好
蓝紫色	一般
紫红色	不健康
红色	非常不健康

空气净化器打开后,空气质量指示灯将自 动亮起,并按顺序亮起所有颜色。大约 30 秒后,空气质量传感器将选择与环境空 气悬浮颗粒质量相对应的颜色。

打开和关闭

注意

- 务必将空气净化器置于稳固、水平且平 坦的表面上, 使装置的正面背向墙壁或
- 为了获得出色的净化性能,请关闭门窗。
- 使窗帘远离讲风口或出风口。
- 将空气净化器的插头插入墙上插座。
- 2 轻触 (少可打开空气净化器。

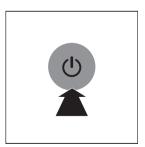

- → 空气净化器将发出蜂鸣音。
- → 默认情况下, 空气净化器将以自动 模式运行。

- → 测量空气质量约 30 秒后,空气质量传感器会自动反馈相应的空气质量指示灯颜色。
- **3** 轻触并按住 **(**) 3 秒可关闭空气净化器。

注意

- 如果空气净化器关闭后仍与电源插座连接,则再次打开后,其将以之前的设置运行。
- 如果空气净化器在运行期间意外关机,则 在恢复供电后,其将自动重启并以之前的 设置运行。

更改风扇速度

本产品提供了多种风速。您可以选择自动模式(A)、速度1、2、3或劲速模式(t)。

自动 (A)

• 反复轻触风速按钮 😵 可选择自动模式。




去过敏原模式

经过专门设计的去过敏原模式可有效减少 花粉和动物皮屑等常见的过敏原。


• 轻触风速按钮 🤡 可选择去过敏原模式。

→ 屏幕上会显示自动 (A) 和 **。

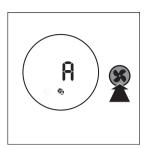

手动


• 反复轻触风速按钮 以选择所需的 风速。

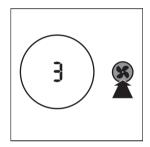

劲速(t)

在劲速模式下,空气净化器会以最高速度 运行。

• 轻触风速按钮 😵 可选择劲速模式 (t)。

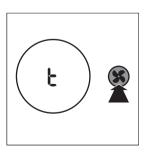

光传感器

净化器可以与周围环境协调工作。当室内环境变暗10秒钟后,控制面板上的所有指示灯会缓慢熄灭。在此期间,轻触控制面板上的任一按钮,指示灯便会重新亮起。如果没有后续操作,指示灯会在10秒钟后再次熄灭。如果室内环境重新变得明亮并且时间持续10秒钟以上,则所有灯光重新亮起。

智感睡眠模式

您可以通过两种方式启用智感睡眠模式。

手动启用智感睡眠模式

- 睡觉之前,用手轻触 © 可启用智感睡眠模式。
 - → 如果空气质量指示灯呈蓝色,则空 气净化器直接进入智感睡眠模式。 此时空气净化器的运行更为安静, 空气质量指示灯将变暗。
 - → 如果空气质量指示灯末呈蓝色,则空气净化器将以高速模式最长运行10分钟,期间空气质量指示灯会缓慢闪烁,然后进入智感睡眠模式。



自动启用智感睡眠模式模式


机器运行在自动模式或去过敏原模式时,若光传感器检测到房间的灯光熄灭,空气净化器会自动进入智感睡眠模式。空气净化器会实时调整风速,以确保室内空气保持洁净。空气质量指示灯将变暗。

注意


- 在进入智感睡眠模式11 小时后,光传感器 会检测室内的光线。
- 如果室内的灯光已开启,则空气净化器会 退出智感睡眠模式并以之前的模式运行。
 空气质量指示灯和显示屏会重新亮起。
- 要手动退出智感睡眠模式,可以轻触 安钥或 **第** 按钮切换成手动风速模式。

设置童锁

- 轻触并按住儿童锁按钮 ♣3 秒可激活儿童锁。
 - → 屏幕上显示 ♣️图标。
 - → 启用儿童锁时,按下其他任何按 钮均将没有反应,只有 **②** 图标 闪烁。

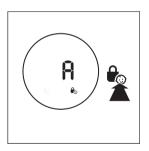

- 2 再次轻触并按住儿童锁按钮 ♣ 3秒可禁用儿童锁。

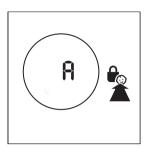

注意

• 任意滤网清洗或者替换提示亮起时, 儿童 锁功能会自动解锁。

清洁 5

注意

- 清洁之前, 务必先关闭空气净化器并从电 源插座上拔下插头。
- 切勿将空气净化器浸入水中或任何其他液 体中。
- 切勿使用研磨性、腐蚀性或易燃性清洁剂 (例如漂白剂或酒精)清洁空气净化器的 仟何部件。
- 只有预过滤网可以用水清洗。滤网不可
- 请勿尝试用吸尘器清洁滤网或空气质量传 感器。

清洁空气净化器的机身

定期清洁空气净化器的内侧和外侧,以防 止灰尘积聚。

- 使用柔软的干布清洁空气净化器的内部 和外部(特别是前盖)。
- 2 出风口也可用柔软的干布进行清洁。
- 3 从空气净化器上卸下前盖,用水清洗 并晾干。


清洁空气质量传感器

每2个月清洁一次空气质量传感器,确保 净化器处于最佳功能状态。

注意

- 如果将空气净化器用于多尘环境,则可能 需要更频繁地进行清洁。
- · 如果室内的湿度非常高,则空气质量传感 器上可能会形成冷凝水,即使空气质量确 实很好,空气质量指示灯也可能会指示空 气质量较差。如出现此情况,请清洁空气 质量传感器或以手动速度设置使用空气净 化器。


- **1** 关闭空气净化器,从墙上插座上拔下插头。
- **2** 使用软毛刷清洁空气质量传感器进风口和出风口。

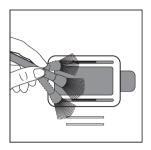

3 卸下空气空气质量传感器的保护盖。




4 使用湿棉签清洁空气质量传感器、进风口和出风口。

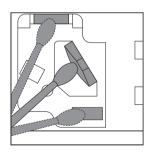

5 使用干棉签彻底擦干所有部件。

6 重新装上空气质量传感器的保护盖。

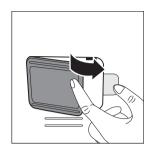

注意

• 开机时请保持空气质量传感器外盖关闭。

清洁预过滤网

当屏幕上显示 FO 时,请清洁预过滤网。



- **1** 关闭空气净化器,从墙上插座上拔下插头。
- **2** 拉动前面板的底部再轻微上提以将其从空气净化器上卸下。



3 向下按固定夹(①),然后朝自己的 方向拉动预过滤网(②)。




4 如果预过滤网很脏,请使用软刷清除上面的灰尘。然后,在水龙头下清洗预过滤网。



5 待预过滤网完全晾干后再将其装回空气 净化器中。

注意

- 要优化预过滤网的使用寿命,请确保清洁 后将其完全晾干。
- 拆装滤网后,请洗净双手。
- 6 将预过滤网装回空气净化器中。

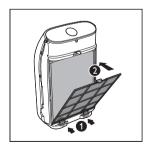

注意

- 确保带固定夹的一面朝向自己,并确保预过滤网的所有挂钩均已正确连接到空气净化器上。
- 7 重新安装前面板,先将面板的顶部和空 气净化器顶部连接并贴合(①)。然 后,朝空气净化器机身方向轻推面板 (②)。



- 8 将空气净化器的插头插入墙上插座。
- 9 轻触并按住 ♣ 3 秒钟可重置预过滤网清洁时间。



10 安装滤网后,请洗净双手。

6 更换滤网

滤网更换指示灯

该空气净化器配有滤网更换指示灯,旨在确保空气净化器运行时,空气净化滤网处于最佳工作状态。需要更换滤网时,屏幕上会显示滤网代码。

如果 14 天内未更换滤网,则空气净化器将 停止运行并自动锁定。

更换过滤网


=

注意

- 滤网不可水洗或重复使用。
- 在更换过滤网之前,务必先关闭空气净化 器并从电源插座上拔下插头。
- 请勿用吸尘器清洁滤网。

当屏幕上显示 A3 时,请更换滤网。

- 1 关闭空气净化器,从墙上插座上拔下插头。
- 2 根据屏幕上显示的滤网提示灯状态,取出旧滤网。丢弃旧滤网。

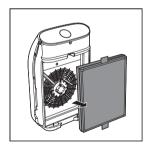


注意

• 请勿接触滤网的褶皱面,或闻滤网的气味,因为其包含从空气中收集的污染物。


3 拆除新滤网上的所有包装材料。



4 将新滤网装入空气净化器。

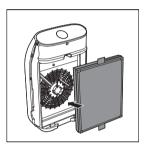

- 5 将空气净化器的插头插入墙上插座。
- 6 轻触并按住**全**⊙3 秒钟可重置滤网使用 寿命计数器。

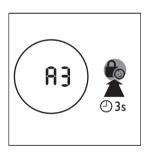

7 更换滤网后,请洗净双手。

7 存放

- 1 关闭空气净化器,从墙上插座上拔下
- 2 清洁滤网、空气质量传感器和预过滤网 (请参阅"清洁"一章)。
- 3 待所有部件完全晾干后再进行存放。
- 4 将滤网和预过滤网分别装入密封的塑 料袋中。
- 5 将空气净化器、滤网和预过滤网存放在 阴凉干燥处。
- 6 拆装滤网后,务必彻底洗净双手。

故障排除 8

本章总结了使用空气净化器时最常遇到的问题。如果根据以下信息无法解决问题,请访问 www.philips.com/support 或联系您所在国家/地区的客户服务中心。

问题	可能的解决方法
空气净化器无法 开机。	• 请确认前面板已经安装到位。
即便将空气净化器的 插头插入墙上插座并 开机,其仍无法 工作。	 尝试使用其他电源插座或检查墙壁开关。 滤网警报状态显示滤网代码。更换相应的滤网并重置滤网使用寿命计数器(请参阅"更换滤网"一章)。 如果问题仍然存在,请联系您所在国家/地区的客户服务中心。
空气净化器即使已开 启也无法工作。	 滤网更换指示灯持续亮起,但您未更换相应的滤网,产品现在已锁定。在此情况下,更换过滤网并重置过滤网使用寿命计数器。
出风口排出的气流比 之前明显减弱。	• 预过滤网变脏。清洁预过滤网(请参阅"清洁"一章)。
即使空气净化器已经 运行了很长时间, 空气质量也没有显著 改善。	 某一滤网未装入空气净化器或未装好。确保按以下顺序正确安装所有滤网,首先从最里面的滤网开始:1)纳米级劲护滤网-专业S2型(FY1417);2)预过滤网。 空气质量传感器受潮。确保空气质量传感器清洁干燥(请参阅"清洁"一章)。
空气质量指示灯的颜 色始终保持不变。	 空气质量传感器变脏。清洁空气质量传感器(请参阅"清洁" 一章)。
空气净化器发出难闻 的气味。	 前几次使用空气净化器时,其可能会产生塑料味。这是正常的。当滤网很脏时,空气净化器也可能会发出难闻的气味。在此情况下,请清洁或更换相应的滤网。 如果空气净化器发出烧焦的气味,请关机并从电源插座上拔下插头。请与您所在国家/地区的客户服务中心联系。
空气净化器的声音 过大。	 如果空气净化器的声音过大,您可以将风速更改为较低的风速级别。当夜间在卧室使用空气净化器时,可选择智感睡眠模式,也可以手动选择较低的风速档。

问题	可能的解决方法	
滤网已更换,但空气 净化器仍提示需要更 换滤网。	• 可能是您未重置滤网使用寿命计数器。将空气净化器接通电源,轻触 Ů 以打开空气净化器,然后轻触并按住 ♣3 秒钟。	
屏幕上显示 "E1"、"E2"、"E3"或 "E4"错误代码。	• 空气净化器出现故障。请与您所在国家/地区的客户服务中心 联系。	

保修与服务 9

如果您需要了解信息或有任何疑问,请访 间飞利浦网站 www.philips.com 或与您所 在国家/地区的飞利浦客户服务中心联系 (可在全球保修卡中找到其电话号码)。 如果您所在的国家/地区没有飞利浦客户服 务中心, 请向当地的飞利浦经销商求助。

订购部件或附件

如果您必须更换部件或需要购买额外的部 件, 请转到您的飞利浦经销商或访问 www.philips.com/support.

如果获取部件有问题,请与您所在国家/地 区的飞利浦客户服务中心联系(可在全球 保修卡中找到其电话号码)。

10 注意事项

电磁场 (EMF)

本飞利浦产品符合所有有关暴露于电磁场 的适用标准和法规。

符合 EMF 标准

Koninklijke Philips N.V. 主要面向广大消费 者制造和销售各类产品,包括通常能发射 和接收电磁信号的各种电子设备。

飞利浦的主要业务原则之一就是要对自己 的产品采取各种必要的健康和安全措施. 使其符合所有相应的法律要求, 并在制造 产品时严格遵照适用的 EMF 标准。

飞利浦致力于开发、生产和销售对人体健 康无任何危害的产品。飞利浦确认,据目 前的科学证明,如果其产品使用得当,则 对人体毫无危害。

长期以来, Philips 始终在国际 EMF 和安 全标准的制定工作中扮演着积极的角色. 这就使 Philips 总能预知标准的发展趋势, 并率先应用到其产品中去。

回收

弃置产品时,请不要将它与一般生活垃圾 一同丢弃, 应将其交给官方指定的回收中 心。这样做有利于环保。

请遵循您所在国家/地区的电器及电子产品 分类回收规定。正确弃置产品有助于避免 对环境和人类健康造成负面影响。

__||

| ___

Contents

1	Important	22
2	Your air purifier	25
	Product overview	25
	Controls overview	26
3	Getting started	27
	Installing the filter	27
4	Using the air purifier	28
	Understanding the air quality	
	light	28
	Turning on and off	28
	Changing the fan speed	29
	Light sensor	30
	Night sensing mode	30
	Set the child lock	31
5	Cleaning	32
	Cleaning the body of the air	
	purifier	32
	Cleaning the air quality sensor	32
	Cleaning the pre-filter	33
6	Replacing the filter	35
	Filter replacement indicator	35
	Replacing the filter	35
7	Storage	36
8	Troubleshooting	37
9	Guarantee and service	39
	Order parts or accessories	39

10 Notices	39
Electromagnetic fields (EMF)	39
Recycling	40

1 Important

Read this user manual carefully before you use the appliance, and save it for future reference

Danger

- Do not let water or any other liquid or flammable detergent enter the appliance to avoid electric shock and/or a fire hazard.
- Do not clean the appliance with water, any other liquid, or a (flammable) detergent to avoid electric shock and/ or a fire hazard.
- Do not spray any flammable materials such as insecticides or fragrance around the appliance.

Warning

- Check if the voltage indicated on the appliance corresponds to the local power voltage before you connect the appliance.
- If the power cord is damaged, you must have it replaced by Philips, a

- service center authorized by Philips, or similarly qualified persons in order to avoid a hazard.
- Do not use the appliance if the plug, the power cord, or the appliance itself is damaged.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. They should also be aware of danger. Child shall not play with the appliance. Cleaning and maintenance shall not be made by children without supervision.
- Do not block the air inlet and outlet, e.g. by placing items on the air outlet or in front of the air inlet.
- Make sure that foreign objects do not fall into the

appliance through the air outlet.

Caution

- This appliance is not a substitute for proper ventilation, regular vacuum cleaning, or use of an extractor hood or fan while cooking.
- If the power socket used to power the appliance has poor connections, the plug of the appliance becomes hot. Make sure that you plug the appliance into a properly connected power socket.
- Always place and use the appliance on a dry, stable, level, and horizontal surface.
- Leave at least 20cm free space behind and on both sides of the appliance and leave at least 30cm free space above the appliance.
- Do not place anything on top of the appliance.
- Do not sit or stand on the appliance. Sitting or standing on the appliance may lead to potential injuiry.

- Do not place the appliance directly below an air conditioner to prevent condensation from dripping onto the appliance.
- Make sure all filters are properly installed before you switch on the appliance.
- Only use the original Philips filters specially intended for this appliance. Do not use any other filters.
- Combustion of the filter may cause inreversible human hazard and/or jeopardize other lives. Do not use the filter as fuel or for similar purpose.
- Avoid knocking against the appliance (the air inlet and outlet in particular) with hard objects.
- Always lift or move the appliance by the handle on back side of the appliance.
- Do not insert your fingers or objects into the air outlet or the air inlet to prevent physical injury

- or malfunctioning of the appliance.
- Do not use this appliance when you have used indoor smoke-type insect repellents or in places with oily residues, burning incense, or chemical fumes.
- Do not use the appliance near gas appliances, heating devices or fireplaces.
- Always unplug the appliance after use and before cleaning, or carrying out other maintenance or replacing the filters.
- Do not use the appliance in a room with major temperature changes, as this may cause condensation inside the appliance.
- To prevent interference, place the appliance at least 2 meters away from electrical appliances that use airborne radio waves such as TVs, radios, and radio-controlled clocks.
- The appliance is only intended for household

- use under normal operating conditions.
- Do not use the appliance in wet surroundings or in surroundings with high ambient temperatures, such as the bathroom, toilet, or kitchen.
- The appliance does not remove carbon monoxide (CO) or radon (Rn). It cannot be used as a safety device in case of accidents with combustion processes and hazardous chemicals.
- If you need to move the appliance, disconnect the appliance from the power supply first.
- Do not move the appliance by pulling its power cord.
- Always wash your hands thoroughly after changing or cleaning a filter.

2 Your air purifier

Congratulations on your purchase, and welcome to Philips!


To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Newly-launched Philips Air Purifier 1000 Series Disney Limited Edition is designed with the night sensing mode feature, which brings children a quiet sleep environment that will make moms feel more comfortable.

The specially designed allergen mode can effectively reduce common allergens such as pollen and pet dander, which makes chidren breathe more cleaner air.


Product overview

- A Control panel
- **B** Air quality light
- **C** Air outlet
- D Air quality sensor
- NanoProtect filter Pro S2
 - (FY1417)
- F Pre-filter
- **G** Air inlet
- **H** Front panel

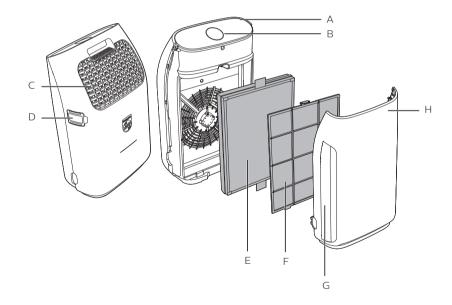

Controls overview

- I On/Off button
- J Night sensing mode button
- **K** Display screen
- L Fan speed button
- M Child lock button

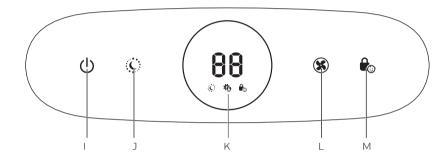

3 Getting started

Installing the filter



Note


- Make sure the air purifier is unplugged from the electrical outlet before installing the filter.
- Make sure the side of the filter with the tag is pointing towards you.
- 1 Pull the bottom part of the front panel to remove it from the air purifier.



Press the two clips down (1) and pull the pre-filter towards you (2).




3 Remove the filter.

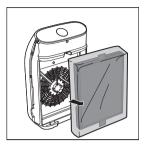

4 Remove all packaging materials from the filter.



5 Place the filter (FY1417) into the air purifier.

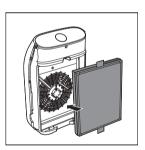

6 Attach the pre-filter back into the air purifier.



=

Note

- Make sure the side with the clip is pointing towards you, and that all hooks of the pre-filter are properly attached to the purifier.
- Reattach the front panel by pressing the top part of the panel onto the top of the air purifier (1). Then, gently push the panel against the body of the air purifier (2).



8 Wash your hands thoroughly after installing filters.

4 Using the air purifier

Understanding the air quality light

Air quality light color	Air quality level	
Blue	Good	
Blue-Purple	Fair	
Purple-Red	Poor	
Red	Very poor	

The air quality light automatically goes on when the air purifier is switched on, and lights up all colors in sequence. After approximately 30 seconds, the air quality sensors select the color that corresponds to the surrounding air quality of airborne particles.

Turning on and off



Note

- Always place the air purifier on a stable, horizontal, and level surface with the front of the unit facing away from walls or furniture.
- For optimum purification performance, close doors and windows.
- Keep curtains away from the air inlet or air outlet.
- 1 Put the plug of the air purifier in the wall outlet.

2 Touch \circlearrowleft to switch on the air purifier.



- → The air purifier beeps.
- → The air purifier operates under the auto mode by default.
- → After measuring the air quality for approximately 30 seconds, the air quality sensor automatically selects the appropriate air quality light color
- 3 Touch and hold \bigcirc for 3 seconds to switch off the air purifier.



Note


- If the air purifier stays connected to the electrical outlet after turning OFF, the air purifier will operate under the previous settings when turned ON again.
- If the air purifier accidentally shuts off during running, it restarts automatically and operates under previous settings when the power supply is resumed.

Changing the fan speed

There are several fan speeds available. You can choose the auto mode, speed 1, 2, 3 or turbo mode (t).

Auto(A)


Touch the fan speed button repeatedly to select the auto mode.

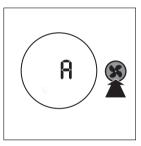

Allergen mode

The specially designed allergen mode can effectively reduce common allergens such as pollen and pet dander.

- Touch the fan speed button select the Allergen mode.
 - Auto (A) and display on the screen.

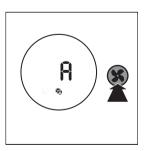

Manual


Touch the fan speed button srepeatedly to select the fan speed you need.



Turbo (t)

In turbo mode, the air purifier operates on the highest speed.

 Touch the fan speed button to select the turbo mode (t).

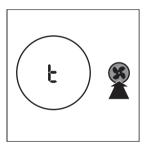

Light sensor

With the light sensor, the air purifier can work according to the ambient light.

When the ambient light dims for 10 seconds, all the lights on the control panel will turn off slowly. During this period, you can touch any of the buttons, all lights will turn on again. If you don't perform other operations within 10 seconds, all lights will turn off.

After the ambient light becomes bright and lasts at least for 10 seconds, all lights will turn on again.

If the ambient light becomes bright and lasts for at least 10 seconds, all light will be on.


Night sensing mode

You can activate the night sensing mode in two ways.

Activating the night sensing mode manually

- Before you go to sleep, touch

 manually to activate the Night sensing mode.
 - → If the air quality light is blue, the air purifier directly goes to the Night sensing mode. The air purifier operates quietely and the air quality light will be dimmed.
 - → If the air quality light is not blue, the air purifier operates under turbo mode for a maximum of 10 minutes, the air quality light blinks slow during this time, and then goes to the Night sensing mode.

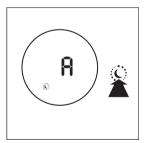

Auto activating the night sensing mode

When the air purifier operates in auto mode or allergen mode, if the light sensor detects the lights in your room are turned off, the air purifier goes to the night sensing mode automatically. The air purifier will adjust the fan speed in real-time to make sure the air in your room is good. The air quality light will be dimmed.




Note


- The light sensor detects the lights in your room after 11 hours in the night sensing mode.
- If the lights in your room are turned on, the air purifier will quit the night sensing mode and operate under the previous mode. The air quality light and the display will be on again.
- To exit the night sensing mode manually, touch \circlearrowleft or s button.

Set the child lock

- Touch and hold the child lock button for 3 seconds to activate child lock.
 - → The child lock icon displays on the screen.
 - When the child lock is on, all the other buttons are not responsive, only icon ♠ blinks.

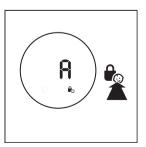

- 2 Touch and hold the child lock button for 3 seconds again to deactivate child lock.
 - → The child lock icon to disapears from the screen.

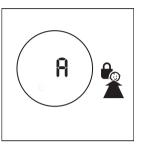



Note

 The child lock function is automatically unlocked when the pre-filter cleaning code or the filter replacement code displays on the screen.

5 Cleaning



Note

- Always turn the air purifier off and unplug the air purifier from the electrical outlet before cleaning.
- Never immerse the air purifier in water or any other liquid.
- Never use abrasive, aggressive, or flammable cleaning agents such as bleach or alcohol to clean any part of the air purifier.
- Only the pre-filter is washable. The air filter is not washable.
- Do not attempt to clean the filters or air quality sensor with a vacuum.

Cleaning the body of the air purifier

Regularly clean the inside and outside of the air purifier to prevent dust from collecting.

- Use a soft, dry cloth to clean both the interior and exterior of the air purifier (Especially for the front cover).
- 2 The air outlet can also be cleaned with a dry, soft cloth.
- 3 Detach the front cover from the air purifier, wash the front cover under running tap water, and then air dry it


Cleaning the air quality sensor

Clean the air quality sensor every 2 months for optimal functioning of the purifier.



Note


- If the air purifier is used in a dusty environment, it may need to be cleaned more often.
- If the humidity level in the room is very high, condensation may develop on the air quality sensor and the air quality light may indicate a more poor air quality even though the air quality is actually good. If this occurs, clean the air quality sensor or use the air purifier on a manual speed setting.
- 1 Switch off the air purifier and unplug from the wall outlet.
- 2 Clean the air quality sensor inlet and outlet with a soft brush.

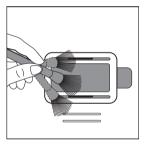


3 Remove the air quality sensor cover.



4 Clean the air quality sensor, the dust inlet and the dust outlet with a damp cotton swab.

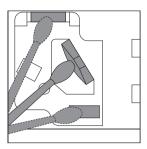

- 5 Dry all parts thoroughly with a dry cotton swab.
- 6 Reattach the air quality sensor cover.

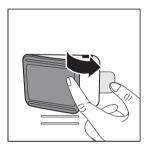



Note

 Always keep air quality cover closed while the air purifier is working.

Cleaning the pre-filter

Clean the pre-filter when **F0** is displayed on the screen.

- 1 Switch off the air purifier and unplug from the wall outlet.
- Pull the bottom part of the front panel to remove it from the air purifier.



3 Press the two clips down (1) and pull the pre-filter towards you (2).



4 If the pre-filter is very dirty, use a soft brush to brush away the dust . Then wash the pre-filter under running tap water.



Allow the pre-filter to air dry thoroughly before placing back in the air purifier.



Note

- To optimize the lifetime of the prefilter, make sure it dries completely after cleaning.
- Wash your hands after handling the filter
- 6 Put the pre-filter back into the air purifier.





Note

- Make sure the side with the two clips is pointing towards you, and that all hooks of the pre-filter are properly attached to the air purifier.
- 7 To reattach the front panel, press the top part of the panel onto the top of the air purifier (1). Then, gently push the panel against the body of the air purifier (2).



- 8 Put the plug of the air purifier in the wall outlet.
- 9 Touch and hold the ♣ for 3 seconds to reset the pre-filter cleaning time.



10 Wash your hands thoroughly after installing filters.

6 Replacing the filter

Filter replacement indicator

This air purifier is equipped with a filter replacement indicator to make sure that the air purification filter is in optimal condition when the air purifier is operating. When the filters need to be replaced, the filter code displays on the screen.

If the filters are not replaced in 14 days, the air purifier will stop operating and automatically lock.

Replacing the filter




Note

- The air filter is not washable or reusable.
- Always turn off the air purifier and unplug from the electrical outlet before replacing the filter.
- · Do not clean the filter with a vacuum.

Replace the filter when **A3** is displayed on the screen.

- 1 Turn off the air purifier and unplug from the wall outlet.
- Take out the used air filter according to the filter alert light status displayed on the screen. Discard used filter.

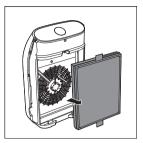




Note


- Do not touch the pleated filter surface, or smell the filter as it has collected pollutants from the air.
- 3 Remove all packaging material from the new filter.



4 Place the new filter into the air purifier.

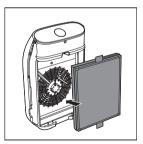

- **5** Put the plug of the air purifier in the wall outlet.
- 6 Touch and hold the for 3 seconds to reset the filter lifetime counter.

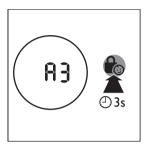

7 Wash your hands after changing a filter.

7 Storage

- 1 Turn off the air purifier and unplug from the wall outlet.
- 2 Clean the air purifier, air quality sensor and pre-filter (see chapter 'Cleaning').
- 3 Let all parts dry thoroughly before storing.
- 4 Wrap the filter and pre-filter separately in air tight plastic bags.
- 5 Store the air purifier, the filter and pre-filter in a cool, dry location.
- **6** Always thoroughly wash hands after handling filters.

Troubleshooting

This chapter summarizes the most common problems you could encounter with the air purifier. If you are unable to solve the problem with the information below, visit www. philips.com/support or contact the Consumer Care Center in your country.

Problem	Possible solution
The air purifier cannot be switched on.	 Make sure the front cover is properly attached to the air purifier.
The air purifier does not work even though it is plugged in to the wall outlet and switched on.	 The timer is set to a specific time interval. Reset or turn off the timer. Try a different electrical outlet or check the wall switch. The filter alert status is displaying the filter code. Replace the corresponding filter and reset the filter lifetime counter (see chapter "Replacing the filter"). If the problem persists, contact the Consumer Care Center in your country.
The air purifier does not work even though it is switched on.	The filter replacement indicator has been on continuously but you have not replaced the corresponding filter, and the air purifier is now locked. In this case, replace the filter and reset the filter lifetime counter.
The air purifier accidentally powers off.	The air purifier restarts automatically and goes to the previous mode when the power resumes.
The airflow that comes out of the air outlet is significantly weaker than before.	The pre-filter is dirty. Clean the pre-filter (see chapter "Cleaning").
The air quality does not improve, even though the air purifier has been operating for a long time.	 One of the filters has not been placed in the air purifier or the filter is not placed properly. Make sure that all filters are properly installed in the following order, starting with the innermost filter: 1) NanoProtect filter Pro S2 (FY1417); 2) pre-filter. The air quality sensor is wet. Make sure that the air quality sensor is clean and dry (see chapter "Cleaning").

Problem	Possible solution		
The color of the air quality light always stays the same.	The air quality sensor is dirty. Clean the air quality sensor (see chapter "Cleaning").		
The air purifier produces a unpleasant smell.	 The first few times you use the air purifier, it may produce a plastic smell. This is normal. The air purifier may also produce an unpleasant smell when the filter is dirty. In this case, clean or replace the appropriate filter. If the air purifier produces a burnt odor, switch OFF and unplug from the electrical outlet. Contact the Consumer Care Center in your country. 		
The air purifier is loud.	If the air purifier is too loud, change the fan speed to a lower fan speed level. When using the air purifier in a bedroom at night, choose the NightSense mode or change the fan speed to a lower level.		
The air purifier still indicates that I need to replace a filter, but I already did.	• Perhaps you did not reset the filter lifetime counter. Plug in the air purifier, touch $\textcircled{0}$ to switch on the air purifier, and touch and hold the $\textcircled{6}$ for 3 seconds.		
Error codes "E1", "E2", "E3" or "E4" displays on the screen.	The air purifier has malfunctions. Contact the Consumer Care Center in your country.		

9 Guarantee and service

If you need information or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Consumer Care Center in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

Order parts or accessories

If you have to replace a part or want to purchase an additional part, go to your Philips dealer or visit www.philips.com/support.

If you have problems obtaining the parts, please contact the Philips Consumer Care Center in your country (you can find its phone number in the worldwide guarantee leaflet).

10 Notices

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields

Compliance with EMF

Koninklijke Philips N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.

Recycling

Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.



保修及服务:

此产品是一件设计精良,用高品质元件制造之家用电器,在正常使用及保养下应能发挥其优越性能。在购买日期后二年内,若发生任何因制造工艺或元器件造成之损坏,飞利浦中国维修服务中心将为持证用户提供免费门市维修服务,视情况更换零件或整个产品。

无论在保期中或保期后, 只要飞利浦正式行销该产品的任何国家皆可获得维修服务。

若飞利浦在当地无行销该项产品,飞利浦同样提供维修服务,但可能因未储备所需零件,维修时间可能较长,敬请见谅。 请联络当地飞利浦经销商,或飞利浦服务部门。

若您需洽询相关资讯,或遇困难事项时,请联络当地飞利浦维修服务中心,或向飞利浦服务热线咨询。

中国顾客服务热线: 4008 800 008 (用户需承担本地通话费)。

网址: http://www.philips.com.cn

网上会员注册与产品注册:

- 1) 登陆 http://www.philips.com.cn/welcome
- 2) 点击"创建新账户", 创建您的飞利浦账号
- 3) 点击"注册产品",通过产品名称或产品型号查找产品, 完成产品注册

服务须知

需要此产品的售后服务, 拨打服务热线: 4008 800 008 在维修服务过程中有任何意见, 欢迎致函飞利浦(中国)投资有限公司解决疑难。

保修条例:

- * 在购买日期后二年内,凡经本公司特约维修站人员确认为 正常使用情况下,因制造工艺或元器件造成之损坏,您都 将获得免费保修服务。
- * 此免费服务不包括需时常更换的易耗零配件(吸尘机纸袋, 布袋,空气清新机滤网,滤芯,活性碳,咖啡壶过滤网)及 附件(如须刀网膜、刀头,咖啡杯,食品加工机杯/刀具等), 辅助装置,运输费及维修人员上门服务费。
- * 用户请保留此联。
- * 维修时请携同此证及发票正本。
- * 此证若经涂改即作废。
- * 此证须联同发票正本使用方为有效。
- * 以下情况将不能获得免费服务
- 1. 使用不当引起的人为损坏,例如接入不适当电源、使用不适当配件、不适当之安装、不依说明书使用、错误使用或疏忽而造成损坏等。因运输及其他意外而造成之损坏。 非经本公司认可之维修和改装。其他因不可抗力(如自然灾害、电压异常等)造成的损坏。
- 2.一般家庭以外使用(如工业、商业用)而造成的损坏。
- 3.正常使用引起的产品老化、磨损等, 但不影响产品的正常使用。
- * 保修证作为在规定期限及条件之内进行免费维修的保证, 并不限制消费者的法定权利。
- * 飞利浦提供 2 年全球联保服务,在产品由飞利浦正式销售的所有国家中,都提供保修和保修期满的维修服务。 要求保修时,您需提供发票正本,且请求保修的日期还在 保修期限之内。

飞利浦(中国)投资有限公司 上海市静安区灵石路718号A1幢 : 飞利浦空气净化器1000系列

迪士尼限量版 AC1386/00

型号 : KJ260F-A09

额定输入功率: 50 W

 生产日期
 : 请见产品本体

 产地
 : 中国浙江宁波

飞利浦(中国)投资有限公司 上海市静安区灵石路 718 号 A1 幢 全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005,

GB4706.45-2008 制造

产品性能指标

目标污染物	洁净空气量(CADR)	累计净化量(CCM)	净化能效等级
颗粒物	260 m³/h	P4	高效级
甲醛	176 m³/h	F3	高效级

噪声	(声功率级)	60 dB (A)	适用面积*	18 - 31 m ²

*适用面积是按照国标 GB/T18801-2015 根据颗粒物洁净空气量计算得出 以上性能指标数据是在第三方试验室按照国标 GB/T18801-2015, 以特定 的烟尘颗粒物或气态污染物为目标污染物测试得出

保留备用 出版日期: 2018-04-04



© 2018 Koninklijke Philips N.V. 保留所有权利

4241 210 99231

