



EN

① Steamer head	⑩ Hanger
② Steam supply hose	⑪ Hanger hook
③ Steam dial	⑫ Steamer head holder
④ Base	⑬ Pleat maker and brush (GC517, GC523)
⑤ De-calc knob	⑭ Glove
⑥ Water tank	⑮ Board (GC517, GC523)
⑦ Pole	⑯ Board cover (GC517, GC523)
⑧ Pole lock clip	
⑨ Pants clip (GC517, GC523)	

TC

① 蒸汽噴頭	⑩ 衣架
② 蒸氣管	⑪ 衣架鉤
③ 蒸氣控制鈕	⑫ 蒸氣噴頭放置架
④ 底座	⑬ 煙線夾和刷具 (GC517, GC523)
⑤ 除垢旋鈕	⑭ 手套
⑥ 水箱	⑮ 費燙板 (GC517, GC523)
⑦ 掛桿	⑯ 費燙板套 (GC517, GC523)
⑧ 掛桿鎖固定夾	
⑨ 褲子固定夾 (GC518、GC523)	

SC

① 蒸汽噴頭	⑩ 衣架
② 蒸氣輸送管	⑪ 衣架鉤
③ 蒸氣旋鈕	⑫ 蒸氣噴頭支架
④ 底座	⑬ 衣褶褶夾和毛刷 (GC517, GC523)
⑤ 除垢旋鈕	⑭ 防燙手套
⑥ 水箱	⑮ 熨燙板 (GC517, GC523)
⑦ 衣架	⑯ 熨燙板套 (GC517, GC523)
⑧ 衣架杆鎖夾	
⑨ 褲子夾 (GC517, GC523)	

VI

① Đầu bắn ủ hơi	⑩ Giá treo
② Vòi cung cấp hơi nước	⑪ Móc treo
③ Nút chọn chế độ hơi nước	⑫ Kẹp giữ đầu bắn ủ hơi
④ Đè	⑬ Dụng cụ xếp lì và bắn chải (GC517, GC523)
⑤ Nút de-calc	⑭ Găng tay
⑥ Ngăn chứa nước	⑮ Ván lót (GC517, GC523)
⑦ Trù đung	⑯ Vỏ bọc ván lót (GC517, GC523)
⑧ Kép khóa	
⑨ Kép quần áo (GC517, GC523)	

MS

① Kepala penstim	⑩ Penggantung
② Hos bekalan stim	⑪ Cangkul penggantung
③ Tombol stim	⑫ Pemegang kepala penstim
④ Tapak	⑬ Pembuat lisu dan berus (GC523)
⑤ Tombol pembersihan kerak	⑭ Sarung tangan
⑥ Tangki air	⑮ Papap (GC517, GC523)
⑦ Diran	⑯ Alas papap (GC517, GC523)
⑧ Klip pengunci dirian	
⑨ Klip seluar (GC517, GC523)	

TH

① หัวพ่นไอน้ำ	⑩ ไม้แขวนเสื้อ
② สายไฟฟ้า	⑪ ตัวต่อสายไฟฟ้า
③ ปุ่มควบคุมตั้งเวลา	⑫ กันดูดไอน้ำ
④ ฐาน	⑬ ผ้าเช็ดตัวและผ้าขนหนู
⑤ ปุ่ม De-Calc	⑭ ผ้าห่มเด็กและผ้าห่มเย็น
⑥ แท่นหยอดน้ำ	⑮ ผ้าห่ม (GC517, GC523)
⑦ เล็ก	⑯ ผ้าห่มเด็ก (GC517, GC523)
⑧ คลิปรักษาเสื้อ	
⑨ คลิปห้องน้ำ (GC517, GC523)	

KO

① 스팀 헤드	⑩ 옷걸이
② 스팀 호스	⑪ 옷걸이 고리
③ 스팀 랑 조절기	⑫ 스티머 헤드 홀더
④ 반침대	⑬ 주름 솔 생성기 및 브러시 (GC517, GC523)
⑤ 석회질 제거 조절기	⑭ 잡감
⑥ 물탱크	⑮ 달립판 (GC517, GC523)
⑦ 풀	⑯ 달립판 뒷면 (GC517, GC523)
⑧ 풀 잡금 클립	
⑨ 바지 클립 (GC517, GC523)	

English

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Important

Please read the separate important information leaflet and the user manual carefully before you use the appliance. Save both documents for future reference. This appliance has been designed for domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.

Danger

- Never immerse the appliance in water or any other liquid, nor rinse it under the tap.

Warning

- Check if the voltage indicated on the type plate corresponds to the local mains voltage before you connect the appliance.

- The plug must be plugged to a power outlet of the same technical characteristics of the plug only.

- Do not use the appliance if the plug, the mains cord, the steam supply hose or the appliance itself shows visible damage or if the appliance has been dropped or leaks.

- If the mains cord or the steam supply hose is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

- The appliance must not be left unattended while it is connected to the supply mains.

- This appliance can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Children shall not play with the appliance.

- Cleaning and user maintenance shall not be made by children under supervision. Keep the appliance and its cord out of reach of children less than 8 years of age when the appliance is switched on or cooling down.

- Do not let the mains cord and steam supply hose come into contact with the hot steamer head.

- The appliance must be used and placed on a flat, stable, heat resistant surface.

- Steam may damage or cause discolouration of certain wall, door finishes or furniture.

- Care should be taken when using the appliance due to the emission of steam. Your appliance gives off steam which can cause burns. Handle your steamer carefully. Never direct the steam towards persons or animals.

- Do not use bare hand as a supporting surface when you steam. Pull the sides of the garment to stretch it.

- If the appliance has a hot air outlet, it can be extremely hot and may cause burns when touched.

CAUTION: Hot surface (Fig. 1)

- Surfaces are liable to get hot during use (for steamer with hot symbol marked on the appliance).

Caution

- This appliance is intended for household use only.

- Only connect the appliance to an earthed wall socket.

- Check the mains cord and the steam supply hose regularly for possible damage.

- Fully unwind the mains cord before you plug it in the wall socket.

- Do not use the appliance when the water tank is empty.

- Do not use perfumed water, water from the tumble dryer, vinegar, starch, descaling agents, ironing aids, chemically treated water or other chemicals, as they may cause water leakage, brown staining or damage to your appliance.

- Do not place the steamer base on top of table or chair but rather keep the steamer base off the floor during usage duration. If the hose forms a U shape, steam condenses on the base. This causes irregular steam or water droplets to come out of the steamer head.

- Unplug the appliance during fitting and cleaning.

- When you have finished steaming, clean the appliance, fill or empty the water tank, perform cleaning and rinsing, attach or detach the brush attachment, or leave the appliance even for a short while, switch off the steam generator and remove the mains plug from the wall socket.

- Make sure that the steamer has been unplugged for at least 1 hour and has completely cooled down, before you use De-Calc function (if the function is available).

- Do not pour water, vinegar, descaling agents or other chemicals into the opening of the De-Calc function (if the function is available).

Electromagnetic fields (EMF)

This Philips product follows all relevant standards and regulations regarding exposure to electromagnetic fields.

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

- Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

Guarantee and support

If you need information or support, please visit www.philips.com/support or read the separate guarantee leaflet.

繁體中文

簡介

感謝您購買本產品。歡迎來到飛利浦的世界！請至 www.philips.com/welcome 註冊您的產品，以獲得飛利浦提供的完整支援。

重要事項

使用本產品前，請先詳閱個別的重要資訊手冊和使用手冊。請妥善保存這些文件，以供日後參考。

本產品設計供家用。對於任何商業用途、不當使用或未能遵循指示操作等行為，製造商概不負責，且不適用保固。

危險

- 請勿讓產品浸入水或其他液體中，也不要將它們放在水龍頭下沖洗。

警告

- 在接觸產品之前，請先檢查機械上所標示的電壓是否與當地的電源系統電壓一致。

- 插頭必須插入採用相同技術規格的電源插座。

- 插頭、電源線、蒸氣管或產品本身受損時，或是產品曾摔落或漏電時，切勿使用。

- 如果電源線或蒸氣管損壞，必須交由飛利浦、飛利浦授權之服務中心，或是具有相等資格的技術人員更換，以免發生危險。

- 產品所提供的電源線必須符合當地的國家標準。

- 木製衣服可供 8 歲以下孩童穿着及知覺、體能或精神能力有障礙者使用。

- 本產品可供 8 歲以下孩童穿着及知覺、體能或精神能力有障礙者使用。

- 本產品的電源線開啟或正在冷卻時，請將產品及其電源線放在 8 歲以下兒童無法觸及之處。

- 請勿讓兒童接觸潔淨與維護產品。

- 當產品的電源線開啟或正在冷卻時，請將其放在地板上。對於任何商業用途、不當使用或未能遵循指示操作等行為，製造商概不負責，且不適用保固。

- 使用 De-Calc 除垢功能 (如果有該功能) 之前，請確認蒸氣機插頭已經拔下至少 1 小時且蒸氣機已完全冷卻。

- 請勿從 De-Calc 除垢功能 (如果有該功能) 開口處注入清水、醋、除垢劑或其他化學物質。

- 注意：高溫表面 (圖 1)