


Register your product and get support at
请登录以下网址并得到相应的帮助
www.philips.com/welcome

Important Information / 重要信息手册

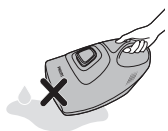

PHILIPS

PHILIPS

产品: 飞利浦无绳除螨吸尘器
型号: FC6333
额定电压: 220V ~
额定频率: 50Hz
额定输入电流: 0.35A
生产日期: 请见产品本体
产地: 中国江苏苏州

飞利浦(中国)投资有限公司
上海市天目西路218号1602-1605
全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005, GB4706.7-2014, GB4343.1-2009及GB17625.1-2012制造

PHILIPS

产品: 飞利浦无绳除螨吸尘器
型号: FC6331
额定电压: 220V ~
额定频率: 50Hz
额定输入电流: 0.35A
生产日期: 请见产品本体
产地: 中国江苏苏州

飞利浦(中国)投资有限公司
上海市天目西路218号1602-1605
全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005, GB4706.7-2014, GB4343.1-2009及GB17625.1-2012制造

保留备用

发行日期: 09/09/2015



www.philips.com



100% recycled paper
100% 循环再造纸

4222.003.4226.1

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Important

Read this important information carefully before you use the appliance and save it for future reference.

Danger

- Never immerse the appliance in water or any other liquid. Do not rinse it with running water, except for the parts that can be removed and rinsed according to the instructions.
- Never use the appliance near flammable or toxic substances.
- Do not vacuum up any liquid, flammable material or sharp objects, such as needles or pins.

Warning

- Check if the voltage indicated on the adapter corresponds to the local mains voltage before you connect the appliance.
- Do not use the appliance or the adapter if it is damaged.
- If the adapter is damaged, always have it replaced with one of the original type in order to avoid a hazard.
- The adapter contains a transformer. Do not cut off the adapter to replace it with another plug, as this causes a hazardous situation.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep the appliance and its cord out of the reach of children.
- To avoid danger of strangulation, keep the cord out of the reach of children.
- The plug must be removed from the socket-outlet before cleaning or maintenance.
- This appliance contains a UV emitter. Do not stare at the light source and avoid contact with the skin.
- To avoid eye injury, do not look into the UV light directly.
- Do not point the UV light directly towards your own hands or body, the hands or body of other people, or at pets during use.
- Always return the appliance to a service centre authorised by Philips for examination or repair. Do not attempt to repair the appliance yourself, otherwise the guarantee becomes invalid.
- Do not open the appliance and do not connect the appliance to the mains when its housing is damaged or open.

Caution

- Always switch off and unplug the appliance after use and before removing the dust container or cleaning the appliance.
- Do not use the adapter in or near a power outlet that contains an electric air freshener to prevent damage to the adapter.
- Do not use the appliance if you are highly sensitive to sunlight or bright light.
- Never block the exhaust air openings or the vacuum inlet.
- Always use the appliance with the dust compartment and the filter unit assembled.
- Always make sure that the washable parts of the appliance (i.e. the outer filter and the dust container) are completely dry before you put them back into the appliance.
- Do not use a sharp object to clean the EPA filter, as this damages the filter.
- Avoid placing your hands on or near the exhaust openings during use. The exhaust air emitted by the appliance can be hot.
- Do not touch the tapping feet when the tapping mode is active.
- Do not use the appliance on hard floors or furniture in tapping mode.
- Stop using the appliance when smoke, an unusual smell or an unusual sound is coming out of the appliance. Unplug the appliance immediately and contact the Philips Customer Care Centre.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Ordering accessories

To buy accessories or spare parts, visit www.shop.philips.com/service or go to your Philips dealer. You can also contact the Philips Consumer Care Centre in your country (see the worldwide guarantee leaflet for contact details).

Recycling

Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Guarantee and support

If you need information or support, please visit www.philips.com/support or read the separate worldwide guarantee leaflet.

Troubleshooting

This chapter summarises the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Centre in your country.

Problem	Cause	Solution
The appliance does not work and the battery icon flashes red.	The rechargeable battery is empty.	Recharge the appliance.
The appliance stops, the vacuum icon flashes and there is an audible warning signal.	The filter unit or the dust container with the filter unit are not assembled or not assembled properly.	Make sure that you assemble the filter unit in the dust container and the dust container in the appliance before you start using the appliance.
The suction power decreased suddenly.	The dust container is full, the filter is dirty or if the vacuum inlet is blocked.	Unplug the appliance. Empty the dust container and clean the filter. If the vacuum inlet is dirty, use the brush to clean it.
The lamp is not always on or goes on and off from time to time.	If you use the appliance on a dark surface, the response time of the sensor is longer.	The UV lamp is controlled by a sensor in the bottom of the appliance. This sensor ensures that the lamp goes out when the appliance is 5cm off the surface or the surface is very dark.
	The lamp goes on and off as you move the appliance over different colours and materials.	The UV lamp is controlled by a sensor in the bottom of the appliance. This sensor ensures that the lamp goes out when the appliance is 5cm off the surface or the surface is very dark.
The appliance stops, the tapping icon flashes red and there is an audible warning signal.	The tapping feet do not work because they are blocked by the fabric you are cleaning.	Do not press the appliance into the fabric too hard. Make sure you apply light pressure so that the appliance glides over the fabric easily.
	The motor that drives the tapping feet may be broken.	Take the appliance to your dealer or a Philips service centre. You can also contact the Philips Consumer Care Centre for information.
The appliance stops, the UV icon flashes red and there is an audible warning signal.	The infrared sensors may be dirty.	Clean the infrared sensors with the cleaning brush.
	The UV lamp may be broken.	Take the appliance to your dealer or a Philips service centre. You can also contact the Philips Consumer Care Centre for information.
The appliance doesn't start and the dust container icon flashes red.	The dust container is not assembled or is not assembled properly.	Push the dust container into the appliance. When the dust container is placed correctly, the dust container icon stops flashing and the appliance starts working.

Problem	Cause	Solution
	The dust container is full or dirty.	Empty the dust container and rinse it under the tap. Dry it properly before you put it back into the appliance.

Frequently asked questions

Question	Answer
If dirt and hair get trapped between the EPA filter and the prefilter, does this shorten the life of the EPA filter?	No, not if you clean the prefilter and filter regularly. Use the cleaning brush to remove larger particles from between the folds of the EPA filter.
Can I wash the EPA filter?	No, the EPA filter cannot be rinsed with tap water. Use the brush supplied to clean the filter.
How often do I have to replace the EPA filter?	Replace the EPA filter every 3 to 5 months, depending on how often you use the appliance. If the suction power decreases noticeably, you have to replace the EPA filter.
Can the appliance be used on hard floors?	Yes, but only in vacuum mode. If you use it on furniture or hard floors in tapping mode, you may damage the surface you clean.

简体中文

简介

感谢您的惠顾，欢迎光临飞利浦！为了您能充分享受飞利浦提供的支持，请在 www.philips.com/welcome 上注册您的产品。

注意事项

使用产品之前，请仔细阅读本重要信息，并妥善保管以供日后参考。

- 危险**
- 切勿将本产品浸入水中或任何其它液体中。不要用自来水冲洗，但根据说明可以拆卸下来冲洗的部件除外。
 - 切勿在易燃或有毒物质附近使用本产品。
 - 切勿吸入任何液体、易燃材料或尖锐物体，例如针或别针。

- 警告**
- 在将本产品连接电源前，务必检查当地的电压是否与电源适配器所标电压一致。
 - 如果产品或适配器受损，请停止使用。
 - 如果适配器已损坏，则务必更换原装型号适配器，以免发生危险。
 - 电源适配器内含有一个变压器。切勿自行更换插头，否则将导致严重后果。
 - 本产品不打算由肢体不健全、感觉或精神上有障碍或缺乏相关经验和知识的人（包括儿童）使用，除非有负责他们安全的人对他们使用本产品进行监督或指导。
 - 应照看好儿童，确保他们不玩耍本器具。
 - 将产品及其线缆放在儿童接触不到的地方。
 - 为避免窒息危险，请将电源线置于儿童接触不到的地方。
 - 清洁或维护之前，必须先从插座拔掉插头。
 - 本产品包含紫外线发射器。切勿凝视光源并避免与皮肤接触。
 - 为避免伤害眼睛，切勿直视紫外线。
 - 切勿在使用时将紫外线直接指向自己的手或身体、其他人的手或身体或者宠物。
 - 产品只能送到由飞利浦授权的维修中心检修。不要自己修理产品，否则产品维修保证书将会无效。

- 切勿打开本产品，也不要在其外壳损坏或已打开时将本产品连接到电源。

- 警告**
- 在使用本产品后以及在卸下集尘桶或清洗本产品前，务必关闭产品电源并拔出电源插头。
 - 切勿在插有插电式空气清新剂的电源插座上或附近使用适配器，以防止适配器损坏。
 - 如果您对阳光或亮光高度敏感，请勿使用本产品。
 - 切勿阻塞排气口或真空口。
 - 务必在装好集尘桶和过滤网部件的情况下使用本产品。
 - 务必确保保持产品的可水洗部件（即外层滤网和集尘桶）完全干燥后再将其放回产品中。
 - 切勿使用尖锐的物体清洁 EPA 过滤网，因为这样会损坏过滤网。
 - 在使用时避免将双手放在排气口或附近。产品排出的废气可能很热。
 - 在拍打模式处于激活状态时，切勿接触器具底部的振动垫。
 - 切勿在处于拍打模式时在硬地板或家具上使用本产品。
 - 当产品产生烟雾、异味或异常声音时，切勿使用本产品。立即拔掉产品插头，并联系飞利浦客户服务中心。

电磁场 (EMF)
本飞利浦产品符合所有有关暴露于电磁场的适用标准和法规。

订购附件

要购买附件和备件，请访问 www.shop.philips.com/service 或 请联系飞利浦经销商。您也可以联系您所在国家/地区的飞利浦客户服务中心（联系详情，请参阅全球保修卡）。

回收

弃置产品时，请不要将它与一般生活垃圾扔在一起，应将其交给官方指定的回收中心，这样做有利于环保。

保修和支持

如果您需要信息或支持，请访问 www.philips.com/support 或阅读单独的全球保修卡。

故障种类和处理方法

本章归纳了使用本产品时最常见的一些问题。如果您无法根据以下信息解决问题，请访问 www.philips.com/support 查阅常见问题列表，或联系您所在国家/地区的客户服务中心。

问题	原因	解决方法
产品不工作，电池图标呈红色闪烁。	充电电池的电量已耗尽。	为产品充电。
产品停止运行，真空图标呈红色闪烁并伴有声音警告信号。	未安装或未正确安装过滤网部件或带过滤网部件的集尘桶。	开始使用本产品之前，确保将过滤网部件装到集尘桶中，并将集尘桶装到产品中。
吸力突然下降。	集尘桶已满、过滤网很脏或真空口被阻塞。	拔掉产品插头。清空集尘桶并清洁过滤网。如果真空口很脏，请使用清洁刷进行清洁。

问题	原因	解决方法
灯泡并非始终亮起，或者时亮时灭。	如果您在黑暗的表面上使用本产品，传感器的响应时间会较长。	UV 灯泡由产品底部的传感器控制。此传感器可确保灯泡在产品距离表面 5 厘米以上或表面非常暗时熄灭。
	将产品移至不同的颜色和材料上时，灯泡会亮起和熄灭。	UV 灯泡由产品底部的传感器控制。此传感器可确保灯泡在产品距离表面 5 厘米以上或表面非常暗时熄灭。
产品停止运行，拍打图标呈红色闪烁并伴有声音警告信号。	器具底部的振动垫不起作用，因为它们可能被您正在清洁的织物堵塞。	切勿过于用力地将产品按入织物中。确保轻轻施加一点压力，以便产品轻松地在织物上滑动。
	驱动振动垫的马达可能已损坏。	请将本产品送往经销商处或飞利浦服务中心。您也可以联系飞利浦客户服务中心以获得更多信息。
产品停止运行，紫外线图标呈红色闪烁并伴有声音警告信号。	红外线传感器可能很脏。	用清洁刷清洁红外线传感器。
	紫外线灯泡可能已损坏。	请将本产品送往经销商处或飞利浦服务中心。您也可以联系飞利浦客户服务中心以获得更多信息。
产品无法启动，集尘桶图标呈红色闪烁。	未安装或未正确安装集尘桶。	将集尘桶推入产品中。放好后，集尘桶图标会停止闪烁，产品开始工作。
	集尘桶已满或很脏。	清空集尘桶并在水龙头下冲洗。晾干后再将其放回产品中。

常见问题	
问题	回答
如果污渍和头发卡在 EPA 过滤网和预过滤网之间，是否会缩短 EPA 滤网的使用寿命？	不会，如果定期清洁预过滤网和过滤网，则不会缩短使用寿命。请使用随附的清洁刷清除 EPA 过滤网褶皱之间的较大颗粒物。
能否清洗 EPA 过滤网？	不能，不能用自来水冲洗 EPA 过滤网。请使用随附的清洁刷清洁过滤网。
EPA 过滤网应多久更换一次？	每隔 3 到 5 个月更换一次 EPA 过滤网，具体取决于您使用本产品的频繁程度。如果吸力明显下降，则必须更换 EPA 过滤网。
本产品是否可以在硬地板上使用？	可以，但只能在真空模式下使用。如果在处于轻踏模式时在家具或硬地板上使用本产品，可能损坏您清洁的表面。