

Register your product and get support at
www.philips.com/welcome

02

English

INTELIA EVO

Bella

Type HD8770

USER MANUAL



EN

02

PLEASE READ THIS USER MANUAL CAREFULLY BEFORE USING THE MACHINE.



Congratulations on your purchase of a Saeco Intelia EVO Bella full automatic espresso machine!

*To fully benefit from the support that Saeco offers, please register your product at **www.philips.com/welcome**.*

This user manual applies to HD8770.

The machine is suitable for preparing espresso coffees using whole coffee beans. It can also dispense steam and hot water. In this user manual you will find all the information you need to install, use, clean and descale your machine.

CONTENTS

IMPORTANT.....	4
Safety Instructions	4
Warning	4
Caution	6
Compliance with Standards	7
INSTALLATION	8
Product overview	8
General description.....	9
PREPARING FOR USE.....	10
Machine packaging.....	10
Machine installation.....	10
USING THE MACHINE FOR THE FIRST TIME	12
Circuit priming	12
Automatic rinse/self-cleaning cycle	13
Manual rinse cycle.....	14
Measuring and programming water hardness	16
"INTENZA+" water filter installation	17
Replacing the "INTENZA+" water filter.....	19
ADJUSTMENTS.....	20
Saeco Adapting System.....	20
Adjusting the ceramic coffee grinder.....	20
Adjusting the aroma (coffee strength)	21
Adjusting the dispensing spout.....	22
Adjusting the coffee length	23
ESPRESSO AND COFFEE BREWING	24
Espresso and coffee brewing using coffee beans.....	24
Espresso and coffee brewing using pre-ground coffee	25
STEAM DISPENSING /CAPPUCCINO BREWING.....	26
HOT WATER DISPENSING	27
CLEANING AND MAINTENANCE	28
Daily cleaning of the machine	28
Daily cleaning of the water tank.....	29
Daily cleaning of the Pannarello.....	30
Weekly cleaning of the machine	30
Weekly cleaning of the Pannarello	31
Weekly cleaning of the brew group.....	31
Monthly lubrication of the brew group	34
Monthly cleaning of the brew group with "Coffee Oil Remover"	35
Monthly cleaning of the coffee bean hopper	37
DESCALING.....	38
PROGRAMMING	42
Adjustable parameters.....	42
Programming mode example	43
MEANING OF THE DISPLAY SYMBOLS.....	45
TROUBLESHOOTING.....	48
ENERGY SAVING.....	50
Stand-by	50
Disposal	50
TECHNICAL SPECIFICATION.....	51
GUARANTEE AND SERVICE	51
Guarantee	51
Service	51
ORDERING MAINTENANCE PRODUCTS	52

IMPORTANT

Safety Instructions

This machine is equipped with safety features. Nevertheless read the safety instructions carefully and only use the machine as described in these instructions to avoid accidental injury or damage.

Keep this user manual for future reference.



The term **WARNING** and this icon warn against possible severe injuries, danger to life and/or damage to the machine.



The term **CAUTION** and this icon warn against slight injuries and/or damage to the machine.

Warning

- Connect the machine to a wall socket with a voltage matching the technical specifications of the machine.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- Never immerse the machine, mains plug or power cord in water (danger of electrical shock).
- Never direct the hot water jet towards body parts: danger of burns!
- Do not touch hot surfaces. Use handles and knobs.
- Remove the mains plug from the wall socket:
 - If a malfunction occurs.
 - If the machine will not be used for a long time.
 - Before cleaning the machine.

Pull on the plug, not on the power cord. Do not touch the mains plug with wet hands.

- Do not use the machine if the mains plug, the power cord or the machine itself is damaged.
- Do not make any modifications to the machine or its power cord. Only have repairs carried out by a service centre authorised by Philips to avoid a hazard.
- The machine should not be used by children younger than 8 years old.
- The machine can be used by children of 8 years and upwards if they have previously been instructed on the correct use of the machine and made aware of the associated dangers or if they are supervised by an adult.
- Cleaning and maintenance should not be carried out by children unless they are more than 8 years old and supervised by an adult.
- Keep the machine and its power cord out of reach of children under 8 years old.
- The machine may be used by persons with reduced physical, sensory or mental capabilities or lacking sufficient experience and/or skills if they have previously been instructed on the correct use of the machine and made aware of the associated dangers or if they are supervised by an adult.
- Children should be supervised to ensure that they do not play with the machine.
- Never insert fingers or other objects into the coffee grinder.

Caution

- The machine is for household use only and is not intended for use in environments such as canteens, staff kitchens of shops, offices, farms or other work environments.
- Always put the machine on a flat and stable surface.
- Do not place the machine on hot surfaces, directly next to a hot oven, heater or similar source of heat.
- Only put coffee beans into the coffee bean hopper. If ground coffee, instant coffee or any other substance is put in the coffee bean hopper, it may damage the machine.
- Let the machine cool down before inserting or removing any parts.
- Never use warm or hot water to fill the water tank. Use cold non sparkling drinking water.
- Never clean with scrubbing powders or harsh cleaners. Simply use a soft cloth dampened with water.
- Descale your machine regularly. The machine indicates when descaling is needed. Not doing this will make your appliance stop working properly. In this case repair is not covered under your warranty!
- Do not keep the machine at temperature below 0 °C. Residue water in the heating system may freeze and cause damage.
- Do not leave water in the water tank when the machine is not used over a long period of time. The water can be contaminated. Use fresh water every time you use the machine.

Compliance with Standards



 
 






The machine complies with art.13 of the Italian Legislative Decree dated 25 July 2005, no. 151 "Implementation of the Directives 2005/95/EC, 2002/96/EC and 2003/108/EC on the restriction of the use of certain hazardous substances in electrical and electronic equipment, as well as waste disposal".

This machine complies with EU Directive 2002/96/EC.

This Philips appliance complies with all the applicable standards and regulations relating to the exposure to electromagnetic fields.

INSTALLATION

Product overview

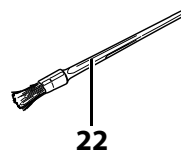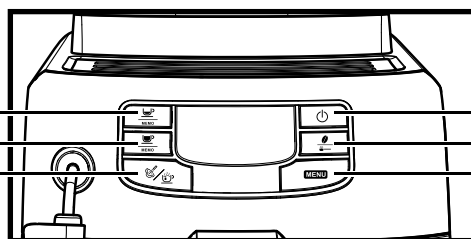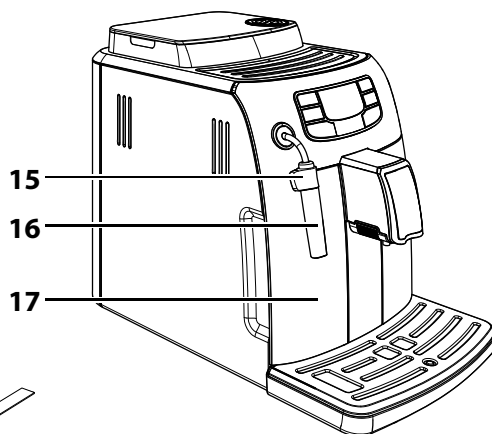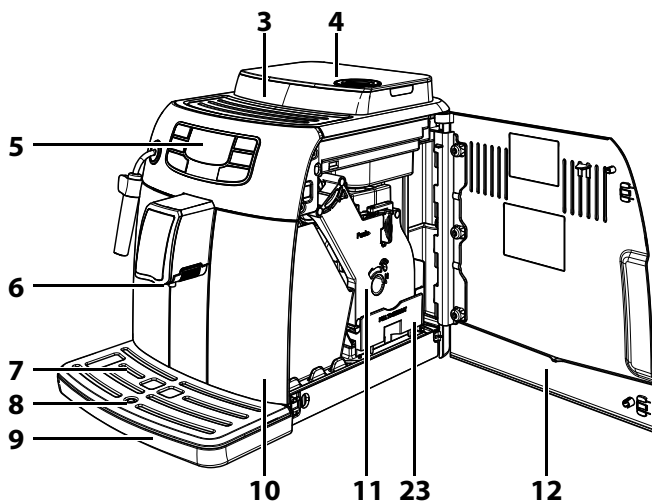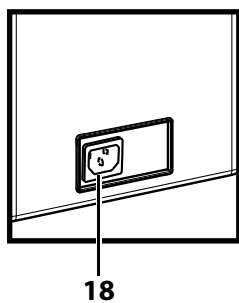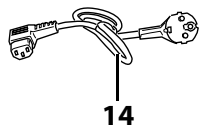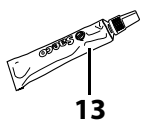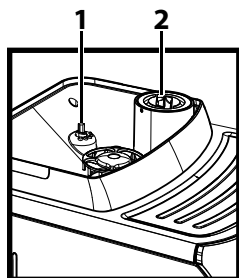

General description

1. Grinder adjustment knob
2. Pre-ground coffee compartment
3. Coffee bean hopper
4. Coffee bean hopper lid
5. Control panel
6. Dispensing spout
7. Cup holder grill
8. Full drip tray indicator
9. Drip tray
10. Coffee grounds drawer
11. Brew group
12. Service door
13. Grease for the brew group - to be purchased separately
14. Power cord
15. Wand protective gripper
16. Pannarello (for hot water/steam wand)
17. Water tank
18. Power cord socket
19. Power button
19. Descaling solution - to be purchased separately
20. Coffee grinder adjustment key + Pre-ground coffee scoop
21. Water hardness test
22. Cleaning brush - to be purchased separately
23. Coffee residues drawer
24. Espresso brew button
25. Coffee brew button
26. Hot water/steam selection button
27. ON/OFF button
28. "Aroma" - Pre-ground coffee button
29. "MENU" button

PREPARING FOR USE

Machine packaging

The original packaging has been designed and constructed to protect the machine during transport. We recommend keeping the packaging material for possible future transport.



Machine installation

1 Remove the drip tray with grill from the packaging.

2 Remove the machine from the packaging.

3 For best use, it is recommended to:

- Choose a safe, level surface, where there will be no danger of overturning it or being injured.
- Choose a location that is sufficiently well-lit, clean and near an easily reachable socket.
- Allow for a minimum distance from the sides of the machine as shown in the illustration.

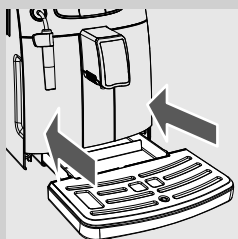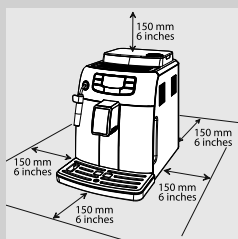


4 Attach the drip tray with grill to the machine. Make sure it is fully inserted.




Note:

The drip tray collects the water that comes out of the dispensing spout during each rinse/self-cleaning cycle as well as coffee that might be spilled during beverage preparation. Empty and clean the drip tray daily and each time the full drip tray indicator is raised.

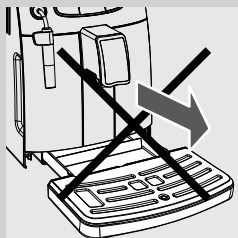


Caution:

NEVER remove the drip tray when the machine has just been turned on. Wait a couple of minutes, since the machine will carry out a rinse/self-cleaning cycle.

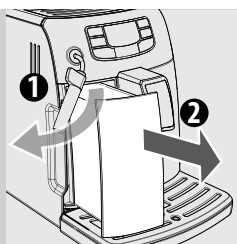

- 5 Remove the water tank.

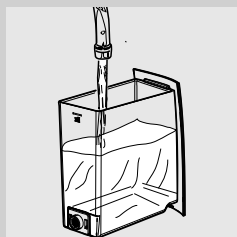

- 6 Rinse the water tank under fresh water.

- 7 Fill the water tank with fresh water up to the MAX level and reinsert it into the machine. Make sure it is fully inserted.



Caution:

Never fill the water tank with warm, hot, sparkling water or any other liquid, as this may cause damage to the water tank and the machine.



- 8 Remove the coffee bean hopper lid and slowly pour the coffee beans into the coffee bean hopper.



Note:


Do not pour too many coffee beans into the coffee bean hopper as this will reduce the grinding performance of the machine.



Caution:


Only coffee beans must be put into the coffee bean hopper. Ground coffee, instant coffee, caramelized coffee or any other object may damage the machine.

- 9 Put the lid on the coffee bean hopper.

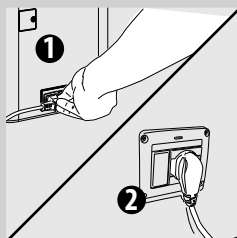


- 10 Insert the plug into the socket located on the back of the machine.

 
- 11 Insert the plug of the other end of the power cord into a wall socket with suitable power voltage.




Black

12 The display shows the stand-by icon.

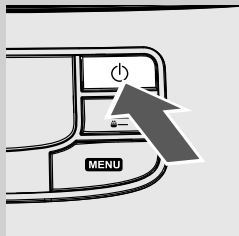

 13 To turn on the machine simply press the “” button. The display indicates that the circuit must be primed.



Yellow

USING THE MACHINE FOR THE FIRST TIME

When using the machine for the first time, the following activities need to happen:


- 1) You need to prime the circuit.
- 2) The machine will perform an automatic rinse/ self-cleaning cycle.
- 3) You need to initiate a manual rinse cycle.


Circuit priming

During this process fresh water flows through the internal circuit of the machine and the machine warms up. This takes a few minutes.

- 1** Place a container under the Pannarello.



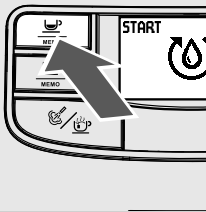


- 2** Press the “” button to start the cycle. The machine starts the automatic priming of the circuit by dispensing some water through the Pannarello.



Yellow

 - 3** The bar under the icon shows the operation progress. When the process is complete, the machine stops dispensing automatically.




Yellow

- 4** Then the display shows the machine warm-up icon.

Automatic rinse/self- cleaning cycle

When warm-up is complete, the machine automatically performs a rinse/ self-cleaning cycle of the internal circuit with fresh water. This takes less than a minute.

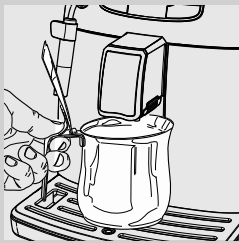

- 5** Place a container under the dispensing spout to catch the small amount of water which will be dispensed.




 
Yellow

- 6** The machine shows this display. Wait for the cycle to finish automatically.



Note:

You can stop dispensing by pressing the “” button.



 

Green

- 7** When the above steps are complete, the machine shows this display.

Manual rinse cycle


During this process you activate the coffee brewing cycle and fresh water flows through the steam/hot water circuit. This takes a few minutes.

- 1 Place a container under the dispensing spout.

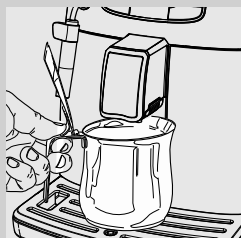

Green

 - 2 Check that the machine shows this display.



Green

- 3 Select the pre-ground coffee brewing function by pressing the "☉" button. The machine shows this display.

**Note:**

 
Do not add pre-ground coffee into the compartment.

- 4 Press the "MEMO" button. The machine starts dispensing water.

- 5 When the dispensing has finished, empty the container. Repeat operations from step 1 to step 4 twice, then continue with step 6.





- 6 Place a container under the Pannarello.



Green

 - 7 Press the "☉/☉" button. The following icon is displayed.


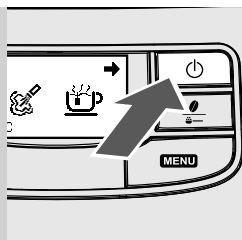


8 Press the “” button to start dispensing hot water.



Red

 9 Dispense water until the no water icon appears.

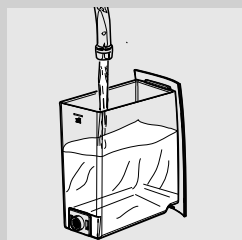

Green

10 At the end, fill the water tank again up to the MAX level. Now the machine is ready for brewing coffee.
You will see the display as shown at the left.



Note:

When you haven't used the machine for 2 or more weeks, the machine will automatically perform an automatic rinse/self-cleaning cycle after you switch it on. Following this, you need to initiate a manual rinse cycle as described above.

The automatic rinse/self-cleaning cycle starts automatically when the machine has been in stand-by mode or turned off for more than 15 minutes. At the end of the cycle, it is possible to brew a coffee.

Measuring and programming water hardness

Water hardness measuring is very important in order to define the descaling frequency and to install the "INTENZA+" water filter (for more detail on the water filter, see next chapter).

To measure the water hardness follow the steps below:

- 1 Immerse the water hardness test strip (supplied with the machine) in water for 1 second.



Note:

The test strip can only be used for one measurement.

- 2 Wait for one minute.

- 3 Check how many squares have changed the colour to red and then consult the table.



Note:

The numbers on the water hardness test strip correspond to the water hardness adjustment settings.

More precisely:

 


1 = 1 (very soft water)

2 = 2 (soft water)

3 = 3 (hard water)

4 = 4 (very hard water)

The letters correspond to the references that are located at the base of the "INTENZA+" water filter. (see next chapter for this).

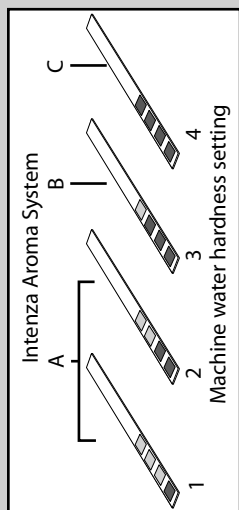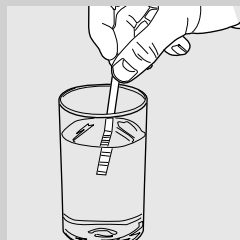

Yellow

- 4 Now you can program the water hardness setting.

Press the "MENU" button and scroll the pages by pressing the "▲" button until the following icon is displayed.



Note:

The machine is supplied with standard water hardness setting, suitable for most of the type of water.

- 5 Press the "MEMO" button to increase the value or the "MEMO" button to decrease the value.


- 6 Press the "OK" button to confirm the setting.



Yellow




Green

- 7** Press the “” button to exit the programming MENU.


“INTENZA+” water filter installation

We recommend installing the “INTENZA+” water filter as this prevents limescale build-ups and preserves a more intense aroma to your espresso coffee.


The INTENZA+ water filter can be purchased separately. Please refer to the maintenance product page in this user manual for further details. Water is a crucial part of every espresso, so it’s most important to always have it professionally filtered. Using the “INTENZA+” water filter will prevent mineral deposits from building up and improve your water quality.

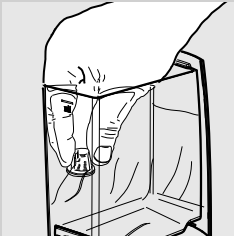


- 1** Remove the small white filter from the water tank and store it in a dry place.

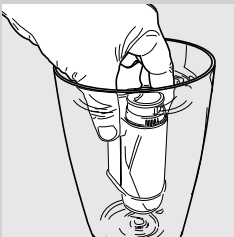

- 2** Remove the “INTENZA+” water filter from its packaging, immerse it vertically (with the opening positioned upwards) in cold water and gently press the sides so as to let the air bubbles out.

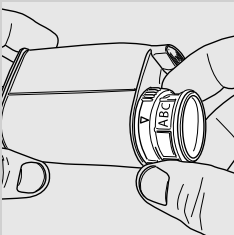

- 3** Set the filter according to the measurements performed (see previous chapter) and indicated on the base of the filter:
 A = Soft water – equals 1 or 2 on the test strip
 B = Hard water (standard) – equals 3 on the test strip
 C = Very hard water – equals 4 on the test strip

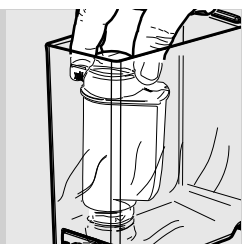


4 Put the filter into the empty water tank. Press it until it cannot move further down.

5 Fill the water tank with fresh water and reinsert it into the machine.


6 Dispense the entire water tank by using the hot water function (see chapter "Hot water dispensing").

 7 Fill the water tank again.




Yellow

 8 Press the "**MENU**" button and scroll the pages by pressing the "**⬆**" button until the following page is displayed.



Yellow

 9 Press the "**☕**" button to select "ON" and press the "**⬆**" button to confirm.



Green

10 To exit, press the "**⏻**" button.

In this way the machine has been programmed to inform the user of the need to replace the "INTENZA+" water filter.

 
Replacing the "INTENZA+" water filter

When the "INTENZA+" water filter needs to be replaced with a new one, the following icon is displayed.



Yellow


- 1 Replace the filter as described in the previous chapter.



Yellow

- 2 Press the "MENU" button and scroll the pages by pressing the "0" button until the following icon is displayed.

 
- 3 Select the "RESET" option. Press the "0" button to confirm.



Green

- 4 To exit, press the "0" button.

 The machine is now programmed to manage a new filter.



Yellow



Note:

If the filter is already installed and you want to remove - but not replace - it, select the "OFF" option instead.

If there is no "INTENZA+" water filter installed, insert the small white filter previously removed into the water tank.

ADJUSTMENTS

The machine allows for certain adjustments so that you can brew the best tasting coffee possible.

Saeco Adapting System

Coffee is a natural product and its characteristics may change according to its origin, blend and roast. The machine is equipped with a self-adjusting system that allows the use of all types of coffee beans available on the market (not for caramelized beans).

The machine automatically adjusts itself after brewing several cups of coffee to optimize the extraction of the coffee to the compactness of the ground coffee.

Adjusting the ceramic coffee grinder

Ceramic coffee grinders always guarantee accurate and perfect grinding and coarseness for every coffee speciality.

This technology provides for full aroma preservation, delivering the truly Italian taste in every cup.



Warning:

The ceramic coffee grinder contains moving parts that may be dangerous. Do not insert fingers or other objects. Only adjust the ceramic coffee grinder using the grinder adjustment key.

You can adjust the ceramic grinders to set the coffee grinding to your personal taste.



Warning:


Only turn the grinder adjustment knob inside the coffee bean hopper when the ceramic coffee grinder is in use.

This adjustment can be carried out by pressing and turning the grinder adjustment knob inside the coffee bean hopper, using the coffee grinder adjustment key provided with the machine.


Adjusting the dispensing spout

The height of the dispensing spout can be adjusted to better fit the dimensions of the cups that you wish to use.


Move the dispensing spout up or down with your fingers to adjust its height as shown in the image.

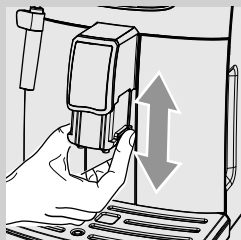

The recommended positions are:
For the use of small cups;

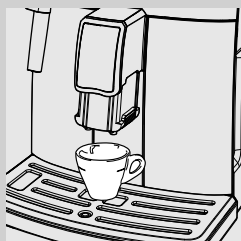

For the use of large cups.

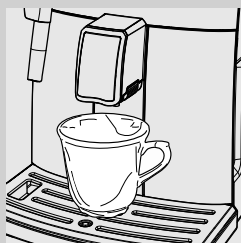

Two cups can be placed under the dispensing spout to brew two cups of coffee at the same time.



Adjusting the coffee lenght

The machine allows you to adjust the amount of brewed coffee according to your taste and the size of your cups.

Each time the "MEMO" or "MEMO" button is pressed, the machine brews a pre-set amount of coffee. Each button may be individually programmed for a specific brew setting.

The following procedure describes the programming of the "MEMO" button.

 


- 1 Place a cup under the dispensing spout.



Green

- 2 Press and hold the "MEMO" button until the "MEMO" icon is displayed. Then release the button. The machine is now programming. The machine starts brewing coffee.



Green

- 3 When the "STOP" icon is displayed, press the "MEMO" button as soon as the desired amount of coffee is reached.

Now the button "MEMO" is programmed; each time it is pressed, the machine will brew the same amount of espresso that was just programmed.



Note:

To program the "MEMO" brew button, the same steps should be followed. You should always use the "MEMO" button to stop brewing coffee when the desired amount of coffee is reached even when you are programming the "MEMO" brew button.

ESPRESSO AND COFFEE BREWING

Before brewing coffee, make sure that there are no warnings shown on the display, and that the water tank and coffee bean hopper are filled.

Espresso and coffee brewing using coffee beans

- 1** Place 1 or 2 cups under the dispensing spout.



Green

- 2** To brew an espresso or a coffee, press the "☕" button to select the desired aroma.

- 3** Press the "MEMO ☕" button for an espresso or the "MEMO ☕" button for a coffee.

- 4** To brew 1 cup of espresso or coffee, press the desired button once. This icon will be displayed.



Green

- 5** To brew 2 cups of espresso or coffee, press the desired button twice consecutively. This icon will be displayed.

**Note:**

 
In this operating mode, the machine automatically grinds and doses the correct amount of coffee. Brewing two espressos requires two grinding and brewing cycles, automatically carried out by the machine.

- 6** After the pre-brewing cycle, coffee begins to pour out of the dispensing spout.
- 7** Coffee brewing stops automatically when the pre-programmed level is reached; however, it is possible to stop earlier by pressing the "MEMO ☕" button.


Espresso and coffee brewing using pre-ground coffee


This function allows to use pre-ground and decaffeinated coffee.

With the pre-ground coffee function you can only brew one coffee at a time.



Green

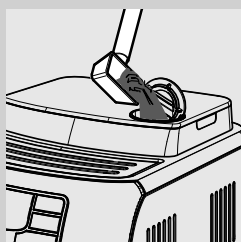

 


- 1 Press the "  " button one or more times to select the pre-ground coffee function.

- 2 Lift the pre-ground coffee compartment lid and add one scoop of pre-ground coffee to the compartment. Use only the measuring scoop supplied with the machine. Then close the pre-ground coffee compartment lid.



Warning:

 Add only pre-ground coffee to the pre-ground coffee compartment. Other substances and objects may cause severe damages to the machine. Such damages are not covered by your warranty.

- 3 Press the "  " button for an espresso or "  " button for a coffee. The brewing cycle starts.
- 4 After the pre-brewing cycle, coffee begins to pour out of the dispensing spout.
- 5 Coffee brewing stops automatically when the pre-programmed level is reached; it is possible to stop earlier by pressing the "  " button.

After brewing the product, the machine returns to the main menu.

Repeat the steps described above to brew more coffees using pre-ground coffee.



Note:

If no pre-ground coffee is poured into the pre-ground coffee compartment, only water will be dispensed.

If the dose is excessive and 2 or more scoops of pre-ground coffee are used, the machine will not brew the product and any ground coffee will be discharged into the coffee grounds drawer.

STEAM DISPENSING /CAPPUCCINO BREWING**Warning:**

Danger of scalding! Dispensing may be preceded by small jets of hot water. The hot water/steam wand may reach high temperatures. Never touch it with bare hands. Use the appropriate protective handle only.




- 1 Fill 1/3 of a container with cold milk.

**Note:**



 Use cold (~5°C / 41°F) milk with a protein content of at least 3% to ensure optimum results when preparing a cappuccino. You can use whole milk or low-fat milk depending on your personal taste.



- 2 Immerse the Pannarello in milk.



Green

- 3 Press the “” button. The following icon is displayed. Press the “” button to start dispensing steam.




Yellow

- 4 The following icon may be displayed during the preheating time required by the machine.



Green

- 5 Froth the milk by gently swirling the container and moving it up and down.
- 6 When the milk froth has the desired consistency, press “” button to stop dispensing steam.



Caution:

After frothing the milk, clean the Pannarello by dispensing a small amount of hot water into a container. For detailed cleaning instructions please see the "Cleaning and Maintenance" chapter.



Note:

After dispensing steam, it is possible to brew an espresso or dispense hot water straight after.

 
HOT WATER DISPENSING




Warning:

Danger of scalding! Dispensing may be preceded by small jets of hot water. The hot water/steam wand may reach high temperatures: never touch it with bare hands. Use the appropriate protective handle only.

Before dispensing hot water, check that the machine is ready to use and the water tank is filled.



Green

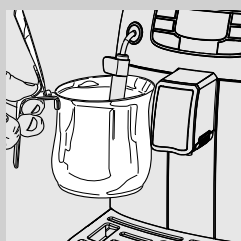


- 1 Place a container under the Pannarello.




Green

- 2 Press the "☁️/☕" button. The following icon is displayed.

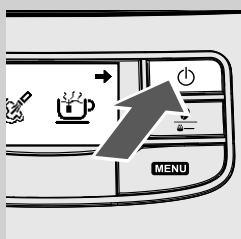

 - 3 Press the "⏻" button to start dispensing hot water.




Yellow



Green

4 The following icon may be displayed during the preheating time required by the machine.

 5 Pour the desired amount of hot water. To stop the hot water dispensing press the “” button.

CLEANING AND MAINTENANCE

Daily cleaning of the machine



Caution:


Timely cleaning and maintenance of your machine is very important as it prolongs the life of your machine. Your machine gets exposed to moist, coffee and lime scale continuously!

In this chapter it is described in detail which activities you need to perform at which frequency. Not doing this will ultimately make your machine stop working properly. This repair is NOT covered by your warranty!




Note:

- Use a soft, dampened cloth to clean the machine.
- Do not wash any of its parts in the dishwasher.
- Do not immerse the machine in water.
- Do not use alcohol, solvents, and/or abrasive objects to clean the machine.
- Do not dry the machine and/or its components using a microwave and/or standard oven.

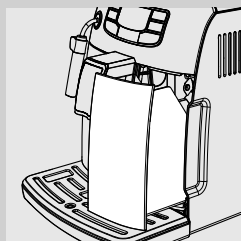


1 Empty and clean the coffee ground drawer daily with the machine turned on.


Other maintenance operations can only be carried out when the machine is turned off and unplugged.

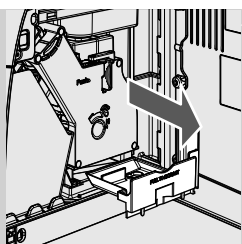


- 2 Empty and clean the coffee residues drawer located in side of the machine. Open the service door, remove the drawer and empty the coffee residues.

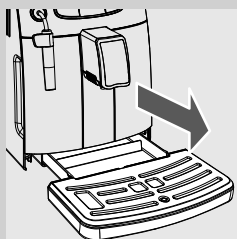

- 3 Empty and clean the drip tray. Perform this operation also when the full drip tray indicator is raised.

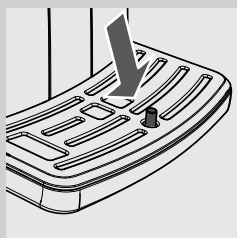

Daily cleaning of the water tank

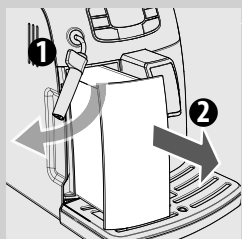


- 1 Remove the small white filter or the INTENZA+ water filter (if installed) from the water tank and wash it with fresh water.
- 2 Put the small white filter back or the INTENZA+ water filter (if installed) in its housing by gently pressing and turning it at the same time.
- 3 Fill the water tank with fresh water.

Daily cleaning of the Pannarello


It is important that you clean the pannarello daily or after each use as it preserves hygiene and ensures perfect milk froth consistency.

Each time after frothing milk you need to:
Remove the external part of the Pannarello and wash it with fresh water.


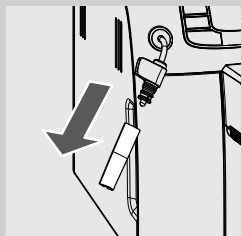


Weekly cleaning of the machine

- 1** Clean the seat of the drip tray.

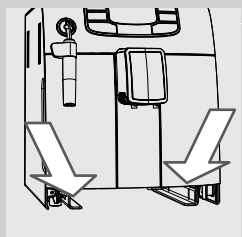

- 2** Clean the pre-ground coffee compartment with the brush (purchased separately) or the handle of a utensil.

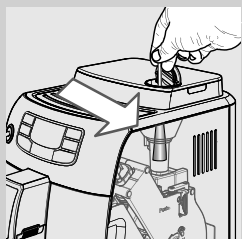
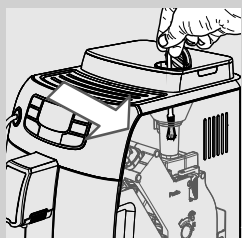


Weekly cleaning of the Pannarello

The weekly cleaning is more thorough as you need to disassemble all parts of Pannarello.

You need to perform the following cleaning operations:



- 1** Remove the external part of the Pannarello. Wash it with fresh water.
- 2** Remove the upper part of the Pannarello from the hot water/steam wand.
- 3** Wash the upper part of the Pannarello with fresh water.
- 4** Clean the hot water/steam wand with a wet cloth to remove milk residues.
- 5** Put the upper part back in the hot water/steam wand (make sure it is completely inserted).
- 6** Reassemble the external part of the Pannarello.

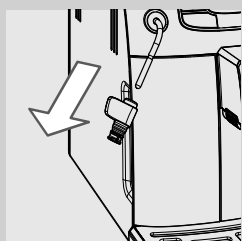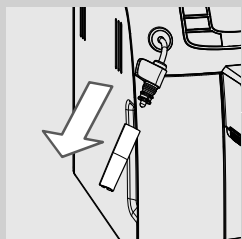


Weekly cleaning of the brew group


The brew group should be cleaned every time the coffee bean hopper is filled or at least once a week.

- 1** Turn off the machine by pressing the button and remove the plug from the socket.
- 2** Remove the coffee grounds drawer. Open the service door.

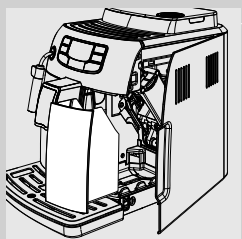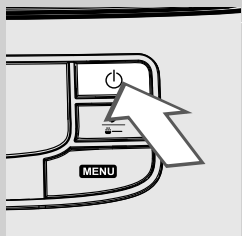


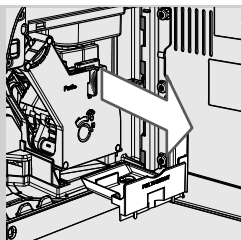

3 Remove and clean the coffee residues drawer.

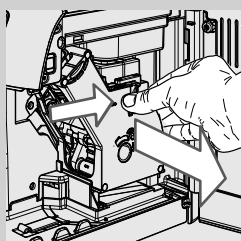

4 To remove the brew group, press the «PUSH» button and pull it by the handle.

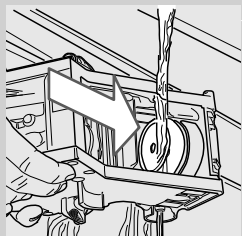

5 Thoroughly wash the brew group with fresh, lukewarm water and carefully clean the upper filter.




Caution:


Do not use detergent/soap to clean the brew group.

6 Let the brew group air-dry thoroughly.


7 Thoroughly clean the inside of the machine using a soft, dampened cloth.

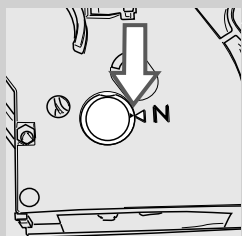



8 Make sure the brew group is in the rest position; the two reference signs must match. If they do not match, proceed as described in step (9).

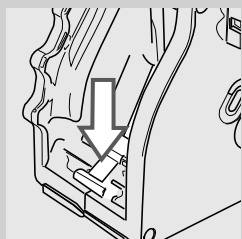


9 Gently pull down the lever until it is in contact with the brew group base and the two reference signs on the side of the brew group do match.

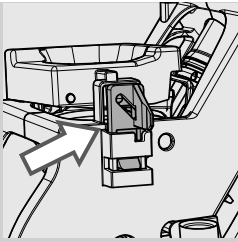


- 10** Make sure the hook to lock the brew group is in the correct position by firmly pressing the "PUSH" button until you hear a click. Check if the hook is at the top end position. If it is not, please try again.

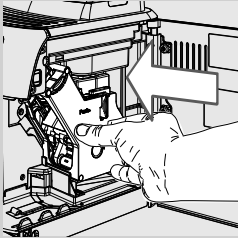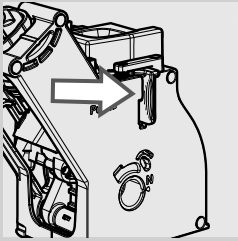

- 11** Insert the brew group in its seat again until it locks into place without pressing the "PUSH" button.

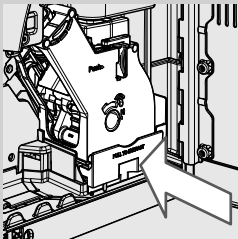

- 12** Insert the coffee residues drawer and close the service door.

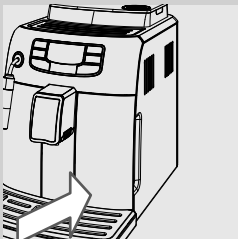

- 13** Insert the coffee grounds drawer.



Monthly lubrication of the brew group

Lubricate the brew group after approximately 500 cups of coffee or once a month.



You can purchase Saeco grease separately the grease to lubricate the brew group. Please refer to the maintenance products page in this user manual for further details.

**Caution:**


Before lubricating the brew group, clean it under fresh water and let it dry, as described in the "Weekly cleaning of the brew group" chapter.

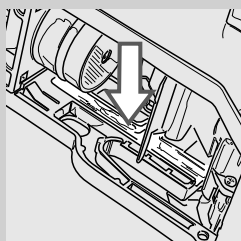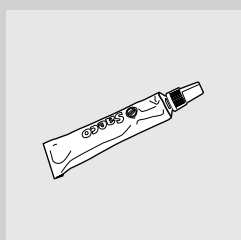


- 1** Apply the grease evenly on both side guides.

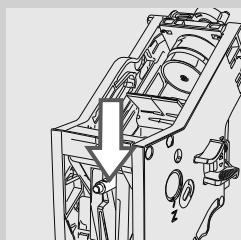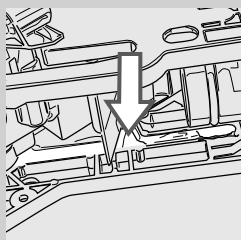

- 2** Lubricate the shaft too.

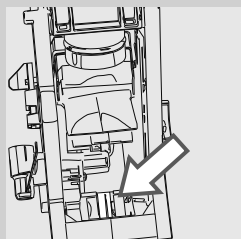

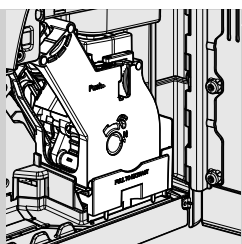

3 Insert the brew group in its seat until it locks into place. (see “Weekly Cleaning of the Brew Group” chapter). Insert the coffee residues drawer.

4 Close the service door and insert the coffee ground drawer.

Monthly cleaning of the brew group with “Coffee Oil Remover”



Besides weekly cleaning, we recommend running this cleaning cycle with the “Coffee Oil Remover” after approximately 500 cups of coffee or once a month. This operation completes the maintenance process of the brew group.

You can purchase separately the “Coffee Oil Remover”. Please refer to the maintenance products page in this user manual for further details.




Caution:



The “Coffee Oil Remover” tablets are to be used for cleaning only and do not have a descaling function. For the descaling procedure use the Saeco descaling solution and follow the procedure described in the “Descaling” chapter.






1 Place a container under the dispensing spout.

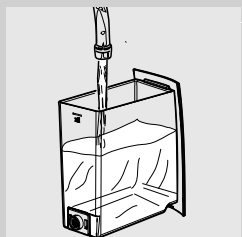

 2 Make sure the water tank is filled with fresh water up to the “MAX” level.

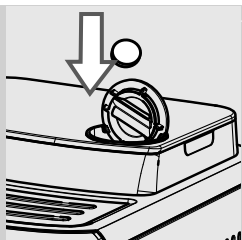

Green

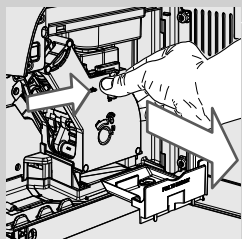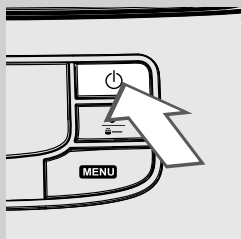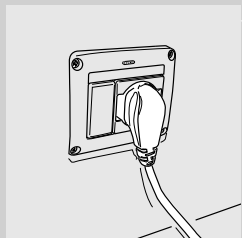

3 Put a "Coffee Oil Remover" tablet in the pre-ground coffee compartment.

4 Press the "☕" button one or more times to select the pre-ground coffee function without adding ground coffee to the compartment.

5 Press the "☕" button to start a coffee brewing cycle.


6 Wait until the machine has dispensed half a cup of water.

7 Remove the plug of the power cord from the wall socket.


8 Let the solution take effect for approximately 15 minutes. Make sure you discard the dispensed water.

9 Reinsert the plug of the power cord into the wall socket. Turn on the machine by pressing the "⏻" button. Wait for the automatic rinse cycle to be completed.

10 Remove the coffee ground drawer and open the service door. Remove the coffee residues drawer and then the brew group.

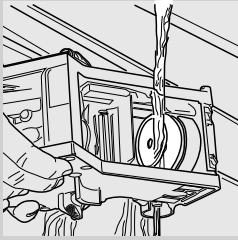

- 11** Wash the brew group thoroughly with fresh water.

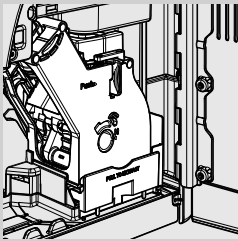

- 12** After rinsing the brew Group, insert it again in its seat until it locks into place (see "Weekly cleaning of the brew group" chapter). Insert the coffee residues drawer and the coffee ground drawer. Close the service door.




Green

- 13** Press the "☉" button to select the pre-ground coffee function, without adding coffee to the pre-ground coffee compartment.


- 14** Press the "☕" button to start a coffee brewing cycle.

- 15** Repeat steps 12- 13 twice. Make sure you discard the dispensed water.

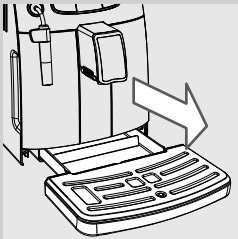

- 16** To clean the drip tray, place a "Coffee Oil Remover" tablet inside and fill it up to 2/3rds full with hot water. Let the cleaning solution take effect for about 30 minutes, then rinse thoroughly.

Monthly cleaning of the coffee bean hopper

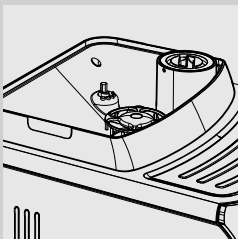

Clean the coffee bean hopper once a month when it is empty with a damp cloth to remove coffee oil. Thereafter refill it with coffee beans.

DESCALING

The descaling process takes approx. 35 minutes.



Yellow

Lime scale builds up inside the machine during use. It needs to be removed regularly as it may clog the water and coffee circuit of your machine. The machine tells you when descaling is needed. If the machine display shows the **CALC CLEAN** icon, it means that you need to descale.

**Caution:**

Not doing this will ultimately make your machine stop working properly, and in this case repair is NOT covered by your warranty.



Use the Saeco decalcifier only. Its formula has been designed to ensure better machine performance.

You can purchase separately the SAECO decalcifier. Please refer to the maintenance products page in this user manual for further details.

**Warning:**

Never drink the decalcifier or any products dispensed until the cycle has been carried out to the end. Never use vinegar as a decalcifier.


**Note:**


During the descaling cycle do not switch off the machine. If this has happened you need to restart the descaling cycle from the very beginning.

To execute the descaling cycle, follow the steps below:

Before descaling:

- 1** Empty the drip tray.

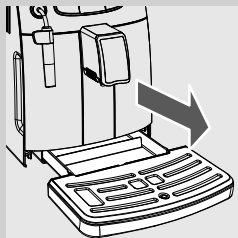

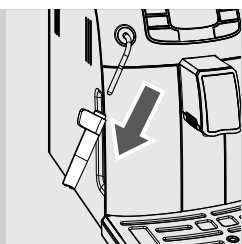


2 Remove the Pannarello from the hot water/steam wand.



Yellow

 4 Press the "MENU" button. Press the "☺" button until the following display is shown.




Red

5 Press the "☺" button to enter the descaling menu.




Note:


If you press the "☺" button by mistake, press the "⏻" button to quit.

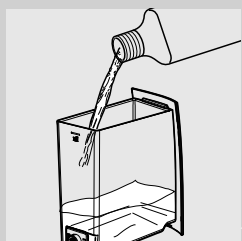


6 Remove the water tank and pour the entire content of the Saeco decalcifier. Then fill the water tank with fresh water up to the MAX level.

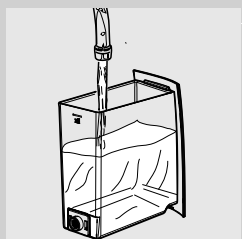


7 Place the water tank back into the machine.

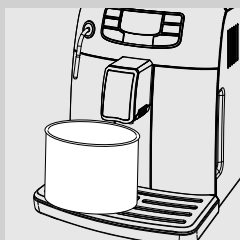

 8 Place a large container (1.5L) under both the steam/hot water wand and the dispensing spout.



Red



- 9** Press the “” button to start the descaling cycle.



Red

- 10** The machine will start dispensing the descaling solution at intervals. The bar on the display shows the cycle progress.

**Note:**

The descaling cycle may be paused by pressing the “” button. To resume the cycle, press the “” button again. This allows you to empty the container or to stay away from the machine for a brief period of time.




Red



Red

- 11** When this icon is displayed, the water tank is empty.

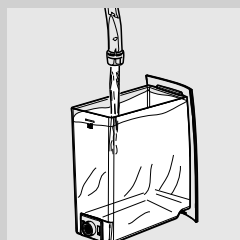


- 12** Remove the water tank, rinse it and fill it up to the MAX level with fresh water. Place it back into the machine.

- 13** Empty the drip tray and place it back.

- 14** Empty the container and place it back under the steam/hot water wand and dispensing spout.




 
Red

- 15** When inserting the water tank into the machine, this icon is displayed. Press the “” button to start the rinsing cycle.



Red

 

- 16** When this icon is displayed, the water tank is empty. Repeat steps 12 – 15. Then continue to step 17.

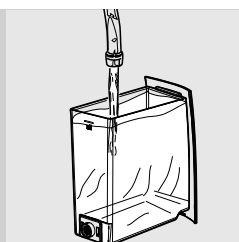

Red




Yellow

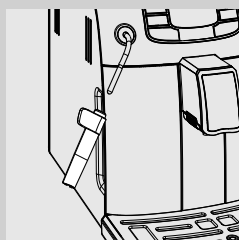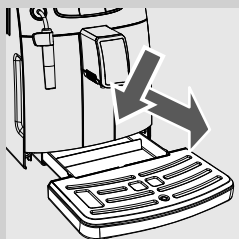

17 When the water tank is empty, remove the water tank, rinse it and fill it up to the MAX level with fresh water. Place it back into the machine.

18 Empty the container and place it back under the dispensing spout.

19 When the amount of water needed for the rinse cycle has been completely dispensed, this icon on the side is displayed. Press the “” button to quit the descaling cycle.

20 The machine automatically primes the circuit.

21 The machine now carries out the warm-up and automatic rinse cycle to prepare for product brewing.

22 Empty the drip tray and place it back.

23 Remove and empty the container.

24 The descaling cycle is now complete.

25 Place back the “INTENZA+” water filter into the water tank if it was installed and the Pannarello.



 
Note:

At the end of the descaling cycle, wash the brew group as described in the “Weekly cleaning of the brew group” chapter.

The two rinse cycles are performed in order to have the circuit cleaned with a preset amount of water to ensure proper machine performance. If the water tank is not filled up to MAX level, the machine might require three or more cycles.

PROGRAMMING


The user can change some of the machine operating settings according to her/his preferences.

Adjustable parameters

Yellow

Coffee temperature

 
This function allows you to adjust the coffee brewing temperature.



Yellow

Timer (stand-by)

 This function allows you to adjust the time until the machine will go into standby mode after the last brewing.



Yellow

Contrast

This function allows you to adjust the contrast of the display to better view the messages.



Yellow

Water hardness

This function allows you to adjust the water hardness setting according to the area where you live.

 
1 = very soft water

2 = soft water

3 = hard water

4 = very hard water

For more details please see the "Measuring and programming water hardness" chapter.




Yellow

"INTENZA+" water filter

This function allows you to manage the "INTENZA+" water filter.

 
For more details, see the chapter related to filter handling.



Yellow

Descaling cycle

 This function allows you to run the descaling cycle.



Yellow

 
Factory settings

This function allows you to reset all factory values.


Programming mode example

In this example, it is shown how to program the display contrast. Proceed in the same way to program the other functions.


The programming menu can only be accessed when the machine is on and shows this display.



Green

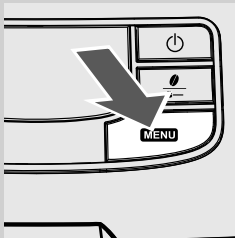


 - 1 Press the "MENU" button to access programming




Yellow

- 2 The first page is displayed.

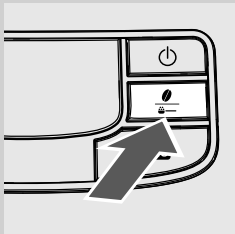


 
- 3 Press the "☕" button to scroll the functions pages until the display contrast function is displayed.




Yellow

 
- 4 Press the "☕" and "☕" buttons to increase or decrease the value of the function.

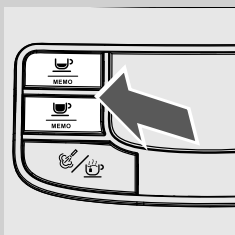





Yellow

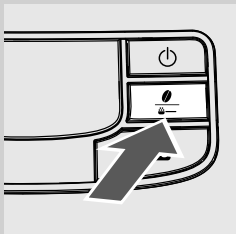

- 5** When the display value is changed, the “OK” message appears. Press the “” button to confirm the change.

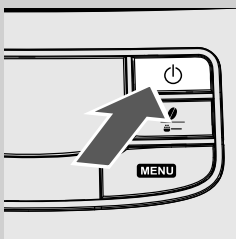

- 6** Press the “” button to exit the programming mode.


**Note:**

 The machine will automatically exit the programming mode if the user does not do anything for 3 minutes. The function's value that were changed but not confirmed won't be saved.


MEANING OF THE DISPLAY SYMBOLS

This machine is equipped with a colour-coded system to make the user's understanding of the display signals easier.
The icons are colour-coded according to the traffic light principle.


Ready Signals (Green Colour)




The machine is ready to brew products.

 

 The machine is ready to brew pre-ground coffee.




Steam or hot water selection.

 


Hot water dispensing.



 Steam dispensing.



 The machine is brewing one cup of espresso .



The machine is brewing one cup of coffee



 
The machine is brewing two cups of espresso.




The machine is brewing two cups of coffee

Ready Signals (Green Colour)


The machine is programming the amount of coffee to be brewed.



 Coffee brewing using pre-ground coffee in progress.

Warning Signals (Yellow Colour)

 
The machine is heating-up to brew beverages or dispense hot water.



The machine is heating-up during beverages programming.



 
The machine performs the rinsing cycle. Wait until the machine has completed the cycle.




The machine needs the "INTENZA+" water filter to be replaced.



 The brew group is being reset due to machine reset.



 Refill the coffee bean hopper with coffee beans and restart the cycle.



Prime the circuit.

 


The machine needs to be descaled. Press the "MEMO" button to enter the descaling menu. Follow the steps described in the "Descaling" chapter of this manual.


If you want to descale later, press the "STOP" button to continue using the machine.

Please note that not descaling your machine will ultimately make it stop working properly. In this case repair is NOT covered under your warranty.

Warning Signals (Red Colour)




Close the service door.

 


Fill the coffee beans hopper.



 
The brew group must be inserted into the machine.



Insert the coffee grounds drawer.

 

 
Empty the coffee grounds drawer and the coffee residues drawer.



 Fully insert the coffee ground drawer before turning the machine off.




 
Fill the water tank.



Turn off the machine. After 30 seconds, turn it on again. Try this 2 or 3 times. If the machine does not start, contact the Philips SAECO hotline in your country. You can find its contact details in the warranty booklet by-packed separately or on www.philips.com/support.

TROUBLESHOOTING



This chapter summarizes the most common problems you could encounter with your machine. If you are unable to solve the problem with the information below, visit **www.philips.com/support** for a list of frequently asked questions or contact the Philips Saeco hotline in your country. You find its contact details in the warranty booklet by-packed separately or on **www.philips.com/support**.

Machine actions	Causes	Solutions
The machine does not switch on.	The machine is not connected to the electric network.	Connect the machine to the electric network.
The drip tray gets filled although no water is drained.	Sometimes water is drained automatically by the machine into the drip tray to manage the rinsing of the circuits and ensure optimum machine performance.	This is seen as normal machine behavior.
The red  icon is always displayed on the machine.	The coffee grounds drawer was emptied with the machine off.	The coffee grounds drawer must always be emptied with the machine on. Wait until the  icon is displayed before refitting the drawer.
Coffee is not hot enough.	The cups are cold.	Preheat the cups with hot water.
No hot water or steam is dispensed.	The hole of the steam wand is clogged.	Clean the hole of the steam wand using a pin. Make sure that the machine is off and cold before performing this operation.
	Pannarello is dirty.	Clean the Pannarello.
Coffee does not have enough crema. (See note)	The blend is unsuitable, coffee is not freshly roasted or the grind is too coarse.	Change coffee blend or adjust the grinder as explained in chapter "Adjusting the ceramic coffee grinder".
The machine takes a long time to warm up or the amount of water dispensed is too little.	The machine circuit is clogged by limescale.	Descale the machine.
The brew group cannot be removed.	The brew group is out of place.	Turn the machine on. Close the service door. The brew group automatically returns to the initial position.
	The coffee grounds drawer is inserted.	Remove the coffee grounds drawer before removing the brew group.
There is a lot of ground coffee under the brew group.	Coffee is not suitable for automatic machines.	It may be necessary to change the type of coffee or the coffee grinder settings.

Machine actions	Causes	Solutions
The machine grinds the coffee beans but no coffee comes out. (See note)	There is no water.	Fill the water tank and prime the circuit (chapter "Using the machine for the first time").
	The brew group is dirty.	Clean the brew group ("Weekly cleaning fo the brew group" chapter).
	The circuit is not primed.	Prime the circuit (chapter "Using the machine for the first time").
	This might occur when the machine is automatically adjusting the dose.	Brew a few cups of coffee as described in chapter "Saeco Adapting System".
	The dispensing spout is dirty.	Clean the dispensing spout.
Coffee is too weak. (See note)	This might occur when the machine is automatically adjusting the dose.	Brew a few cups of coffee as described in chapter "Saeco Adapting System".
Coffee is brewed slowly. (See note)	The coffee grind is too fine.	Change coffee blend or adjust the grind as explained in chapter "Adjusting the ceramic coffee grinder".
	The circuit is not primed.	Prime the circuit (chapter "Using the machine for the first time").
	The brew group is dirty.	Clean the brew group ("Weekly cleaning fo the brew group" chapter).
Coffee leaks out of the dispensing spout.	The dispensing spout is clogged.	Clean the dispensing spout and its holes.

**Note:**

 These problems can be considered normal if the coffee blend has been changed or if the machine has just been installed. In this case wait until the machine performs a self-adjusting operation as described in chapter "Saeco Adapting System".

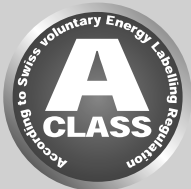ENERGY SAVING**Stand-by**

Black

The Saeco full automatic espresso machine is designed for energy saving-proven by the Class A energy label.

After 30 minutes of inactivity, the machine turns off automatically. If a product has been brewed, the machine performs a rinsing cycle.

In stand-by mode, the energy consumption is below 1Wh.

To turn on the machine, press "I" button (if power button on the back of the machine is set to "I"). If the boiler is cold the machine performs a rinsing cycle.

Disposal

Do not throw away the machine with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

- The packing materials can be recycled.
- Machine: unplug the machine and cut the power cord
- Deliver the appliance and power cord to a service center or public waste disposal facility.

This product complies with EU directive 2002/96/EC.

The symbol on the product or on its packaging indicates that this product may not be treated as household waste.

Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

TECHNICAL SPECIFICATION

The manufacturer reserves the right to make changes to the technical specifications of the product

Nominal Voltage - Power Rating - Power Supply	See label on the inside of the service door
Housing material	Thermoplastic material
Size (w x h x d)	265.5 x 341 x 449 cm
Weight	9 kg
Power Cord Length	1.2 m
Control Panel	On the front
Pannarello	Special for cappuccino
Size of cup	110mm
Water Tank	1.5 liters – Removable type
Coffee Bean Hopper Capacity	300 gr
Coffee grounds drawer capacity	10
Pump pressure	15 bar
Boiler	Stainless steel type
Safety mechanisms	Thermal fuse

GUARANTEE AND SERVICE

Guarantee

For detailed information on your warranty and related conditions, please read the warranty booklet by-packed separately.

Service

We want to ensure that you remain satisfied with your machine. If not done already, please register your product on **www.philips.com/welcome** so that we can stay in contact with you and send you cleaning and descaling reminders.

If you need service or support, please visit the Philips website at **www.philips.com/support** or contact the Philips Saeco hotline in your country. You find its phone number in the warranty booklet by packed separately or on **www.philips.com/support**.

ORDERING MAINTENANCE PRODUCTS

For cleaning and descaling, use Saeco maintenance products only. You can purchase these at the Philips online shop at www.shop.philips.com/service, your local dealer or at authorised service centers. If you have any difficulties obtaining maintenance products for your machine, please contact the Philips Saeco hotline in your country.

You find its contact details in the warranty booklet by-packed separately or on www.philips.com/support.

Overview of maintenance products


- Decalcifier CA6700



- INTENZA+ Water Filter CA6702




- Grease HD5061

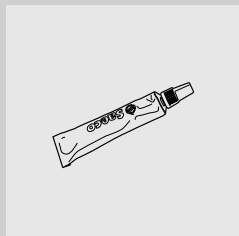

- Coffee Oil Remover CA6704




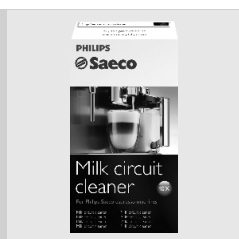


- Milk Circuit Cleaner: CA6705



  - Maintenance Kit CA 6706







The manufacturer reserves the right to make changes without prior notice.

www.philips.com/saeco



421946009441

Rev.00 del 15-02-14