

EN

- ① Steamer head
② Steam supply hose
③ Steamer head holder
④ Hanger
⑤ Pole lock clip
⑥ Pole
- ⑦ Steam dial
⑧ Base
⑨ De-calc knob
⑩ Water tank
⑪ Glove

MS

- ① Kepala penstim
② Hos bekalan stim
③ Pemegang kepala penstim
④ Penggantung
⑤ Klip pengunci dirian
⑥ Dirian
- ⑦ Tombol stim
⑧ Tapak
⑨ Tombol pembersihan kerak
⑩ Tangki air
⑪ Sarung tangan

TH

- ① หัวต้มน้ำ
② สายไฟ
③ หัวต้มน้ำ
④ ไม้ผ้าเช็ด
⑤ คัมภีร์กลิ่น
⑥ เล้า
- ⑦ ปุ่มควบคุมพื้นที่
⑧ ถ่าน
⑨ ฝา De-calc
⑩ ผ้าห่มน้ำ
⑪ ถุงมือ

VI

- ① Đầu bùi ủ hơi nước
② Ông cắp hơi phun
③ Kẹp giữ đầu bùi ủ hơi nước
④ Giá treo
⑤ Kèm khóa
⑥ Trụ đứng
- ⑦ Núm điều chỉnh hơi phun
⑧ Đế
⑨ Núm De-Calc
⑩ Ngăn chứa nước
⑪ Gang tay

TC

- ① 蒸氣噴頭
② 蒸氣膠管
③ 蒸氣噴頭固定座
④ 衣架
⑤ 掛鎖鎖定夾
⑥ 掛桿
- ⑦ 蒸氣控制鈕
⑧ 底座
⑨ 除鈣旋鈕
⑩ 水箱
⑪ 手套


SC

- ① 蒸汽喷头
② 蒸汽输送管
③ 蒸汽喷头支架
④ 衣架
⑤ 衣架锁夹
⑥ 衣架杆
- ⑦ 蒸汽旋钮
⑧ 基座
⑨ 除垢旋钮
⑩ 水箱
⑪ 防烫手套

KO

- ① 스팀 헤드
② 스팀 호스
③ 스팀 헤드 홀더
④ 걸걸이
⑤ 물 절개 클립
⑥ 팔
- ⑦ 스팀 조절기
⑧ 반침대
⑨ 석회제거 조절기
⑩ 물탱크
⑪ 장갑

EN

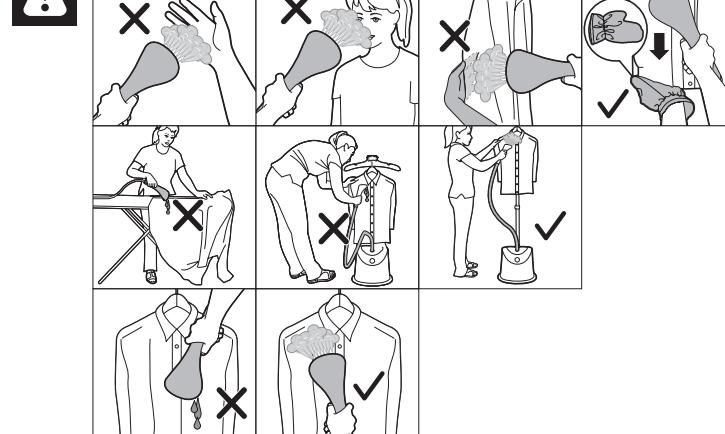

English

Introduction
Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Important
Read this important information before you use the appliance and save it for future reference.

Danger

- Never immerse the appliance in water or any other liquid, nor rinse it under the tap.

Warning

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.

Do not use the appliance if the plug, mains cord or the appliance itself shows visible damage, or if the appliance has been dropped or leaks.

- Do not connect the appliance to a direct current supply.

- Always return the appliance to a service centre authorised by Philips for examination or repair. Do not attempt to repair the appliance yourself, otherwise the guarantee becomes invalid.

- If the mains cord is damaged you must have it replaced by Philips, a service centre authorized by Philips or similarly qualified persons in order to avoid a hazard.

- Never leave the appliance unattended when it is connected to the mains.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.