

PHILIPS

DE3203



ZH-S **用户手册** 1

EN **User manual** 18



目录

1 重要事项	2	7 存放	15
安全	2		
2 您的空气除湿机	5	8 故障排除	16
产品概述	5		
控件概述	6	9 保修与服务	17
		订购部件或附件	17
3 使用入门	7	10 注意事项	17
首次使用之前	7	电磁场 (EMF)	17
放置除湿机	7	回收	17
使用香薰功能	7		
4 使用除湿机	8		
湿度指示灯	8		
打开和关闭	8		
设置湿度级别	9		
选择自动模式	9		
更改风速	10		
选择干衣模式	10		
使用摆风功能	10		
设置定时器	11		
除湿机除霜	11		
使用灯光开/关功能	11		
5 排空除湿机	12		
倒空水箱	12		
使用连续排水口	12		
6 清洁	13		
清洁除湿机的机身	13		
清洁水箱	13		
清洁机身后盖	14		

1 重要事项

安全

使用除湿机之前，请仔细阅读本用户手册，并妥善保管以备日后参考。

危险

- 切勿将任何可燃材料（例如杀虫剂或香水）喷到除湿机周围，以免发生触电和/或火灾。
- 请勿饮用积水，也不要用于其喂养动物或浇灌植物。清空水箱，将水倒入水槽。

警告

- 在将产品接通电源以前，首先确认产品背面或底部所标示的电压是否与当地的电压相符。
- 将除湿机连接至专用电源插座，切勿通过延长线连接，以防止发生火灾危险和/或触电。
- 如果电源软线损坏，为避免危险，必须由制造厂或其维修部或类似的专职人员来更换。
- 如果插头、电源线或产品本身受损，请勿再使用本产品。

- 本产品不可由肢体残障、精神障碍或缺乏相关经验和技能的人（包括儿童）使用，除非有负责安全的人员对他们进行产品使用的相关指导或说明，方可使用本产品。
- 应照看好儿童，确保他们不玩耍本产品。
- 请勿通过插上或拔下电源线来启动或停止除湿机。
- 请勿堵塞进风和出风口，例如不要将物体放置在出风口上或进风口前方。
- 请勿将手指或其他物体插入进风口和出风口，以防发生人身伤害或出现产品故障。
- 如果您对精油过敏，请勿使用香薰功能。
- 如果您有呼吸系统问题，不建议使用香薰功能。
- 如果您在使用香薰功能时感觉不适，请立即停止此功能。
- 婴儿、孕妇或哺乳期的女性请勿使用香薰功能。
- 不建议使用精油以外的物质。
- 本产品只能用于用户手册中所示的预期用途。

警告

- 请勿频繁开关本产品。
- 如果连接除湿机的电源插座接触不良，则除湿机的插头可能会变得很热。确保除湿机所连接的电源插座接触良好。
- 一定要在干燥、稳固、平整且水平的表面上放置和使用除湿机。
- 除湿机的后侧及两侧均要留出至少 40 厘米的空间，上方至少要留出 60 厘米的空间。通风不足可能导致过热或发生火灾危险。
- 当您使用室内烟雾式驱虫剂或在充满油污、燃烧的香或化学烟雾的地方时，请勿使用本除湿机。
- 请勿在阳光直射处操作或存放除湿机。
- 请勿在气体用具、加热装置或火炉附近使用除湿机。
- 请勿在浴室或可能会接触水的其他地方使用或用水清洗除湿机。
- 用除湿机吹干衣物时，请将衣服挂在远处，使水滴不会滴到除湿机上。
- 本除湿机仅限于家用并在正常运行条件下使用 (5°C-35°C)。
- 请勿在温度变化较大的房间内使用除湿机。
- 将电源线置于地毯、小地毯或滑槽下。将电线远离可能会造成绊倒的区域。
- 确保已正确安装水箱，然后再打开除湿机。
- 切勿触摸摇摆式摆叶。
- 请勿用硬物敲击除湿机（尤其是进风口和出风口）。
- 使用之后和在您移动或清洁产品之前，务必先将除湿机的电源插头拔掉。
- 排出水箱中的水之前，先关闭电源并拔下除湿机的电源插头。否则，可能导致漏水漏电。
- 切勿让除湿机跌落，否则可能会造成人身伤害，因水溢出损坏地板或家居用品。
- 请勿在除湿机上放置任何物品。
- 请勿站、坐或靠在除湿机上。否则会导致除湿机翻倒，对人体造成伤害。
- 请勿移除或拆下水箱中的浮子；否则，除湿机无法检测水箱是否已满，可能导致漏水。
- 请勿使用去污剂、清洁剂、磨蚀性粉末、经过化学处理的抹布、汽油、苯、稀释剂或其他溶剂，否则可能会损坏除湿机或水箱。否则，可能导致漏水。

- 水箱中可能会生长霉菌，每周用自来水清洗一次。然后，用柔软的干布擦净。
- 如果打算较长时间不使用除湿机，确保所有部件清洁且干燥。
- 请勿将除湿机用于食品保鲜、艺术品或科研工作。
- 请勿让除湿机的气流长时间正对着身体，尤其是无法使用湿度调节功能的人。
例如：婴儿、儿童或老人。
否则可能会损坏身体状况并导致脱水。
- 在易受干燥空气影响的墙壁、家具和艺术品处要小心使用除湿机。
- 切勿将产品直接放在空调下方，以防冷凝水滴到产品中，引起短路或漏电。
- 请勿在温度变化较大的房间内使用除湿机，因为这可能导致除湿机内部的冷凝。
- 为防止产生干扰，产品与使用无线电波的电器（例如电视机、收音机和无线电控制时钟）之间至少应保持 2 米距离。
- 本产品不能去除一氧化碳 (CO) 或氡 (Rn)，因此在发生燃烧和危险化学品事故时，不能作为安全设备使用。
- 切勿通过拖拽电源线来移动产品。

- 本产品不能替代正常通风、日常吸尘或者在烹饪时使用的抽油烟机。
- 请勿坐在或站在产品上面。
产品配有万向轮。坐在或站在产品上方可能引发人身伤害。

保险丝规格：

2010 T1.6A 250V~


2010 T5.0A 250V~

2 您的空气除湿机

感谢您的惠顾，欢迎光临飞利浦！


为了您能充分享受飞利浦提供的支持，请在以下网站注册您的产品：
www.Philips.com/welcome。

产品概述

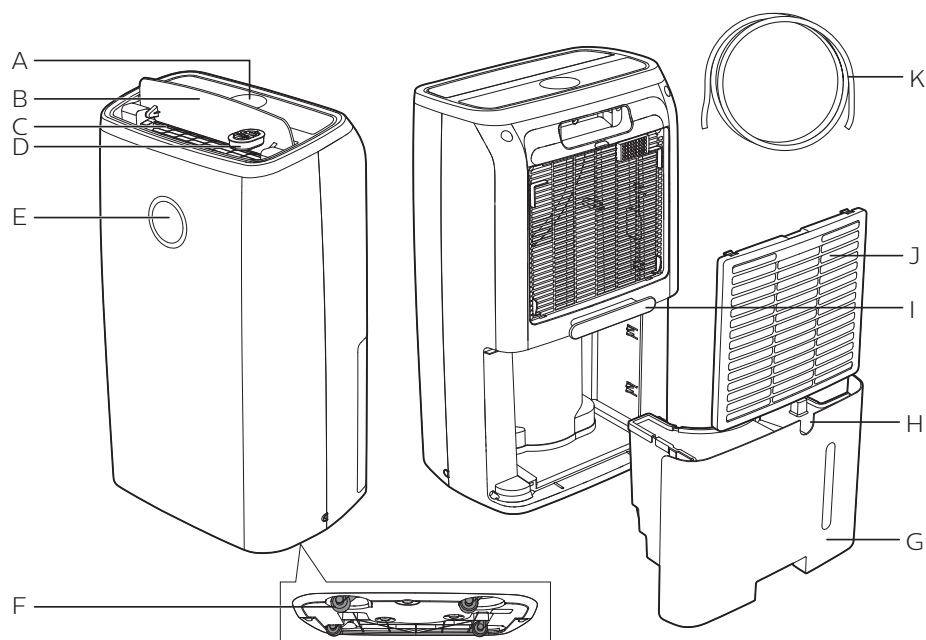

A	显示面板	G	水箱
B	摆叶	H	连续排水口
C	出风口	I	电源线绕线手柄
D	香薰盒	J	后盖
E	湿度指示灯	K	软管
F	万向轮		

控件概述

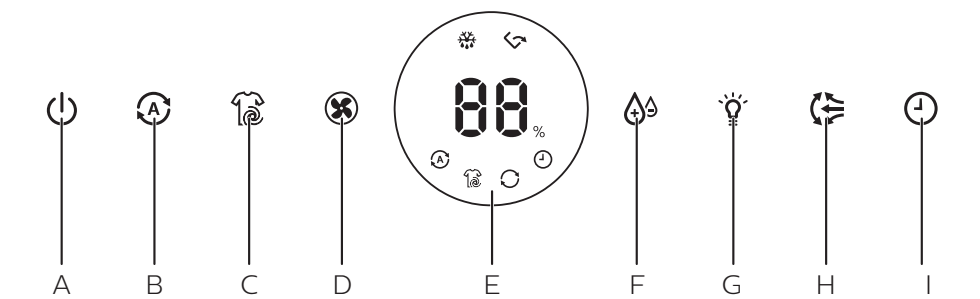

A	开/关按钮	F	湿度设定按钮
B	自动模式按钮	G	灯光开/关按钮
C	干衣模式按钮	H	自动摆风按钮
D	风速设定按钮	I	定时器
E	显示屏		

显示面板

	自动除霜指示灯		干衣模式图标
	水箱满水提醒		持续除湿模式图标
	自动模式图标		定时器指示灯

3 使用入门

首次使用之前

使用本产品前，请先除去所有包装材料。

注意

- 先将除湿机放置水平再使用。

放置除湿机

为了提高除湿效率，请将除湿机放在可抽取大部分空气的位置。

注意


- 除湿机运行时，请勿打开外面的门窗。

使用香薰功能


注意

- 本产品仅提供香薰盒，所需精油不在本产品提供范围之内。请自行购买并使用精油。
- 使用香薰功能之前请仔细阅读精油用户手册。
- 确保先将除湿机的电源断开，然后再将精油滴入香薰盒。
- 如果您有呼吸系统问题，不建议使用香薰功能。
- 如果您对精油过敏，请勿使用香薰功能。
- 如果您在使用香薰功能时感觉不适，请立即停止此功能。
- 婴儿、孕妇或哺乳期的女性请勿使用香薰功能。
- 不建议使用精油以外的物质。


- 1 从产品的顶部取下香薰盒。

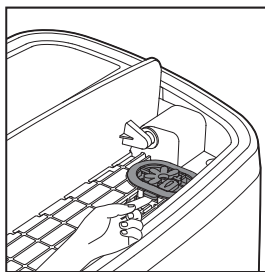


- 2 取下香薰盒的盖子。

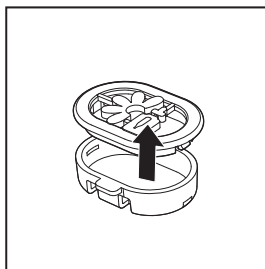


- 3 拆下香薰棉片的包装材料，然后取一片放入香薰盒内。

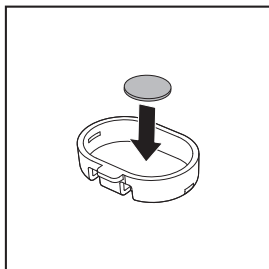

- 4 滴 2-3 滴精油到香薰棉片上。

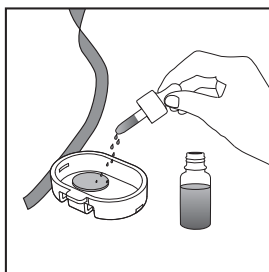

- 5 盖上香薰盒的盖子，然后将其放回除湿机顶部。

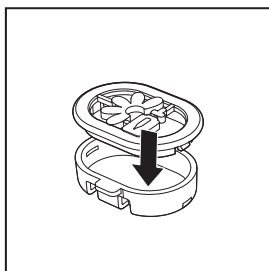

4 使用除湿机

湿度指示灯

湿度指示灯颜色	环境湿度级别
蓝色	≤5（与预设湿度级别相比，环境湿度级别较低）
紫色	6-15（与预设湿度级别相比，环境湿度级别适中）
红色	>15（与预设湿度级别相比，环境湿度级别较高）

产品打开后，湿度指示灯会自动亮起，并按顺序亮起所有颜色。片刻后，湿度传感器会选择与周围湿度相对应的颜色。

打开和关闭

注意


- 为了达到最佳效果，请关闭门窗。
- 使窗帘远离进风口或出风口。
- 为了达到最佳除湿效果，请将除湿机放在平稳的表面。
- 开启除湿机之前，请检查电源电压是否与印在除湿机上的电压匹配。

- 1 将除湿机的插头插入墙面插座。
↳ 除湿机会发出蜂鸣音。
- 2 轻触  按钮一次打开设备。
↳ 屏幕将显示当前湿度级别。
↳ 测量环境湿度级别后，湿度传感器会自动选择湿度指示灯的颜色。
↳ 除湿机进入自动模式。
- 3 轻触并按住  3 秒可关闭除湿机。

设置湿度级别

您可以将所需的湿度级别设置为40%、50%、60%、70%或--。

- 一次或多次轻触  按钮可设置所需的湿度级别，然后湿度指示灯将亮起。

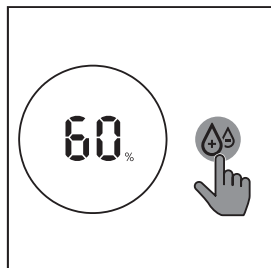

注意

- 当湿度降低至所需级别，除湿机会自动停止对空气除湿，但风扇会继续工作。
- 如果不设置湿度级别，则默认相对湿度为 60%。


提示

- 舒适湿度介于RH 40% 到RH 60% 之间。

持续除湿模式


在持续除湿  模式下，产品将以最佳除湿设置连续工作。

- 反复轻触  按钮选择持续除湿模式。
↳ 屏幕上显示 -- 和 .

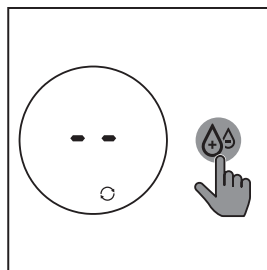


选择自动模式

- 轻触自动模式按钮  可选择自动模式。
↳ 屏幕上显示 .
- ↳ 屏幕上显示当前湿度级别。

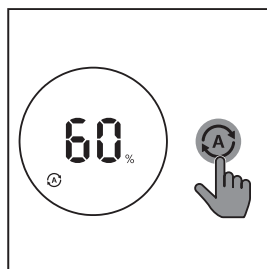


更改风速

- 反复轻触风速设定按钮  可选择您需要的风速（1、2 或 3）。

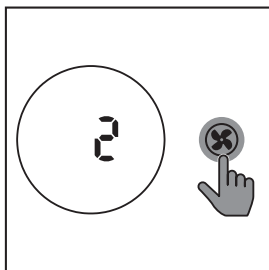

选择干衣模式

- 轻触  按钮可选择干衣模式。
 - 除湿机进入干衣模式。
 - 除湿机将以最高风扇速度运转。
 - 屏幕上显示 .

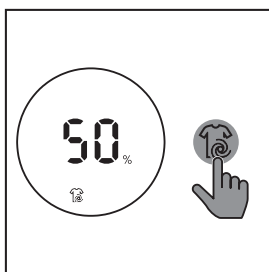

注意

- 请勿让除湿机的气流长时间正对着身体，尤其是无法使用湿度调节功能的人。
- 使用除湿机吹干衣物时，请将衣服挂在远处，使水滴不会滴到除湿机上。
- 确保衣物不会挡住进风口和出风口。
- 确保在安全的地方吹干衣物，防止水滴阻塞进风口和出风口。


提示

- 调整摆叶，直至气流直接对准衣物，以便更有效地吹干衣物。

使用摆风功能

出风口摆风可以最高接 90 度摇摆。使用摆风功能调整气流方向。

- 轻触  按钮可启动摆风功能。

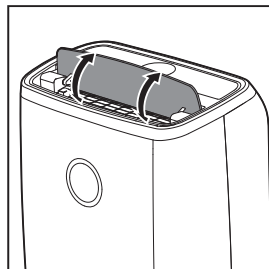

- 再次轻触  按钮可停用摆风功能。


提示

- 产品开启后，将摆叶向上可提高除湿效率。

设置定时器

使用定时器功能，您可设定除湿机运行的小时数。到达设定的时间时，除湿机将自动关闭。定时器的设置范围为1至9小时。

1 轻触  按钮启用定时器功能。

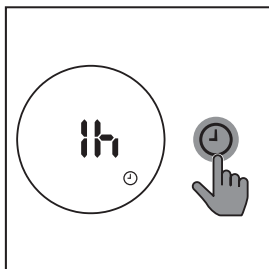

2 反复轻触  按钮可选择您想要除湿机运行的小时数。

- 要停用定时器功能，请反复轻触  按钮，直至屏幕上显示 --。

除湿机除霜


注意

- 只有除湿机在除湿模式下运行时，除霜功能才会启用。

除湿机配有除霜传感器，可确保其在寒冷天气中使用时处于最佳状态。除湿机可自动检测是否需要除霜。

需要除霜时：

- ↳  指示灯亮起。
- ↳ 除霜功能将开始启动，并一直持续，直至除湿机彻底除霜完成。

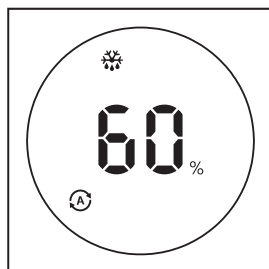

注意

- 除霜期间，除湿机将以干衣模式运行。
- 除霜完成后，除湿机将恢复运行，并以先前的设置运行。

使用灯光开/关功能

借助灯光开/关按钮，您可以打开或关闭湿度指示灯或显示屏。


- 1 轻触灯光开/关按钮  一次，湿度指示灯将熄灭。
- 2 再次轻触灯光开/关按钮 ，显示屏将变暗。
- 3 第三次轻触灯光开/关按钮 ，所有指示灯都将重新亮起。

5 排空除湿机


倒空水箱

水箱已满时：


- 产品发出蜂鸣声，↻ 指示灯点亮。

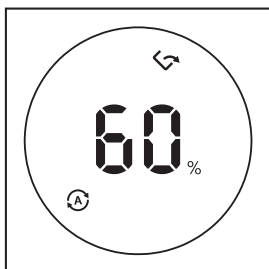


- 1 握住水箱凹槽，将其从除湿机上取下。

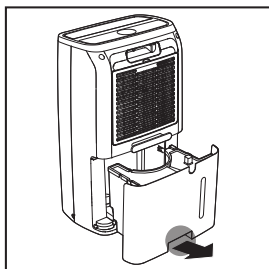


- 2 打开水箱盖并 将水倒入水槽。

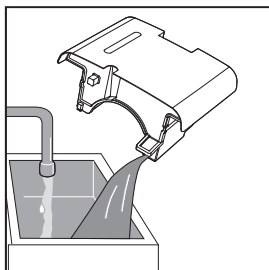

- 3 用干净的布将水箱外侧擦干。

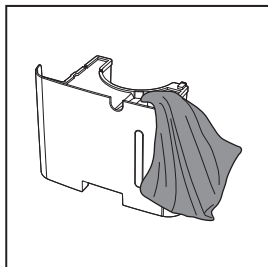

- 4 将水箱放回除湿机。

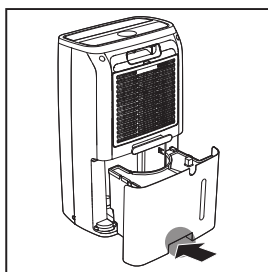


注意

- 倒空水箱后，除湿机会继续工作。


使用连续排水口

除湿机也可以通过安装软管来排水。这样您无需倒空水箱，就能操作除湿机。


- 1 关闭除湿机，从墙面插座上拔下插头。
- 2 从除湿机中取出水箱。

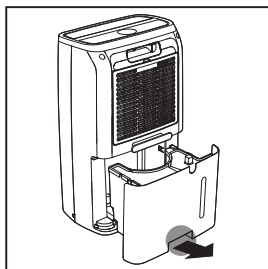

3 将软管连接至排水口。

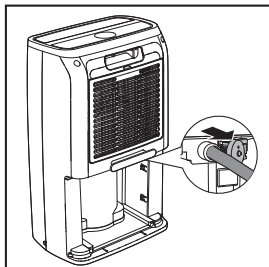

4 将水箱放回除湿机。

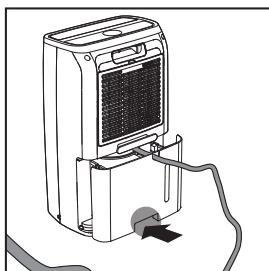

注意

- 即使使用连续排水，也请将水箱放回除湿机，否则除湿机可能无法正常运行。
- 确保软管安装牢固，以使除湿机不会漏水。
- 使用连续排水时，要确保将软管放平，不打结。
- 确保软管未浸入水中，也不要高于连续排水口。
- 将软管的出口放在可方便排水的地方。
- 连续排水或长时间无人看管时，请每周检查一次除湿机。

6 清洁

注意

- 清洁前，请务必关闭产品，并从电源插座上拔下产品的插头。
- 切勿将本产品浸入水中或任何其它液体中。
- 切勿使用研磨性或腐蚀性清洁剂（例如漂白剂或酒精）清洁本产品的任何部件。
- 机身后盖可清洗。

清洁除湿机的机身


定期清洁除湿机的内侧和外侧，防止灰尘积聚。

- 1 使用柔软的干布清洁产品的内部和外部。
- 2 出风口也可用柔软的干布进行清洁。


清洁水箱

每天清洁水箱，使其保持洁净。

- 1 关闭除湿机，从电源插座上拔下插头。
- 2 从除湿机中取出水箱。

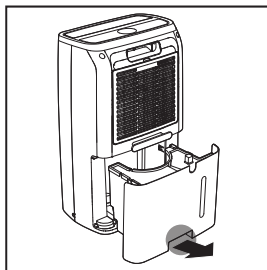


- 3 打开水箱盖并向水箱中注入三分之一的水。

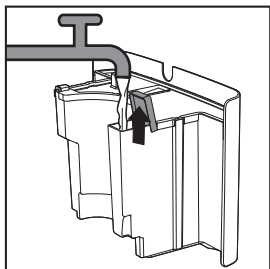


- 4 向水箱里的水中添加一些温和的洗涤剂。


- 5 使用自来水清洗水箱，并用干净的软布对其内部进行清洁。

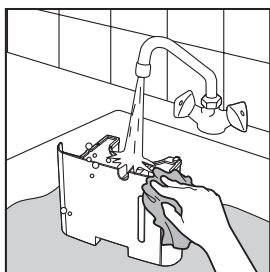

- 6 用干净的布将水箱外侧擦干。

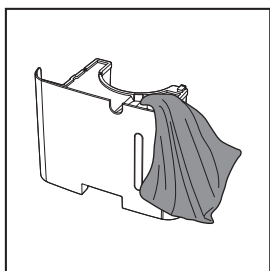

- 7 将水箱放回除湿机。

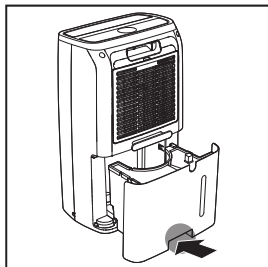


清洁机身后盖

必要时清洁机身后盖，使其保持洁净。


注意

- 机身后盖可清洗，也可用吸尘器清洁。


- 1 关闭除湿机，从电源插座上拔下插头。
- 2 拉开机身后盖，并将其从除湿机上取下。

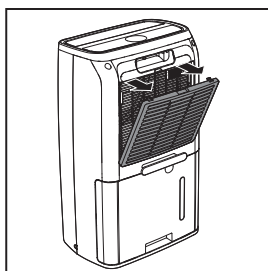

- 3 如果机身后盖很脏，请使用软刷清除上面的灰尘。使用自来水冲洗机身后盖。

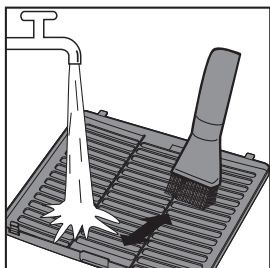

- 4 待机身后盖完全晾干后，再将其装回除湿机中。
- 5 将机身后盖重新安装在产品上。

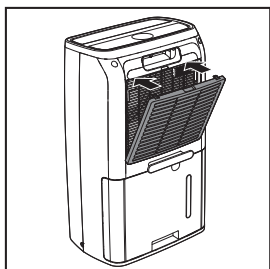

- 6 将除湿机的插头插入墙面插座。
- 7 清洁机身后盖后，彻底清洗双手。

7 存放

- 1 关闭空气除湿机，从墙面插座上拔下插头。
- 2 清洁除湿机、倒空水箱并清洗机身、后盖（请参阅“清洁”一章）。
- 3 待所有部件完全晾干后再进行存放。
- 4 将除湿机存放在阴凉干燥处。

8 故障排除

本章归纳了您在使用除湿机时最常遇到的问题。如果根据以下信息无法解决问题，请访问 www.philips.com/support 或与您所在国家/地区的客户服务中心联系，以寻求帮助。

问题	可能的解决方法
即使将本产品的插头插入墙面插座并开机，产品仍然无法工作。	• 定时器已设置为特定时间间隔。重置或关闭定时器。 • 尝试使用其他电源插座或检查墙壁开关。 • 确保水箱已倒空并正确放置于除湿机中。
水箱已空，但是  指示灯仍然亮起。	• 将水箱从除湿机中取出，然后重新放回除湿机。
房间内无空气除湿机，或者除湿效果很差。	• 确保进风口和出风口未被堵塞。 • 室内湿度低于除湿机所设置的湿度。选择更低的湿度。 • 确保未打开外面的门窗。 • 房间里当前温度较低。请重试，直至温度上升。
除湿机漏水。	• 确保除湿机状态良好，水箱未破裂。
除湿机无法采集水分。	• 湿度过低。湿度增加后，除湿机将自动恢复工作。 • 温度过低。等到温度上升。
出风口排出的气流比之前明显减弱。	• 机身后盖很脏。清洁机身后盖（请参阅“清洁”一章）。
除湿机产生难闻的气味。	• 前几次使用除湿机时，它可能会产生塑料味。这是正常的。 • 如果除湿机发出烧焦的气味，请关机并从电源插座上拔下插头。请与您所在国家/地区的客户服务中心联系，以取得帮助。
除湿机声音很响。	• 如果除湿机声音过大，请将风扇速度更改为较低的风扇速度级别。夜间在卧室里使用本产品时，请选择较低的风扇速度。 • 确保将除湿机置于水平、稳固的表面上。
屏幕上显示 "E3"、"E4" 或 "E5" 错误代码。	• 除湿机出现故障。请与您所在国家/地区的客户服务中心联系。

9 保修与服务

如果需要信息或有任何疑问，请访问飞利浦网站：www.philips.com 请联系您所在国家/地区的飞利浦客户服务中心（可在全球保修卡中找到飞利浦客户服务中心的电话号码）。如果您所在的国家/地区没有飞利浦客户服务中心，请向当地的飞利浦经销商求助。

订购部件或附件

如果您必须更换部件或需要购买额外的部件，请联系您的飞利浦经销商或访问 www.philips.com/support。

如果获取部件有问题，请与您所在国家/地区的飞利浦客户服务中心联系（可在全球保修卡中找到其电话号码）。

10 注意事项

电磁场 (EMF)

本飞利浦产品符合所有有关暴露于电磁场的适用标准和法规。

符合 EMF 标准

Koninklijke Philips N.V. 主要面向广大消费者制造和销售各类产品，包括通常能发射和接收电磁信号的各种电子设备。

飞利浦的主要经营原则之一就是要对我们的产品采取各种必要的健康和安全措施，符合所有相应的法律要求，并在生产产品时严格遵照 EMF 标准。

飞利浦致力于开发、生产和销售对人体健康无任何危害的产品。飞利浦确认，据目前的科学证明，如果其产品使用得当，则对人体毫无危害。

长期以来，飞利浦始终在国际 EMF 和安全标准的制定工作中扮演着积极的角色，这就使飞利浦总能预知标准的发展趋势，并率先应用到其产品中去。

回收

弃置产品时，请不要将它与一般生活垃圾一同丢弃，应将其交给官方指定的回收中心。这样做有利于环保。

请遵循您所在国家/地区的电器及电子产品分类回收规定。正确弃置产品有助于避免对环境和人类健康造成负面影响。

Contents

1 Important	19	6 Cleaning	33
Safety	19	Cleaning the body of the dehumidifier	33
2 Your Air Dehumidifier	23	Cleaning the water tank	34
Product Overview	23	Cleaning the back cover	35
Controls Overview	24	7 Storage	36
3 Getting started	25	8 Troubleshooting	37
Before first use	25	9 Guarantee and service	39
Positioning the dehumidifier	25	Order parts or accessories	39
Using the aroma function	25	10 Notices	39
4 Using the dehumidifier	27	Electromagnetic fields (EMF)	39
The humidity light	27	Recycling	40
Turning on and off	27		
Setting the humidity level	28		
Selecting the Auto mode	28		
Changing the fan speed	29		
Selecting laundry drying mode	29		
Using the swing function	30		
Setting the Timer	30		
Defrosting the dehumidifier	30		
Using the light on/off function	31		
5 Draining the dehumidifier	31		
Emptying the water tank	31		
Using the continuous drainage	32		

1 Important

Safety

Read this user manual carefully before you use the dehumidifier, and save it for future reference.

Danger

- Do not spray any flammable materials such as insecticides or fragrance around the dehumidifier to avoid electric shock and/or a fire hazard.
- Do not drink the accumulated water, use it to feed animals, nor to water plants. Empty the water tank, and pour the water down the drain.

Warning

- Check if the voltage indicated on the bottom or indicated at the rear of the appliance corresponds to the local power voltage before you connect the appliance.
- Connect the dehumidifier to the power socket exclusively, and do not connect it through an extension cord to prevent fire hazard and/ or electric shock.

- If the power cord is damaged, you must have it replaced by Philips, a service center authorized by Philips, or similarly qualified persons in order to avoid a hazard.
- Do not use the appliance if the plug, the power cord, or the appliance itself is damaged.
- This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not start or stop the dehumidifier by plugging and unplugging the power cord.
- Do not block the air inlet and outlet, e.g. by placing items on the air outlet or in front of the air inlet.

- Do not insert your fingers or objects into the air inlet and outlet to prevent physical injury or product malfunction.
- Do not use the aroma function if you are allergic to essential oils.
- It is suggested not using the aroma function if you have respiratory issues.
- If you feel unwell during the use of the aroma function, stop this function immediately.
- Do not use the aroma function for infants, pregnant women or women in lactation period.
- It's not recommended to use substances other than essential oils.
- This appliance can only be used for the intended purpose shown in the user manual.

Caution

- Do not turn the appliance on and off frequently.
- If the power socket used to power the dehumidifier has poor connections, the plug of the dehumidifier becomes hot. Make sure you plug the dehumidifier

into properly connected power socket.

- Always place and use the dehumidifier on a dry, stable, level, and horizontal surface.
- Leave at least 40 cm free space behind and on both sides of the dehumidifier and leave at least 60 cm free space above it. Insufficient ventilation may cause overheating or fire hazard.
- Do not use this dehumidifier when you have used indoor smoke-type insect repellents or in places with oily residues, burning incense, or chemical fumes.
- Do not operate or store the dehumidifier under direct sunlight.
- Do not use the dehumidifier near gas appliances, heating devices or fireplaces.
- Do not use the dehumidifier in a bathroom or other places where it is likely to come in contact with water, or wash it with water.

- When you use the dehumidifier for drying laundry, hang your clothes from a distance where water droplets will not drip onto the dehumidifier.
- The dehumidifier is only intended for household use under normal operating conditions (5°C - 35°C).
- Do not use the dehumidifier in a room with major temperature changes.
- Run the power cord under carpeting, rugs, or runners. Arrange the cord away from areas where it may be tripped over.
- Make sure the water tank is properly installed before you switch on the dehumidifier.
- Do not touch the swing louver.
- Avoid knocking against the dehumidifier (the air inlet and outlet in particular) with hard objects.
- Always unplug the dehumidifier after use and before you move or clean it.
- Power off and unplug the dehumidifier before draining the water from the tank. Otherwise, this may result in water leakage or electricity leakage.
- Do not drop the dehumidifier as this may cause personal injury, and damage to the floor or household items as a result of water spillage.
- Do not place anything on top of the dehumidifier.
- Do not stand on, sit on, or lean against the dehumidifier. This may cause the dehumidifier to tip over causing injury.
- Do not remove or dismantle the float in the tank; otherwise, the dehumidifier cannot detect when the tank is full and could result in water leakage.
- Do not use detergents, cleaning agents, abrasive powders, chemically treated dusters, gasoline, benzene, thinners or other solvents, as they can damage the dehumidifier or the water tank. This may result in water leakage.
- Mildew may form in the water tank, clean it every week with tap water. Then, wipe with a soft, dry cloth.

- If you do not use the dehumidifier for an extended period of time, make sure all parts are clean and dry.
- Do not use the dehumidifier for food preservation, art or scientific works.
- Do not point the airflow of the dehumidifier directly at the body for a prolonged period of time, especially where there is someone who is unable to use the humidity adjustment function. For instance: infant, child, or elderly person. This may harm the physical condition and lead to dehydration.
- Use the dehumidifier with cautions where the walls, furniture, and art works are vulnerable to dry air.
- Do not place the appliance directly below an air conditioner to prevent condensation from dripping onto the appliance which will cause short circuit and leakage of electricity.
- Do not use the dehumidifier in a room with major temperature changes, as this may cause condensation inside the dehumidifier.
- To prevent interference, place the appliance at least 2m away from electrical appliances that use airborne radio waves such as TVs, radios, and radio-controlled clocks.
- The appliance does not remove carbon monoxide (CO) or radon (Rn). It cannot be used a safety device in case of accidents with combustion processes and hazardous chemicals.
- Never move the appliance by pulling the power cord.
- This appliance is not a substitute for proper ventilation, regular vacuum cleaning, or use of an extractor hood or fan while cooking.
- Do not sit or stand on the appliance. The appliance is equipped with omni wheels. Sitting or standing on the appliance may lead to potential injury.

Fuse Specification:

2010 T1.6A 250V~


2010 T5.0A 250V~

2 Your Air Dehumidifier

Congratulations on your purchase, and welcome to Philips!


To fully benefit from the support that Philips offers, register your product at www.Philips.com/welcome.

Product Overview

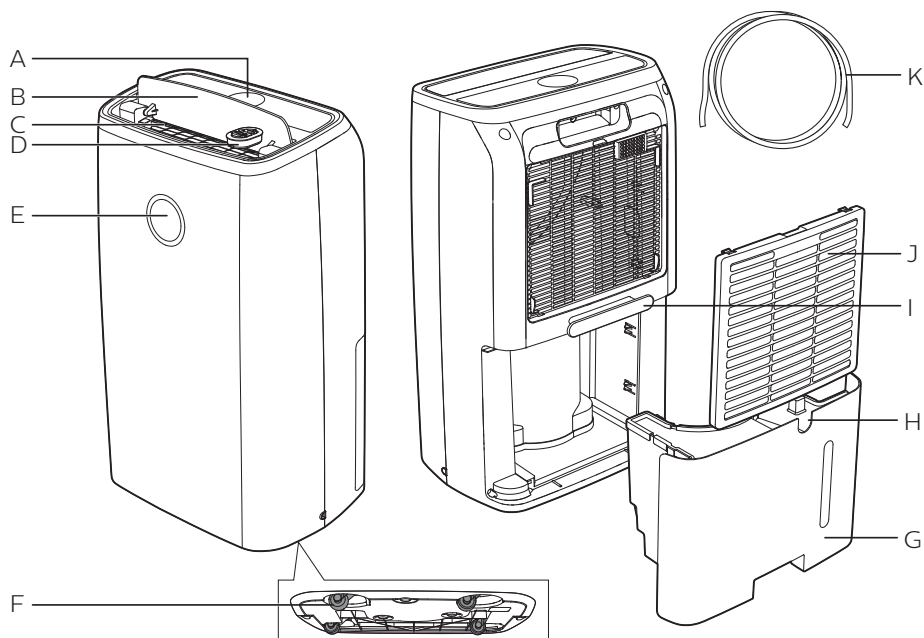

A	Display panel	G	Water tank
B	Louver	H	Continuous drainage outlet
C	Air outlet	I	Power cord wrapping handle
D	Aroma box	J	Back cover
E	Humidity indication light	K	Hose
F	Omni wheels		

Controls Overview

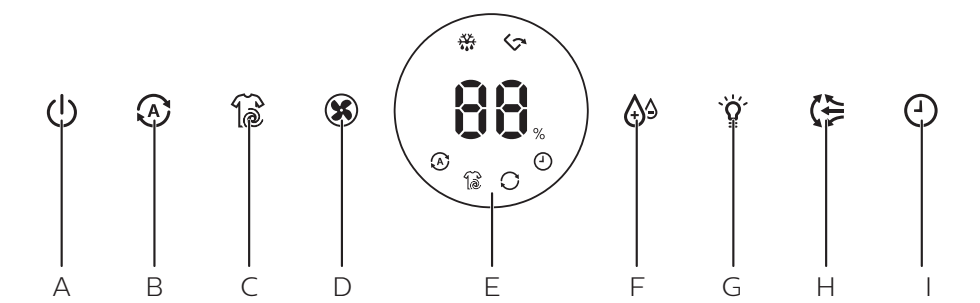

A	On/off button	F	Humidity setting button
B	Auto mode button	G	Light on/off button
C	Laundry drying mode button	H	Auto swing button
D	Fan speed button	I	Timer button
E	Display screen		

Display panel

	Auto defrosting indicator		Laundry drying mode icon
	Water tank full alert		Continuous mode icon
	Auto mode icon		Timer indicator

3 Getting started

Before first use

Before using the appliance, remove all packaging materials.

Note

- Before using the dehumidifier, place it horizontally.

Positioning the dehumidifier

To increase the dehumidifying effectiveness, position the dehumidifier in a location that can draw the most air.

Note


- When the dehumidifier is operating, do not open exterior doors or windows.

Using the aroma function


Note

- Only the aroma box is provided, the essential oils are not included. Please purchase and use the essential oils if needed.
- Read the user manual of essential oils carefully before using the aroma function.
- Make sure the dehumidifier is disconnected with power before dropping essential oils into the aroma box.
- It is suggested not using the aroma function if you have respiratory issues.
- Do not use the aroma function if you are allergic to essential oils.
- If you feel unwell during the use of the aroma function, stop this function immediately.
- Do not use the aroma function for infants, pregnant women or women in lactation period.
- It's recommended not to use substances other than essential oils.


- 1 Remove the aroma box from the top of the appliance.

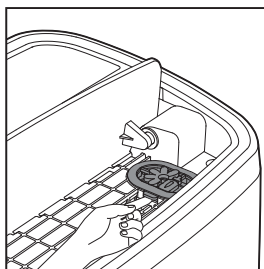


- 2** Remove the cover of the aroma box.

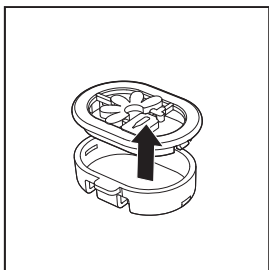


- 3** Remove the packing materials of the aroma pads and put one piece of pads into aroma box.

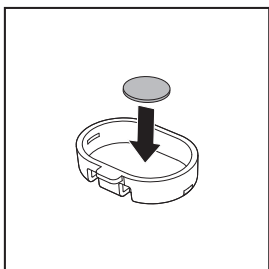

- 4** Drop in 2-3 drops of essential oils to the aroma pad.

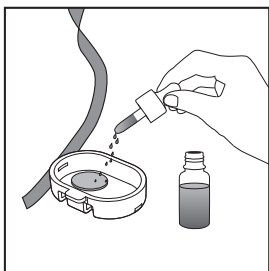

- 5** Close the cover of the aroma box and put it back onto the top of the dehumidifier.

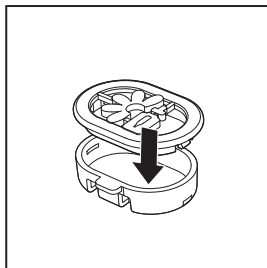

4 Using the dehumidifier

The humidity light

Humidity light color	Ambient humidity level
Blue	≤5 (Lower ambient humidity level compared with preset humidity level)
Purple	6-15 (Medium ambient humidity level compared with preset humidity level)
Red	>15 (Higher ambient humidity level compared with preset humidity level)

The humidity light automatically goes on when the appliance is switched on, and lights up all colors in sequence. In a short time the humidity sensors select the color that corresponds to the surrounding humidity.

Turning on and off

Note


- For optimum performance, close doors and windows.
- Keep curtains away from the air inlet or air outlet.
- For optimum dehumidification efficiency, place the dehumidifier in a flat, stable surface.
- Before turning on the dehumidifier, check if the power voltage corresponds to the voltage printed on the dehumidifier.

- 1 Put the plug of the dehumidifier in the wall outlet.
↳ The dehumidifier beeps.
- 2 Touch the  button once to turn on the appliance.
↳ The current humidity level is displayed on the screen.
↳ After measuring the ambient humidity level, the humidity sensor automatically selects the color of the humidity light.
↳ The dehumidifier goes to the Auto mode.
- 3 Touch and hold  for 3 seconds to turn off the dehumidifier.

Setting the humidity level

You can set the desired humidity level to **40, 50, 60, 70**, or **--** percent.

- Touch the  button one or more times to set the desired humidity level, and the humidity indicator lights up.

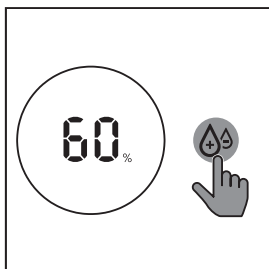

Note

- When the humidity is decreased to the selected level, the dehumidifier automatically stops dehumidifying the air, but the fan will continue working.
- If you do not set the humidity level, the default relative humidity is 60%.


Tip

- A comfortable humidity level is from RH 40% to RH 60%.

Continuous mode


In continuous  mode, the appliance constantly works with the optimal dehumidifying settings.

- Touch the  button repeatedly to select the continuous mode.
 - ↳ The **--** and  display on the screen.

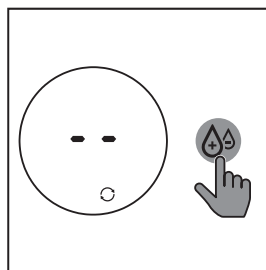


Selecting the Auto mode

- Touch the Auto mode button  to select the Auto mode.
 - ↳  displays on the screen.
 - ↳ The current humidity level displays on the screen.

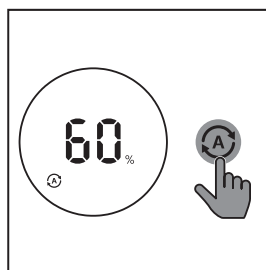


Changing the fan speed

- Touch the fan speed button  repeatedly to select the fan speed (1, 2 or 3) you need.

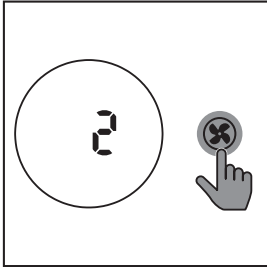

Selecting laundry drying mode

- Touch the  button to select the laundry drying mode.
 - ↳ The dehumidifier goes to laundry drying mode.
 - ↳ The dehumidifier operates under the highest fan speed.
 - ↳  display on the screen.

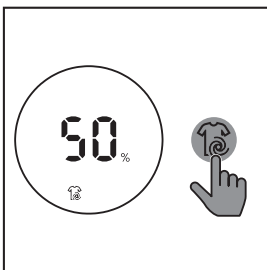

Note

- Do not point the airflow of the dehumidifier directly at the body for a prolonged period of time, especially where there is someone who is unable to use the humidity adjustment function.
- When you use the dehumidifier for laundry drying, hang your clothes from a distance where water droplets will not drip onto the dehumidifier.
- Make sure the air inlet and outlet are not blocked by the clothes.
- Make sure that you dry the clothes on a safe and secure place from dropping to block the air inlet and outlet.


Tip

- Direct the louver until air flows directly onto the clothes to dry your clothes more efficiently.

Using the swing function

The louver is able to swing close to 90 degrees. Use the swing function to direct the air flow.

- 1 Touch the  button to activate the swing function.

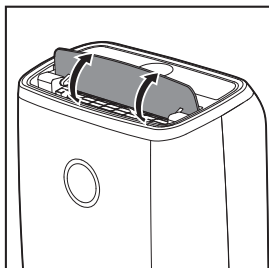

- 2 Touch the  button again to deactivate the swing function.




Tip

- After the appliance is turned on, turn the louver upward to increase the dehumidifying efficiency.

Setting the Timer

With the timer function, you can let the dehumidifier operate for a set number of hours. When the set time has elapsed, the dehumidifier automatically turns off. The timer is available from 1 to 9 hours.

- 1 Touch the  button to activate the timer.

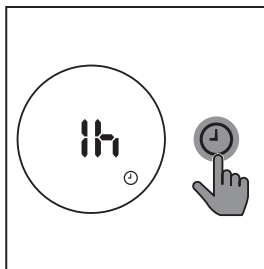

- 2 Touch the  button repeatedly to choose the number of hours you want the dehumidifier to operate .
 - To deactivate the timer function, touch the  button repeatedly until -- is displayed on the screen.

Defrosting the dehumidifier



Note


- The defrosting function is enabled only when the dehumidifier operates under dehumidifying mode.

The dehumidifier is equipped with a defrosting sensor to make sure it is in optimal condition when being used in cold weather. The dehumidifier automatically detects if defrosting is required.

When defrosting is required:

- ↳ The  indicator is on.

- ↳ Defrosting will begin defrosting and continue until the dehumidifier is completely defrosted.

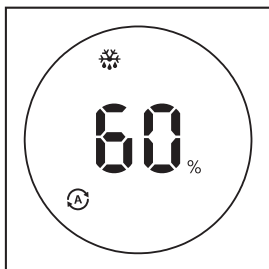

Note

- During defrosting, the dehumidifier operates in clothes dry mode.
- The dehumidifier will resume working and operate the previous settings after defrosting is completed.

Using the light on/off function

With the light on/off button, you can switch on or off the humidity light or the display screen.


- 1 Touch the light on/off button  once, the humidity light will go off.
- 2 Touch the light on/off button  again, the display screen will dimmed.
- 3 Touch the light on/off button  for the third time, all lights will be on again.

5 Draining the dehumidifier


Emptying the water tank

When the water tank is full:


- ↳ The appliance beeps, and the  indicator is on.

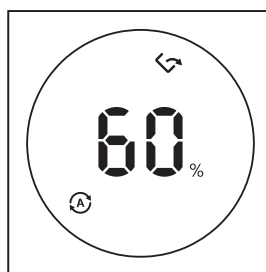


- 1 Hold the recess of the water tank, and pull it from the dehumidifier.

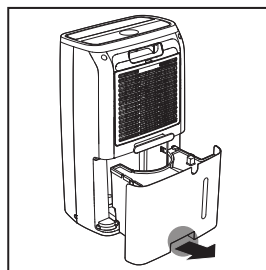


- 2 Open the water tank cover and empty the water into a sink.

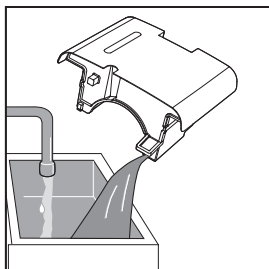

- 3 Wipe the outside of the water tank dry with a clean cloth.

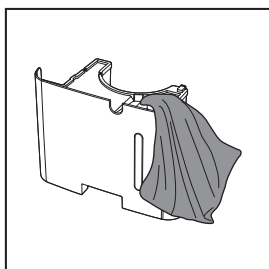

- 4 Put the water tank back into the dehumidifier.

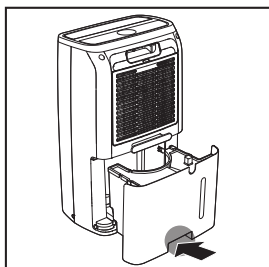


Note

- The dehumidifier will resume working after the water tank is emptied.


Using the continuous drainage

The dehumidifier can also drain excess water by attaching a hose. This allows you to operate the dehumidifier without emptying the water tank.


- 1 Turn off the dehumidifier and unplug from the wall socket.
- 2 Remove the water tank from the dehumidifier.

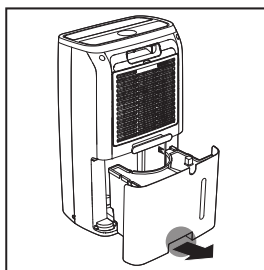

- 3 Connect the hose to the drainage outlet.

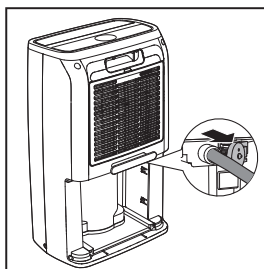

- 4 Put the water tank back into the dehumidifier.

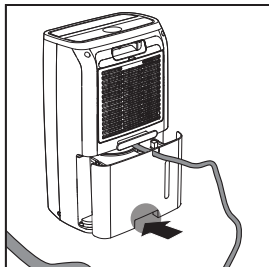

Note

- Put the water tank back in to the dehumidifier even using the continuous drainage, or the dehumidifier can not operate normally.
- Make sure the hose fits tightly so that no water leaks from the dehumidifier.
- When using the continuous drainage, make sure the hose is laid flat and not knotted.
- Make sure the hose is not immersed in water, nor raised higher than the continuous drainage hole.
- Place the outlet of the hose in somewhere it can easily drain.
- Check the dehumidifier once a week when draining water continuously or left unattended for an extended period of time.

6 Cleaning

Note

- Always turn the appliance off and unplug the appliance from the electrical outlet before cleaning.
- Never immerse the appliance in water or any other liquid.
- Never use abrasive or aggressive cleaning agents such as bleach or alcohol to clean any part of the appliance.
- The back cover is washable.

English

Cleaning the body of the dehumidifier


Regularly clean the inside and outside of the dehumidifier to prevent dust from collecting.

- 1 Use a soft, dry cloth to clean both the interior and exterior of the appliance.
- 2 The air outlet can also be cleaned with a dry, soft cloth.


Cleaning the water tank

Clean the water tank every day to keep it clean.

- 1 Switch off the dehumidifier and unplug from the electrical outlet.
- 2 Remove the water tank from the dehumidifier.

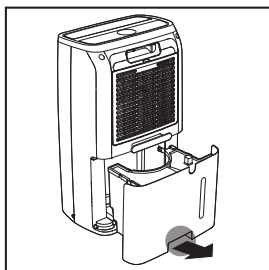


- 3 Open the water tank cover and fill the water tank for 1/3 with water.

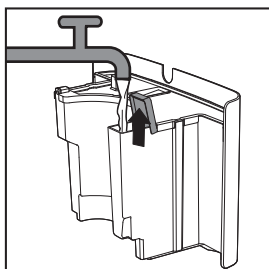


- 4 Add some mild washing-up liquid to the water in the water tank.


- 5 Wash the water tank under a running tap water, and clean the insides of it with a soft clean cloth.

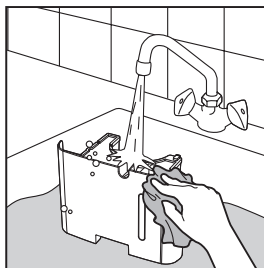

- 6 Wipe the outside of the water tank dry with a clean cloth.

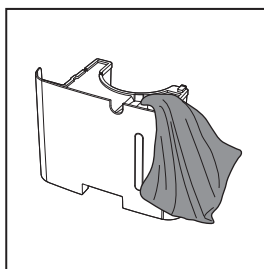

- 7 Put the water tank back into the dehumidifier.

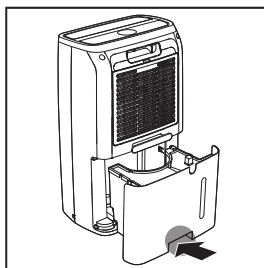


Cleaning the back cover

Clean the back cover when necessary to keep it clean.


Note

- The back cover is washable and vacuum cleanable.

- 1 Switch off the dehumidifier and unplug from the electrical outlet.
- 2 Pull the back cover, and remove it from the dehumidifier.

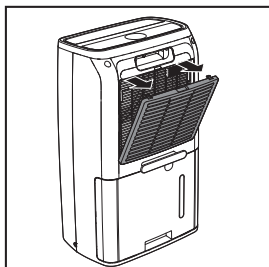


- 3 If the back cover is very dirty, use a soft brush to brush away the dust. Wash the back cover under a running tap water.

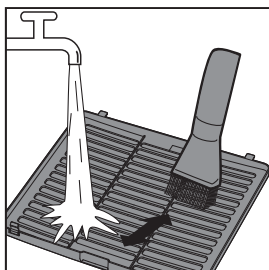

- 4 Allow the back cover to air dry thoroughly before placing back in the dehumidifier.

- 5 Put the back cover back into the appliance.

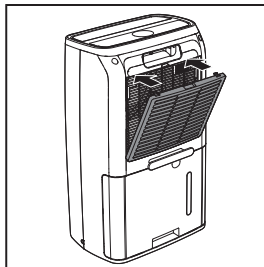

- 6 Put the plug of the dehumidifier in the wall outlet.
- 7 Wash your hands thoroughly after cleaning the back cover.

7 Storage

- 1 Turn off the dehumidifier and unplug from the wall outlet.
- 2 Clean the dehumidifier, empty the water tank and wash the back cover (see chapter 'Cleaning').
- 3 Let all parts dry thoroughly before storing.
- 4 Store the dehumidifier in a cool, dry location.

8 Troubleshooting

This chapter summarizes the most common problems you could encounter with the dehumidifier. If you are unable to solve the problem with the information below, visit www.philips.com/support or contact the Consumer Care Center in your country for assistance.

Problem	Possible solution
The appliance does not work even though it is plugged in to the wall socket and switched on.	• The timer is set to a specific time interval. Reset or turn off the timer. • Try a different electrical socket or check the wall switch. • Make sure that the water tank is empty and placed in the dehumidifier properly.
The water tank is empty but the  indicator is still on.	• Remove the water tank from the dehumidifier and place it back to the dehumidifier again.
There is no air dehumidification in the room or the dehumidifying effectiveness is low.	• Make sure the air inlet and outlet are not blocked. • The room humidity is below what the dehumidifier is set to. Select a lower humidity level. • Make sure that no exterior doors or windows are open. • The current temperature is low in the room. Try again until the temperature rises up.
Water leaks from the dehumidifier.	• Make sure that the dehumidifier is in good condition and the water tank is not cracked.
The dehumidifier does not collect water.	• The humidity is low. The dehumidifier automatically resumes working when the humidity level is increased. • The temperature is low. Wait until the temperature rises up.

Problem	Possible solution
The airflow that comes out of the air outlet is significantly weaker than before.	The back cover is dirty. Clean the back cover (see chapter "Cleaning").
The dehumidifier produces a unpleasant smell.	- The first few times you use the dehumidifier, it may produce a plastic smell. This is normal. - If the dehumidifier produces a burnt odor, switch OFF and unplug from the electrical outlet. Contact the Consumer Care Center in your country for assistance.
The dehumidifier is loud.	- If the dehumidifier is too loud, change the fan speed to a lower fan speed level. When using the product in a bedroom at night, choose a lower fan speed. - Make sure that the dehumidifier is placed on a flat and stable surface.
Error codes "E3" "E4" or "E5" displays on the screen.	The dehumidifier has malfunctions. Contact the Consumer Care Center in your country.

9 Guarantee and service

If you need information or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Consumer Care Center in your country (you can find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Center in your country, go to your local Philips dealer.

Order parts or accessories

If you have to replace a part or want to purchase an additional part, go to your Philips dealer or visit www.philips.com/support.

If you have problems obtaining the parts, please contact the Philips Consumer Care Center in your country (you can find its phone number in the worldwide guarantee leaflet).

10 Notices

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Compliance with EMF

Koninklijke Philips N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.

Recycling

Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

PHILIPS

产品保用卡

保修及服务：

此产品是一件设计精良，用高品质元件制造之家用电器，在正常使用及保养下应能发挥其优越性能。在购买日期后二年内，若发生任何因制造工艺或元器件造成之损坏，飞利浦中国维修服务中心将为持证用户提供免费门市维修服务，视情况更换零件或整个产品。无论在保期中或保期后，只要飞利浦正式行销该产品的任何国家皆可获得维修服务。若飞利浦在当地无行销该项产品，飞利浦同样提供维修服务，但可能因未储备所需零件，维修时间可能较长，敬请见谅。请联络当地飞利浦经销商，或飞利浦服务部门。若您需洽询相关资讯，或遇困难事项时，请联络当地飞利浦维修服务中心，或向飞利浦服务热线咨询。

中国顾客服务热线：

4008 800 008（用户需承担本地通话费）。

网址：www.philips.com.cn

网上会员注册与产品注册：

- 1 登陆 www.philips.com.cn/welcome
- 2 点击“创建新账户”，创建您的飞利浦账号
- 3 点击“注册产品”，通过产品名称或产品型号查找产品，完成产品注册

保修条例：

- 在购买日期后二年内，凡经本公司特约维修站人员确认为正常使用情况下，因制造工艺或元器件造成之损坏，您都将获得免费保修服务。
- 此免费服务不包括需时常更换的易耗零配件（吸尘机纸袋，布袋，空气清新机滤网，滤芯，活性炭，咖啡壶过滤网）及附件（如须刀网膜、刀头，咖啡杯，食品加工机杯/刀具等），辅助装置，运输费及维修人员上门服务费。
- 用户请保留此联。
- 此证若经涂改即作废。

- 此证须联同发票正本使用方为有效。
- 以下情况将不能获得免费服务。
 - 1 使用不当引起的人为损坏，例如接入不适当电源、使用不适当配件、不适当之安装、不依说明书使用、错误使用或疏忽而造成损坏等。因运输及其他意外而造成之损坏。非经本公司认可之维修和改装。其他因不可抗力（如自然灾害、电压异常等）造成的损坏。
 - 2 一般家庭以外使用（如工业、商业用）而造成的损坏。
 - 3 正常使用引起的产品老化、磨损等，但不影响产品的正常使用。
- 保修证作为在规定期限及条件之内进行免费维修的保证，并不限制消费者的法定权利。
- 飞利浦提供2年全球联保服务，在产品由飞利浦正式销售的所有国家中，都提供保修和保修期满的维修服务。要求保修时，您需提供发票正本，且请求保修的日期还在保修期限之内。

服务须知

需要此产品的售后服务，拨打服务热线：4008 800 008
在维修服务过程中有任何意见，欢迎致函飞利浦（中国）投资有限公司解决疑难。

飞利浦（中国）投资有限公司
上海市静安区灵石路718号A1幢

PHILIPS

产品 : 飞利浦空气除湿机3000系列
型号 : DE3203
额定电压 : 220V~
额定频率 : 50Hz
额定消耗功率: 310 W (27°C RH60%)
最大输入功率: 395 W (35°C RH90%)
生产日期 : 请见产品本体
产地 : 中国广东深圳
技能种类 : B
额定除湿能力: 15L/日 (27°C RH60%)
最大除湿能力: 30L/日 (35°C RH90%)
冷媒填充量 : R134a/145g
工作压力 (制冷回路) : 吸气0.25/排气0.90MPa
最大工作压力 (热交换器) :
高压侧最大允许工作压力: 1.5MPa
低压侧最大允许工作压力: 0.4MPa
吸排气侧允许工作过压 : 2.18MPa
额定电流 : 1.46A (27°C RH60%)
机体外观尺寸: 宽349*高588*深268 (mm)
制品净重 : 13.8kg
适用室温 : 5°C~35°C
水箱容量 : 4L

飞利浦 (中国) 投资有限公司
上海市静安区灵石路 718 号 A1 幢
全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005,
GB4706.32-2012, GB4343.1-2018
及 GB17625.1-2012 制造

* 额定除湿能力的测试条件是风速2档。

* 最大除湿能力的测试条件是风速3档。

产品中有害物质的名称及含量

部件名称	有害物质					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
摆风马达	×	○	○	○	○	○
压缩机	×	○	×	○	○	○
电源线	×	○	○	○	○	○
电源PCBA板	×	○	○	○	○	○
控制PCBA板	×	○	○	○	○	○
温湿度感应PCBA板	×	○	○	○	○	○
温度传感器	×	○	○	○	○	○
本表格依据SJ/T 11364的规定编制。 ○ 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。 × × 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。						

*该表格中所显示的“有害物质”在产品正常使用情况下不会对人身和环境产生任何伤害。

*该表格中所显示的“有害物质”及其存在的部件向消费者和回收处理从业者提供相关物质的存在信息，有助于产品废弃时的妥善处理。





© 2021 Koninklijke Philips N.V.

保留所有权利

4241 211 04064

