

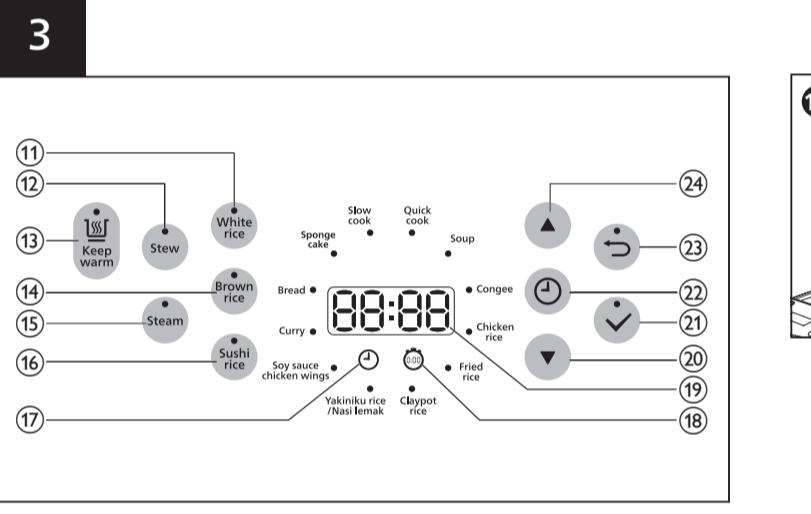


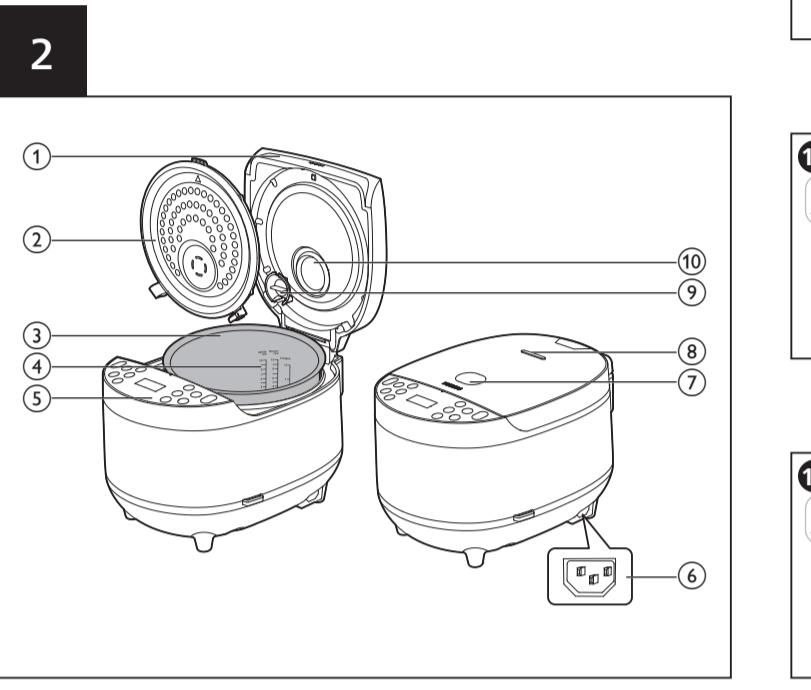

EN	User manual
MS-MY	Bahasa Malaysia
TH	ภาษาไทย

Hướng dẫn sử dụng

ZH-T 繁體中文

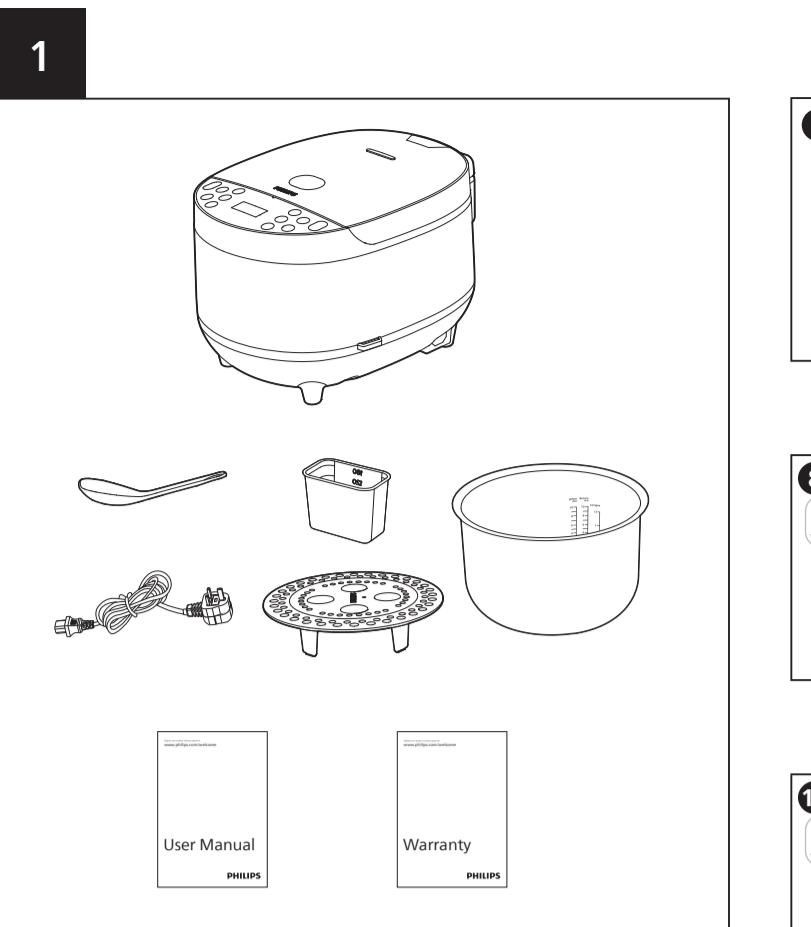

PHILIPS and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.
This product has been manufactured by and is sold under the responsibility of Versuni Holding B.V., and Versuni Holding B.V. is the warrantor in relation to this product.

2023 © Versuni Holding B.V.

6608.000.0820.6 (27/04/2023)

English
1 Important
Read this user manual carefully before you use the Rice cooker and save it for future reference.

Danger

The appliance must not be immersed.

This appliance shall not be used by children from 0 year to 8 years.

This appliance can be used by children aged from 8 years and above if they are continuously supervised and they have been given supervision or instruction concerning use of the appliance by persons responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Keep the appliance and its cord out of reach of children aged less than 8 years.

Cleaning and maintenance work must not be made by children.

This appliance should be positioned in a stable situation with the handles (if any) positioned to avoid tripping over the hot lids.

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments;
- Farm houses;
- By clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments;

If the power cord is damaged, it must be replaced by a cord set available from the manufacturer or an authorized service center.

Cooking appliances should be positioned in a stable situation with the handles (if any) positioned to avoid spillage of the hot liquids.

The appliance is not intended to be operated by means of an external timer or a separate remote-control system.

Check if the voltage indicated on the appliance corresponds to the local power voltage before you connect it.

Do not touch the power cord hang over the edge of the table or worktop on which the appliance rests.

Make sure the heating element and the outside of the inner pot are clean and dry before you put the plug in the power outlet.

Do not plug in the appliance or press any of the buttons on the control panel with wet hands.

WARNING: Make sure to avoid spillage on the power connector to avoid a potential hazard.

According to the instructions prescribed in this user manual, use a soft damp cloth to clean the surfaces in contact with food and make sure to remove all the food residues stuck to the appliance.

Don't touch the power cord under the appliance when in use.

When placing the steaming basket, avoid touching the side wall of the inner pot, otherwise it may cause deformation due to high temperature.

Cautions: Surface of the heating element is subject to residual heat after use.

Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend! If you use such accessories or parts, your guarantee becomes invalid.

Do not expose the appliance to high temperatures, nor place it on a working or still hot stove or cooker.

Do not expose the appliance to direct sunlight.

Place the appliance on a stable, horizontal and level surface.

Always put the inner pot in the appliance before you put the plug in the power outlet and switch it on.

Do not place the inner pot directly over an open fire to cook rice.

Do not use the inner pot if it is deformed.

The accessible surfaces may become hot when the appliance is operating. Take extra caution when touching the appliance.

Avoid hot steam coming out of the steam vent during cooking or out of the appliance when you open the lid. Keep hands and face away from the steam to avoid the steam.

Do not lift and move the appliance while it is operating.

Do not exceed the maximum water level indicated in the inner pot to prevent overflow which might cause potential hazard.

Do not place the cooking utensils inside the pot while cooking, keeping warm or reheat the food.

Only use the cooking utensils provided. Avoid using sharp utensils.

Avoid scratches, it is not recommended to cook ingredients with crustaceans and shellfish. Remove the hard shells before cooking.

Do not insert metallic or other alien substances into the steam vent.

Do not place a magnetic substance on the lid. Do not use the appliance near a magnetic substance.

Always turn the appliance off before you clean or rinse it.

Always wash the appliance by hand in a dishwasher.

Always unplug the appliance if not used for a longer period.

If the appliance is used improperly or for professional or semi-professional purposes, or if it is not used according to the instructions in this user manual, the guarantee becomes invalid and Philips refuses liability for any damage caused.

EN User manual
MS-MY Bahasa Malaysia
TH ຈຸດອື່ນສິ້ວນ

Hướng dẫn sử dụng

ZH-T 繁體中文

1 Take out all the accessories from the inner pot. Remove the packaging material of the inner pot.
2 Before first use, boil water and clean the Rice cooker.
3 Clean the parts thoroughly before using it for the first time (see chapter "Cleaning and Maintenance").

2 Using the Rice cooker
Before first use
1 Take out all the accessories from the inner pot. Remove the packaging material of the inner pot.
2 Before first use, boil water and clean the Rice cooker.
3 Clean the parts thoroughly before using it for the first time (see chapter "Cleaning and Maintenance").

1 Put ingredients and water into the inner pot.
2 Follow the steps in "Preparations before cooking".
3 Press the (○ or (●) to select Congee/Soup or Curry (fig. 10).
4 Press (✓ to confirm, the Multil cooker starts working in the selected mode.
5 When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.
6 The Rice cooker will be in keep-warm mode automatically.
7 The keep-warm indicator lights up.

1 Make sure that the detachable inner lid is properly installed.
2 Your Rice cooker
Congratulations on your purchase, and welcome to Philips!
To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.
3 What's in the box (fig. 1)
Rice cooker main unit Measuring cup
Rice and soup 2 in 1 spoon Power cord
Steaming basket User manual

4 Overview

Product overview (fig. 2)

(1) Top lid (2) Power socket
(3) Detachable inner lid (4) Lid release button
(5) Inner pot (6) Steam vent
(7) Water level indicators (8) Steam valve
(9) Control panel (10) Steam basket

Controls overview (fig. 3)

(1) Rice button (2) Preset time indicator (3) Time display (4) Keep warm button (5) Selection button (6) Brown rice button (7) Confirmation button (8) Steam button (9) Cooking time/preset time button (10) Cancel button (11) Timer indicator (12) Menu selection button (13) Rice buton (14) Stew button (15) Keep warm button (16) Selection button (17) Keep warm button (18) Time display (19) Confirmation button (20) Steam button (21) Cooking time/preset time button (22) Cancel button (23) Timer indicator (24) Menu selection button

Preparation before cooking

Warning
• Make sure that the detachable inner lid is properly installed.

Note

• Do not fill the inner pot with food and liquid less than the minimum of the water level indications, or more than the maximum of the water level indications.
• For rice cooking, follow the water level indications on the inside of the inner pot.
• You can adjust the water level for different types of rice and according to your own preference. Do not exceed the maximum quantity indicated on the inside of the inner pot.
• After the cooking process is started, you can press (●) to terminate the current work and the appliance goes to menu selection mode.

Preparation before cooking
1 Press the (○ or (●) to select "Sponge cake or Bread" (fig. 11).
2 Press (✓ to confirm, the Multil cooker starts working in the selected mode.
3 When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.
4 The Rice cooker will be in keep-warm mode automatically.
5 The keep-warm indicator lights up.

Note
• Make sure the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element.
• Make sure the inner pot is in proper contact with the heating element.

Baking cake or bread
1 Mix all ingredients well and put it into the inner pot.
2 Follow the steps in "Preparations before cooking".
3 Press the (○ or (●) to select "Sponge cake or Bread" (fig. 11).
4 Press (✓ to confirm, the Multil cooker starts working in the selected mode.
5 When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.
6 The Rice cooker will be in keep-warm mode automatically.
7 The keep-warm indicator lights up.

Note
• Make sure the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element.
• Make sure the inner pot is in proper contact with the heating element.

Steaming food
1 Measure 1/4 cup of water with the measuring cup.
2 Pour the water into the inner pot.
3 Put the steam basket into the inner pot.
4 Put the food into the steam basket.
5 Follow the steps in "Preparations before cooking".
6 Pour some water onto the food to prevent it from becoming too dry. The quantity of the water depends on the amount of food.
7 Press the (○ or (●) to Steam (fig. 12).
8 Press (✓ to confirm, the Rice cooker starts working in the selected mode.
9 When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.
10 The Rice cooker will be in keep-warm mode automatically.
11 The keep-warm indicator lights up.

Note
• Make sure you add water to the level indicated on the scale inside the inner pot that corresponds to the number of cups of rice used.
• Make sure the rice is not overcooked.
• Make sure the rice is not undercooked.
• Make sure you add water to the level indicated on the scale inside the inner pot that corresponds to the number of cups of rice used.

Rice cooking
There are eight cooking function: Yakiniku rice/Nasi Lemak, Claypot rice, Fried rice, Chicken rice, Quick cook, Curry, Sushi rice, and Soups.

1 Following the steps in "Preparations before cooking".
2 Press (○ or (●) to select one of the cooking menus (fig. 8).
3 The indicator chosen cooking function lights up, the default cooking time is displayed on the screen.
4 When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.
5 The Rice cooker will be in keep-warm mode automatically.
6 The keep-warm indicator lights up.

Note
• You can adjust the cooking time for Slow cook, Bread, Soy sauce chicken wings, Congee, Sop, Stew, Curry and Steam.
• Choose a desired function.
• Press (●) to access the cooking time settings (fig. 14).
• (●) The cooking time indicator (●) displays on the screen.
3 Press the (○ or (●) to adjust the cooking time you want (fig. 15).
4 Press (✓ to confirm, the All-in-One cooker starts working in the selected mode.

Adjust the cooking time
1 Note
• You can adjust the cooking time for Slow cook, Bread, Soy sauce chicken wings, Congee, Sop, Stew, Curry and Steam.
2 Press (●) to access the cooking time settings (fig. 14).
3 Press the (○ or (●) to adjust the cooking time you want (fig. 15).
4 Press (✓ to confirm, the All-in-One cooker starts working in the selected mode.

Cooking program
Cooking function Default cooking time Adjustable cooking time
Slow cook 4 hours 3-10 hours
Sponge cake 45 minutes NA
Bread 45 minutes 30 minutes-2 hours
Curry 70 minutes 1-2 hours
Soy sauce chicken wings 30 minutes 25 minutes-2 hours
Yakiniku rice/Nasi Lemak 45 minutes NA
Claypot rice 60 minutes NA
Fried rice 40 minutes NA
Chicken rice 45 minutes NA
Congee 1.5 hours 1-4 hours
Soup 2 hours 1-4 hours
Quick cook 25 minutes NA
Stew 4 hours 3-6 hours
Steam 25 minutes 10-59 minutes
White rice 45 minutes NA
Brown Rice 60 minutes NA
Sushi rice 50 minutes NA
Keep warm 24 hours NA

Using the Rice cooker
Before first use
1 Take out all the accessories from the inner pot. Remove the packaging material of the inner pot.
2 Before first use, boil water and clean the Rice cooker.
3 Clean the parts thoroughly before using it for the first time (see chapter "Cleaning and Maintenance").

1 Put ingredients and water into the inner pot.
2 Follow the steps in "Preparations before cooking".
3 Press the (○ or (●) to select Congee/Soup or Curry (fig. 10).
4 Press (✓ to confirm, the Multil cooker starts working in the selected mode.
5 When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.
6 The Rice cooker will be in keep-warm mode automatically.
7 The keep-warm indicator lights up.

Note
• Do not exceed the maximum water level indicated in the inner pot, as this may cause the Rice cooker to overflow.

Congee/Soup/Curry
1 Put ingredients and water into the inner pot.
2 Follow the steps in "Preparations before cooking".
3 Press the (○ or (●) to select Congee/Soup or Curry (fig. 10).
4 The indicator chosen cooking function lights up, the default cooking time is displayed on the screen.
5 The cooking process is started, you can press (●) to terminate the current work and the appliance goes to menu selection mode.
6 The Rice cooker will be in keep-warm mode automatically.
7 The keep-warm indicator lights up.

Note
• Do not exceed the maximum water level indicated in the inner pot, as this may cause the Rice cooker to overflow.

Using the Rice cooker
Before first use
1 Take out all the accessories from the inner pot. Remove the packaging material of the inner pot.
2 Before first use, boil water and clean the Rice cooker.
3 Clean the parts thoroughly before using it for the first time (see chapter "Cleaning and Maintenance").

1 Pull the inner lid outwards to remove it from the top lid for cleaning (fig. 18).
2 Soak in hot water and clean with sponge.
3 Make sure to remove all the food residues stuck to the Rice cooker.
4 Re-install the inner lid back to the top lid.

Note
• Do not exceed the maximum water level indicated in the inner pot, as this may cause the Rice cooker to overflow.

Inner lid
1 Pull the inner lid outwards to remove it from the top lid for cleaning (fig. 18).
2 Soak in hot water and clean with sponge.
3 Make sure to remove all the food residues stuck to the Rice cooker.
4 Re-install the inner lid back to the top lid.

Steam vent cap
1 Follow the above steps to disassemble the inner lid.
2 Disassemble the steam vent cap from the inner lid (fig. 19).
3 Clean the steam vent cap under tap water (fig. 20). Make sure no food residue is left. Reassemble the steam box to the inner lid after cleaning is completed (fig. 21).

Note
• Do not exceed the maximum water level indicated in the inner pot, as this may cause the Rice cooker to overflow.

Steam vent cap
1 Follow the above steps to disassemble the inner lid.
2 Disassemble the steam vent cap from the inner lid (fig. 19).
3 Clean the steam vent cap under tap water (fig. 20). Make sure no food residue is left. Reassemble the steam box to the inner lid after cleaning is completed (fig. 21).

Note
• Do not exceed the maximum water level indicated in the inner pot, as this may cause the Rice cooker to overflow.

Steam vent cap
1 Follow the above steps to disassemble the inner lid.
2 Disassemble the steam vent cap from the inner lid (fig. 19).
3 Clean the steam vent cap under tap water (fig. 20). Make sure no food residue is left. Reassemble the steam box to the inner lid after cleaning is completed (fig. 21).

Note
• Do not exceed the maximum water level indicated in the inner pot, as this may cause the Rice cooker to overflow.

Steam vent cap
1 Follow the above steps to disassemble the inner lid.
2 Disassemble the steam vent cap from the inner lid (fig. 19).
3 Clean the steam vent cap under tap water (fig. 20). Make sure no food residue is left. Reassemble the steam box to the inner lid after cleaning is completed (fig. 21).

Note
• Do not exceed the maximum water level indicated in the inner pot, as this may cause the Rice cooker to overflow.

Steam vent cap<br

