



EN User manual PT-BR Manual do Usuário

**PHILIPS  
WALITA**

**CIC** Centro de Informações  
ao Consumidor  
Grande SP: (11) 2121 0203  
Demais localidades: 0800 701 0203

Specifications are subject to change without notice  
© 2013 Koninklijke Philips N.V.  
All rights reserved.

RI3011\_RI3016\_UM\_PT-BR\_V3.0\_140101



## English

### 1 Your rice cooker

Congratulations on your purchase, and welcome to Philips!  
To fully benefit from the support that Philips offers, register your  
product at www.philips.com/welcome.

### 2 Important

Read this important information leaflet carefully before you use the  
rice cooker and save it for future reference.

### Safety


#### Danger

- Don't immerse the main body of the rice cooker in water, nor rinse it under the tap.


#### Warning

- Check if the voltage indicated on the rice cooker corresponds to the local power voltage before you connect it.
- Only connect the rice cooker to a grounded power outlet. Always make sure that the plug is inserted firmly into the power outlet.
- Do not use the appliance if the plug, the power cord, the inner pot, the sealing ring, or the main body is damaged.
- Make sure that the damaged power cord


### What's in the box Conteúdo da caixa

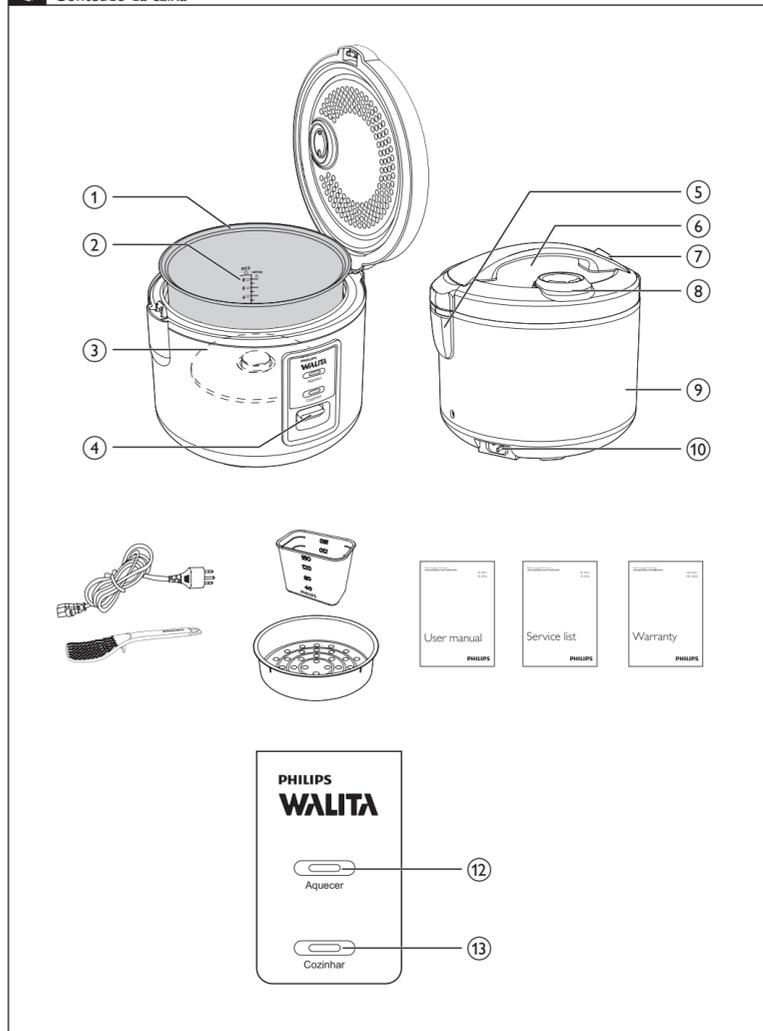


### 1 Using the rice cooker Utilização da máquina de fazer arroz

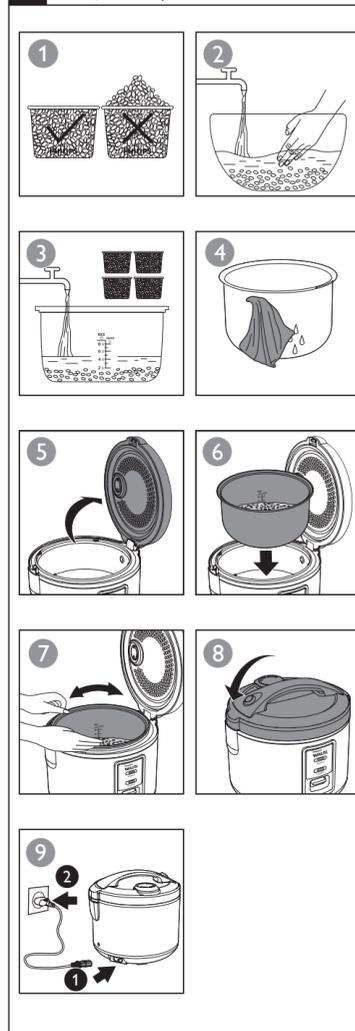

### Cooking rice Preparo de arroz

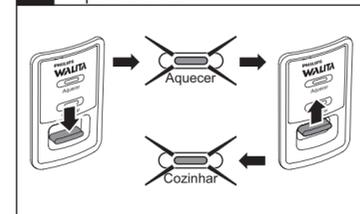

### Steaming Cozimento a vapor

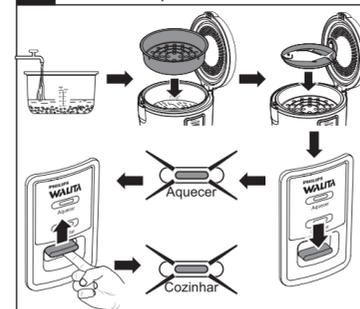

is replaced by Philips, a service center authorized by Philips or similarly qualified persons in order to avoid a hazard.

- The appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to make sure that they do not play with the rice cooker.
- Keep the power cord out of the reach of children. Do not let the power cord hang over the edge of the table or worktop on which the rice cooker stands.
- Make sure the heating element, the temperature sensor, and the outside of the inner pot are clean and

dry before you put the plug in the power outlet.

- Do not plug in the rice cooker or press any of the buttons on the control panel with wet hands.
- Never connect this rice cooker to an external timer switch in order to avoid a hazardous situation.

#### Caution

- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not expose the rice cooker to high temperatures, nor place it on a working or still hot stove or cooker.
- Do not expose the rice cooker to direct sunlight.
- Place the rice cooker on a stable, horizontal, and level surface.
- Always put the inner pot in the rice cooker before you put the plug in the power outlet and switch it on.

- Do not place the inner pot directly over an open fire to cook rice.
- Do not use the inner pot if it is deformed.
- The accessible surfaces may become hot when the rice cooker is operating. Only touch the control panel and open lid button.
- Beware of hot steam coming out of the steam vent during cooking or out of the rice cooker when you open the lid. Keep hands and face away from the rice cooker to avoid the steam.
- The inner pot, steam basket, and resealable cups, during and after cooking process, may be hot and heavy.
- Do not lift and move the rice cooker while it is operating.
- Do not exceed the maximum water level indicated in the inner pot to prevent overflow.
- Do not place the cooking utensils inside the pot while

- cooking, keeping warm or reheating rice.
- Only use the cooking utensils provided. Avoid using sharp utensils.
- Do not use the cooking utensils provided by the rice cooker on open flame.
- To avoid scratches, it is not recommended to cook ingredients with crustaceans and shellfish. Remove the hard shells before cooking.
- Do not insert metallic objects or alien substances into the steam vent.
- Do not place a magnetic substance on the lid. Do not use the rice cooker near a magnetic substance.
- Always let the rice cooker cool down before you clean or move it.
- Always clean the rice cooker after use. Do not clean the rice cooker in dishwasher.
- Always unplug the rice cooker if not used for a longer period.

- The rice cooker is intended to be used in household or similar applications such as: Staff kitchen areas in shops, offices, and other residential type environments; Farm houses; By clients in hotels, motels and other residential type environments; Bed and breakfast type environments.
- If the rice cooker is used improperly or for professional or semi-professional purposes, or if it is not used according to the instructions in this user manual, the guarantee becomes invalid and Philips refuses liability for any damage caused.

### Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

### 3 What's in the box

Rice cooker main unit	Steam basket
Rice scoop	Measuring cup
User manual	Service List
Warranty card	Power cord

### Overview

① Inner pot	⑦ Lid release button
② Water level indications	⑧ Detachable steam vent cap
③ Heating element	⑨ Main body
④ Control Key	⑩ Power socket
⑤ Steam water storage	⑪ Keep warm indicator
⑥ Outer lid	⑫ Cooking indicator

### 4 Using the rice cooker

#### Before first use

- 1 Take out all the accessories from the inner pot. Remove the packaging material of the inner pot.
- 2 Clean the parts of the rice cooker thoroughly before using the rice cooker for the first time (see chapter 'Cleaning').

#### Note

- Make sure all parts are completely dry before you start using the rice cooker.

#### Preparations before use

Before using the rice cooker, you need to follow the preparation:

- 1 Measure the rice using the measuring cup provided.
- 2 Wash the rice thoroughly.
- 3 Put the pre-washed rice in the inner pot.
- 4 Add water to the level indicated on the scale inside the inner pot that corresponds to the number of cups of rice used. Then smooth the rice surface.
- 5 Press the release lever to open the lid.
- 6 Put the inner pot in the rice cooker. Check if the inner pot is in proper contact with the heating element.
- 7 Close the lid of the rice cooker, put the plug in the power socket.

#### Note

- Each cup of uncooked rice normally gives 3 cups of cooked rice. Do not exceed the quantities indicated on the inside of the inner pot.
- The level marked inside the inner pot is just an indication. You can always adjust the water level for different types of rice and your own preference. If the voltage is unstable at the area you live, it is possible that the rice cooker overflows.
- Besides following the water level indications, you can also add rice and water at 1:1-1.2 ratio for rice cooking. Do not exceed the quantities indicated on the inside of the inner pot.
- Use a separate container to wash the rice to avoid damaging the non-slick coating of the inner pot.
- Make sure that the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element or the magnetic switch.

#### Rice cooking

- 1 Follow the steps in "Preparations before use".
- 2 Push down the control key, and the cooking (Cozinhar) indicator lights up.
- 3 When the cooking is finished, the cooking (Cozinhar) indicator will be off.
- 4 The rice cooker switches to keep warm mode automatically, and the keep warm (Aquecer) indicator lights up.

#### Note

- Do not exceed the volume indicated nor exceed the maximum water level indicated in the inner pot, as this may cause the rice cooker to overflow.

#### Steaming

- 1 Measure a few cups of water with the measuring cup.
- 2 Pour the water into the inner pot.
- 3 Put the steam basket into the inner pot.
- 4 Put the food into the steam basket.

